



# INSTALLATION MANUAL

## Daikin Altherma Heat pump convector

FWXV10AATV3(R)  
FWXV15AATV3(R)  
FWXV20AATV3(R)  
FWXM10AATV3(R)  
FWXM15AATV3(R)  
FWXM20AATV3(R)

---

*We want to thank you for choosing one of our products.*

*We are confident that you will be happy with your selection because it represents the state of the art in the technology of home climate control.*

*By following the suggestions contained in this manual, the product you have purchased will operate without problems giving you optimum room temperatures with minimum energy costs.*

DAIKIN EUROPE N.V.

## Conformity

This unit complies with European directives:

- Low voltage directive 2014/35/UE
- Electro-magnetic compatibility 2014/30/UE;.

## Symbols

The following symbols provide the necessary information way  
for correct, safe use of the machine in a rapid, unmistakable

## Editorial pictograms

### **U** User

- Refers to pages containing instructions or information for the user.

### **S** Service

- Refers to pages containing instructions or information for the installer TECHNICAL CUSTOMER SERVICE.

### **I** Installer

- Refers to pages containing instructions or information for the installer

## Safety pictograms

### Generic danger

- Signals that the operation described could cause physical injury if not performed according to the safety rules.

### Danger due to heat

- Signals that the operation described could cause burns if not performed according to the safety rules.

### Danger of high voltage

- Signals that the operation described could cause electrocution if not performed according to the safety rules.

### Do Not

- Refers to actions that absolutely must not be performed.

---

## General

1.1	General warnings . . . . .	4
1.2	Fundamental safety rules . . . . .	4
1.3	Product range . . . . .	5
1.4	Nominal technical specifications . . . . .	5
1.5	Overall dimensions . . . . .	6

## Installation

2.1	Positioning the unit . . . . .	7
2.2	Installation modes. . . . .	7
2.3	Minimum installation space . . . . .	7
2.4	Access to the internal components . . . . .	8
2.5	Removing the side panels. . . . .	9
2.6	Vertical installation . . . . .	9
2.7	Horizontal or ceiling installation . . . . .	10
2.8	Hydraulic connections . . . . .	10
2.9	Condensation discharge. . . . .	11
2.10	Filling the system . . . . .	12
2.11	Evacuating air while filling the system. . . . .	12
2.12	Electrical connections. . . . .	13
2.13	Maintenance . . . . .	13
2.14	Cleaning the outside. . . . .	13
2.15	Cleaning air suction filter. . . . .	14
2.16	Energy saving tips . . . . .	15

## Troubleshooting

3.1	Troubleshooting . . . . .	16
3.2	Table of anomalies and remedies . . . . .	16

# GENERAL

## 1.1 General warnings

- ⚠ After unpacking, make sure that all the components are present. If not, contact your installer or your DAIKIN affiliate office.
- ⚠ DAIKIN appliances must be installed by an authorised installer who, on completion of the work, will release a declaration of conformity to the client in respect of the laws in force and the indications given by DAIKIN in the instructions leaflet supplied together with the appliance.
- ⚠ These appliances have been designed both for conditioning and/or heating environments and must be destined for this use only and compatibly with their performance characteristics.  
DAIKIN EUROPE N.V. accepts no responsibility, either contractual or extra-contractual, for any damage caused to persons, animals or property as a result of incorrect installation, adjustment or maintenance or improper use.
- ⚠ In case of water leaks, turn the master switch of the system to "OFF" and close the water taps.  
As soon as possible, call the DAIKIN technical service department or else professionally qualified personnel and do not intervene personally on the appliance.
- ⚠ The imbedded FWXM-series do not have a grill or covering plate. Provide safety guards and air inlet/outlet grills to prevent accidental contact with the device.
- ⚠ If the appliance is not used for a long period of time, the following operations should be performed:
  - Turn the master switch of the system to "OFF"
  - Close the water taps
  - If there is the risk of freezing, make sure that anti-freeze has been added to the system otherwise empty the system.
- ⚠ If the room temperature is too low or too high it is damaging for the health and is also a useless waste of energy.  
Avoid prolonged contact with the direct air flow.
- ⚠ Do not leave the room closed for long periods. Periodically open the windows to ensure a correct change of air.
- ⚠ This instruction leaflet is an integral part of the appliance and consequently must be kept carefully and must ALWAYS accompany the appliance, even when it is passed to a new owner or user or transferred onto another system. If it is lost or damaged, please contact the local DAIKIN technical service centre.
- ⚠ All repair or maintenance interventions must be performed by the technical service department or by professionally qualified personnel as foreseen in this booklet. Do not modify or intervene on the appliance as this could create dangerous situations and the manufacturer will not be responsible for any damage caused.
- ⚠ Danger from burns - take care when touching

## 1.2 Fundamental safety rules

- ⊖ Remember that some fundamental safety rules should be followed when using a product that uses electricity and water, such as:
  - ⊖ The unit can be used by children over the age of 8, and by people with reduced physical, sensory or mental capabilities, or with no experience or necessary knowledge, as long as they are monitored or after they have received instructions on the safe use of the unit and have understood the dangers involved.  
Children must not play with the appliance.  
The cleaning and maintenance that must be performed by the user should not be carried out by children without supervision.
  - ⊖ It is forbidden to touch the appliance with wet hands or body when barefoot.
  - ⊖ It is forbidden to carry out any cleaning before having disconnected the appliance from the electricity mains supply by turning the system master switch to "OFF".
  - ⊖ It is forbidden to modify the safety or adjustment devices or adjust without authorisation and indications of the manufacturer.
  - ⊖ It is forbidden to pull, cut or knot the electrical cables coming out of the appliance, even if it is disconnected from the mains supply.

- ⊖ It is forbidden to poke objects or anything else through the inlet or outlet grills.
- ⊖ It is forbidden to climb onto the appliance or rest any object on it.
- ⊖ It is forbidden to open the doors which access the internal parts of the appliance without first turning the system master switch to "OFF".
- ⊖ The external parts of the appliance can reach temperatures of more than 70°C.
- ⊖ It is forbidden to dispose of or leave in the reach of children the packaging materials which could become a source of danger.

### 1.3 Product range

There are 2 types of DAIKIN heat pump convectors, FWXV and FWXM, each of which is offered in 3 sizes with different performances and dimensions.

#### FWXV-series

cooler-convector with metal cabinet.

#### FWXM-series

Embedded cooler-convector without panels.

### 1.4 Nominal technical specifications

#### 2 pipes

TECHNICAL DATA (DC)				
FWXV/FWXM		10AATV3(R)	15AATV3(R)	20AATV3(R)
Heat exchanger water contents FWXV/FWXM	L	0,8	1,13	1,46
Maximum working pressure	bar	10	10	10
Maximum water inlet temperature	°C	80	80	80
Minimum inlet water temperature	°C	4	4	4
Hydraulic fixtures	"	Eurokonus 3/4	Eurokonus 3/4	Eurokonus 3/4
Power supply	V/ph/Hz	230/1/50	230/1/50	230/1/50
Maximum current absorbed	A	0,16	0,18	0,26
Maximum power absorbed	W	17,6	19,8	26,5
Weight FWXM	kg	12	15	18
Weight FWXV	kg	20	23	26


EN

**1.5 Overall dimensions**

**2 pipes**


	U.M.	FWXV10AATV3(R)	FWXV15AATV3(R)	FWXV20AATV3(R)
<b>Dimensions</b>				
A	mm	999	1199	1399

**FWXV**

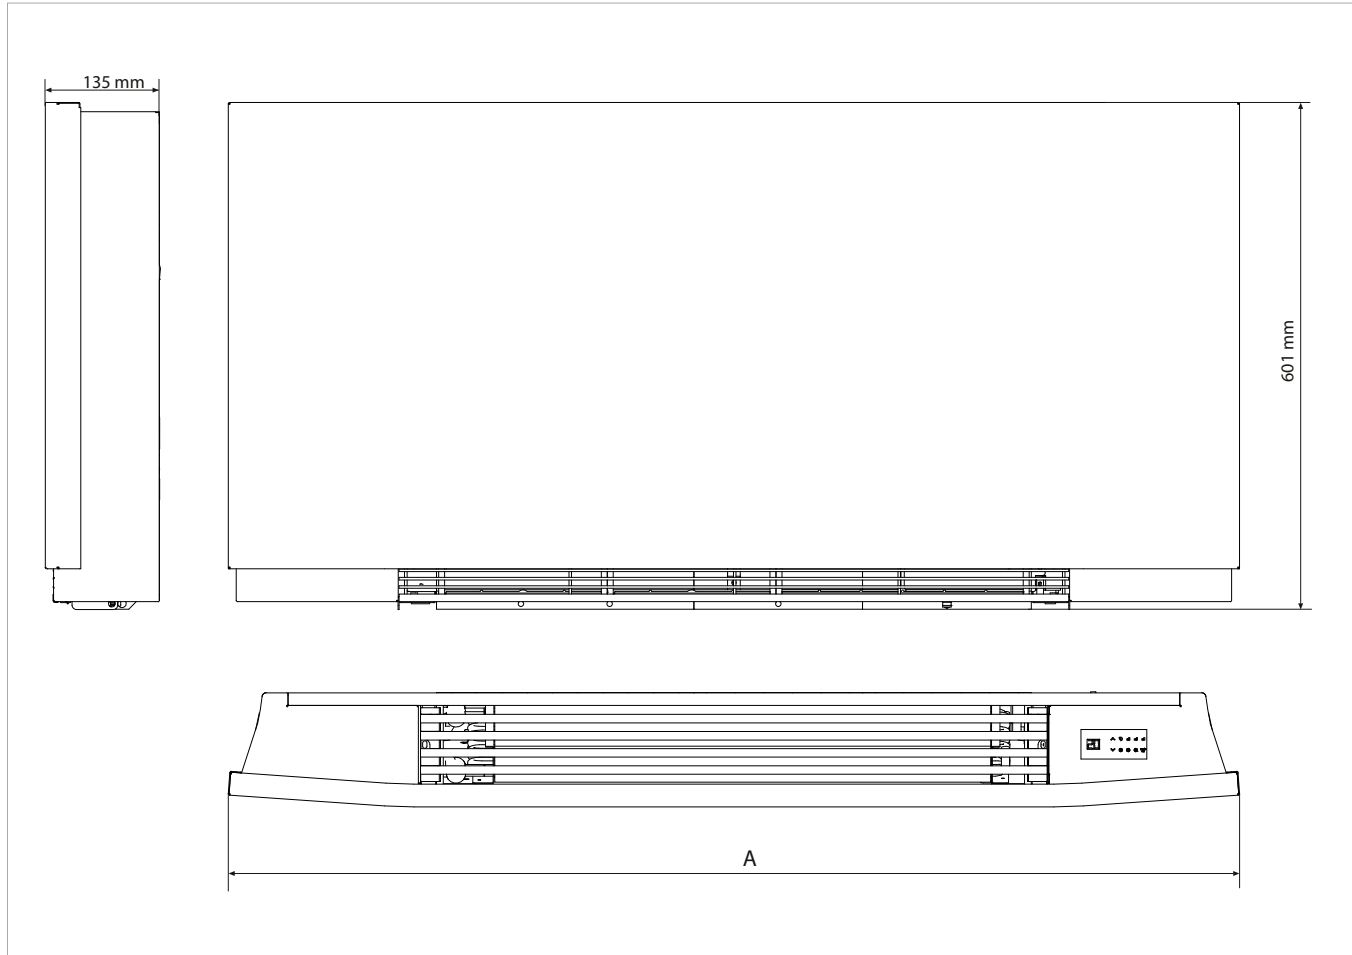

	U.M.	FWXM10AATV3(R)	FWXM15AATV3(R)	FWXM20AATV3(R)
<b>Dimensions</b>				
A	mm	578	778	978

**FWXM**

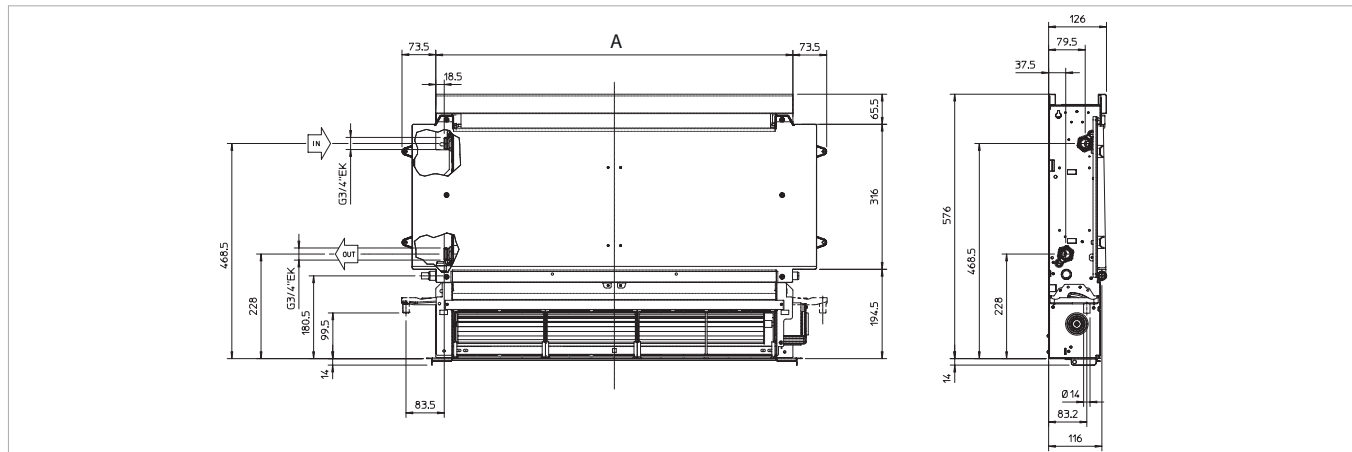

## INSTALLATION

### 2.1 Positioning the unit

- ⚠ Avoid installing the unit:
- in positions subject to exposure to direct sunlight;
  - in proximity to sources of heat;
  - in damp areas or places with probable contact with water;
  - in places with oil fumes
  - in places subject to high frequency radio waves.

- ⚠ Make sure that:
- the wall on which the unit is to be installed is strong enough to support the weight;

- the part of the wall interested does not have pipes or electric wires passing through;
- the interested wall is perfectly flat;
- there is an area free of obstacles which could interfere with the inlet and outlet air flow;
- the installation wall is preferably an outside perimeter wall to allow the discharge of the condensation outside;
- in case of ceiling installation (FWXM-series) the airflow is not directed towards persons.

### 2.2 Installation modes

The following descriptions of the various mounting phases and the relative designs refer to a version of the machine with fixtures on the left.

The operations for the mounting of machines with fixtures on the right (R) are exactly the same.


Only the images are to be considered as a mirror image. To ensure that the installation is performed correctly and

that the appliance will perform perfectly carefully follow the instructions indicated in this manual. Failure to respect the rules indicated not only can cause malfunctions of the appliance but will also invalidate the warranty and hence DAIKIN EUROPE N.V. shall not respond for any damage to persons, animals or property.

EN

### 2.3 Minimum installation space

Figure indicates the minimum mounting distances between the wall-mounted cooler-convactor and furniture present in the room.

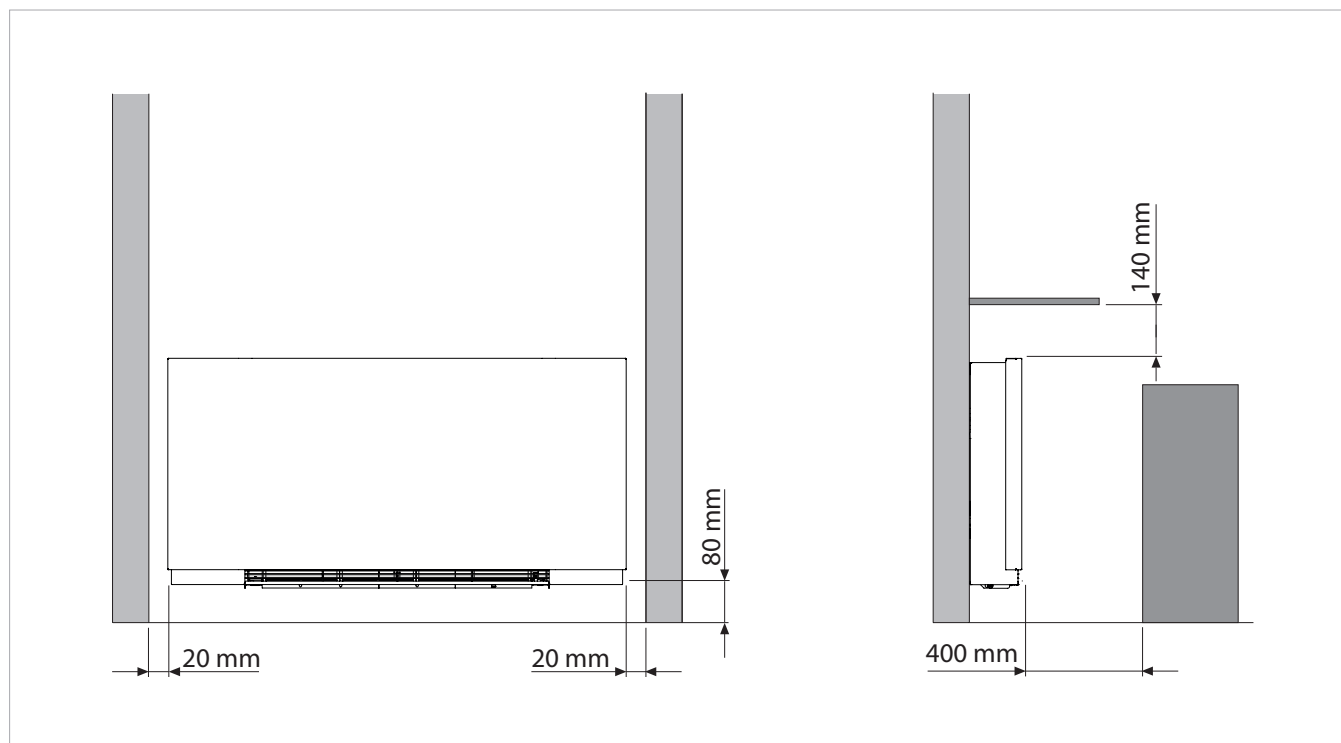

## 2.4 Access to the internal components

To access the inside of the machine, follow the procedures below.

Remove the upper grill:


- loosen the fixing screws of the upper grill
- remove the grill

Remove the front grill:

- extract the grill until it is completely out of the seat
- tilt the grill
- slide outwards

<b>A</b>	Fixing screws
<b>B</b>	Upper grill

<b>C</b>	Front panel
<b>D</b>	Front grill

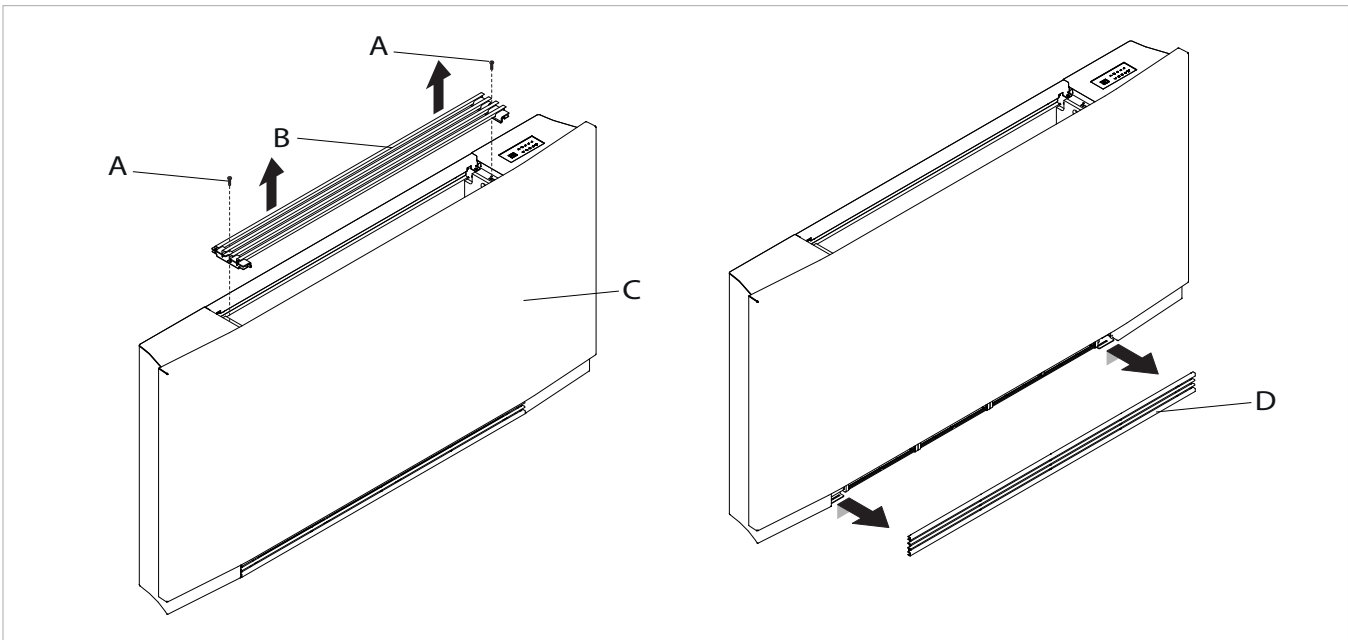


Remove the frontal panel:

- loosen the fixing screws
- remove the panel

<b>A</b>	Fixing screws
----------	---------------

<b>B</b>	Front panel
----------	-------------

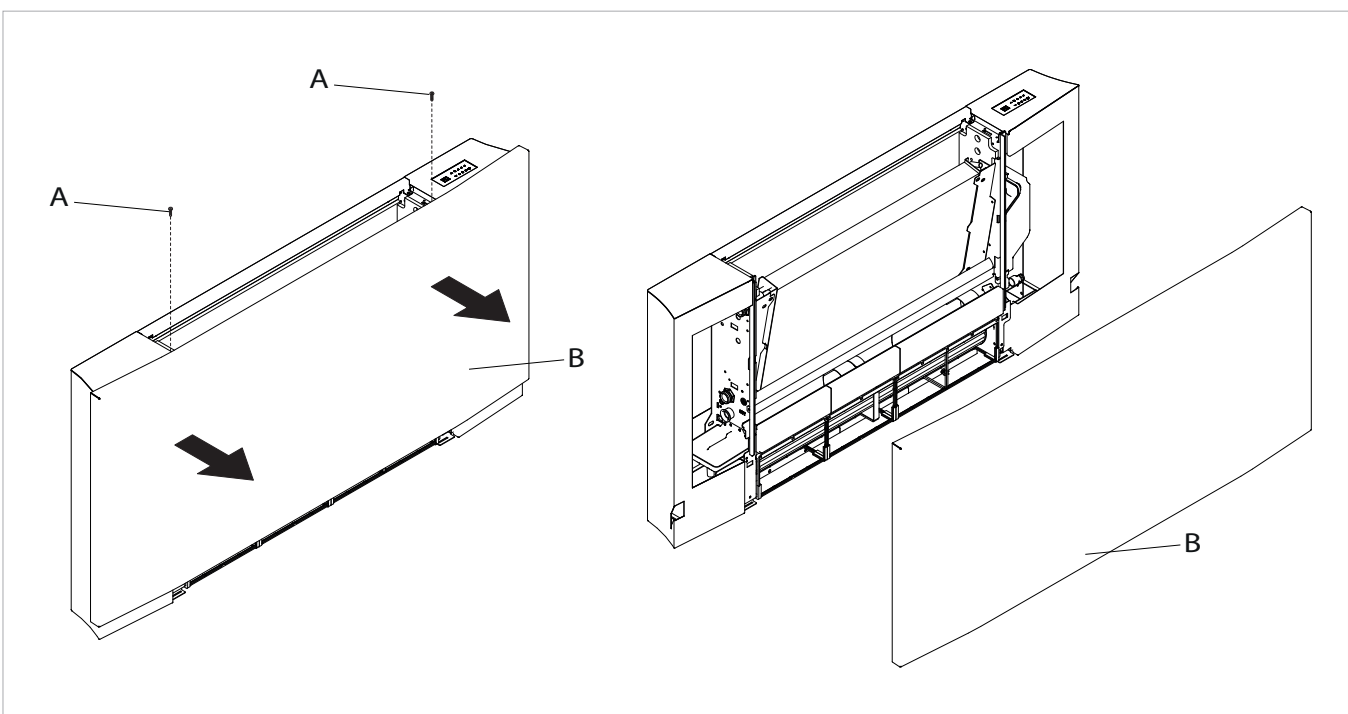




## 2.5 Removing the side panels

To remove the side:  
 - remove the sides upwards

<b>A</b>	Side
<b>B</b>	Machine body

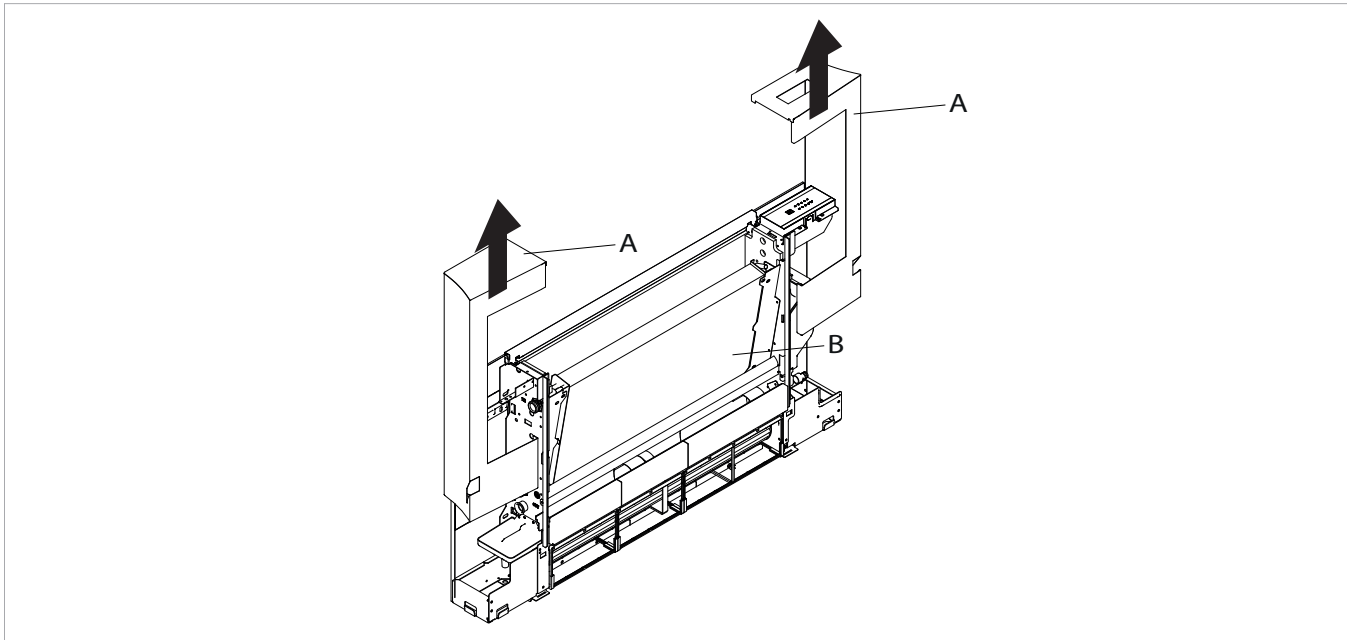

## 2.6 Vertical installation

Using the paper template, trace the position of the two fixing brackets on the wall. Use a suitable drill to make the holes with and insert the wall plugs (2 for each bracket); fix the two brackets. Do not over-tighten the screws so that the brackets can be adjusted with a spirit level. Install the unit at level (with a possible 1÷2% tolerance towards the drainage pipe to facilitate the flow of water).

Mount the unit, checking that it fits correctly onto the brackets and checking that it is stable.


**Note:** to facilitate the connection of the pipes to the fancoil connections, install a built-in box at the outlet of the pipes themselves.

The correct position of the box is indicated on the installation template.

Fully tighten the four screws to block the two brackets. Check the stability by manually moving the brackets to the right and to the left, up and down.

<b>A</b>	Wall plugs
----------	------------

<b>B</b>	Brackets
----------	----------

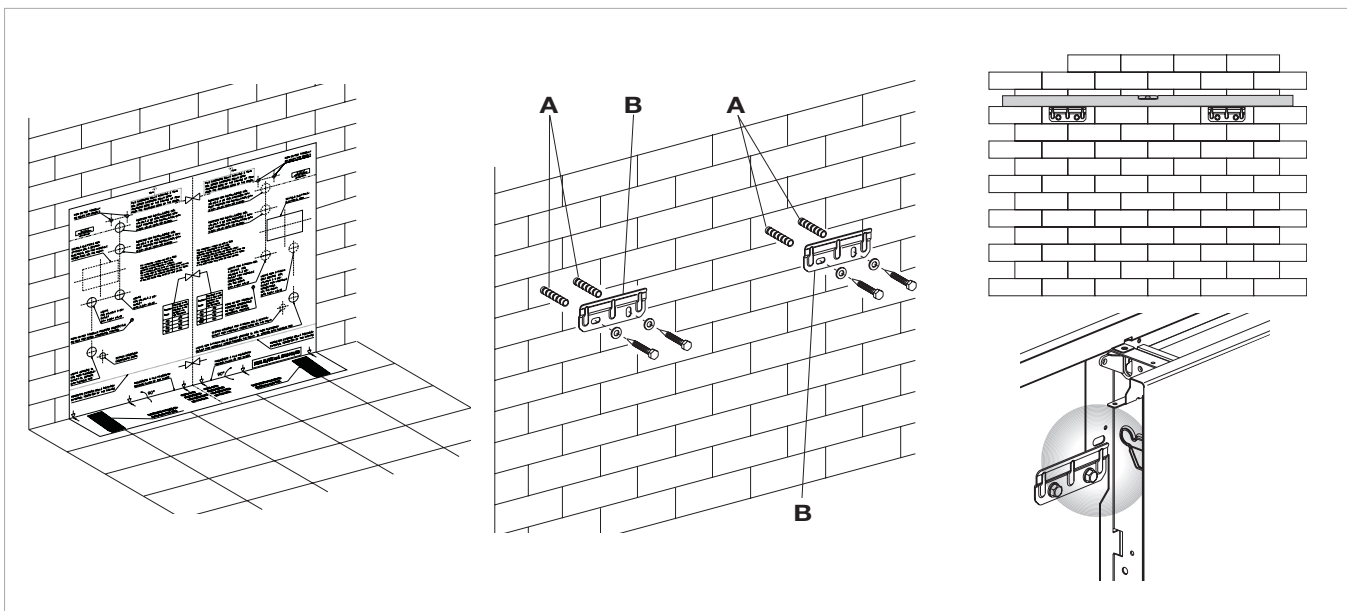

## 2.7 Horizontal or ceiling installation


Using the paper template, trace on the ceiling the position of the two fixing brackets and the two rear screws. Using a suitable drill, make the holes and insert the wall plugs (2 for each bracket); fix the two brackets. Do not over-tighten the screws. Position the machine on the two brackets, keeping it in position and then fix the two screws into the rear toggle bolts, one on each side. Install the unit at level (with a possible 1÷2% tolerance towards the drainage pipe to facilitate the flow of water).

For installation of the FWXV-series, horizontal condensation collection basin accessory kits are available EKM(10/15/20)COH.

**⚠** Carefully check the inclination of the exhaust pipe. Any counter slope of the discharge line can cause water leakage

<b>A</b>	Wall plugs
<b>B</b>	Brackets

<b>C</b>	Screws
<b>D</b>	Drainage pipe

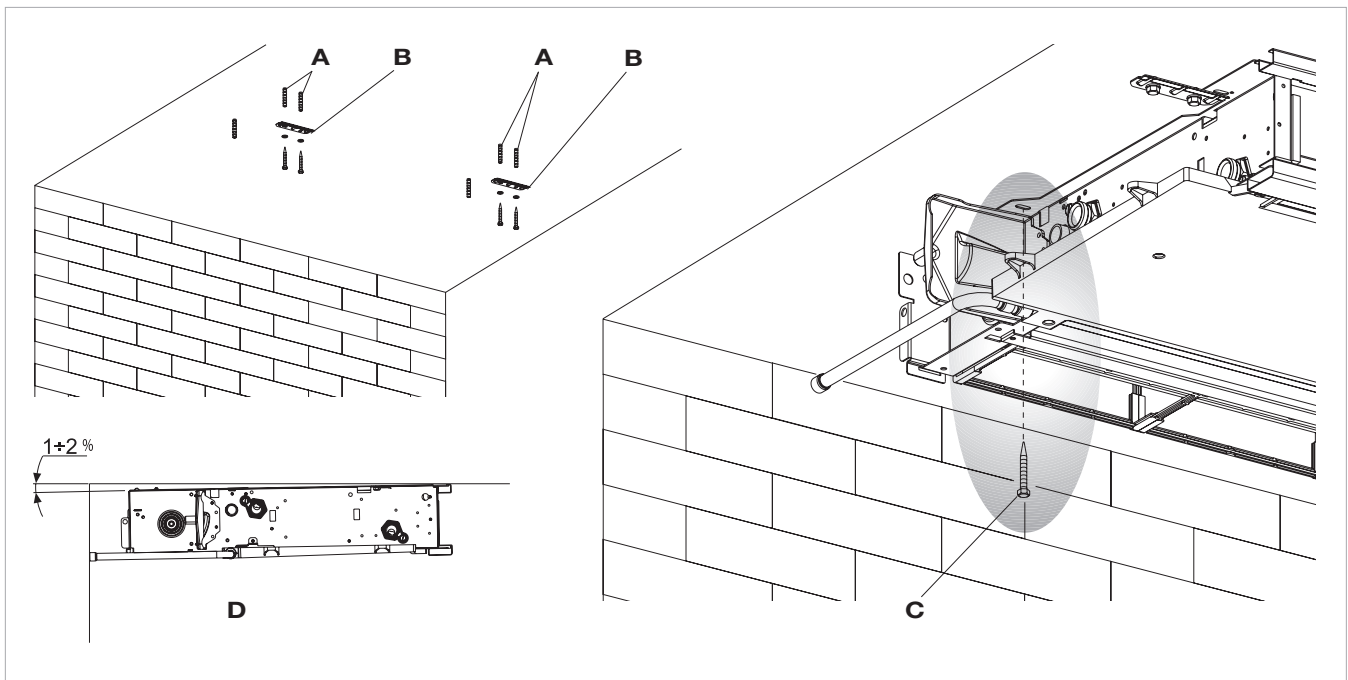

## 2.8 Hydraulic connections

	U.M.	FWX(V/M)10AATV3(R)	FWX(V/M)15AATV3(R)	FWX(V/M)20AATV3(R)
Pipeline diameter	mm	14	16	18

**NB:** the nominal diameter, unless otherwise indicated, always refers to the internal diameter.

To avoid the formation of surface condensation, it is always recommended to install electric valve kits, except in the case where an electrical control (eg electrothermal head) is provided upstream of the appliance. The choice and sizing of the hydraulic lines must be made by an expert who must operate according to the rules of good technique and the laws in force, taking into account that undersized pipes cause a malfunction.

To make the connections:

- position the hydraulic lines
- tighten the connections using the “spanner and counter spanner” method
- check for any leaks of liquid
- coat the connections with insulating material.

**⚠** The hydraulic lines and joints must be thermally insulated.

**⚠** Avoid partially insulating the pipes.

**⚠** Do not over-tighten to avoid damaging the insulation.

**⚠** Use hemp and green paste to seal the threaded connections; the use of Teflon is advised when there is anti-freeze in the hydraulic circuit.

## 2.9 Condensation discharge

The condensation discharge network must be suitably sized and the pipeline positioned so that it keeps a constant inclination, never less than 1%. In the vertical installation, the discharge pipe is connected directly to the discharge tray, positioned at the bottom of the side shoulder underneath the hydraulic fixtures. In a horizontal installation the discharge tube is connected to the one already present on the machine.

- If possible, make the condensation liquid flow directly in a gutter or a "rainwater" discharge.
- When discharging directly into the main drains, it is advisable to make a siphon to prevent bad smells returning up the pipe towards the room. The curve of the siphon must be lower than the condensation collection bowl.
- If the condensation needs to be discharged into a container, it must be open to the atmosphere and the tube must not be immersed in water to avoid problems of adhesiveness and counter-pressure that would interfere with the normal outflow.

- If there is a height difference that could interfere with the outflow of the condensation, a pump must be mounted:
  - in a vertical installation mount the pump under the lateral drainage tray;
  - in a horizontal installation the pump position must be decided according to the specific requirements.
- Such pumps are commonly found in commerce.

However, on completion of the installation it is advisable to check the correct outflow of the condensation liquid by slowly pouring about ½ l of water into the collection tray in about 5-10 minutes.


### Mounting the condensation discharge pipe in the vertical version

Connect to the condensation collection tray discharge union a pipe for the outflow of the liquid blocking it

adequately. Check that the drip-collector extension is present and correctly installed.

<b>A</b>	Discharge fitting
<b>B</b>	Tube for the outflow of the liquid - Ø14 mm

<b>C</b>	Extension drip
----------	----------------

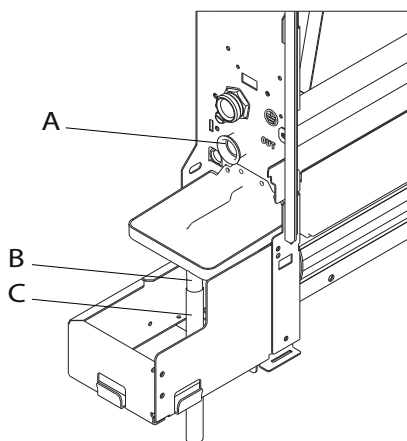

EN

**Mounting the condensation discharge pipe in the horizontal version**

To mount the horizontal bowl on the FWXM-series refer to the instructions in kits EKM(10/15/20)COH.


- check that the "L" pipe and the flexible rubber hose are correctly connected to the bowl.
- slide in the side of the machine keeping the pipe in position up against the front grill.
- fully close the side checking that the pipe remains blocked in the special groove on the side.

N.B. for the horizontal installation carefully note the following precautions:

- make sure that the machine is installed perfectly level or with a slight inclination towards the condensation discharge;
- insulate carefully the inflow and outflow pipes up to the machine union to prevent any drops of condensation outside the same collection bowl;
- insulate the bowl condensation discharge pipe along all of its length.

**A** Connection pipes - Ø14 mm

**B** Discharge

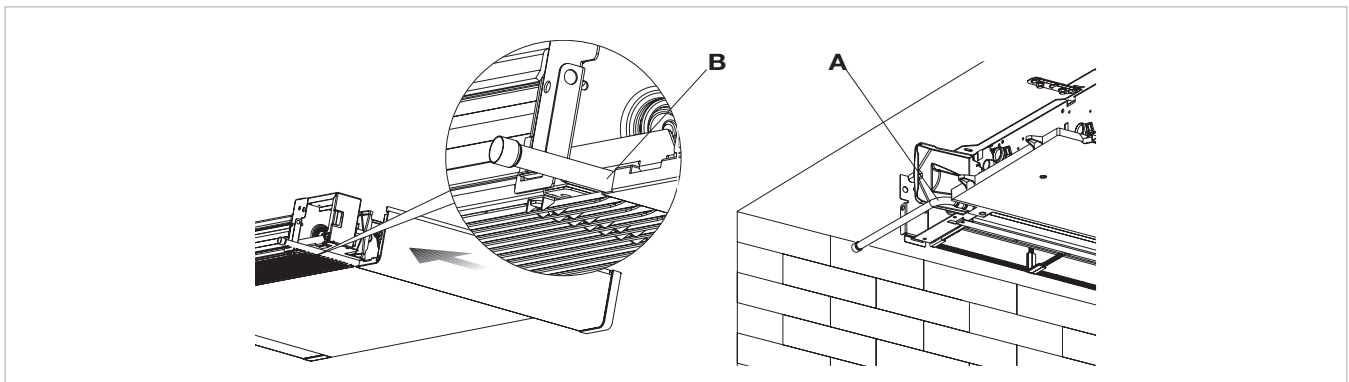

**2.10 Filling the system**

When starting up the system, make sure that the hydraulic unit lockshield is open. If there is no electric power and the

thermo-valve has already been powered use the special cap to press the valve stopper to open it.

**2.11 Evacuating air while filling the system**


- Open all the shut off valves (manual or automatic);
- Start the filling by slowly opening the system water filling tap;
- For the unit installed in a vertical position, take a screwdriver and open the highest breather of the heat exchanger; for appliances installed in a horizontal position, open the highest positioned breather.

- When water starts coming out of the breather valves of the appliance, close them and continue filling until reaching the nominal value for the system.

Check the hydraulic seal of the gaskets.

It is advisable to repeat these operations after the appliance has been running for a few hours and periodically check the pressure of the system.

**A** Breather

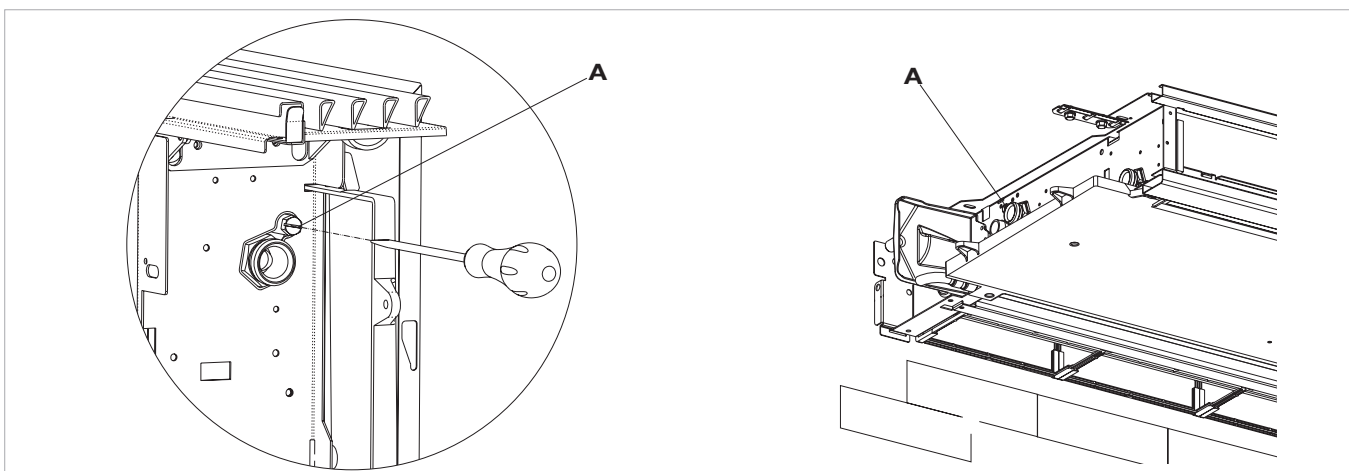

## 2.12 Electrical connections

Make electrical connections according to the requirements set out in sections General Warnings and Fundamental Safety Rules by reference to the patterns present in the installation and accessories manuals.

Before doing any work, make sure the power is switched off.

The unit must be connected to the mains through a multipolar switch with minimum contact opening of at least 3mm or with a device that allows the complete disconnection from the device under the overvoltage conditions category III.

## 2.13 Maintenance

Routine maintenance is indispensable to keep the heat pump convector in perfect working condition, safe and reliable over the years. This can be done every six months

for some interventions and annually for others, by the Technical Service Assistance, technically authorised and prepared, using always original spare parts.


## 2.14 Cleaning the outside

⚠ Before every cleaning and maintenance intervention, disconnect the appliance from the mains by switching off the master switch.

⚠ Wait until the parts have cooled down to avoid the risk of burns.

⚠ Do not use abrasive sponges or abrasive or corrosive detergents to avoid damaging the painted surfaces.

When necessary, clean the outer surfaces of the heat pump convector with a soft damp cloth.

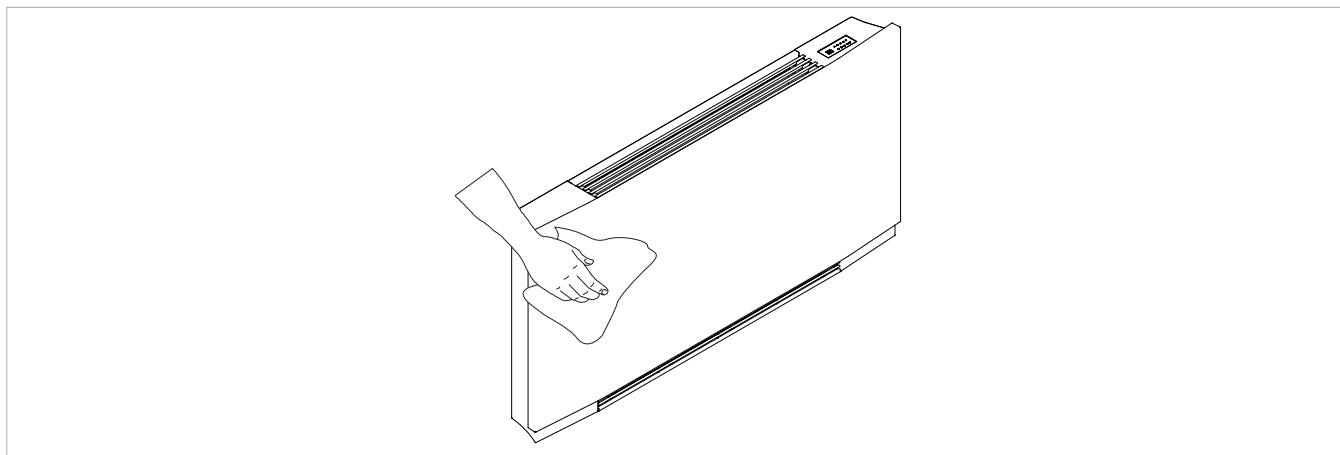

**2.15 Cleaning air suction filter**

After a period of continuous operation and in consideration of the concentration of impurities in the air, or when

he intends to restart the unit after a period of inactivity, proceed as described.

**Extraction of filter cells**


To remove the grill:

- lift the grill until it is completely released from the seat
- tilt the grill and slide it outwards

- then remove the filter by pulling it outwards

<b>A</b>	Front grill
<b>B</b>	Grill hook

<b>C</b>	Filter
----------	--------

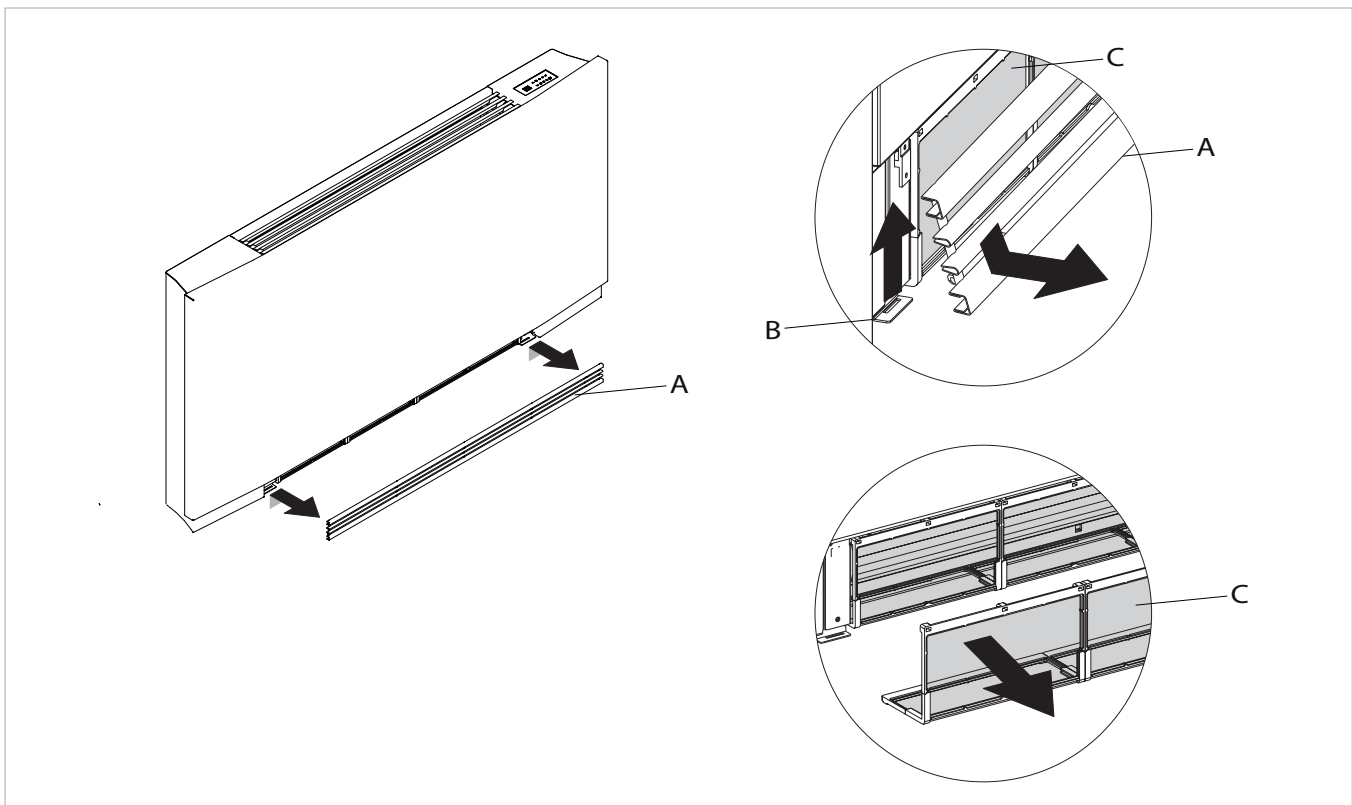


**Cleaning filtering seats**

- suck up the dust with a vacuum cleaner
- wash the filter with running water without using detergents or solvents, and leave to dry.

**⚠** The appliance is fitted with a safety switch that prevents the operation of the fan with the mobile panel missing or out of position.

**⊘** It is forbidden to use the unit without the net filters.

**⚠** After finishing the cleaning of the filter, check that the panel is mounted correctly.

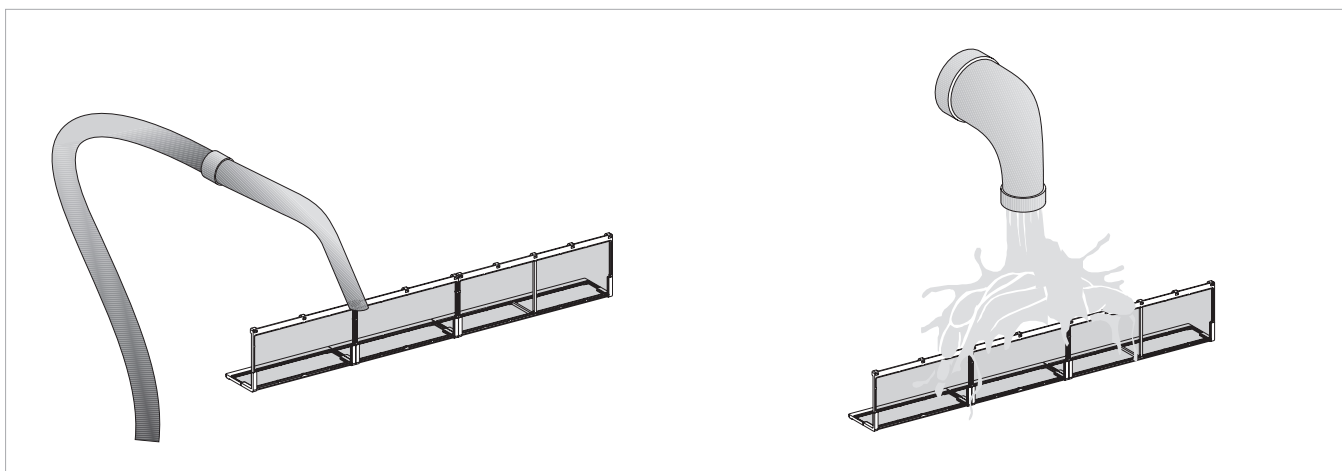


EN

**Ending Cleaning Operations**

- For the versions with a grill with flaps, insert the two lugs into the special slots, turn it and hook it up with a slight tap on the upper part.

<b>A</b>	Filter
<b>B</b>	Grill hook

<b>C</b>	Front grill
<b>D</b>	The filter housing

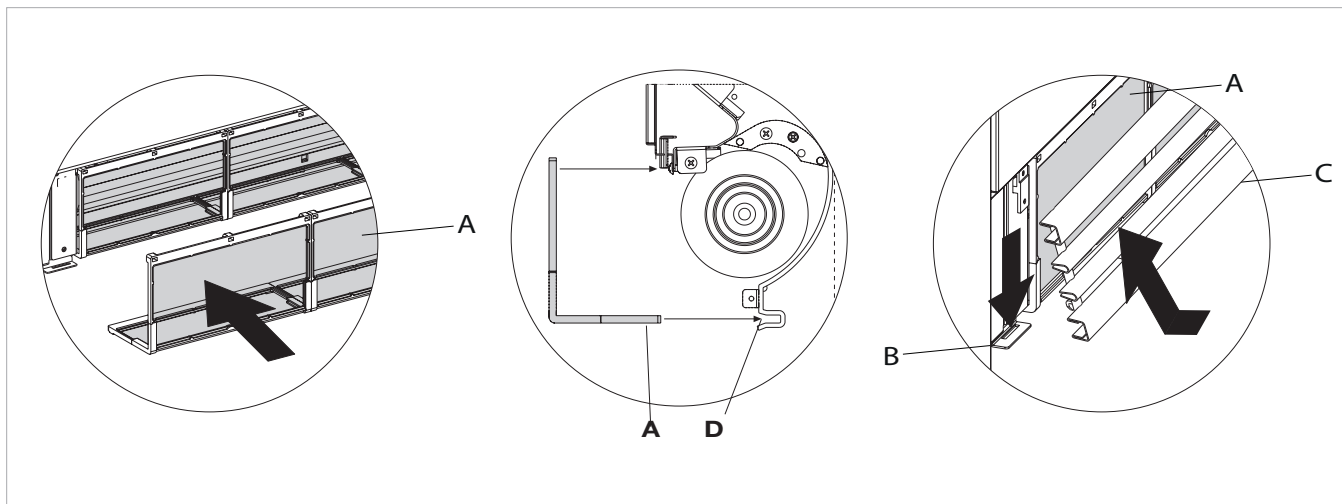

**2.16 Energy saving tips**

- Always keep the filters clean;
- when far possible, keep the doors and windows closed in the room being conditioned;
- limit where possible the effect of direct sun rays in the rooms being conditioned (use curtains, shutters etc.)

## TROUBLESHOOTING

### 3.1 Troubleshooting

- ⚠ In case of water leaks or anomalous functioning immediately cut off the power supply and close the water taps.
- ⚠ Should one of the following anomalies occur, contact an authorised service centre or an authorised qualified person, but do not intervene personally.
  - The ventilation does not activate even if there is hot or cold water in the hydraulic circuit.
  - The appliance leaks water during the heating function.
  - The appliance leaks water only during the cooling function.
  - The appliance makes an excessive noise.
  - There are formations of dew on the front panel.

### 3.2 Table of anomalies and remedies

The interventions must be carried out by a qualified installer or by a specialised service centre.

Effect	Cause	Remedy
A delayed activation of the ventilation respect to the new temperature or function settings.	The circuit valve needs some time to open and as a result the hot or cold water takes time to circulate in the appliance.	Wait for 2 or 3 minutes to open the circuit valve.
The appliance does not activate the ventilation.	No hot or cold water in the system.	Check that the water boiler or cooler are functioning correctly.
The ventilation does not activate even if there is hot or cold water in the hydraulic circuit.	The hydraulic valve remains closed.	Dismount the valve body and check if the water circulation is restored. Check the working efficiency of the valve by powering it separately with 230V. If it activates the problem could be the electronic control.
	The fan motor is blocked or burnt out.	Check the windings of the motor and the free rotation of the fan.
	The micro-switch that stops the ventilation when the filter grill is opened does not close correctly.	Check that by closing the grill the micro-switch contact is activated.
	The electrical connections are not correct.	Check the electrical connections.
The appliance leaks water during the heating function.	Leaks in the hydraulic connections of the system.	Check the leak and fully tighten the connections.
	Leaks in the valve unit.	Check the state of the gaskets.
There are formations of dew on the front panel.	Thermal insulation detached.	Check the correct positioning of the thermo-acoustic insulation paying attention to that in the front above the finned heat exchanger.
There are drops of water on the air outlet grill.	In situations of high humidity (>60%) condensation could form, especially at the minimum ventilation speeds.	As soon as the humidity starts falling the phenomenon disappears. In any case the presence of a few drops of water in the appliance does not indicate a malfunction.



<b>Effect</b>	<b>Cause</b>	<b>Remedy</b>
The appliance leaks water only during the cooling function.	The condensation bowl is blocked.	Slowly pour a bottle of water in the low part of the battery to check the drainage; if necessary, clean the bowl and/or increase the inclination of the drainage pipe.
	The condensation discharge does not need an inclination for correct drainage.	
	The connection pipes and the valve unit are not insulated well.	Check the insulation of the pipes.
The appliance makes a strange noise.	The fan touches the structure.	Check the clogging of filters and clean them if necessary
	The fan is unbalanced.	The unbalancing causes excessive vibrations of the machine; replace the fan.
	Check the clogging of filters and clean them if necessary	Clean the filters





**DAIKIN EUROPE N.V.**

Zandvoordestraat 300, B-8400 Oostende, Belgium

Copyright 2019 Daikin

cod. N420249A - 03