

PUMY-P Series CITY MULTI Indoor Unit Compatibility Table for PUMY-P200

Series	Type	Model Name	Capacity													
			P10	P15	P20	P25	P32	P40	P50	P63	P71	P80	P100	P125	P140	P200
CITY MULTI series	1-way cassette	PMFY-P-VBM-E			●	●	●	●								
	2-way cassette	PLFY-P-VLMD-E			●	●	●	●	●	●			●	●	●	
		PLFY-M-VEM-E			●	●	●	●	●	●			●	●	●	
	4-way cassette	PLFY-M-VEM6-E			●	●	●	●	●	●	●		●	●	●	
		PLFY-P-VFM-E		●	●	●	●	●	●	●						
	Ceiling-concealed	PEFY-P-VMR-E-L/R			●	●	●									
		PEFY-P-VMS1-E		●	●	●	●	●	●	●						
		PEFY-M-VMA-A(1)			●	●	●	●	●	●	●	●	●	●	●	●
		PEFY-P-VMHS-E								●	●	●	●	●	●	●
	Ceiling-suspended	PEFY-P-VMHS-E-F														●
		PCFY-P-VKM-E							●		●			●	●	
	Wall-mounted	PKFY-P-VLM-E	●	●	●	●	●	●	●							
		PKFY-P-VKM-E									●			●		
	Floor-standing	PFFY-P-VKM-E2			●	●	●	●								
		PFFY-P-VLEM-E			●	●	●	●	●	●						
		PFFY-P-VLRM-E			●	●	●	●	●	●	●					
		PFFY-P-VLRMM-E			●	●	●	●	●	●	●					
PFFY-P-VCM-E				●	●	●	●	●	●	●						
Lossnay *2			GUF-50/100RD(H)4													

*1 Note that connection is not allowed inside EU countries and UK.
 PWFY can not connect to PUMY-P200YKM2.
 *2 Do not connect Lossnay remote controller(s). (PZ-61DR-E, PZ-60DR-E, PZ-52SF-E, PZ-43SMF-E)

PUMY-P Series Branch Box/LEV Kit Connection Compatibility Table for PUMY-P250/300

Series	I/U Type	Model Name	Capacity							
			15	18	20	22	25	35	42	50
M Series	Wall-mounted	MSZ-LN-VG2					●	●		●
		MSZ-AP-VG(K)	●		●		●	●	●	
		MSZ-FH-VE2					●	●		●
		MSZ-EF-VG(K)		●		●	●	●	●	
	Floor-Standing	MFZ-KT-VG					●	●		●

PUMY-P Series CITY MULTI Indoor Unit Compatibility Table for PUMY-P250/300

Series	Type	Model Name	Capacity													
			P10	P15	P20	P25	P32	P40	P50	P63	P71	P80	P100	P125	P140	P200
CITY MULTI series	1-way cassette	PMFY-P-VBM-E			●	●	●	●								
	2-way cassette	PLFY-P-VLMD-E			●	●	●	●	●	●			●	●	●	
		PLFY-M-VEM-E			●	●	●	●	●	●			●	●	●	
	4-way cassette	PLFY-M-VEM6-E			●	●	●	●	●	●	●		●	●	●	
		PLFY-P-VFM-E		●	●	●	●	●	●							
	Ceiling-concealed	PEFY-P-VMR-E-L/R			●	●	●									
		PEFY-P-VMS1-E		●	●	●	●	●	●	●						
		PEFY-M-VMA-A			●	●	●	●	●	●	●	●	●	●	●	●
		PEFY-P-VMA-A1			●	●	●	●	●	●	●	●	●	●	●	●
	Ceiling-suspended	PEFY-P-VMHS-E							●	●	●	●	●	●	●	●
		PEFY-P-VMHS-E-F														●
	Ceiling-suspended	PCFY-P-VKM-E							●		●			●	●	
		Wall-mounted	PKFY-P-VLM-E	●	●	●	●	●	●	●						
	PKFY-P-VKM-E										●			●		
	Floor-standing	PFFY-P-VKM-E2			●	●	●	●								
		PFFY-P-VLEM-E			●	●	●	●	●	●						
		PFFY-P-VCM-E			●	●	●	●	●	●	●					
Lossnay *2			GUF-50/100RD(H)4													

*1 Do not connect Lossnay remote controller(s). (PZ-61DR-E, PZ-60DR-E, PZ-52SF-E, PZ-43SMF-E)