

# Air conditioner

# Installation manual

---

**AM\*\*\*DN6DKG**

---

- Thank you for purchasing this Samsung air conditioner.
- Before operating this unit, please read this manual carefully and retain it for future reference.

# Contents

---

<b>Safety Information</b>	<b>3</b>
<b>Installation Procedure</b>	<b>8</b>
Step 1 Checking and preparing accessories	8
Step 2 Choosing the installation location	8
Step 3 Optional: Insulating the body of the indoor unit	11
Step 4 Installing the indoor unit	11
Step 5 Purging inert gas from the indoor unit	13
Step 6 Cutting and flaring the pipes	13
Step 7 Connecting the assembly pipes to the refrigerant pipes	14
Step 8 Performing the gas leak test	15
Step 9 Insulating the refrigerant pipes	15
Step 10 Installing the drain hose and drain pipe	16
Step 11 Performing the drainage test	18
Step 12 Connecting the power and communication cables	19
Step 13 Optional: Extending the power cable	21
Step 14 Optional: LED Display indicator specifications when checking Wi-Fi Easy Setup and Wi-Fi status	23
Step 15 Setting the indoor unit addresses and the installation options	25
<b>Appendix</b>	<b>46</b>
<b>Troubleshooting</b>	<b>46</b>

# Safety Information

## WARNING





- Hazards or unsafe practices that may result in severe personal injury or death.

## CAUTION

- Hazards or unsafe practices that may result in minor personal injury or property damage.
- Carefully follow the precautions listed below because they are essential to guarantee the safety of the equipment.

## WARNING

- Always disconnect the air conditioner from the power supply before servicing it or accessing its internal components.
- Verify that installation and testing operations are performed by qualified personnel.
- Verify that the air conditioner is not installed in an easily accessible area.

Symbol	Meaning
	WARNING: Low burning velocity material (This appliance is filled with R-32.)
	Refer to operating manual
	Read operating manual
	Read installation and service manual

## WARNING

The installation and testing of this appliance must be performed by a qualified technician.

- The instructions in this manual are not intended as a substitute for proper training or adequate experience in the safe installation of the appliance.

Always install the air conditioner in compliance with current local, state, and federal safety standards.

Do not use means to accelerate the defrost operation or to clean, other than those recommended by Samsung.

Do not pierce or burn.

Be aware that refrigerants may not contain an odor.

## General information

### WARNING

- Carefully read the content of this manual before installing the air conditioner and store the manual in a safe place in order to be able to use it as reference after installation.
- For maximum safety, installers should always carefully read the following warnings.
- Store the operation and installation manual in a safe location and remember to hand it over to the new owner if the air conditioner is sold or transferred.
- The use of other types of units with different control systems may damage the units and invalidate the warranty. The manufacturer shall not be responsible for damages arising from the use of non compliant units.
- The manufacturer shall not be responsible for damage originating from unauthorized changes or the improper connection of electric and requirements set forth in the "Operating limits" table, included in the manual, shall immediately invalidate the warranty.
- The air conditioner should be used only for the applications for which it has been designed: the indoor unit is not suitable to be installed in areas used for laundry.
- Do not use the units if damaged. If problems occur, switch the unit off and disconnect it from the power supply.
- In order to prevent electric shocks, fires or injuries, always stop the unit, disable the protection switch and contact Samsung's technical support if the unit produces smoke, if the power cable is hot or damaged or if the unit is very noisy.
- Always remember to inspect the unit, electric connections, refrigerant tubes and protections regularly. These operations should be performed by qualified personnel only.
- The unit contains moving parts, which should always be kept out of the reach of children.
- After unpacking the air conditioner, keep all packaging materials well out of the reach of children, as packaging materials can be dangerous to children.
  - If a child places a bag over its head, it may result in suffocation.
- Do not attempt to repair, move, alter or reinstall the unit. If performed by unauthorized personnel, these operations may cause electric shocks or fires.
- Do not place containers with liquids or other objects on the unit.
- The packing material and exhaust batteries of the remote controller(optional) must be disposed of in accordance with current laws.

# Safety Information

- The air conditioner contains a refrigerant that has to be disposed of as special waste. At the end of its life cycle, the air conditioner must be disposed of in authorized centres or returned to the retailer so that it can be disposed of correctly and safely.
- Wear protective equipment (such as safety gloves, goggles, and headgear) during installation and maintenance work. Installation/repair technicians may be injured if protective equipment is not properly equipped.
- This unit is a partial unit air conditioner, complying with partial unit requirements of this International Standard, and must only be connected to other units that have been confirmed as complying with corresponding partial unit requirements of this International Standard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.  
Children should be supervised to ensure they do not play with the appliance.
- Do not install the product in a place where thermo-hygrostat is needed (such as server room, machinery room, computer room, etc.) Those places do not provide guaranteed operation condition of the product therefore performance can be poor in these places.
- Do not install the product in a ship or a vehicle (such as a campervan). Salt, vibration or other environmental factor may cause the product malfunction, electric shock or fire.
- Excessive indoor humidity or clogged condensate drain lines may cause water to drip from indoor units. Do not install the indoor unit where dripping could result in property damage, such as over electronic equipment or other sensitive instruments.
- Our units should be installed in compliance with the spaces shown in the installation manual, to ensure accessibility from both sides and allow repairs or maintenance operations to be carried out. The unit's components should be accessible and easy to disassemble without endangering people and objects. For this reason, when provisions of the installation manual are not complied with, the cost required to access and repair the units (in SAFETY CONDITIONS, as set out in prevailing regulations) with harnesses, ladders, scaffolding or any other elevation system will NOT be considered part of the warranty and will be charged to the end customer.
- If any gas or impurities, except R-32 refrigerant, come into the refrigerant pipe, a serious problem may occur and it may cause injury.  
Use the supplied accessories, specified components and tools for the installation.
  - Do not use the pipe and the installation product used for the R-410A refrigerant.
  - Failure to use the specified components can cause the product to fall, water leakage, electrical shock, and fire. (The pipe and flare components used for R-410A refrigerant must not be used)

## Installing the unit

**IMPORTANT:** When installing the unit, always remember to connect first the refrigerant tubes, then the electrical lines.

### WARNING

- Always disassemble the electric lines before the refrigerant tubes.
- Upon receipt, inspect the product to verify that it has not been damaged during transport. If the product appears damaged, DO NOT INSTALL it and immediately report the damage to the carrier or retailer (if the installer or the authorized technician has collected the material from the retailer.)
- During the transportation of the indoor unit, the pipelines shall be covered with brackets for protection. Do not move the product by holding the refrigerant or drain pipe connections.
  - It may cause gas leakage.
- After completing the installation, always carry out a functional test and provide the instructions on how to operate the air conditioner to the user.
- Do not use the air conditioner in environments with hazardous substances or close to equipment that release free flames to avoid the occurrence of fires, explosions or injuries.

## Power supply line, fuse or circuit breaker

### WARNING

- Always make sure that the power supply is compliant with current safety standards. Always install the air conditioner in compliance with current local safety standards.
- Always verify that a suitable grounding connection is available.
- Verify that the voltage and frequency of the power supply comply with the specifications and that the installed power is sufficient to ensure the operation of any other domestic appliance connected to the same electric lines.

- Always verify that the cut-off and protection switches are suitably dimensioned.
- Verify that the air conditioner is connected to the power supply in accordance with the instructions provided in the wiring diagram included in the manual.
- Always verify that electric connections (cable entry, section of leads, protections...) are compliant with the electric specifications and with the instructions provided in the wiring scheme. Always verify that all connections comply with the standards applicable to the installation of air conditioners.
- Devices disconnected from the power supply should be completely disconnected in the condition of overvoltage category.
- Fix the outdoor unit firmly so that the electric part of the outdoor unit is not exposed.
  - Failing to do so may result in electric shock or fire.
- Do not pull or excessively bend the power line. Do not twist or tie the power line. Do not hook the power line over a metal object, place a heavy object on the power line, insert the power line between objects, or push the power line into the space behind the appliance.
  - This may result in electric shock or fire.
- Use the power line with the power specifications of the product or higher and use the power line for this appliance only. In addition, do not use an extension line.
  - Extending the power line may result in electric shock or fire.
  - Do not use an electric transformer. This may result in electric shock or fire.
  - If the voltage/frequency/rated current condition is different, it may cause fire.
- Install the indoor unit away from lighting apparatus using the ballast.
  - If you use the wireless remote control, reception error may occur due to the ballast of the lighting apparatus.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons to avoid a hazard.
- This unit is equipped with electrically powered safety measure. For the safety measures to be effective, the unit must be electrically powered at all times after installation, other than when servicing.
- This unit is equipped with a leak detection system for safety. For leak detection to be effective, the unit must be electrically powered at all times after installation, other than when servicing.

## Precautions for using R-32 refrigerant

### General

- This product is pre-charged with mildly flammable gas classified as A2L. The following precautions and instruction manuals must be followed during installation, operation, servicing and decommissioning of the product.
- The appliance shall be stored in a room without continuously operating ignition sources, like open flames or a gas appliance or an electric heater.
- All national and local regulations shall be observed at all times.
- All pipe-work including piping material, pipe routing and installation shall include protection from physical damage in operation and service, and comply with national and local codes and standards. All field joints shall be accessible for inspection before being covered or enclosed.
- All field piping and joints shall be pressure tested with an inert gas according to prevalent industry standards before refrigerant charging and system commissioning.
- Where additional field charging is required. The installer shall write with a permanent marker the field charge added on the ODU label provided, such that the Total Charge = Factory 'Pre-charge' + field charge.
- For ducted systems, any auxiliary systems that are potential ignition sources shall not be installed in the duct work. Examples of ignition sources are hot surfaces with temperatures exceeding 700°C and electric switching devices.
- Any auxiliary device installed must be approved by Samsung and must be suitable for operating with the refrigerant marked on the label.

### CAUTION

- Make sure that you earth the cables.
  - Do not connect the earth wire to the gas pipe, water pipe, lighting rod or telephone wire. If earthing is not complete, electric shock or fire may occur.
- Install the circuit breaker.
  - If the circuit breaker is not installed, electric shock or fire may occur.
- Make sure that the condensed water dripping from the drain hose runs out properly and safely.
- Install the power cable and communication cable of the indoor and outdoor unit at least 1m away from the electric appliance.

# Safety Information

---

- For mechanical ventilation the lower edge of the air extraction opening shall not be more than 100mm above the floor. The exhaust location outside the building must be at least 3 m away from the building opening and mechanical air intake openings.
- To handle, purge, and dispose of the refrigerant, or break into the refrigerant circuit, the worker should have a certificate from an industry-accredited authority.
- Non-ducted systems may be installed in areas such as false ceilings not being used as return air plenum if the conditioned air does not mix with the air in the false ceilings.
- For ducted appliances false ceilings or drop ceilings may be used as return air plenum if a refrigerant leak detection system is provided in the system and any external connections are also provided with a sensor immediately below the return air plenum duct joint.
- Installation, servicing, and any type of maintenance or repair must be performed by certified personnel who are competent to carry out such activity following national and local regulations.

## General information on Servicing

---

- Do not work in a confined space. Ensure adequate ventilation is provided at the workspace during the entirety of the duration of the work to safely disperse any released refrigerant.
- All maintenance staff and others working in the local area shall be instructed on the nature of the work being performed and instructed to follow all instructions provided by Samsung, national and local authorities.
- The area shall be checked with an approved refrigerant detector before and during any work on the system.
- Have a dry CO<sub>2</sub> fire extinguisher adjacent to the charging area and workspace.
- The service personnel shall not use any ignition sources in a manner that may lead to the risk of fire or explosion.
- Potential ignition sources shall be kept away from the work area where the flammable refrigerant can be released into the surrounding area.
- The work area should be checked to ensure that there are no flammable hazards or ignition risks. The "No Smoking" sign shall be attached.
- Under no circumstances shall potential sources of ignition be used upon detection of leakage.

The following checks shall be applied to installations and maintenance operations.

- The actual total refrigerant charge is in accordance with the room size.
- The ventilation machinery and outlets are operating adequately and are not obstructed.
- Markings on the equipment are visible and legible.
- Refrigerant pipes or components are installed in a position where they are unlikely to be exposed to any substance that may corrode refrigerant containing components.

Initial checks of electrical devices shall include the following.

- that capacitors are discharged safely to avoid sparking.
- that no live electrical components and wiring are exposed while charging, recovering or purging the system.
- That there is continuity to earth bonding.
- Check that cabling is not worn, corroded or damaged in any manner.

## Electrical repair safety measures

---

- All electrical components used or replaced must be to Samsung's specifications.
- If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily dealt with.
- Sealed electrical components and intrinsically safe components shall be replaced and not repaired.
- Cabling should be protected from excessive vibration, pressure, sharp edges, and other adverse environmental factors.

## Detection of flammable refrigerants

---

- Electronic leak detectors shall be used to detect flammable refrigerants, but the sensitivity may not be adequate or may need re-calibration. (Detection equipment shall be calibrated in a refrigerant-free area.)
- Make sure that the detector is not a potential source of ignition.
- Leak detection equipment shall be set at a percentage of the LFL (Lower flammable limit) of the refrigerant and shall be calibrated to the refrigerant employed and the appropriate percentage of gas (25% maximum) is confirmed.
- The use of detergents containing chlorine shall be avoided for cleaning because the chlorine may react with the refrigerant and corrode the piping.
- If leakage is suspected, naked flames shall be removed.

- If a leakage is found while brazing, the entire refrigerant shall be recovered from the product or isolated (e.g. using shut-off valves). It shall not be directly released into the environment. Oxygen-free nitrogen (OFN) shall be used for purging the system before and during the brazing process.
- The work area shall be checked with an appropriate refrigerant detector before and during work.
- Ensure that the leakage detector is appropriate for use with flammable refrigerants.

## Removal and Evacuation

- When removing refrigerant for servicing it is recommended to remove the entire quantity.
- When removing refrigerant follow local and national regulations and follow best practices including;
  - evacuate;
  - purge the circuit with inert gas (optional for A2L);
  - evacuate (optional for A2L);
  - continuously flush or purge with inert gas when using a flame to open the circuit; and
  - open the circuit.
- Use proper recovery cylinders appropriate for the type of refrigerant.
- Follow prescribed industry best practices for purging and evacuation.
- Oxygen free nitrogen shall be used for purging the system.

## Charging procedure

- Follow industry standard refrigerant charging best practices.
- Before recharging the system shall be pressure tested with oxygen free nitrogen gas.
- Ensure that contamination of different refrigerants does not occur when charging.
- Cylinders shall be kept in the appropriate position as per instructions.
- The refrigerant system should be grounded before charging the system.
- Label the system when charging is completed.
- Take extreme care not to overfill the refrigeration system.
- The system shall be leak tested on completion of charging before commissioning.

## Decommissioning

- Only qualified licensed professionals shall perform refrigerant recovery and decommissioning.
- Isolate the system electrically.
- All recovery equipment and cylinders shall conform to appropriate standards. Only approved cylinders, with pressure relief valves, for the type of refrigerant shall be used.
- Recover refrigerant following industry standard procedure for flammable refrigerants.
- When draining compressors oil care must be taken that there is no flammable refrigerant in the compressor and that the compressor is not hot. Oil should be handled according to local and federal regulations.
- After decommissioning, the system shall be labeled stating that it has been decommissioned. The label shall be dated and signed. The label should state that it "contains flammable refrigerant".
- Ensure that there are labels on the equipment indicating the equipment contains flammable refrigerant.
- Recovered refrigerant shall not be mixed or reused. It shall be processed according to national, state and local regulations.









## About Refrigerant Detection System(RDS)

- This system includes a refrigerant detection system (RDS) and automatic leak mitigation controls.
- When a leak is detected, the RDS will stop the compressor and energize the indoor unit(s) fan for air circulation to disperse the leaked gas and display an error code .
- The RDS sensor does automatic self-test each hour and does not require any periodic maintenance.
- The sensor should be replaced upon end of life when error code E700 is displayed.
- For complete replacement instructions, please refer to the Service Manual.
- The RDS sensor must only be replaced with sensors as specified by Samsung. Sensor replacement must be performed by a certified technician.

# Installation Procedure

## Step 1 Checking and preparing accessories

The following accessories are supplied with the indoor unit. The type and quantity may differ, depending on the specifications.

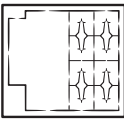Insulation pipe (3 ea) 	Cable-tie (6 ea) 
Drain hose (1 ea) 	Installation manual (1 ea) 
Clamp (1 ea) 	User manual (1 ea) 
Installation template (1 ea) 	Dimension gauge (1 ea) 

## Step 2 Choosing the installation location

### Installation location requirements

- There must be no obstacles near the air inlet and outlet.
- Install the indoor unit on a ceiling that can support its weight.
- Maintain sufficient clearance around the indoor unit.
- Before installing the indoor unit, be sure to check whether the chosen location is well-drained.
- The indoor unit must be installed such that it is beyond public access and is not touchable by users.
- Rigid wall without vibration.
- Where it is not exposed to direct sunshine.
- Where the air filter can be removed and cleaned easily.
- A location where animals cannot access and urinate on the product. Ammonia may be generated.
- The amount of refrigerant to add differs, depending on the installation conditions (e.g., the total piping length and the indoor unit combination), and the minimum indoor-unit installation area depends on the final amount of refrigerant.  
Be sure to install by referring to the minimum indoorunit installation area depending on the final refrigerant amount, provided in the refrigerant amount table in the outdoor unit installation manual.

### WARNING

- Because your air conditioner contains R-32 refrigerant, make sure that it is installed, operated, and stored in a room whose floor area is larger than the minimum required floor area specified.

### CAUTION

- IMPORTANT: It's mandatory to either Follow the table in the Outdoor Unit Installation Manual or follow the federal, state, and/or local regulations regarding the minimum room area allowed for the total refrigerant charge in the system.
- Minimum installation height of indoor unit is 1.8 m for wall, 2.5 m for ceiling, 2.2 m for Ducted.
- Units cannot be installed at heights that typically exceed 2.5m.
- R-32-exclusive wired remote control: Equipped with a safety alarm
- Outdoor unit (AM\*\*\*DXMD\*G/EU): Equipped with a shut-off valve
  - Outdoor unit (AM\*\*\*HCVANG/EU, AM\*\*\*HCVGNS/EU) : Not equipped with a shut-off valve.(Equipped on MCU or SVB unit)

## Do not install the air conditioner in the following places.


- A place where there is mineral oil or arsenic acid. resin parts flame and the accessories may drop, or water may leak. The capacity of the heat exchanger may be reduced, or the air conditioner may be out of order.
- A place with exposure to mineral oil, oil vapor or a cooking area where there is spray (If oil adheres to the heat exchanger, performance degradation, spray or condensation scattering may occur. If oil adheres to a plastic component, the component may deform or get damaged. Such issues may result in a system failure or refrigerant leak.)
- A place with aromatic diffusers, aromatherapy, scented candles or perfumes as the chemicals may react to the product's materials and may result in system failure or refrigerant leaks.
- The place where corrosive gas such as sulphuric acid gas is generated from the vent pipe or air outlet.
- The copper pipe or connection pipe may corrode and the refrigerant may leak.
- The place where there is a machine that generates electromagnetic waves. The air conditioner may not operate normally due to the control system.
- The place where there is a danger of existing combustible gas, carbon fiber or flammable dust.
- The place where thinner or gasoline is handled. Gas may leak and it may cause fire.
- The place that is close to heat sources.
- Do not use the indoor unit for the preservation of food items, plants, equipment, and artwork. This may cause deterioration of their quality.
- Do not install the indoor unit if it has any drainage problems.

## Indoor unit dimensions

(Unit: mm)

Category	Square panel	Circular panel
Front		
Large		
Small		

# Installation Procedure

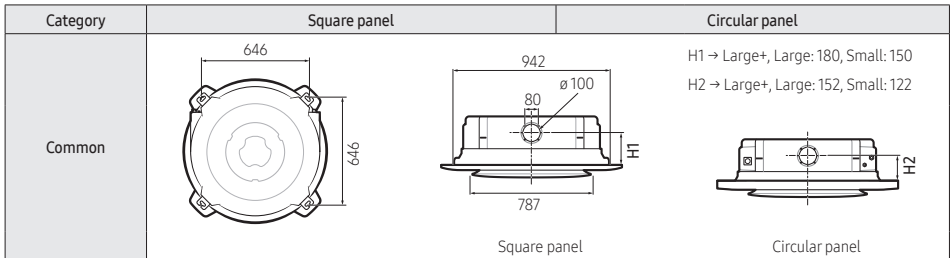


Model	AM045DN6DKG AM056DN6DKG	AM071DN6DKG AM090DN6DKG	AM112DN6DKG AM128DN6DKG AM140DN6DKG
Chassis	Small		Large
Net dimension (W x H x D)	947 x 281 x 947		947 x 365 x 947
Liquid pipe connection	6.35		9.52
Gas pipe connection	12.70		15.88
Drain hose connection	outer diameter : 32, inner diameter : 25 (VP25)		

- The circular panel is by default available in exposed installation.
- Make inspection holes on the ceiling for easier installation and maintenance, as shown in the following table. (The size of an inspection hole must be at least 450 mm x 450 mm.)
- A suspended ceiling structure can substitute for the inspection holes.

- For the recessed installation of the circular panel



Category	Inspection hole		
	Recessed installation		Exposed installation
	Integrated	suspended	
Square panel	1 ea		
Circular panel	2 ea		

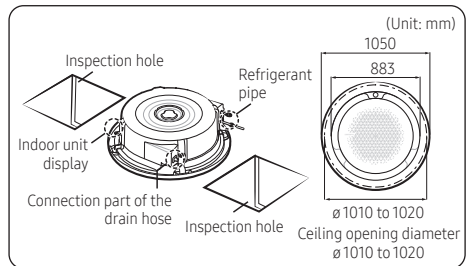

## NOTE

- The clearance between the panel and the inspection hole is 15 to 20 mm on a side.

## Spacing requirements

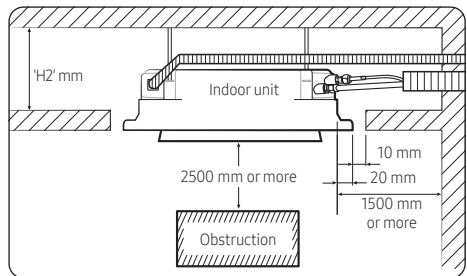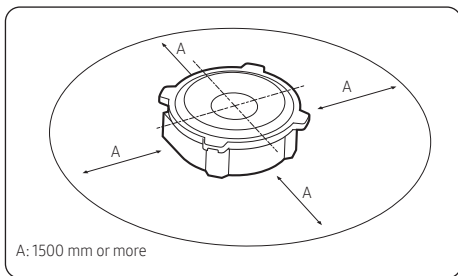


(Unit: mm)

Model	AM045DN6DKG AM056DN6DKG	AM071DN6DKG AM090DN6DKG	AM112DN6DKG AM128DN6DKG AM140DN6DKG
H2	261	-	345

### ⚠ CAUTION


- The indoor unit must be installed according to the specified distances in order to permit accessibility from each side, to guarantee correct operation, maintenance, and repair of the unit.  
The components of the indoor unit must be reachable and removable under safe conditions for people and the unit.
- Do not hold the discharge while carrying the indoor unit to avoid the possibility of breakage.
- You must hold the hanger plate on the corner and carry the indoor unit.

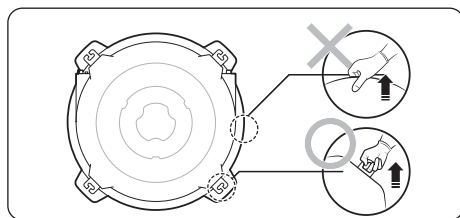

### Step 3 Optional: Insulating the body of the indoor unit

If you install a cassette type indoor unit on the ceiling when temperature is over 27°C and humidity is over 80%, you must apply an extra 10 mm thick polyethylene insulation or a similar type of insulation to the body of the indoor unit.

Cut away the part where pipes are pulled out for the insulating work.

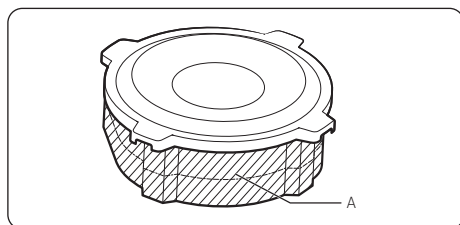

Insulate the end of the pipe and some curved area by using separate insulator.

### 📄 NOTE

- A: Reference for the outer circumference of the unit (When insulating the body of the indoor unit, use A as the reference for its outer circumference.)


(Unit: mm)

Indoor unit type and models		Dimensions
All way cassette type (S) (947 x 281 x 947)	AM045DN6DKG AM056DN6DKG AM071DN6DKG AM090DN6DKG	2610 x 130
All way cassette type (L) (947 x 365 x 947)	AM112DN6DKG AM128DN6DKG AM140DN6DKG	2610 x 215

### Step 4 Installing the indoor unit

When deciding on the location of the air conditioner the following restrictions must be taken into account.

- Determine the positions of the pipe and the drain hose hole as shown in the pattern sheet, and drill the hole with an inner diameter of 14 mm.

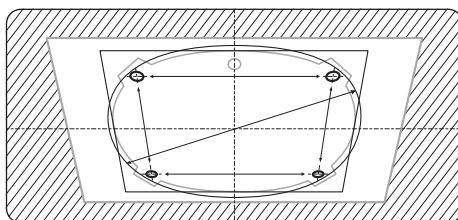


### 📄 NOTE


- Since the diagram is made of paper, it may shrink or stretch slightly due to temperature or humidity. For this reason, before drilling the holes, be sure to maintain the correct dimensions between the markings.

# Installation Procedure


- 2 Perform the following steps to install inspection holes in accordance with the panel type.
- For the recessed installation of the square panel.
    - Install an inspection hole to the direction of connection parts of the refrigerant pipe and the drain hose. (1 point)

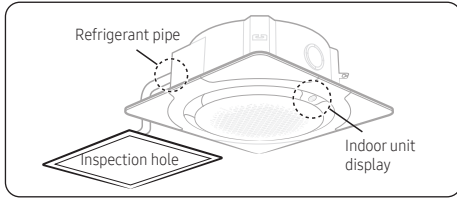


- For recessed installation of the circular panel
  - Install inspection holes to both directions of the connection part of the refrigerant pipe and the drain hose and of the indoor unit display. (2 points)

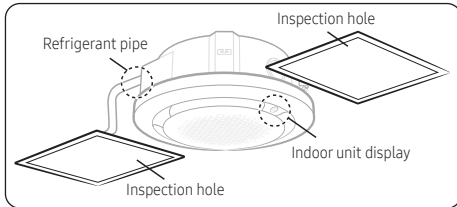

- 3 Insert bolt anchors, use existing ceiling supports or construct a suitable support as shown in figure.

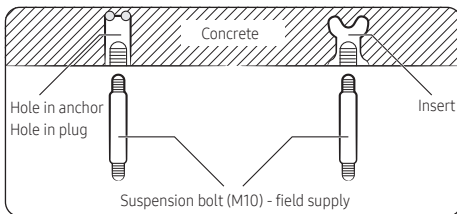

- 4 Install the suspension bolts, depending on the ceiling type.

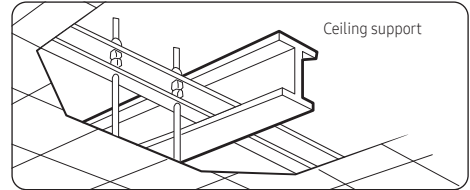


## CAUTION


- Make sure that the ceiling is strong enough to support the weight of the indoor unit. Before hanging the unit, test the strength of each attached suspension bolt.
  - If the length of the suspension bolt is more than 1.5 m, you are required to prevent vibration.
- 5 Screw eight nuts and washers to the suspension bolts, making space for hanging the indoor unit.

## CAUTION

- You must install all of the suspension rods.
  - It is important to leave sufficient space in the false ceiling to allow access for maintenance or repairs to the drainage pipe connection, the refrigerant pipe connection, or to remove the unit if necessary.
- 6 Hang the indoor unit to the suspension bolts between two nuts. Screw the nuts to suspend the unit. Cut a pad stopper and place it on the bracket at this time

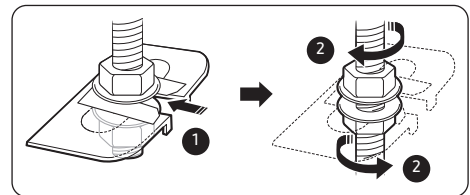


- 7 Adjust the unit to the appropriate position, taking into account the installation area for the front panel.
- Place the pattern sheet on the indoor unit.
  - Adjust the space between the ceiling and the indoor unit by using a dimension gauge.
  - Fix the indoor unit securely after adjusting the level of the unit by using a leveller.
  - Remove the pattern sheet and install the front panel.

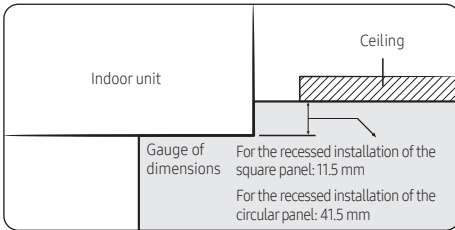

## Step 5 Purging inert gas from the indoor unit

The indoor unit comes with nitrogen gas (inert gas) charged at the factory. Therefore, all inert gas must be purged before connecting the assembly piping.

Unscrew the pinch pipe at the end of each refrigerant pipe.

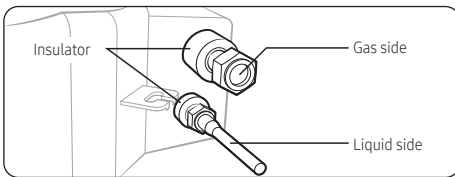


### NOTE


- To prevent dirt or foreign objects from getting into the pipes during installation, do not remove the pinch pipe completely until you are ready to connect the piping.

## Step 6 Cutting and flaring the pipes

- Make sure that you have the required tools available: pipe cutter, reamer, flaring tool, and pipe holder.
- If you wish to shorten the pipes, cut them with a pipe cutter, ensuring that the cut edge remains at a 90° angle to the side of the pipe. Refer to the illustrations below for examples of edges cut correctly and incorrectly.

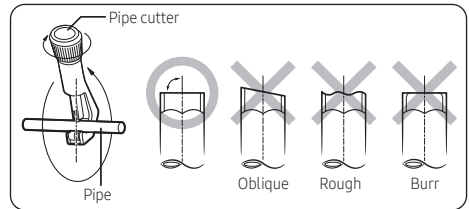


- To prevent any gas from leaking out, remove all burrs at the cut edge of the pipe, using a reamer.
- Slide a flare nut on to the pipe and modify the flare.

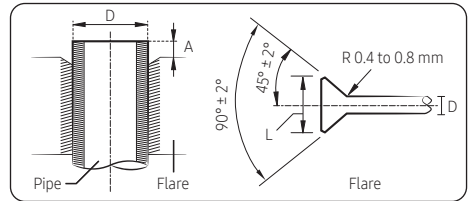

Outer Diameter (D)	Depth (A)	Flare dimension (L)
Ø 6.35 mm	1.3 mm	8.7 to 9.1 mm
Ø 9.52 mm	1.8 mm	12.8 to 13.2 mm
Ø 12.70 mm	2.0 mm	16.2 to 16.6 mm
Ø 15.88 mm	2.2 mm	19.3 to 19.7 mm
Ø 19.05 mm	2.2 mm	23.6 to 24.0 mm

- Check that the flaring is correct, referring to the illustrations below for examples of incorrect flaring.

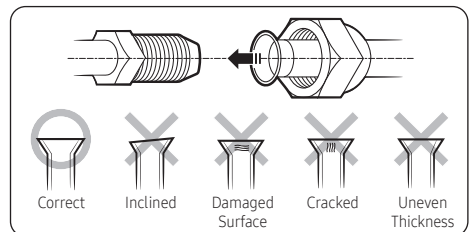


# Installation Procedure

## Step 7 Connecting the assembly pipes to the refrigerant pipes

There are two refrigerant pipes of different diameters :

- A smaller one for the liquid refrigerant.
  - A larger one for the gas refrigerant. The inside of copper pipe must be clean and has no dust.
- 1 Remove the pinch pipe on the pipes and connect the assembly pipes to each pipe, tightening the nuts, first manually and then with a torque wrench, a spanner applying the following torque.

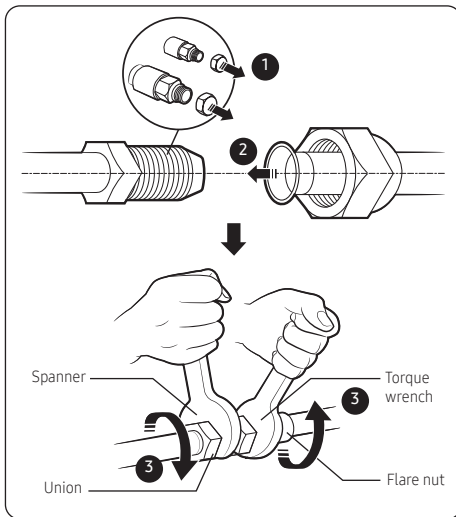

Outer diameter (mm)	Torque (N•m)
Ø 6.35	14 to 18
Ø 9.52	34 to 42
Ø 12.70	49 to 61
Ø 15.88	68 to 82
Ø 19.05	100 to 120

(1 N•m=10 kgf•cm)

### NOTE


- If the pipes must be shortened, see **Step 6 Cutting and flaring the pipes** on page 13.
- 2 Be sure to use an insulator thick enough to cover the refrigerant tube to protect the condensate water on the outside of the pipe falling onto the floor and to improve the efficiency of the unit.
  - 3 Cut off any excess foam insulation.
  - 4 Make sure that there are no cracks or waves on the bent area.
  - 5 It would be necessary to double the insulation thickness (10 mm or more) to prevent condensation even on the insulator when if the installed area is warm and humid.
  - 6 Do not use joints or extensions for the pipes connecting the indoor and outdoor units. The only permitted connections are those for which the units are designed.

### CAUTION

- Connect the indoor and outdoor units using pipes with flared connections (not supplied). For the lines, use insulated, unwelded, degreased and deoxidized copper pipe (Cu DHP type to ISO 1337 or UNI EN 12735-1), suitable for operating pressures of at least 4.2 MPa and for a burst pressure of at least 20.7 MPa. Copper pipe for hydro-sanitary applications is completely unsuitable.
- For sizing and limits (height difference, line length, max. bends, refrigerant charge, etc.) see the outdoor unit installation manual.
- All refrigerant connection must be accessible, in order to permit either unit maintenance or removing it completely.
- If the pipes require brazing, make sure that oxygen free nitrogen (OFN) is flowing through the system.
- Nitrogen blowing pressure range is 0.02 to 0.05 MPa.

## Step 8 Performing the gas leak test


Before recreating the vacuum and recirculating the refrigerant gas, pressurize the whole system with nitrogen (using a cylinder with a pressure reducer) at a pressure above 4 MPa in order to immediately detect leaks on the refrigerant fittings.

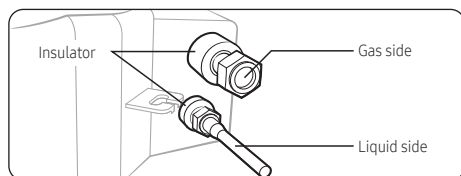

## Step 9 Insulating the refrigerant pipes

Once you have checked that there are no leaks in the system, you can insulate the piping and hose.

- 1 To avoid condensation problems, place Acrylonitrile Butadien Rubber separately around each refrigerant pipe.

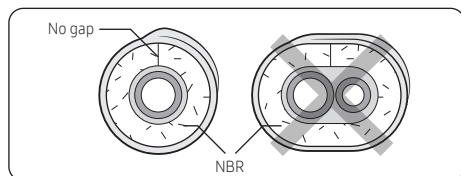


### NOTE

- Always make the seam of pipes face upwards.


### CAUTION

- The insulation has to be produced in full compliance with European regulation EEC / EU 2037 / 2000 requiring the use of sheaths insulation without using CFC and HCFC gases for health and the environment.
- 2 Wind insulating tape around the pipes and drain hose avoiding compressing the insulation too much.
  - 3 Finish wrapping insulating tape around the rest of the pipes leading to the outdoor unit.
  - 4 The pipes and electrical cables connecting the indoor unit with the outdoor unit must be fixed to the wall with suitable ducts.

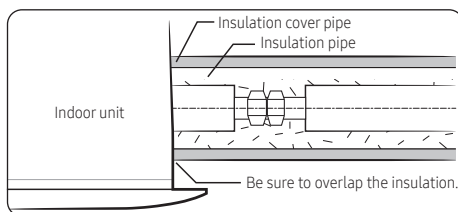

### CAUTION

- Install the insulation not to get wider and use the adhesives on the connection part of it to prevent moisture from entering.
- Wind the refrigerant pipe with insulation tape if it is exposed to outside sunlight.
- Install the refrigerant pipe respecting that the insulation does not get thinner on the bent part or hanger of pipe.
- Add the additional insulation if the insulation plate gets thinner.

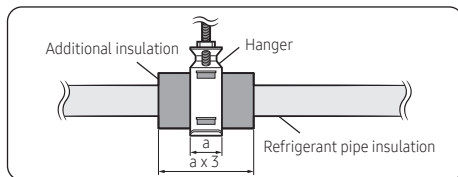

- Must fit tightly against body without any gap.
- All refrigerant connection must be accessible, in order to permit either unit maintenance or removal.

# Installation Procedure

- 5 Select the insulation of the refrigerant pipe.
  - Insulate the gas side and liquid side pipe, noting the insulation thickness that must differ according to the pipe size.
  - Standard: Less than an indoor temperature of 30°C, with humidity at 85%. If installing in a high humidity environment, use one grade thicker insulator by referring to the table below. If installing in an unfavourable environment, use thicker one.
  - The heat-resistance temperature of the insulator must be more than 120°C.


Pipe	Pipe size (mm)	Insulation Type (Heating/Cooling)		Remarks
		Standard [30°C, 85%]	High humidity [30°C, over 85%]	
		EPDM, NBR (mm)		
Liquid pipe	Ø6.35 to Ø9.52	9t	←	Internal temperature is higher than 120°C
	Ø12.7 to Ø50.80	13t	←	
Gas pipe	Ø6.35	13t	19t	
	Ø9.52 to Ø25.40	19t	25t	
	Ø28.58 to Ø44.45		32t	
	Ø50.80	25t	38t	

- When installing insulation in the places and conditions below, use the same insulation that is used for high humidity conditions.



<b>&lt;Geological condition&gt;</b>
High humidity locations such as shorelines, hot springs, lake or riversides, and ridges (when part of the building is covered by earth and sand)
<b>&lt;Operation purpose condition&gt;</b>
Restaurant ceiling, sauna, swimming pool etc.
<b>&lt;Building construction condition&gt;</b>
Ceilings frequently exposed to moisture and cooling are not covered. For example, pipes installed at a corridor of a dormitory and studio or near an exit that opens and closes frequently.
Places (where the pipes are installed) that are highly humid due to a lack of ventilation.

## Step 10 Installing the drain hose and drain pipe

- 1 Push the supplied drain hose as far as possible over the drain socket.
- 2 Tighten the metal clamp as shown in the picture.

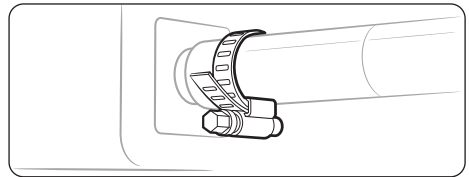


- 3 Wrap the supplied large sealing pad over the metal clamp and drain hose to insulate and fix it with clamps.
- 4 Insulate the complete drain piping inside the building (field supply).  
If the drain hose cannot be sufficiently set on a slope, fit the hose with drain raising piping (field supply).
- 5 Push the drain hose up to insulation when connecting the drain hose to drain socket.

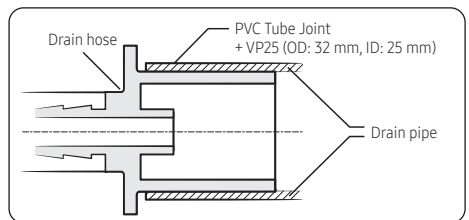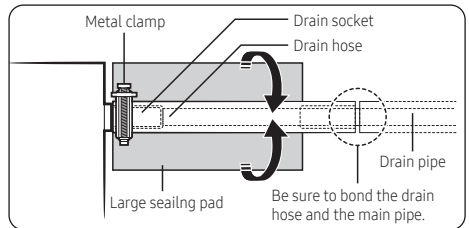


**⚠ CAUTION**

Check that the indoor unit is level with the ceiling by using the leveller.


- Install air ventilation to drain condensation smoothly.

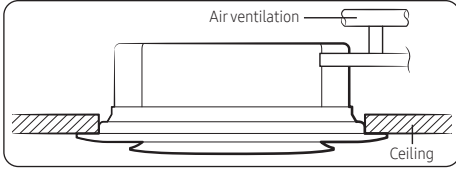


- If it is necessary to increase the height of the drain pipe, install the drain pipe straight within 300 mm from the drain hose port. If it is raised higher than 550 mm, there may be water leaks.

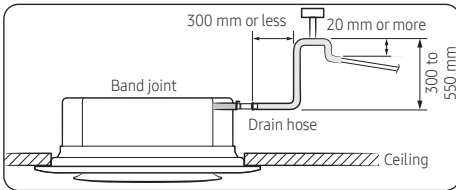


- Do not give the hose an upward gradient beyond the connection port. This will cause water to flow backwards when the unit is stopped, resulting in water leaks.

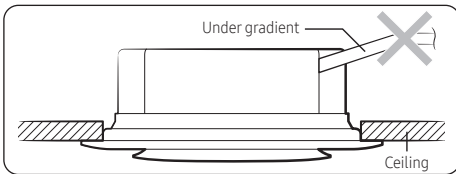


- Do not apply force to the piping on the unit side when connecting the drain hose. The hose should not be allowed to hang loose from its connection to the unit. Fasten the hose to a wall, frame or other support as close to the unit as possible.

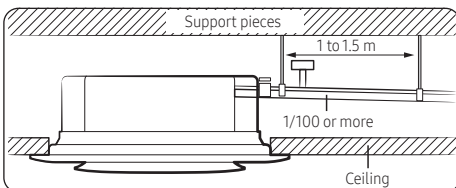


- Install horizontally.

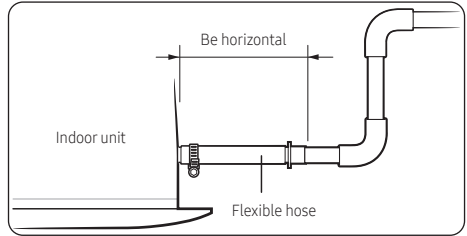

- Max. allowable axis gap

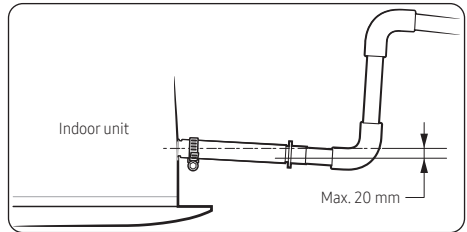


- Max. allowable bending angle

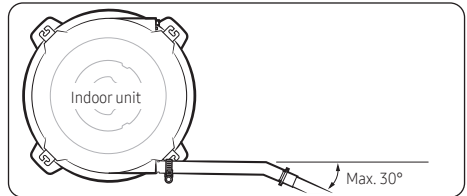

**📖 NOTE**

- If a concentrated drain pipe is installed, refer to the figure below.

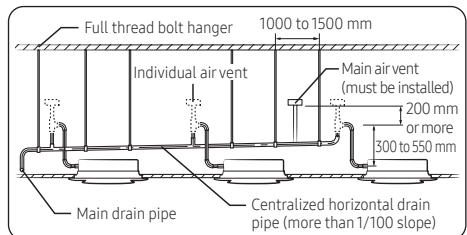


# Installation Procedure

- If 3 or more units are installed, install the main air vent at the front of the farthest indoor unit from the main drain pipe.
- To prevent water from flowing back to indoor units, install an individual air vent at the top of each indoor unit.
  - The air vents should be T or 7 shaped to prevent dust or foreign substances from entering.
  - You may not need to install air vent if the horizontal drain pipe is in proper slope.

## Step 11 Performing the drainage test

- 1 Do a leak test at the connection part of the flexible hose and the drain pipe:
  - a Connect a general hose to the connection part of the flexible hose of the indoor unit, and pour in some water.

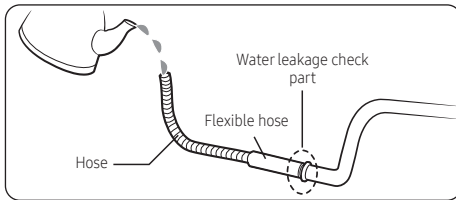


- b After pouring some water, reassemble the rubber cap on the connection part of a flexible hose of the indoor unit and firmly tighten it with a band to prevent leakage.
- c Check the leak test at the part where the adhesive for the flexible hose and the drain pipe is used.

### CAUTION

- The leak test must be performed for at least 24 hours.

- 2 Check the condensed water drainage:
  - a Pour about 2 liters of water into the indoor unit drain pan as shown in the picture.

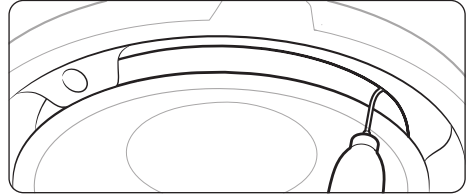

- b When the electric cable connection is completed
  - Turn on the indoor unit and outdoor unit.
  - Operate in the Cool mode.

### CAUTION

- Only in the Cool mode, you can check the correct operation of the drain pump.

When the electric cable connection has not been completed

- Remove the control box cover of the indoor unit.
- Connect the power supply (220V, 50 Hz) to the L and N terminals.
- Reassemble the control box cover and turn on the indoor unit.

### CAUTION

- When the float switch is not detected due to insufficient water on the drain pan, the drain pump will not work.
- If the power supply is directly connected to the L and N terminals, communication error message might appear.
- After completing the drainage check, turn the unit off and disconnect the power supply.
- Reassemble the control box cover.

- c Check whether the drain pump works correctly.
- d Check whether the drainage is performing correctly at the end of the drain pipe.
- e Check for leakage at the drain pipe and drain pipe connection part.
- f When leakage occurs, check whether the indoor unit is level and check the drain hose connection part, drainpipe connection part and drain pump connection.
- g When the drainage check is completed and the condensed water remains on the drain pan, remove the water.

- The auxiliary circuit breaker (ELCB, MCCB, ELB) should be considered more capacity if many indoor units are connected from one breaker.
- Connect F3, F4(for communication) to the communication cable of the wired remote control.
- Tighten the electric wires with a proper tool within the torque limit to connect and fix them firmly, and then organize the wires to prevent outside pressure being exerted on the covers and other parts. Failure to do so may result in overheating, electric shock, and fire.


Tightening torque (N•m)	
M3.5	0.8 to 1.2
M4	1.2 to 1.8

(1 N•m=10kgf•cm)



- To protect the product from water and possible shock, you should keep the power and the communication cables of the indoor and outdoor units in the iron pipe.
- Connect the power cable to the auxiliary circuit breaker (ELCB, MCCB, ELB).
- Keep distances of 50mm or more between power cable and communication cables.
- Power supply cords of parts of appliances for outdoor use shall not be lighter than polychloroprene sheathed flexible cord. (Code designation IEC:60245 IEC 57 / CENELEC: H05RN-F or IEC:60245 IEC 66 / CENELEC: H07RN-F)
- Screws on terminal block must not be unscrewed with the torque less than 12 kgf•cm.
- When installing the indoor unit in a computer room, use the double shielded (tape aluminum / polyester braid + copper) cable of FROHH2R type.

## Step 12 Connecting the power and communication cables

### Power and communication cable connection

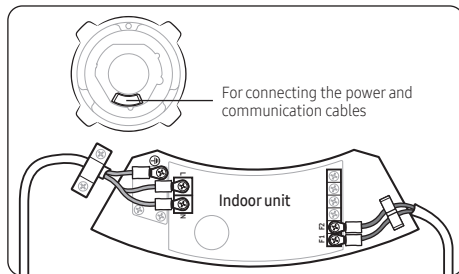


- Before wiring work, you must turn off all power source.
- Connect the power and communication cable among the units within maximum length to set the voltage drop under 10%.

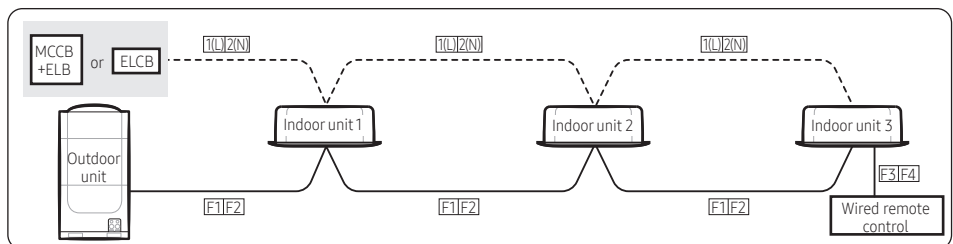


# Installation Procedure

## Selecting the crimping terminal lug

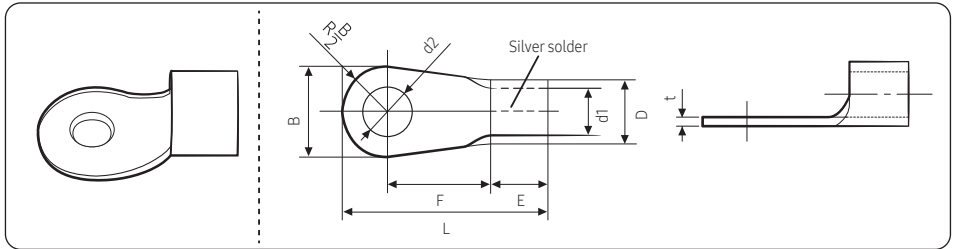

Nominal dimensions for cable (mm <sup>2</sup> )	Nominal dimensions for screw (mm)	B		D		d1		E	F	L	d2		t
		Standard dimension (mm)	Allowance (mm)	Standard dimension (mm)	Allowance (mm)	Standard dimension (mm)	Allowance (mm)				Standard dimension (mm)	Allowance (mm)	
1.5	4	6.6	±0.2	3.4	+0.3 -0.2	1.7	±0.2	4.1	6	16	4.3	+0.2 0	0.7
	4	8											
2.5	4	6.6	±0.2	4.2	+0.3 -0.2	2.3	±0.2	6	6	17.5	4.3	+0.2 0	0.8
	4	8.5											
4	4	9.5	±0.2	5.6	+0.3 -0.2	3.4	±0.2	6	5	20	4.3	+0.2 0	0.9

## Specifications of the terminal blocks

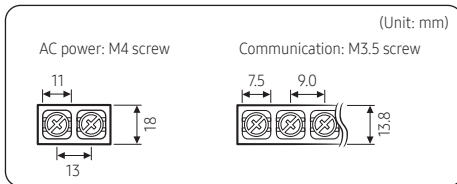

Power supply (single phase)	MCCB	ELB
Min : 198V Max : 242V	XA	XA, 30 mA 0.1 s
Power cable		Earth cable
2.5 mm or more	2.5 mm <sup>2</sup>	0.75 to 1.5 mm <sup>2</sup>

Decide the power cable specification and maximum length by formula 2.

1 Decide the capacity of ELB and MCCB by below formula.

$$\text{The capacity of ELB, MCCB } X[A] = 1.25 \times 1.1 \times \Sigma Ai$$

### NOTE

- X : The capacity of ELB, MCCB
- $\Sigma Ai$  : Sum of rating currents of each indoor unit.

## Rated currents

Unit	Model	Rating current (A)
AM***DN6DKG*	**045**	0.18
	**056**	0.21
	**071**	0.25
	**090**	0.42
	**112**	0.41
	**128**	0.62
	**140**	0.75

2 Decide the power cable specification and maximum length within 10% voltage drop among indoor units.


$$\sum_{k=1}^n \frac{\text{Coef} \times 35.6 \times L_k}{1000 \times A_k} \times i_k < 10\% \text{ of input voltage [V]}$$

### NOTE

- Coef: 1.55
- $L_k$ : Distance among each indoor unit [m],  $A_k$ : Power cable specification [mm<sup>2</sup>]
- $i_k$ : Running current of each unit [A]

### Example of Installation

Total power cable length L = 100(m), Initial pull-in current = 10[A], Running current of each units = 1[A], Total 10 indoor units were installed

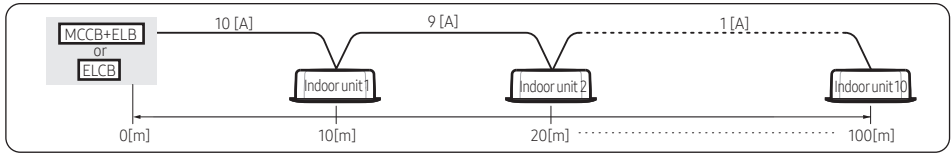

- Apply following equation.

$$\sum_{k=1}^n \left( \frac{\text{Coef} \times 35.6 \times L_k}{1000 \times A_k} \times i_k \right) < 10\% \text{ of input voltage [V]}$$

- Calculation

– Installing with 1 sort wire.

$$\begin{array}{l} \begin{array}{l} \uparrow 2.5 \text{ [mm}^2\text{]} \uparrow 2.5 \text{ [mm}^2\text{]} \uparrow \dots \dots 2.5 \text{ [mm}^2\text{]} \dots \dots \uparrow \\ \downarrow -2.2 \text{ [V]} \downarrow -2.2 \text{ [V]} \downarrow \dots \dots \uparrow \end{array} \begin{array}{l} \text{Within 198V} \\ \text{to 242V} \end{array} \\ 220 \text{ [V]} \qquad \qquad \qquad 208.8 \text{ [V]} : \text{Applicable} \end{array}$$

$$-(2.2+2.0+1.8+1.5+1.3+1.1+0.9+0.7+0.4+0.2)=-11.2 \text{ [V]}$$

– Installing with 2 different sort wire.

$$\begin{array}{l} \begin{array}{l} \uparrow 4.0 \text{ [mm}^2\text{]} \uparrow 4.0 \text{ [mm}^2\text{]} \uparrow \dots \dots 2.5 \text{ [mm}^2\text{]} \dots \dots \uparrow \\ \downarrow -1.2 \text{ [V]} \downarrow -1.2 \text{ [V]} \downarrow \dots \dots \uparrow \end{array} \begin{array}{l} \text{Within 198V} \\ \text{to 242V} \end{array} \\ 220 \text{ [V]} \qquad \qquad \qquad 209.5 \text{ [V]} : \text{Applicable} \end{array}$$

$$-(1.4+1.2+1.8+1.5+1.3+1.1+0.9+0.7+0.4+0.2)=-10.5 \text{ [V]}$$


### Step 13 Optional: Extending the power cable

- Prepare the following tools.

Tools	Spec	Shape
Crimping pliers	MH-14	
Connection sleeve (mm)	20 x Ø 6.5 (H x OD)	
Insulation tape	Width 19 mm	
Contraction tube (mm)	70 x Ø 8.0 (L x OD)	

- As shown in the figure, peel off the shields from the rubber and wire of the power cable.


- Peel off 20 mm of cable shields from the pre-installed tube.

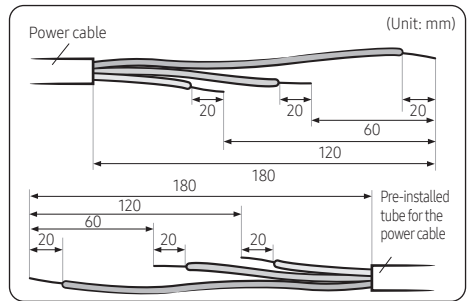

### CAUTION

- For information about the power cable specifications for indoor and outdoor units, refer to the installation manual.
  - After peeling off cable wires from the pre-installed tube, insert a contraction tube.
- Insert both sides of core wire of the power cable into the connection sleeve.


- Method 1:** Push the core wire into the sleeve from both sides.
- Method 2:** Twist the wire cores together and push it into the sleeve.

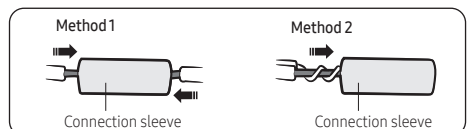


# Installation Procedure

## ⚠ CAUTION


- If cable wires are connected without using connecting sleeves, their contact area becomes reduced, or corrosion develops on the outer surfaces of the wires (copper wires) over a long time. This may cause an increase of resistance (reduction of passing current) and consequently may result in a fire.
- 4 Using a crimping tool, compress the two points and flip it over and compress another two points in the same location.
- The compression dimension should be 8.0 mm<sup>2</sup>.

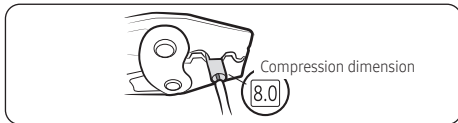


- After compressing it, pull both sides of the wire to make sure it is firmly pressed.

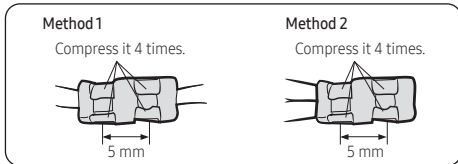


- 5 Apply heat to the contraction tube to contract it.

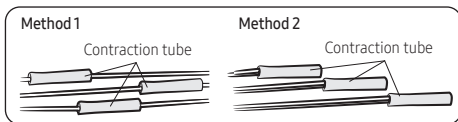

- 6 Wrap it with the insulation tape twice or more and position your contraction tube in the middle of the insulation tape.

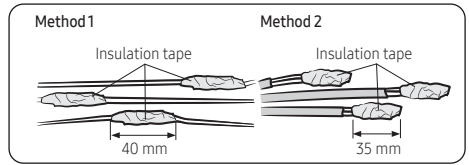

- 7 After tube contraction work is completed, wrap it with the insulation tape to finish. Three or more layers of insulation are required.




## ⚠ CAUTION

- Make sure that the connection parts are not exposed to outside.
- Be sure to use insulation tape and a contraction tube made of approved reinforced insulating materials that have the same level of withstand voltage with the power cable. (Comply with the local regulations on extensions.)








## ⚠ WARNING

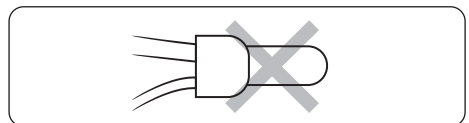- In case of extending the electric wire, please DO NOT use a round-shaped Pressing socket.
  - Incomplete wire connections can cause electric shock or a fire.



## Step 14 Optional: LED Display indicator specifications when checking Wi-Fi Easy Setup and Wi-Fi status

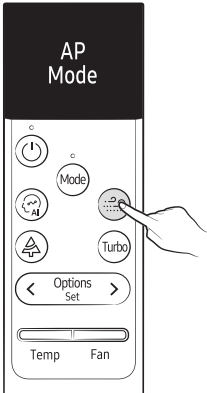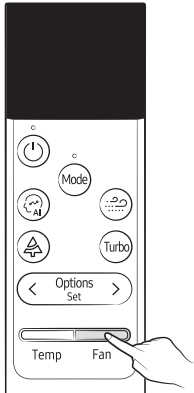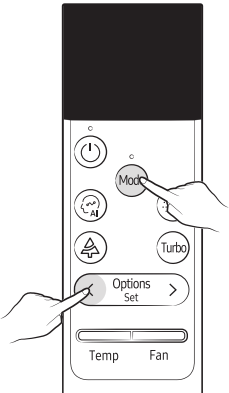The wireless remote control can be used for Easy Setup, checking the internet connection status and connecting or disconnecting Wi-Fi.

Easy Setup	Check internet connection status	Enable/Disable Wi-Fi
		
<p>Press the  button for 5 seconds</p>	<p>Press the  button for 5 seconds</p>	<p>Press the  and  button for 5 seconds</p>

# Installation Procedure

## LED Indicator Status

360 Cassette		LED Display							Remarks	Measure
		LED color of indicator lights				LED indicator for wind direction				
		Ice blue	blue	Yellow green	Red	Wide	Mid	Spot		
●	●					●				
Easy Setup	AP entry	●	X	X	X	●	●	●	All LED lights are on	-
	Check device	●	X	X	X	●	●	●	All LED lights flash	-
	Registering devices	X	X	X	X	X	●	X	Rotating	-
	Connected	●	X	X	X	●	●	●	All LED lights flash for 3 seconds	-
	Connection failed	X	X	X	●	X	X	X	Red LED indicator lights turn on, all LED lights for wind direction turns off	Retry AP settings, change Wi-Fi module
Check internet connection status	If AP/internet is connected successfully	●	X	X	X	●	●	●	All LED lights turn on for 5 seconds	Normal operation
	If no AP connection	X	X	X	X	X	X	X	All LED turns off for 5 seconds	AP settings, change Wi-Fi module
Wi-Fi	Enable	●	X	X	X	●	●	●	All LED lights flash once	-
	Disable		X	X	X					-
If AP is set up using the wired remote controller		●	X	X	X	●	●	●	All LED lights flash simultaneously (max. 10 mins)	-


Spot	LED Display									Remarks
	Airflow direction indication									
	Wide			Mid			Spot			
	●			●			●			
	Airflow direction			Airflow direction			Airflow direction			
	1	2	3	1	2	3	1	2	3	
Connection info reset	●			●			●			Sequential light-up <sup>1)</sup>
All devices reset	●			●			●			Sequential light-up <sup>2)</sup>

<sup>1)</sup> Spot → (Spot + Mid) → (Spot + Mid + Wide) → Spot → ●●●

<sup>2)</sup> Wide → (Wide + Mid) → (Wide + Mid + Spot) → Wide → ●●●

### NOTE

- LED indication status of airflow direction

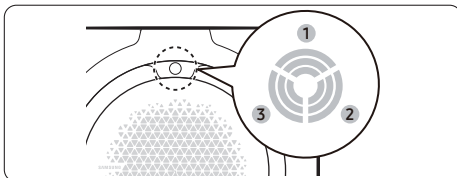


## Step 15 Setting the indoor unit addresses and the installation options

You cannot set both indoor unit addresses and the installation options in a batch: set both respectively.

### Common steps for setting the addresses and options

#### Remote controls

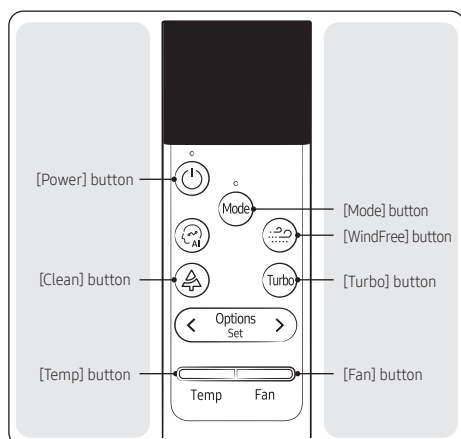


#### NOTE

- The remote control display and buttons may vary depending on the model.

#### 1 Enter the mode for setting the options.

- Reset remote control: button Down + button Down + Press for 10 seconds
- You can see the "SW Initialization" message and enter the following in 5 seconds.
- Press button and button for 5 seconds.

- Make sure that you are entered to the mode for setting options.

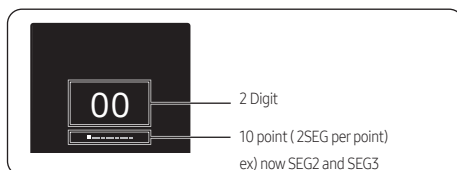

- Set the option values.

#### CAUTION

























- The total number of available options are 24 : SEG1 to SEG24
- Because SEG1, SEG7, SEG13 and SEG19 are the page options used by the previous remote control models, the modes to set values for these options are skipped automatically.
- Set a 2-digit value for each option pair in the following order.
- You can see 20 SEG ( except SEG1, SEG7, SEG13, SEG19) SEG2 → ... → SEG6 → SEG8 → ... → SEG12 → SEG14 → ... → SEG18 → SEG20 → ... → SEG24

























SEG1	SEG2	SEG3	SEG4	SEG5	SEG6
0	X	X	X	X	X
SEG7	SEG8	SEG9	SEG10	SEG11	SEG12
1	X	X	X	X	X
SEG13	SEG14	SEG15	SEG16	SEG17	SEG18
2	X	X	X	X	X
SEG19	SEG20	SEG21	SEG22	SEG23	SEG24
3	X	X	X	X	X

- You can set the next SEG by pressing the button.
- You can change the digit value through the following operation.  
Left value: up or down, range : 0 ~ F  
Right value: up or down, range : 0 ~ F

























# Installation Procedure

























Take the steps presented in the following table:

Steps	Remote control display
<p>1 Set the SEG2 and SEG3 values:</p> <p>a Set the SEG2 value by pressing the  button repeatedly until the value you want to set appears on the remote control display.</p> <p>b Set the SEG3 value by pressing the  button repeatedly until the value you want to set appears on the remote control display.</p> <p>When you press the  or  button, values appear in the following order:   →  → ... →  → </p>	 <p>SEG2</p>  <p>SEG3</p>
<p>2 Press the  button to move to the next page.</p>	
<p>3 Set the SEG4 and SEG5 values:</p> <p>a Set the SEG4 value by pressing the  button repeatedly until the value you want to set appears on the remote control display.</p> <p>b Set the SEG5 value by pressing the  button repeatedly until the value you want to set appears on the remote control display.</p> <p>When you press the  or  button, values appear in the following order:   →  → ... →  → </p>	 <p>SEG4</p>  <p>SEG5</p>
<p>4 Press the  button to move to the next page.</p>	























Steps	Remote control display
<p><b>5</b> Set the SEG6 and SEG8 values:</p> <p><b>a</b> Set the SEG6 value by pressing the  button repeatedly until the value you want to set appears on the remote control display.</p> <p><b>b</b> Set the SEG8 value by pressing the  button repeatedly until the value you want to set appears on the remote control display.</p> <p>When you press the  or  button, values appear in the following order:   →  → ... →  → </p>	 <p>SEG6</p>  <p>SEG8</p>
<p><b>6</b> Press the  button to move to the next page.</p>	
<p><b>7</b> Set the SEG9 and SEG10 values:</p> <p><b>a</b> Set the SEG9 value by pressing the  button repeatedly until the value you want to set appears on the remote control display.</p> <p><b>b</b> Set the SEG10 value by pressing the  button repeatedly until the value you want to set appears on the remote control display.</p> <p>When you press the  or  button, values appear in the following order:   →  → ... →  → </p>	 <p>SEG9</p>  <p>SEG10</p>
<p><b>8</b> Press the  button to move to the next page.</p>	

# Installation Procedure


Steps	Remote control display
<p><b>9</b> Set the SEG11 and SEG12 values:</p> <p><b>a</b> Set the SEG11 value by pressing the  button repeatedly until the value you want to set appears on the remote control display.</p> <p><b>b</b> Set the SEG12 value by pressing the  button repeatedly until the value you want to set appears on the remote control display.</p> <p>When you press the  or  button, values appear in the following order:   →  → ...  → </p>	 <p>SEG11</p>  <p>SEG12</p>
<p><b>10</b> Press the  button to move to the next page.</p>	
<p><b>11</b> Set the SEG14 and SEG15 values:</p> <p><b>a</b> Set the SEG14 value by pressing the  button repeatedly until the value you want to set appears on the remote control display.</p> <p><b>b</b> Set the SEG15 value by pressing the  button repeatedly until the value you want to set appears on the remote control display.</p> <p>When you press the  or  button, values appear in the following order:   →  → ...  → </p>	 <p>SEG14</p>  <p>SEG15</p>
<p><b>12</b> Press the  button to move to the next page.</p>	

Steps	Remote control display
<p><b>13</b> Set the SEG16 and SEG17 values:</p> <p><b>a</b> Set the SEG16 value by pressing the  button repeatedly until the value you want to set appears on the remote control display.</p> <p><b>b</b> Set the SEG17 value by pressing the  button repeatedly until the value you want to set appears on the remote control display.</p> <p>When you press the  or  button, values appear in the following order:   →  → ... →  → </p>	 <p>SEG16</p>  <p>SEG17</p>
<p><b>14</b> Press the  button to move to the next page.</p>	
<p><b>15</b> Set the SEG18 and SEG20 values:</p> <p><b>a</b> Set the SEG18 value by pressing the  button repeatedly until the value you want to set appears on the remote control display.</p> <p><b>b</b> Set the SEG20 value by pressing the  button repeatedly until the value you want to set appears on the remote control display.</p> <p>When you press the  or  button, values appear in the following order:   →  → ... →  → </p>	 <p>SEG18</p>  <p>SEG20</p>
<p><b>16</b> Press the  button to move to the next page.</p>	

# Installation Procedure

Steps	Remote control display
<p><b>17</b> Set the SEG21 and SEG22 values:</p> <p><b>a</b> Set the SEG21 value by pressing the  button repeatedly until the value you want to set appears on the remote control display.</p> <p><b>b</b> Set the SEG22 value by pressing the  button repeatedly until the value you want to set appears on the remote control display.</p> <p>When you press the  or  button, values appear in the following order:   →  → ... →  → </p>	 <p>SEG21</p>  <p>SEG22</p>
<p><b>18</b> Press the  button to move to the next page.</p>	
<p><b>19</b> Set the SEG23 and SEG24 values:</p> <p><b>a</b> Set the SEG23 value by pressing the  button repeatedly until the value you want to set appears on the remote control display.</p> <p><b>b</b> Set the SEG24 value by pressing the  button repeatedly until the value you want to set appears on the remote control display.</p> <p>When you press the  or  button, values appear in the following order:   →  → ... →  → </p>	 <p>SEG23</p>  <p>SEG24</p>

- 3 Check whether the option values you have set are correct by pressing the **Mode** button repeatedly.

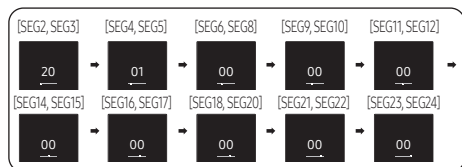


EX) AM\*\*\*FE4DCG  
020010-100000-2000C0-300000

- 4 Save the option values into the indoor unit:  
Point the remote control to the remote control sensor on the indoor unit and then press the **Power** button on the remote control twice.  
Make sure that this command is received by the indoor unit. When it is successfully received, you can hear a short sound from the indoor unit. If the command is not received, press the **Power** button again.
- 5 Check whether the air conditioner operates following the option values you have set:
- Reset the indoor or outdoor unit.
    - Indoor Unit : Press **Power** button + **Temp** button for 5 seconds
    - Outdoor Unit : Press the K3 button
  - Reset remote control: **Temp** button Down + **Fan** button Down + **Mode** Press for 10 seconds  
You can see the "SW Initialization" message.

### Setting the indoor unit addresses (MAIN/RMC/MCU/SVB)


- Make sure that the power is supplied to the indoor unit.
  - If the indoor unit is not plugged in, it must include a power supply.
- Make sure that the panel or display is connected to the indoor unit so that it can receive options.

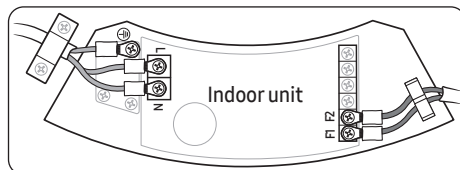

- Set an address (MAIN/RMC/MCU/SVB port) for each indoor unit using the remote control, according to your air conditioning system plan.
  - The indoor unit addresses (MAIN/RMC/MCU/SVB port) are set to 0A0000-100000-200000-300000 by default.

#### **NOTE**

- Also set the MCU/SVB and Indoor units address on HASS.
- From SEG13 to SEG18 is for setting MCU/SVB address.

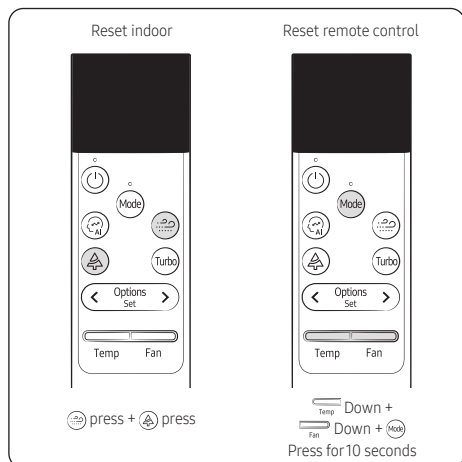

# Installation Procedure

Option No. for an indoor unit address: 0AXXXX-1XXXX-2XXXX-3XXXX

Option	SEG1		SEG2		SEG3		SEG4		SEG5		SEG6	
Function	Page		Mode		Setting main address		100-digit of an indoor unit address		10-digit of an indoor unit address		The single digit of an indoor unit	
Indication and details	Indication	Details	Indication	Details	Indication	Details	Indication	Details	Indication	Details	Indication	Details
		0		A		0	No main address	0 to 9	10-digit	0 to 9	A single digit	0 to 3
					1	Main address setting mode						
Option	SEG7		SEG8		SEG9		SEG10		SEG11		SEG12	
Function	Page		-		Setting RMC address		-		Group channel (x16)		Group address	
Indication and details	Indication	Details			Indication	Details						
		1			0	No RMC address						
					1	RMC address setting mode						
Option	SEG13		SEG14		SEG15		SEG16		SEG17		SEG18	
Function	Page		-		Setting MCU/SVB PORT address		10-digit of MCU/SVB address		1-digit of MCU/SVB		MCU/SVB PORT address	
Indication and details	Indication	Details			Indication	Details						
		2			0	No MCU/SVB PORT						
					1	MCU/SVB PORT address setting mode						


※ MCU/SVB Port address settings initialization : Configure SEG15/16/17/18 as 1/0/0/0.

## CAUTION

- If you enter A to F to the SEG5 or SEG6, the indoor unit main address is not changed.
- If you enter 0 to the SEG 3, the indoor unit maintains the previous main address although you enter the option value for the SEG5 or SEG 6.
- If you enter 0 to the SEG 9, the indoor unit maintains previous RMC address although you enter the option value for the SEG11 or SEG12.
- You cannot set the SEG11 or SEG12 to F value at the same time.
- If the indoor unit is connected to the MCU/SVB, you can set the SEG 15-18.  
Ex.) If you want to set the indoor unit to 'A' port of MCU/SVB #1. (0A0000 – 100000 – 20101A -30000)

## Setting the indoor unit installation option (suitable for the condition of each installation location)

- 1 Make sure that the power is supplied to the indoor unit.
  - If the indoor unit is not plugged in, it must include a power supply.
- 2 Make sure that the panel or display is connected to the indoor unit so that it can receive options

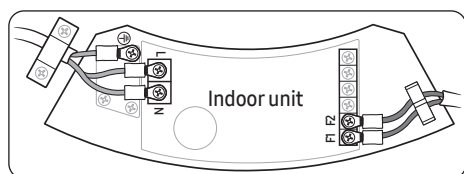

- 3 Set an address for each indoor unit using the remote control, according to your air conditioning system plan.
  - The indoor unit addresses are set to 020010-100000-2000A0-300000 by default.
  - The SEG20 option, Individual control with remote control, allows you to control multiple indoor units individually by using the remote control.

### Installation options for the 02 series

SEG1	SEG2	SEG3	SEG4	SEG5	SEG6
0	2	Evaporator Drying	Use of external temperature sensor / Minimizing fan operation when thermostat is off	Use of central control	Compensation of the fan RPM
SEG7	SEG8	SEG9	SEG10	SEG11	SEG12
1	Use of drain pump	Use of hot water heater	Settings for load operation during heater control Fan control during defrost mode / heater control during defrost mode	EEV step when heating stops	Dew removal operation in WindFree mode
SEG13	SEG14	SEG15	SEG16	SEG17	SEG18
2	Use of external control	Setting the output of external control / External heater On or Off signal	Use of air purification function	Buzzer control / whether to use humidity sensor / whether to use APP UX DSP (Dual Set Point) / whether to use R-32 sensor	Maximum filter usage time
SEG19	SEG20	SEG21	SEG22	SEG23	SEG24
3	Individual control with remote control	Heating setting compensation offset / Removing condensated water in the Heat mode	EEV step of stopped unit during the oil return or the defrost mode	Setting the MDS Kit installation option / Airflow control	Cycle time of Swing

- Even if you set the Use of drain pump (SEG8) option to 0, it is automatically set to 2 (the drain pump is used with 3 minute delay).
- If you set the Maximum filter usage time (SEG18) option to a value other than 2 and 6, it is automatically set to 2 (1000 hours).
- If you set an option to a value that is out of range specified above, the option is automatically set to 0 by default.
- The SEG5 option (Use of central control) is set to 1 (Use) by default. Therefore, you don't need to set the SEG5 option additionally. Note that even if the central control system is not connected, no errors occur. If you want a specific indoor unit not to be controlled by the central control system, set the SEG option of that indoor unit to 0 (Disuse).
- The external output of SEG15 is generated via MIM-B14 connection. (Refer to the manual of MIM-B14.)
- If you set the Individual control with remote control (SEG20) option to a value other than 0 to 4, it is automatically set to 0 (Indoor1).

# Installation Procedure

## Installation options for the O2 series (detailed)

Option No. for an indoor unit address: 02XXXX-1XXXXX-2XXXXX-3XXXXX

Option	SEG1		SEG2		SEG3		SEG4			SEG5		SEG6				
Function	Page		Mode		Evaporator Drying		Use of external temperature sensor / Minimizing fan operation when thermostat is off			Use of central control		Compensation of the fan RPM				
Indication and details	Indication	Details	Indication	Details	Indication	Details	Indication	Details		Indication	Details	Indication	Details			
								Use of external temperature sensor	Minimizing fan operation when thermostat is off							
Indication and details	0		2		0	Disuse	0	Disuse	(Cooling, Heating) Disuse	0	Disuse	0	Disuse (recessed installation)			
							1	Use	(Cooling, Heating) Disuse							
							2	Disuse	Use (Heating) (*2)							
					2	Use (5min) (*1)	3	Use	Use (Heating) (*2)	1	Use	4	Disuse	Use (Cooling) (*2)	1	High-ceiling mode (recessed installation)
							4	Disuse	Use (Cooling) (*2)							
							5	Use	Use (Cooling) (*2)							
					4	Use (10min) (*1)	6	Disuse	Use (Heating / Cooling) (*2)	1	Use	7	Use	Use (Heating / Cooling) (*2)	4	Disuse (exposed installation)
							8	Disuse	Use (Cooling Ultra Low Fan) (*2)							
							9	Use	Use (Cooling Ultra Low Fan) (*2)							
					6	Use (30min) (*1)	A	Disuse	Use (Heating / Cooling Ultra Low Fan) (*2)	5	High-ceiling mode (exposed installation)					
							B	Use	Use (Heating / Cooling Ultra Low Fan) (*2)							

Option	SEG7		SEG8		SEG9		SEG10			SEG11		SEG12	
Function	Page		Use of drain pump		Use of hot water heater		Settings for load operation during heater control Fan control during defrost mode / Heater control during defrost mode			EEV step when heating stops		Dew removal operation in WindFree mode	
Indication and detail	Indication	Details	Indication	Details	Indication	Details	Indication	Detail		Indication	Details	Indication	Details
	1		0	Disuse	0	Disuse	0	Fan control during defrost mode	Heater control during defrost mode				
													0
							1	Fan turns on when heater turns on	Off				
							2	Fan Off	Off				
							3	Fan turns on when heater turns on	Off				
							4	Fan Off	On	1	Noise decreasing setting	8	Use
							5	Fan turns on when heater turns on	On				
							6	Fan Off	On				
							7	Fan turns on when heater turns on	On				
							8	Fan Off	Off				
							9	Fan turns on when heater turns on	Off				
							A	Fan Off	Off				
							B	Fan turns on when heater turns on	Off				
							C	Fan Off	On				
							D	Fan turns on when heater turns on	On				
							E	Fan Off	On				
							F	Fan turns on when heater turns on	On				

# Installation Procedure

Option	SEG13		SEG14		SEG15		SEG16		SEG17				SEG18									
Function	Page		Use of external control		Setting the output of external control / External heater On or Off signal		Use of air purification function		Buzzer control / whether to use humidity sensor / whether to use APP LUX DSP (Dual.Set Point) / whether to use R-32 sensor				Maximum filter usage time									
Indication and details	Indication	Details	Indication	Details	Indication	Details		Indication	Details	Indication	Detail				Indication	Details						
						Setting the output of external control	External heater On or Off signal				Buzzer Control	Humidity sensor	APP LUX DSP	R-32 sensor								
Indication and details	2		0	Disuse	0	Thermo On	External control (Thermo On)	0	Disuse	0	Use Buzzer	Disuse	Disuse	Disuse	2	1000 hours						
					1	Operation On	External control (Thermo On)			1	Disuse Buzzer	Disuse	Disuse	Disuse								
					2	-	External heater signal (*4)			2	Use Buzzer	Use	Disuse	Disuse								
					3	-	External heater signal (*4)			3	Disuse Buzzer	Use	Disuse	Disuse								
					4	-	External heater signal (*4)			4	Use Buzzer	Disuse	Use	Disuse								
					5	-	External heater signal (*4)			5	Disuse Buzzer	Disuse	Use	Disuse								
					6	-	External heater signal (*4)			6	Use Buzzer	Use	Use	Disuse								
					7	-	External heater signal (*4)			7	Disuse Buzzer	Use	Use	Disuse								
					1	ON or OFF control	4			-	Cooling operation signal (*5)	1	Use	8			Use Buzzer	Disuse	Disuse	Use	6	2000 hours
					2	OFF control	5			Thermo On	Free Cooling control (Cooling Thermo On) (*6)			9			Disuse Buzzer	Disuse	Disuse	Use		
					3	Window ON or OFF control	6			Thermo On	Free Cooling control (Cooling/ Dry Thermo On) (*6)			A			Use Buzzer	Use	Disuse	Use		
														B			Disuse Buzzer	Use	Disuse	Use		
														C			Use Buzzer	Disuse	Use	Use		
														D			Disuse Buzzer	Disuse	Use	Use		
														E			Use Buzzer	Use	Use	Use		
														F			Disuse Buzzer	Use	Use	Use		

Option	SEG19		SEG20		SEG21			SEG22	
Function	Page		Individual control with remote control		Heating setting compensation offset / Removing condensated water in the Heat mode			EEV step of stopped unit during the oil return or the defrost mode	
Indication and details	Indication	Details	Indication	Details	Indication	Details		Indication	Details
						Heating setting compensation offset	Removing condensated water in the Heat mode		
Indication and details	3		0 or 1	Indoor 1	0	Default (*7)	Disuse	0	Default
					1	2 °C	Disuse		
			2	Indoor 2	2	5 °C	Disuse		
3	Indoor 3	3	Default (*7)	Use (*8)					
Indication and details	3		4	Indoor 4	4	2 °C	Use (*8)	1	Oil return or Noise decreasing in defrost mode
					5	5 °C	Use (*8)		
Option	SEG23				SEG24				
Function	Setting the MDS Kit installation option / Airflow control				Cycle time of Swing				
	Setting the MDS Kit installation option				Indication	Details			
	Indication		Details			0	(Default) 6 seconds		
	0		Disuse (Soft Off+Hard off)(*9,10)		1		5 seconds		
	Standard	1	Basic function Off after 20 min. (Soft Off+Hard off)						
		2	Basic function Off after 40 min. (Soft Off+Hard off)						
		3	Basic function Off after 80 min. (Soft Off+Hard off)						
	Premium	4	Advanced function Off after 20 min. (Soft Off+Hard off)						
		5	Advanced function Off after 40 min. (Soft Off+Hard off)						
		6	Advanced function Off after 80 min. (Soft Off+Hard off)						
	Standard	7	Basic function Off after 20 min. (Soft Off only)		2	7 seconds			
		8	Basic function Off after 40 min. (Soft Off only)						
9		Basic function Off after 80 min. (Soft Off only)							
Premium	A	Advanced function Off after 20 min. (Soft Off only)							
	B	Advanced function Off after 40 min. (Soft Off only)							
	C	Advanced function Off after 80 min. (Soft Off only)							

(\*1) When cooling or Dry mode is off. The indoor fan operate in setting minutes.

(\*2) Minimizing fan operation when thermostat is off

- Fan operates for 20 seconds at an interval of 5 minutes in Heat mode.
- Fan stops or operates Ultra low in cooling when thermostat is off.

(\*3) 1: Fan is turned on continually when the hot water heater is turned on, 3: Fan is turned off when the hot water heater is turned on with cooling only indoor unit.

Cooling only indoor unit: To use this option, install the Mode Select switch(MCM-C200) on the outdoor unit and fix it as Cool mode.

# Installation Procedure

- (\*4) When the following 2 or 3 is used as external heater On/Off signal, the signal for monitoring external contact control will not be output.  
 2: Fan is turned on continually when the external heater is turned on, 3: Fan is turned off when the external heater is turned on with cooling only indoor unit.  
 Cooling only indoor unit: To use this option, install the Mode Select switch(MCM-C200) on the outdoor unit and fix it as Cool mode.  
 – If fan is set to off for cooling only indoor unit by setting the SEG9=3 or SEG15=3, you need to use an external sensor or wired remote controller sensor to detect indoor temperature exactly.
- (\*5) When indoor unit is in cooling or Dry mode, The output signal is "ON"
- (\*6) For free cooling control, Economizer controller is required.
- (\*7) Default setting value depends on the product option.
- (\*8) If the air conditioner operates in the Heat mode immediately after finishing the cooling operation, the condensated water in the drain pan becomes water steam by the heat of the indoor unit heat exchanger. Since the water steam might be condensed on the indoor unit, which may fall into a living space, use this function to remove the water steam out of the indoor unit by operating the fan (for maximum 20 minutes) although the indoor unit is turned off after the Cool mode is turned to the Heat mode.
- (\*9) **Soft Off:** If no motion is detected for the Soft Off time, the MDS Kit turns off the indoor units. Then if any motion is detected until the Hard Off time is passed, the MDS Kit restarts the indoor units.
- (\*10) **Hard Off:** If no motion is detected for the Hard Off time, the MDS Kit turns hard off the indoor units. Then although any motion is detected, the MDS Kit does not restart the indoor and outdoor units. You must manually restart the units with the wired or wireless remote control .

## Installation options for the 05 series

SEG1	SEG2	SEG3	SEG4	SEG5	SEG6
0	5	Use of Auto Change Over for HR only in Auto mode / Whether to use SVB	(When setting SEG3) Offset for the heating reference temperature	(When setting SEG3) Offset for the cooling reference temperature	(When setting SEG3) Reference for change from Heat mode to Cool mode
SEG7	SEG8	SEG9	SEG10	SEG11	SEG12
1	(When setting SEG3) Reference for change from Cool mode to Heat mode	(When setting SEG3) Time required for mode change	Compensation option for a long pipe and the height difference between indoor units	MTFC (*3)	-
SEG13	SEG14	SEG15	SEG16	SEG17	SEG18
2	-	Dual fuel (heater lock) setting	Dual fuel (HP lock) setting	-	Control variables when the hot water heater or an external heater is used
SEG19	SEG20	SEG21	SEG22	SEG23	SEG24
3	-	-	-	Forced FAN Operation for Heating and Cooling	Whether to use UV LED / whether to use BLE Onboarding / whether to allow fan speed control during auto mode / MDS (motion detection sensor) control UX type

## Installation options for the 05 series (detailed)

Option No. : 05XXXX-1XXXXX-2XXXXX-3XXXXX

Option	SEG1		SEG2		SEG3		SEG4		SEG5		SEG6			
Function	Page		Mode		Use of Auto Change Over for HR only in Auto mode / Whether to use SVB		(When setting SEG3) Offset for the heating reference temperature		(When setting SEG3) Offset for the cooling reference temperature		(When setting SEG3) Reference for change from Heat mode to Cool mode			
Indication and details	Indication	Details	Indication	Details	Indication	Details	Indication	Details	Indication	Details	Indication	Details		
	0		5		0	Default	0	0	0	0	0	1		
					1	Auto change over for HR only used	2	1	2	1	2	2		
					2	Disuse	3	1.5	3	1.5	3	1.5	3	2.5
					3	SVB not used for HP only (Consult qualified installer)	4	2	4	2	4	2	4	3
					5	2.5	5	2.5	5	2.5	5	2.5	5	3.5
6					3	6	3	6	3	6	3	6	4	
7	3.5	7	3.5	7	3.5	7	3.5	7	3.5	7	4.5			
Option	SEG7		SEG8		SEG9		SEG10		SEG11		SEG12			
Function	Page		(When setting SEG3) Reference for change from Cool mode to Heat mode		(When setting SEG3) Time required for mode change		Compensation option for a long pipe and the height difference between indoor units		MTFC (*3)		-			
Indication and details	Indication	Details	Indication	Details	Indication	Details	Indication	Details	Indication	Details	-			
	1		0	1	0	5 min.	0	The default value is used.	0	Default				
			1	1.5	1	7 min.	1	1) The height difference (*1) is more than 30 m. - or - 2) The distance (*2) is longer than 110 m.						
			2	2	2	9 min.								
			3	2.5	3	11 min.								
			4	3	4	13 min.	2	1) The height difference (*1) is 15 to 30 m. - or - 2) The distance(*2) is 50 to 110 m.						
			5	3.5	5	15 min.								
			6	4	6	20 min.								
7	4.5	7	30 min.	2	Use									

# Installation Procedure

Option	SEG13	SEG14	SEG15		SEG16		SEG17
Function	-	-	Dual fuel (heater lock) setting		Dual fuel (HP lock) setting		-
Indication and details	-	-	Indication	Detail	Indication	Detail	-
			0	Disuse	0	Disuse	
			1	18.3 °C	1	7.2 °C	
			2	15.6 °C	2	4.4 °C	
			3	12.8 °C	3	1.7 °C	
			4	10 °C	4	-1.1 °C	
			5	7.2 °C	5	-3.9 °C	
			6	4.4 °C	6	-6.7 °C	
			7	1.7 °C	7	-9.4 °C	
			8	-1.1 °C	8	-12.2 °C	
			9	-3.9 °C	9	-15 °C	
			A	-6.7 °C	A	-17.8 °C	
			B	-9.4 °C	B	-20.6 °C	
			C	-12.2 °C	C	-23 °C	
			D	-15 °C	D	-26 °C	
E	-17.8 °C	E	-29 °C				
<b>Option</b>	<b>SEG18 (*4)</b>						
Function	Control variables when the hot water heater or an external heater is used						
Indication and details	Indication	Details					-
		Offset temperature for heater on			Delay time for heater on		
	0	At the same time with thermo on			No delay		
	1	At the same time with thermo on			10 min.		
	2	At the same time with thermo on			20 min.		
	3	1.5°C				No delay	
	4	1.5°C				10 min.	
	5	1.5°C				20 min.	
	6	3.0°C				No delay	
	7	3.0°C				10 min.	
	8	3.0°C				20 min.	
	9	4.5°C				No delay	
	A	4.5°C				10 min.	
	B	4.5°C				20 min.	
	C	6.0°C				No delay	
D	6.0°C				10 min.		
E	6.0°C				20 min.		


Option	SEG19	SEG20	SEG21	SEG22	SEG23	SEG24						
Function	-	-	-	-	Forcing FAN Operation for Heating and Cooling	Whether to use UV LED / whether to use BLE Onboarding / whether to allow fan speed control during auto mode / MDS (motion detection sensor) control UX type						
Indication and details					Indication	Details		Indication	Detail			MDS (motion detection sensor) control UX type
						Cooling Fan Setting	Heating Fan Setting		UV LED	BLE Onboarding	Whether to allow fan speed control during auto mode	
					0	Disuse	Disuse	0	Disuse	Disuse	Disuse	Fan speed and power saving mode can be set simultaneously
					1	Disuse	Use (Fan: User setting)	1	Use	Disuse	Disuse	Fan speed and power saving mode can be set simultaneously
					2	Disuse	Use (Fan: High)	2	Disuse	Use	Disuse	Fan speed and power saving mode can be set simultaneously
					3	Disuse	Use (Fan: Low)	3	Use	Use	Disuse	Fan speed and power saving mode can be set simultaneously
					4	Use (Fan: User setting)	Disuse	4	Disuse	Disuse	Use	Fan speed and power saving mode can be set simultaneously
					5	Use (Fan: User setting)	Use (Fan: User setting)	5	Use	Disuse	Use	Fan speed and power saving mode can be set simultaneously
					6	Use (Fan: User setting)	Use (Fan: High)	6	Disuse	Use	Use	Fan speed and power saving mode can be set simultaneously
					7	Use (Fan: User setting)	Use (Fan: Low)	7	Use	Use	Use	Fan speed and power saving mode can be set simultaneously
					8	Use (Fan: High)	Disuse	8	Disuse	Disuse	Disuse	Only fan speed or power saving mode can be set at a time
					9	Use (Fan: High)	Use (Fan: User setting)	9	Use	Disuse	Disuse	Only fan speed or power saving mode can be set at a time
					A	Use (Fan: High)	Use (Fan: High)	A	Disuse	Use	Disuse	Only fan speed or power saving mode can be set at a time
					B	Use (Fan: High)	Use (Fan: Low)	B	Use	Use	Disuse	Only fan speed or power saving mode can be set at a time
					C	Use (Fan: Low)	Disuse	C	Disuse	Disuse	Use	Only fan speed or power saving mode can be set at a time
					D	Use (Fan: Low)	Use (Fan: User setting)	D	Use	Disuse	Use	Only fan speed or power saving mode can be set at a time
					E	Use (Fan: Low)	Use (Fan: High)	E	Disuse	Use	Use	Only fan speed or power saving mode can be set at a time
F	Use (Fan: Low)	Use (Fan: Low)	F	Use	Use	Use	Only fan speed or power saving mode can be set at a time					

# Installation Procedure

- (\*1) Height difference : The difference of the height between the corresponding indoor unit and the indoor unit installed at the lowest place, select the option "1". For example, When the indoor unit is installed 40 m higher than the indoor unit.
- (\*2) The difference between the pipe length of the indoor unit installed at farthest place from an outdoor unit and the pipe length of the corresponding indoor unit from an outdoor unit. For example, when the farthest pipe length is 100 m and the corresponding indoor unit is 40 m away from an outdoor unit, select the option "2". (100 - 40 = 60 m)
- (\*3) For MTFC option, MTFC(Multi Tenant Function Controller) kit is required.
- (\*4) Heater operation when the SEG9 of O2 series installation option is set to using hot water heater or when SEG15 is set to using external heater.
  - Example 1) Setting O2 series SEG9 = "1" / Setting O5 series SEG18 = "0": The hot water heater is turned on at the same time as the heating thermostat is on, and turned off when the heating thermostat is off.
  - Example 2) Setting O2 series SEG15 = "2" / Setting O5 series SEG18 = "A": Room temp.  $\leq$  set temp. + f (heating compensation temp.)
    - External heater is turned on when the temperature is maintained as 4.5 °C for 10 minutes. Room temp.  $>$  set temp. + f (heating compensation temp.)
    - External heater is turned off when the temperature is maintained as 4.5 °C + 1 °C. (1 °C is the Hysteresis for On/Off selection.)

## Additional information on SEG 3, 4, 5, 6, 8, 9

When SEG 3 is set to 1 and the HR-specific auto changeover function is run, the indoor unit operates as shown in the following figure:

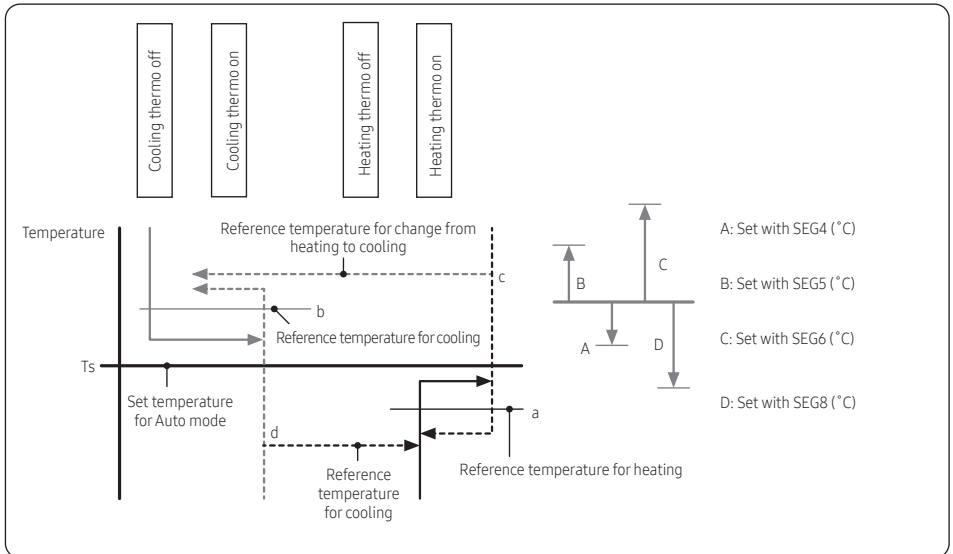

The mode change between the Cool and Heat modes is made only when the thermo off state is maintained for the period of time set with SEG9.

## Changing the addresses and options individually

When you want to change the value of a specific option, refer to the following table and follow the steps in **Common steps for setting the addresses and options** on page 25.

Option	SEG1		SEG2		SEG3		SEG4		SEG5		SEG6	
Function	Page		Mode		Type of the option to change		Tens position of the option number		Units position of the option number		New value	
Indication and details	Indication	Details	Indication	Details	Indication	Details	Indication	Details	Indication	Details	Indication	Details
	0		D		Option type	0 to F	Tens position value	0 to 9	Units position value	0 to 9	New value	0 to F

Example: Changing the Buzzer control (SEG17) option of the installation options to 1 disuse.

Option	SEG1		SEG2		SEG3		SEG4		SEG5		SEG6	
Function	Page		Mode		Type of the option to change		Tens position of the option number		Units position of the option number		New value	
Indication	0		D		2		1		7		1	

### CAUTION


- If your indoor units support both cooling and heating, the mixed operation (two or more indoor units operate in different modes simultaneously) is not available when the indoor units are connected to the same outdoor unit. If you set an indoor unit as the master indoor unit by using the remote control, the outdoor unit automatically operate in the current mode of the master indoor unit.

## Installing external outputs

- An external output signal occurs if the R-32 sensor in the indoor unit detects a refrigerant leak, or the sensor has a malfunction or short circuit.
- Based on this signal, safety measures required for the outdoor unit, such as ventilation system activation and alarm activation, can be taken.
- MIM-B14\*\* (External Contact Control Module) can be used to link the GAS LEAK output.


# Installation Procedure

## For controlling AC LAMP (On/Off)

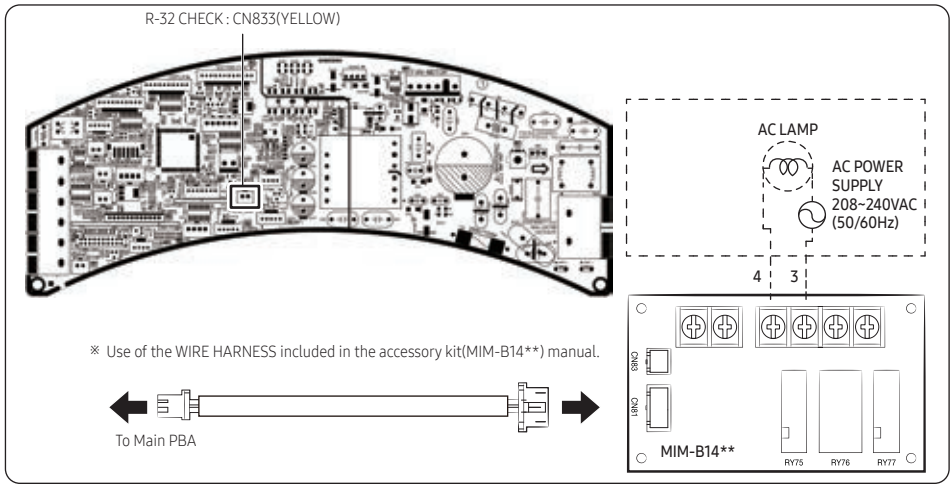

※ Use of the WIRE HARNESS included in the accessory kit(MIM-B14\*\*) manual.

## For controlling EXTERNAL ALARM (On/Off)

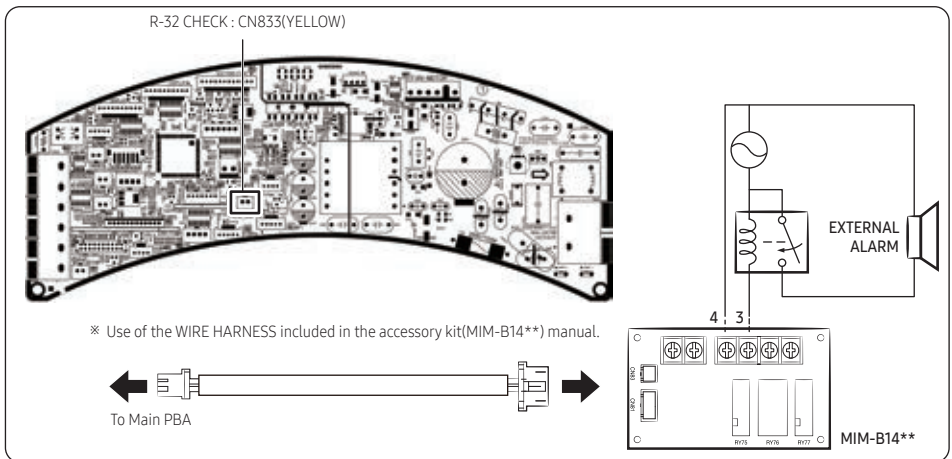

※ Use of the WIRE HARNESS included in the accessory kit(MIM-B14\*\*) manual.

### NOTE


- The MIM-B14\*\* can be connected to the required load on connectors 3 and 4.
- The load is AC (220-240), AC 2.25Amax
- When an error occurs due to a gas leak or R-32 sensor error, 3 and 4 are in a short state (the relay operates).

## For the installation of the circular panel


### Making a circular opening on the ceiling

Use a paper compass printed on the indoor unit package. (attached inside to the upper part)


- 1 Use a bolt or a pin to fix pivot point of the paper compass on center of the ceiling. (in the middle of location for installation)

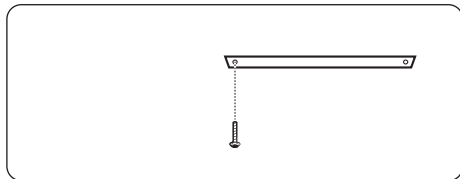


- 2 Put a pencil at the opposite side of the pivot point fixed in place.

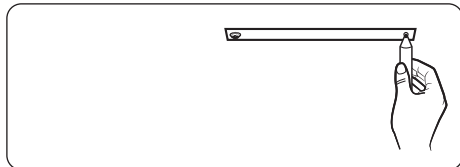

- 3 Rotate the paper compass on its pivot point to draw a line on the ceiling.

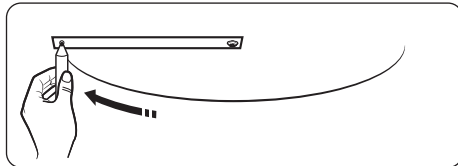

- 4 Rotate the paper compass diametrically to draw a circle on the ceiling.

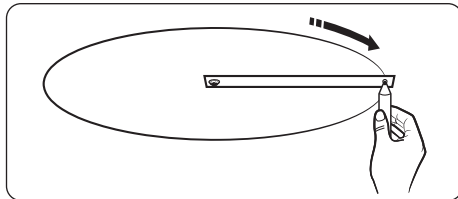

### For the painting of the panel

- Make sure to only apply paints and varnishes for resins (ABS, HIPS) or paint thinners.
- If you apply lacquers for general use on the panel, it may lead to discoloration or erosion on the surface of the panel.

# Troubleshooting

Condition of the indoor unit	Error code	Indoor unit display indications							
		Ice blue	Yellow green	Blue	Red				
Power reset (blinking once every 2 seconds)	No error	●	X	X	X				
In the defrost operation (blinking once every 10 seconds)	No error	●	X	X	X				
Open or short circuit error of the indoor-temperature sensor	E121	X	X	X	●				
Open or short circuit error of the evaporator-in sensor	E122	X	●	X	●				
Open or short circuit error of the evaporator-out sensor	E123								
Error of the fan in the indoor unit	E154	X	X	●	●				
1. Open or short circuit error of the outdoor-temperature sensor	E221								
2. Open or short circuit error of the condenser sensor	E237								
3. Open or short circuit error of the discharge sensor	E251								
Errors of the sensors of the outdoor unit other than the errors listed above									
1. Error due to the opened EEV (2nd detection)	E151								
2. Error due to the closed EEV (2nd detection)	E152								
3. The evaporator-in sensor is detached.	E128								
4. The evaporator-out sensor is detached.	E129								
5. The condenser mid sensor is detached.	E241								
6. Refrigerant leakage (2nd detection)	E554					X	X	●	X
7. Abnormal high temperature on the condenser (2nd detection)	E554								
8. Low pressure switch (2nd detection)	E451								
9. Abnormal high temperature on the air discharged from the outdoor unit (2nd detection)	E416								
10. The indoor unit stops due to an unknown error of the outdoor unit.	E559								
11. Error of detection of a reverse phase	E425								
12. The compressor stops due to freeze detection (6th detection)	E403								
13. The high pressure sensor is detached.	E301								
14. The low pressure sensor is detached.	E306								
15. Compression ratio error of the outdoor unit	E428								
16. Outdoor sump down_1 prevention control	E413								
17. Compressor shutdown due to the low-pressure-sensor prevention control_1	E410								
18. Simultaneous opening of the cooling and heating MCU SOL valves (1st detection)	E180					X	X	●	X
19. Simultaneous opening of the cooling and heating MCU SOL valves (2nd detection)	E181								
Self-diagnosis errors other than the errors listed above									

Condition of the indoor unit	Error code	Indoor unit display indications			
		Ice blue	Yellow green	Blue	Red
No communication occurs between the indoor and outdoor units for 2 minutes.	E101		●	X	X
Communication error received from the outdoor unit	E102				
Error of 3 minute tracking on the outdoor unit	E202				
The number of the installed indoor units that is transmitted via communication after the tracking is different.	E201				
Error of duplicated communication addresses (NASA only)	E108				
The communication address is not confirmed. (NASA only)	E109				
Indoor unit R-32 sensor short/open	E116				
MCU or SVB unit R-32 sensor short / open	E686				
2nd refrigerant leak detection error (Error-causing MCU or SVB unit)	E687				
Refrigerant leak sensor failure error (Error-causing MCU or SVB unit)	E688				
Refrigerant leak sensor replacement notification error (Error-causing MCU or SVB unit)	E689				
Refrigerant leak sensor lifetime expiration error (Error-causing MCU or SVB unit)	E690				
1st refrigerant leak detection error	E696				
2nd refrigerant leak detection error (Error-causing indoor unit)	E697				
Refrigerant leak sensor failure error	E698				
Refrigerant leak sensor replacement notification error	E699				
Refrigerant leak sensor lifetime expiration error	E700				
2nd refrigerant leak detection error (Not Error-causing indoor unit)	E797				
MCU or SVB unit communication address not confirmed	E693				
Communication error between wired remote controller and indoor unit	E601				
Wired remote control incompatible device connection error	E633				
Communication error between wired remote controller and indoor unit	E641				
Communication errors other than the errors listed above					
Error of the second detection of the float switch	E153	X	●	●	X
EEPROM error	E162	●	●	X	●
EEPROM option error	E163				
Error of incompatibility of the indoor unit	E164	●	X	X	●
Error of mixed operation	E161	●	●	X	X
Open circuit error of the thermal fuse	E198	●	X	●	X
MDS (Motion Detecting Sensor) Error		●	●	●	X

● : On, ● : Blinking, X : Off

**SAMSUNG**