

September 2021

No. OCH760
REVISED EDITION-B

TECHNICAL & SERVICE MANUAL

<Outdoor unit>

[Model Name]

PUMY-P250YBM

PUMY-P300YBM

PUMY-P250YBM-ER

PUMY-P300YBM-ER

PUMY-P250YBM-ET

PUMY-P300YBM-ET

Salt proof model

PUMY-P250YBM-BS

PUMY-P300YBM-BS

PUMY-P250YBM-ERBS

PUMY-P300YBM-ERBS

PUMY-P250YBM-ETBS

PUMY-P300YBM-ETBS

Service Ref.

PUMY-P250YBM.TH
PUMY-P300YBM.TH
PUMY-P250YBM-ER.TH
PUMY-P300YBM-ER.TH
PUMY-P250YBM-ET.TH
PUMY-P300YBM-ET.TH
PUMY-P250YBM-BS.TH
PUMY-P300YBM-BS.TH
PUMY-P250YBM-ERBS.TH
PUMY-P300YBM-ERBS.TH
PUMY-P250YBM-ETBS.TH
PUMY-P300YBM-ETBS.TH


Revision:

- The value of the resistance of solenoid valve coil in 8-6. HOW TO CHECK THE PARTS has been modified in REVISED EDITION-B.

OCH760A is void.

Note:

- This service manual describes technical data of the outdoor units only. As for indoor units, refer to its service manual.

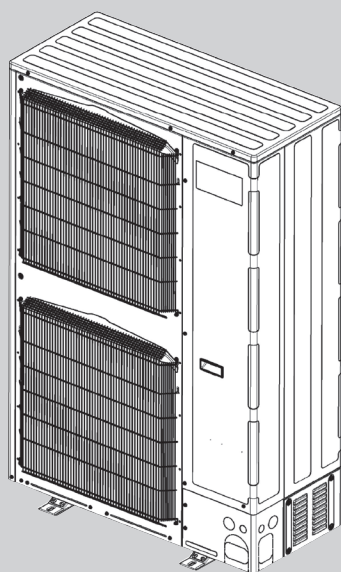

OUTDOOR UNIT

CONTENTS

1. SAFETY PRECAUTION.....	2
2. OVERVIEW OF UNITS.....	6
3. SPECIFICATIONS.....	10
4. DATA.....	11
5. OUTLINES AND DIMENSIONS.....	22
6. WIRING DIAGRAM.....	23
7. NECESSARY CONDITIONS FOR SYSTEM CONSTRUCTION.....	24
8. TROUBLESHOOTING.....	40
9. ELECTRICAL WIRING.....	111
10. REFRIGERANT PIPING TASKS.....	117
11. DISASSEMBLY PROCEDURE.....	125
12. REMOTE CONTROLLER.....	130

PARTS CATALOG (OCB760)

1-1. CAUTIONS RELATED TO NEW REFRIGERANT

Cautions for units utilizing refrigerant R410A

Preparation before the repair service

- Prepare the proper tools.
- Prepare the proper protectors.
- Provide adequate ventilation.
- After stopping the operation of the air conditioner, turn off the power-supply breaker.
- Discharge the condenser before the work involving the electric parts.

Use new refrigerant pipes.

Avoid using thin pipes.

Make sure that the inside and outside of refrigerant piping is clean and it has no contaminants such as sulfur, oxides, dirt, shaving particles, etc., which are hazard to refrigerant cycle. In addition, use pipes with specified thickness.

Contamination inside refrigerant piping can cause deterioration of refrigerant oil, etc.

Follow the instructions below to prevent abrasive components contained in sandpaper and cutting tools from entering the refrigerant circuit because those components can cause failures of the compressor and valves.

- To deburr pipes, use a reamer or other deburring tools, not sandpaper.
- To cut pipes, use a pipe cutter, not a grinder or other tools that use abrasive materials.
- When cutting or deburring pipes, do not allow cutting chips or other foreign matters to enter the pipes.
- If cutting chips or other foreign matters enter pipes, wipe them off the inside of the pipes.

Store the piping indoors, and keep both ends of the piping sealed until just before brazing. (Leave elbow joints, etc. in their packaging.)

If dirt, dust or moisture enters into refrigerant cycle, that can cause deterioration of refrigerant oil or malfunction of compressor.

The refrigerant oil applied to flare and flange connections must be ester oil, ether oil or alkylbenzene oil in a small amount.

If large amount of mineral oil enters, that can cause deterioration of refrigerant oil, etc.

Charge refrigerant from liquid phase of gas cylinder.

If the refrigerant is charged from gas phase, composition change may occur in refrigerant and the efficiency will be lowered.

Precautions during the repair service

- Do not perform the work involving the electric parts with wet hands.
- Do not pour water into the electric parts.
- Do not touch the refrigerant.
- Do not touch the hot or cold areas in the refrigerating cycle.
- When the repair or the inspection of the circuit needs to be done without turning off the power, exercise great caution not to touch the live parts.
- When opening or closing the valve below freezing temperatures, refrigerant may spurt out from the gap between the valve stem and the valve body, resulting in injuries.

Use a vacuum pump with a reverse flow check valve.

Vacuum pump oil may flow back into refrigerant cycle and that can cause deterioration of refrigerant oil, etc.

Use the following tools specifically designed for use with R410A refrigerant.

The following tools are necessary to use R410A refrigerant.

Tools for R410A	
Gauge manifold	Flare tool
Charge hose	Size adjustment gauge
Gas leak detector	Vacuum pump adaptor
Torque wrench	Electronic refrigerant charging scale

Handle tools with care.

If dirt, dust or moisture enters into refrigerant cycle, that can cause deterioration of refrigerant oil or malfunction of compressor.

Do not use a charging cylinder.

If a charging cylinder is used, the composition of refrigerant will change and the efficiency will be lowered.

Ventilate the room if refrigerant leaks during operation. If refrigerant comes into contact with a flame, poisonous gases will be released.

Use the specified refrigerant only.

Never use any refrigerant other than that specified. Doing so may cause a burst, an explosion, or fire when the unit is being used, serviced, or disposed of. Correct refrigerant is specified in the manuals and on the spec labels provided with our products. We will not be held responsible for mechanical failure, system malfunction, unit breakdown or accidents caused by failure to follow the instructions.

Do not use refrigerant other than R410A.

If other refrigerant (R22, etc.) is used, chlorine in refrigerant can cause deterioration of refrigerant oil, etc.

Do not pump down the system when a gas leak has been detected.

The intake of air or other gases causes abnormally high pressure in the refrigeration cycle, which may cause explosion or injury.


[1] Cautions for service

- (1) Perform service after recovering the refrigerant left in unit completely.
- (2) Do not release refrigerant in the air.
- (3) After completing service, charge the cycle with specified amount of refrigerant.
- (4) If moisture or foreign matter might have entered the refrigerant piping during service, ensure to remove them.

[2] Additional refrigerant charge

When charging directly from cylinder

- (1) Check that cylinder for R410A on the market is a syphon type.
- (2) Charging should be performed with the cylinder of syphon stood vertically. (Refrigerant is charged from liquid phase.)

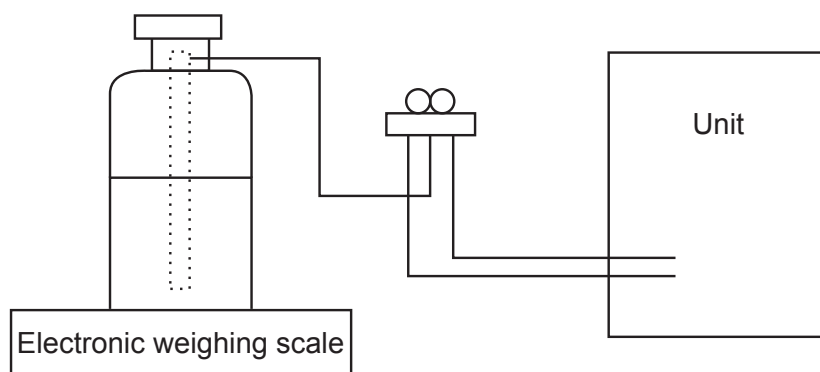

[3] Service tools

Use the below service tools as exclusive tools for R410A refrigerant.

No.	Tool name	Specifications
①	Gauge manifold	· Only for R410A
		· Use the existing fitting specifications. (UNF1/2)
		· Use high-tension side pressure of 5.3MPa·G or over.
②	Charge hose	· Only for R410A
		· Use pressure performance of 5.09MPa·G or over.
③	Electronic weighing scale	—
④	Gas leak detector	· Use the detector for R134a, R407C or R410A.
⑤	Adaptor for reverse flow check	· Attach on vacuum pump.
⑥	Refrigerant charge base	—
⑦	Refrigerant cylinder	· Only for R410A · Top of cylinder (Pink)
		· Cylinder with syphon
⑧	Refrigerant recovery equipment	—

1-2. PRECAUTIONS FOR SALT PROOF TYPE "-BS" MODEL

Although "-BS" model has been designed to be resistant to salt damage, observe the following precautions to maintain the performance of the unit.

- (1) Avoid installing the unit in a location where it will be exposed directly to seawater or sea breeze.
- (2) If the cover panel may become covered with salt, be sure to install the unit in a location where the salt will be washed away by rainwater. (If a sunshade is installed, rainwater may not clean the panel.)
- (3) To ensure that water does not collect in the base of the outdoor unit, make sure that the base is level, not at angle. Water collecting in the base of the outdoor unit could cause rust.
- (4) If the unit is installed in a coastal area, clean the unit with water regularly to remove any salt build-up.
- (5) If the unit is damaged during installation or maintenance, be sure to repair it.
- (6) Be sure to check the condition of the unit regularly.
- (7) Be sure to install the unit in a location with good drainage.

1-3. Cautions for refrigerant piping work

New refrigerant R410A is adopted for replacement inverter series. Although the refrigerant piping work for R410A is same as for R22, exclusive tools are necessary so as not to mix with different kind of refrigerant. Furthermore as the working pressure of R410A is 1.6 times higher than that of R22, their sizes of flared sections and flare nuts are different.

① Thickness of pipes

Because the working pressure of R410A is higher compared to R22, be sure to use refrigerant piping with thickness shown below. (Never use pipes of 0.7 mm or below.)

Diagram below: Piping diameter and thickness


Nominal dimensions (inch)	Outside diameter (mm)	Thickness (mm)	
		R410A	R22
1/4	6.35	0.8	0.8
3/8	9.52	0.8	0.8
1/2	12.70	0.8	0.8
5/8	15.88	1.0	1.0
3/4	19.05	1.0*	1.0
7/8	22.2	1.0*	1.0
1	25.4	1.0*	1.0

* Use 1/2 H or H pipes.

② Dimensions of flare cutting and flare nut


The component molecules in HFC refrigerant are smaller compared to conventional refrigerants. In addition to that, R410A is a refrigerant, which has higher risk of leakage because its working pressure is higher than that of other refrigerants. Therefore, to enhance airtightness and strength, flare cutting dimension of copper pipe for R410A has been specified separately from the dimensions for other refrigerants as shown below. The dimension B of flare nut for R410A also has partly been changed to increase strength as shown below. Set copper pipe correctly referring to copper pipe flaring dimensions for R410A below. For 1/2 and 5/8 inch pipes, the dimension B changes.

Use torque wrench corresponding to each dimension.

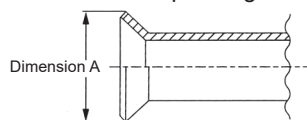

Flare cutting dimensions

Nominal dimensions (inch)	Outside diameter (mm)	Dimension A ($^{+0}_{-0.4}$) (mm)	
		R410A	R22
1/4	6.35	9.1	9.0
3/8	9.52	13.2	13.0
1/2	12.70	16.6	16.2
5/8	15.88	19.7	19.4
3/4	19.05	—	23.3

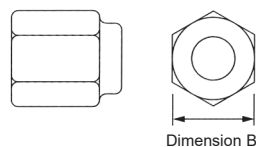

Flare nut dimensions

Nominal dimensions (inch)	Outside diameter (mm)	Dimension B (mm)	
		R410A	R22
1/4	6.35	17.0	17.0
3/8	9.52	22.0	22.0
1/2	12.70	26.0	24.0
5/8	15.88	29.0	27.0
3/4	19.05	—	36.0

③ Tools for R410A (The following table shows whether conventional tools can be used or not.)

Tools and materials	Use	R410A tools	Can R22 tools be used?	Can R407C tools be used?
Gauge manifold	Air purge, refrigerant charge and operation check	Tool exclusive for R410A	×	×
Charge hose		Tool exclusive for R410A	×	×
Gas leak detector	Gas leak check	Tool for HFC refrigerant	×	○
Refrigerant recovery equipment	Refrigerant recovery	Tool exclusive for R410A	×	×
Refrigerant cylinder	Refrigerant charge	Tool exclusive for R410A	×	×
Applied oil	Apply to flared section	Ester oil, ether oil and alkylbenzene oil (minimum amount)	×	Ester oil, ether oil: ○ Alkylbenzene oil: minimum amount
Safety charger	Prevent compressor malfunction when charging refrigerant by spraying liquid refrigerant	Tool exclusive for R410A	×	×
Charge valve	Prevent gas from blowing out when detaching charge hose	Tool exclusive for R410A	×	×
Vacuum pump	Vacuum drying and air purge	Tools for other refrigerants can be used if equipped with adopter for reverse flow check	△(Usable if equipped with adopter for reverse flow)	△(Usable if equipped with adopter for reverse flow)
Flare tool*	Flaring work of piping	Tools for other refrigerants can be used by adjusting flaring dimension	△(Usable by adjusting flaring dimension)	△(Usable by adjusting flaring dimension)
Bender	Bend the pipes	Tools for other refrigerants can be used	○	○
Pipe cutter*	Cut the pipes	Tools for other refrigerants can be used	○	○
Welder and nitrogen gas cylinder	Weld the pipes	Tools for other refrigerants can be used	○	○
Refrigerant charging scale	Refrigerant charge	Tools for other refrigerants can be used	○	○
Vacuum gauge or thermistor vacuum gauge and vacuum valve	Check the degree of vacuum. (Vacuum valve prevents back flow of oil and refrigerant to thermistor vacuum gauge)	Tools for other refrigerants can be used	○	○
Charging cylinder	Refrigerant charge	Tool exclusive for R410A	×	—

×: Prepare a new tool. (Use the new tool as the tool exclusive for R410A.)

△: Tools for other refrigerants can be used under certain conditions.

○: Tools for other refrigerants can be used.

* Follow the instructions below to prevent abrasive components contained in sandpaper and cutting tools from entering the refrigerant circuit because those components can cause failures of the compressor and valves.

- To deburr pipes, use a reamer or other deburring tools, not sandpaper.
- To cut pipes, use a pipe cutter, not a grinder or other tools that use abrasive materials.
- When cutting or deburring pipes, do not allow cutting chips or other foreign matters to enter the pipes.
- If cutting chips or other foreign matters enter pipes, wipe them off the inside of the pipes.

2-1. SYSTEM CONSTRUCTION

Outdoor unit		10HP	12HP
		P250YBM	P300YBM
Applicable indoor unit	Capacity	Type 10 to Type 250	
	Number of units	1 to 30 units	
	Total system capacity range	50 to 130 % of outdoor unit capacity (14.0 to 36.4 kW)	50 to 130 % of outdoor unit capacity (16.8 to 43.5 kW)

Branching pipe components	CMY-Y62-G-E	CMY-Y64-G-E	CMY-Y68-G-E
	Branch header (2 branches)	Branch header (4 branches)	Branch header (8 branches)

Connectable indoor unit lineup																	CONNECTION KIT PAC-LV11M-J
Model type	Model name	P10	P15	P20	P25	P32	P40	P50	P63	P71	P80	P100	P125	P140	P200	P250	M series indoor unit ² MSZ-EF Series MSZ-FH Series MSZ-LN Series MFZ-KT Series MSZ-AP Series
1-way cassette	PMFY-P·VBM-E			●	●	●	●										
2-way cassette	PLFY-P·VLMD-E			●	●	●	●	●	●		●	●	●				
4-way cassette	PLFY-EP·VEM-E *3							●	●								
	PLFY-M·VEM-E			●	●	●	●	●	●		●	●	●				
	PLFY-P·VEM-E			●	●	●	●	●	●		●	●	●				
	PLFY-P·VEM-PA					●	●	●	●		●	●	●				
2 by 2	PLFY-P·VFM-E1		●	●	●	●	●	●									
Ceiling concealed	PEFY-P·VMS1(L)-E		●	●	●	●	●	●									
	PEFY-P·VMA3-E *4								●	●	●						
	PEFY-P·VMHS-E						●	●	●	●	●	●	●	●	●	●	
	PEFY-P·VMR-E-L/R			●	●	●											
	PEFY-M·VMA(2)(L)-A			●	●	●	●	●	●	●	●	●	●	●			
	PEFY-P·VMA(L)-E1			●	●	●	●	●	●	●	●	●	●	●			
	PEFY-P·VMA(L)-E3			●	●	●	●	●	●	●	●	●	●	●			
	PEFY-P·VMH-E/E2						●	●	●	●	●	●	●	●	●	●	
	PEFY-P·VMX(L)-E(1)	●	●	●	●	●	●	●	●								
Ceiling suspended	PCFY-P·VKM-E						●		●			●	●				
Wall mounted	PKFY-P·VKM-E								●			●					
	PKFY-P·VLM-E	●	●	●	●	●	●	●									
Ceiling concealed (Fresh air type) *1	PEFY-P·VMHS-E-F															●	
Floor standing	PFFY-P·VLEM-E			●	●	●	●	●	●								
	PFFY-P·VKM-E2			●	●	●	●										
	PFFY-P·VCM-E			●	●	●	●	●	●								
Rossnay*5	GUF-·RD(H)4							●				●					

Note: The lineup of a connectable indoor unit depends on a district/areas/country.

Remote controller	Name	M-NET remote controller	MA remote controller
	Model number	PAR-F27MEA-E, PAR-U02MEDA	PAR-4xMAA, PAR-3xMAA ("x" represents 0 or later)
	Functions	· A handy remote controller for use in conjunction with the Melans centralized management system. · Addresses must be set.	· Address setting is not necessary.

*1 PUMY is connectable to Fresh Air type indoor unit. It is possible to connect 1 Fresh Air type indoor unit to 1 outdoor unit. (1:1 system) Operating temperature range (outdoor temperature) for fresh air type indoor units differ from other indoor units. Refer to "2-4-(3). Operating temperature range".

*2 When connecting the CONNECTION KIT (PAC-LV11M-J) and an M-series indoor unit, refer to the installation manual for the CONNECTION KIT. Refer to the connectable indoor unit lineup in "2-2 SYSTEM CONSTRUCTION (BRANCH BOX SYSTEM)" for connectable indoor unit models.

*3 Authorized connectable indoor units are only as follows:
PUMY-P250 : PLFY-EP63VEM-E × 4
PUMY-P300 : PLFY-EP50VEM-E × 1 + PLFY-EP63VEM-E × 4

*4 Authorized connectable indoor units are only as follows:
PUMY-P250 : PEFY-P63VMA3-E × 4
PUMY-P300 : PEFY-P80VMA3-E × 1 + PEFY-P71VMA3-E × 3

*5 Do not connect Lossnay remote controller(s). (PZ-61DR-E, PZ-60DR-E, PZ-52SF-E, PZ-43SMF-E)

2-2. SYSTEM CONSTRUCTION (BRANCH BOX SYSTEM)

Outdoor unit		10HP P250YBM	12HP P300YBM
Applicable indoor unit	Capacity	kW unit: Type 15 to Type 50	
	Number of units	2 to 12 units	
	Total system capacity range	50 to 130% of outdoor unit capacity (14.0 to 36.4 kW)	50 to 130% of outdoor unit capacity (16.8 to 43.5 kW)
Branch box that can be connected	Number of units	1 to 3 units*	

* The maximum total capacity of the units that can be connected to each branch box is 20.2kW

		Connectable indoor unit lineup										
Model type	Model name	P15	P18	P20	P22	P25	P35	P42	P50	P60	P71	P80
Wall mounted	MSZ-EF-VG-E2		●		●	●	●	●				
	MSZ-EF-VGK-E1		●		●	●	●	●				
	MSZ-AP-VG(K)	●		●								
	MSZ-AP-VG(K)-E2/E7					●	●	●				
	MSZ-LN-VG2					●	●		●			
	MSZ-FH-VE2					●	●		●			
Floor standing	MFZ-KT-VG					●	●		●			


Note: The lineup of a connectable indoor unit depends on a district/areas/country.

Branch box	PAC-MK54BC	PAC-MK34BC
Number of branches (Indoor unit that can be connected)	5-branches (MAX. 5 units)	3-branches (MAX. 3 units)

Note:
A maximum of 3 branch boxes can be connected to 1 outdoor unit.

2-branch pipe (joint): Optional parts		
In the case of using 1- branch box	No need	
In the case of using 2 or 3 branch boxes		
	Model name	Connection method
	MSDD-50AR-E	flare
	MSDD-50BR-E	brazing
	Select a model according to the connection method.	


Option	Optional accessories of indoor units and outdoor units are available.
--------	---



2-3. SYSTEM CONSTRUCTION (MIXED SYSTEM)

Outdoor unit			10HP			12HP		
			P250YBM			P300YBM		
Applicable indoor unit	Capacity	CITY MULTI indoor unit *3	Type 10 to Type 250					
		Via branch box	kW unit: Type 15 to Type 50					
	Number of units		Total	Via branch box	CITY MULTI indoor	Total	Via branch box	CITY MULTI indoor
		1 branch box *1	Max. 30	Max. 5	Max. 25	Max. 30	Max. 5	Max. 25
		2 branch boxes *1	Max. 30	Max.10	Max. 23	Max. 30	Max.10	Max. 23
		3 branch boxes *1	Max. 30	Max.12	Max. 22	Max. 30	Max.12	Max. 22
	Total system capacity range		14.0 to 36.4kW			16.8 to 43.5kW		

*1 The maximum total capacity of the units that can be connected to each branch box is 20.2kW

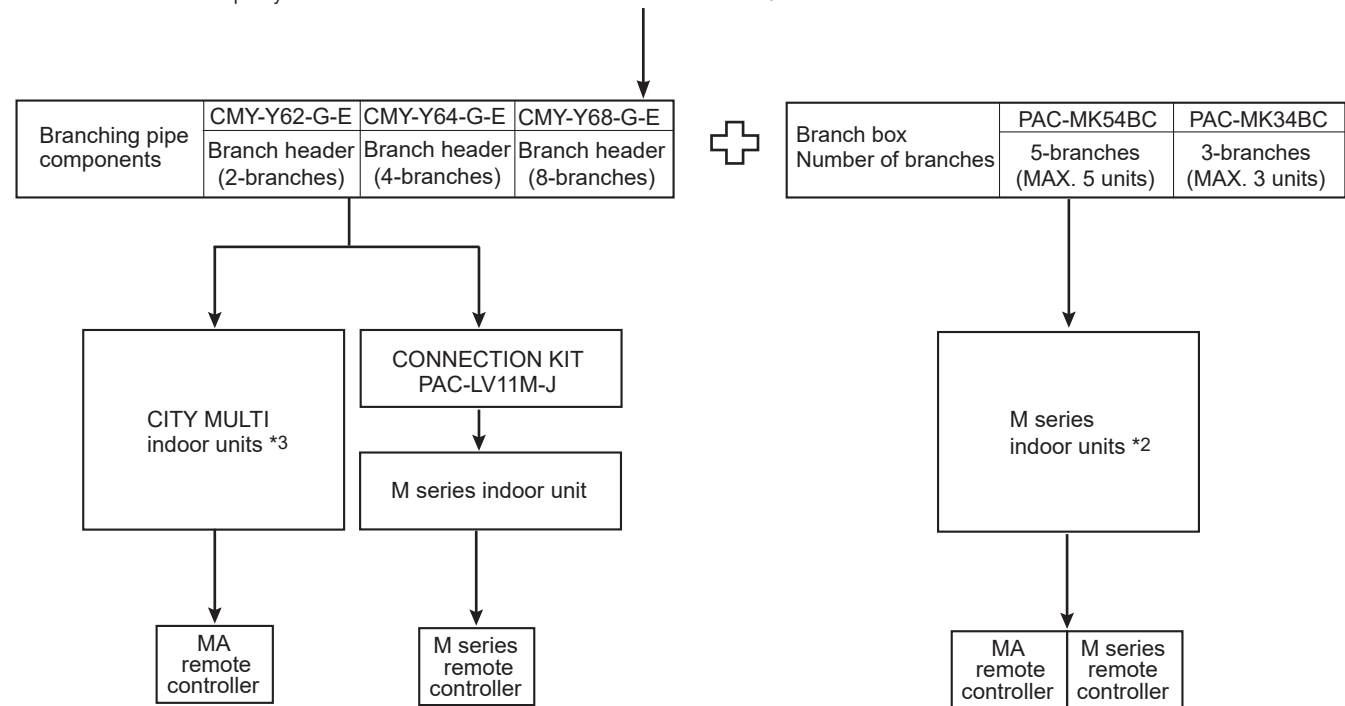

*2 Refer to "2-1. SYSTEM CONSTRUCTION" or "2-2. SYSTEM CONSTRUCTION (BRANCH BOX SYSTEM)", for more detail.

*3 PKFY-P10/15/20/25/32VLM, PFFY-P*VKM, PFFY-P*VCM, PFFY-P*VL* type indoor units cannot be used with MIXED SYSTEM.

2-4. SYSTEM SPECIFICATIONS

(1) Outdoor Unit


Outdoor unit		P250YBM	P300YBM
Capacity	Cooling (kW)	28.0	33.5
	Heating (kW)	31.5	37.5

Cooling/Heating capacity indicates the maximum value at operation under the following condition.

Cooling	Indoor:	D.B. 27°C/W.B. 19.0°C
	Outdoor:	D.B. 35°C
Heating	Indoor:	D.B. 20°C
	Outdoor:	D.B. 7°C/W.B. 6°C

(2) Method for identifying

■ Outdoor unit <When using model 280 >

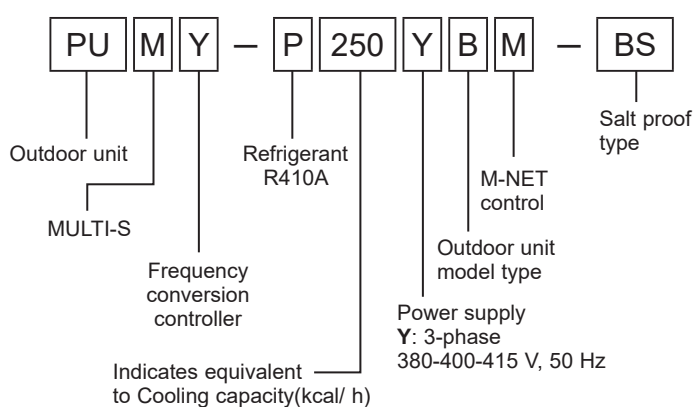

(3) Operating temperature range

	Cooling	Heating
Indoor intake air temperature	W.B. 15 to 24°C	D.B. 15 to 27°C
Outdoor intake air temperature	D.B. -5 to 52°C*1	W.B. -20 to 15°C

Notes: D.B.: Dry Bulb Temperature
W.B.: Wet Bulb Temperature

*1 10 to 52°C D.B.: When connecting PKFY-P10/15/20/25/32VLM, PFFY-P20/25/32VKM, PFFY-P20/25/32VCM, PFFY-P20/25/32VLEM, PEFY-P63/71/80VMA3-E; and M series type indoor unit.

■ When connecting fresh air type indoor unit.

• PEFY-P·VMHS-E-F

	Cooling	Heating
Indoor and outdoor intake air temperature	D.B. 17 to 43°C *2 W.B. 15.5 to 35°C	D.B. -10 to 20°C *3

*2 Thermo-OFF (FAN-mode) automatically starts if the outdoor temp. is lower than 17°C D.B.

*3 Thermo-OFF (FAN-mode) automatically starts if the outdoor temp. is higher than 21°C D.B.

3-1. OUTDOOR UNIT

Model			PUMY-P250YBM (-BS)		PUMY-P300YBM (-BS)			
Power source			3-phase, 380-400-415V, 50Hz					
Cooling capacity (Nominal)		kW ^{*1}	28.0		33.5			
		kcal/h ^{*1}	24,100		28,800			
		Btu/h ^{*1}	95,500		114,300			
		Power input	kW	8.21		10.12		
		Current input	A	13.35 - 12.68 - 12.22		16.36 - 15.54 - 14.98		
EER		kW/kW	3.41		3.31			
Temp. range of cooling		Indoor temp.	W.B. 15 to 24°C					
		Outdoor temp.	D.B. -5 to 52°C ^{*3,*4}					
Heating capacity (Nominal)		kW ^{*2}	31.5		37.5			
		kcal/h ^{*2}	27,100		32,200			
		Btu/h ^{*2}	107,500		128,000			
		Power input	kW	7.41		9.12		
		Current input	A	12.11 - 11.51 - 11.09		14.74 - 14.01 - 13.50		
COP		kW/kW	4.25		4.11			
Temp. range of heating		Indoor temp.	D.B. 15 to 27°C					
		Outdoor temp.	W.B. -20 to 15°C					
Indoor unit connectable		Total capacity		50 to 130% of outdoor unit capacity				
		Model/Max Quantity	CITY MULTI		P10 - P250/ 30			
			Branch box		kW type: P15 - P50/ 12			
			Branch box 1 unit	CITY MULTI	P10-P250/ 25		P10-P250/ 25	
				Branch box	kW type: P15-P50/ 5		kW type: P15-P50/ 5	
				Total (Quantity)	30		30	
			Branch box 2 units	CITY MULTI	P10-P250/ 23		P10-P250/ 23	
				Branch box	kW type: P15-P50/ 10		kW type: P15-P50/ 10	
				Total (Quantity)	30		30	
			Branch box 3 units	CITY MULTI	P10-P250/ 22		P10-P250/ 22	
				Branch box	kW type: P15-P50/ 12		kW type: P15-P50/ 12	
				Total (Quantity)	30		30	
Sound pressure level (SPL) (measured in anechoic room)		dB <A>	55 / 61		57 / 62			
Power pressure level (PWL) (measured in anechoic room)		dB <A>	73 / 79		75 / 79			
Refrigerant piping diameter		Liquid pipe	mm (inch)	ø9.52 (3/8) ^{*5}		ø12.7 (1/2)		
		Gas pipe	mm (inch)	ø22.4 (7/8)		ø25.4 (1)		
FAN		Type × Quantity		Propeller Fan × 2				
		Airflow rate	m³/min	165/183		165/183		
			L/s	2750/3050		2750/3050		
			cfm	5826/6462		5826/6462		
		Control, Driving mechanism		DC control				
		Motor output	kW	0.375 × 2				
		External static pressure		0Pa / 30Pa ^{*6}				
Compressor		Type × Quantity		Scroll hermetic compressor × 1				
		Manufacturer		Siam Compressor Industry Co., Ltd.				
		Starting method		Inverter				
		Motor output	kW	5.7		6.9		
		Case heater	kW	-				
		Lubricant		FVC68D (3.0 litter)				
External finish			Galvanized Steel Sheet Munsell No. 3Y 7.8/1.1					
External dimension HxWxD		mm	1,662 × 1,050 × 460(+45)					
		inch	65-7/16 × 41-11/32 × 187/64 (+ 1-49/64)					
Protection devices		High pressure protection		High pressure Switch				
		Inverter circuit (COMP./FAN)		Overcurrent detection, Overheat detection (Heat sink thermistor)				
		Compressor		Compressor thermistor, Overcurrent detection				
		Fan motor		Overheating, Voltage protection				
Refrigerant		Type × original charge		R410A 9.3 kg				
		Control		Linear Expansion Valve				
Net weight		kg (lb) [-BS kg (lbs)]		196 (432) [198 (437)]				
Heat exchanger			Cross Fin and Copper tube					
HIC circuit (HIC: Heat Inter-Changer)			Double pipe heat exchanger					
Defrosting method			Reversed refrigerant circuit					
Standard attachment		Document		Installation Manual				
		Accessory		Grounded lead wire ×1		Joint pipe×1 set, Grounding lead wire ×1		
Optional parts			Joint: CMY-Y62-G-E Header: CMY-Y64/68-G-E					

*1. Nominal cooling conditions (subject to ISO 15042)

Indoor: 27°C D.B./19°C W.B. [81°F D.B./66°F W.B.], Outdoor: 35°C D.B. [95°F D.B.], Pipe length: 7.5 m [24-9/16 ft.], Level difference: 0 m [0 ft.]

*2. Nominal heating conditions (subject to ISO 15042)

Indoor: 20°C D.B. [68°F D.B.], Outdoor: 7°C D.B./6°C W.B. [45°F D.B./43°F W.B.], Pipe length: 7.5 m [24-9/16 ft.], Level difference: 0 m [0 ft.]

*3. 10 to 52°C, when connecting following models: PKFY-P10/15/20/25/32VLM, PFFY-P20/25/32VKM, PFFY-P20/25/32VCM, PFFY-P20/25/32VLEM, PEFY-P63/71/80VMA3-E; and M series type indoor unit.

*4. -15 to 52°C, when using an optional air protect guide [PAC-SK21AG-E]. However, this condition does not apply to the indoor unit listed in *3.

*5. Liquid pipe diameter: 12.7mm, when further piping length is longer than 90m, and when PEFY-P200 or P250 is connected.

*6. It is possible to set the External static pressure to 30 Pa by Dip Switch.

Notes:

• Nominal conditions *1, *2 are subject to ISO15042

• Due to continuing improvement, above specifications may be subject to change without notice.

Unit converter

kcal/h = kW × 860
 Btu/h = kW × 3,412
 cfm = m³/min × 35.31
 lb = kg/0.4536

Above specification data
 is subject to rounding
 variation.

4-1. SELECTION OF COOLING/HEATING UNITS

<Cooling>

Design Condition	
Outdoor Design Dry Bulb Temperature	39°C
Total Cooling Load	25.0 kW
Room1, Room2	
Indoor Design Dry Bulb Temperature	27°C
Indoor Design Wet Bulb Temperature	20°C
Cooling Load	5.4 kW
Room3, Room4	
Indoor Design Dry Bulb Temperature	24°C
Indoor Design Wet Bulb Temperature	18°C
Cooling Load	7.1 kW
<Other>	
Indoor/Outdoor Equivalent Piping Length	20 m

Capacity of indoor unit

Unit: kW

P·FY Series	Model Number for indoor unit	Model 10	Model 15	Model 20	Model 25	Model 32	Model 40	Model 50	Model 63	Model 71	Model 80	Model 100	Model 125	Model 140	Model 200	Model 250
	Model Capacity	1.2	1.7	2.2	2.8	3.6	4.5	5.6	7.1	8.0	9.0	11.2	14.0	16.0	22.4	28.0
M Series	Model Number for indoor unit	Model 15	Model 18	Model 20	Model 22	Model 25	Model 35	Model 42	Model 50	—	—	—	—	—	—	—
	Model Capacity	1.5	1.8	2.0	2.2	2.5	3.5	4.2	5.0	—	—	—	—	—	—	—

1. Cooling Calculation

(1) Temporary Selection of Indoor Units

Room1, Room2	PEFY-P50	5.6 kW (Rated)
Room3, Room4	PEFY-P71	8.0 kW (Rated)

(2) Total Indoor Units Capacity

$$P50 + P50 + P71 + P71 = P242$$

(3) Selection of Outdoor Unit

The P250 outdoor unit is selected as total indoor units capacity is P242
PUMY-P250YBM

28.0 kW

(4) Total Indoor Units Capacity Correction Calculation

Room1, Room2	Indoor Design Wet Bulb Temperature Correction (20°C)	1.03 (Refer to Figure 1)
Room3, Room4	Indoor Design Wet Bulb Temperature Correction (18°C)	0.94 (Refer to Figure 1)
Total Indoor Units Capacity (CTi)		
CTi = Σ (Indoor Unit Rating \times Indoor Design Temperature Correction)		
= $5.6 \times 1.03 + 5.6 \times 1.03 + 8.0 \times 0.94 + 8.0 \times 0.94$		
= 26.6 kW		

(5) Outdoor Unit Correction Calculation

Outdoor Design Dry Bulb Temperature Correction (39°C)	0.94 (Refer to Figure 2)
Piping Length Correction (20 m)	0.97 (Refer to Figure 3)

Total Outdoor Unit Capacity (CTo)

$$\begin{aligned} CTo &= \text{Outdoor Rating} \times \text{Outdoor Design Temperature Correction} \times \text{Piping Length Correction} \\ &= 28.0 \times 0.94 \times 0.97 \\ &= 25.5 \text{ kW} \end{aligned}$$

(6) Determination of Maximum System Capacity

Comparison of Capacity between Total Indoor Units Capacity (CTi) and Total Outdoor Unit Capacity (CTo)

$$CTi = 26.6 > CTo = 25.5, \text{ thus, select } CTo.$$

$$CTx = CTo = 25.5 \text{ kW}$$

(7) Comparison with Essential Load

Against the essential load 25.0kW, the maximum system capacity is 25.5 kW: Proper outdoor units have been selected.

(8) Calculation of Maximum Indoor Unit Capacity of Each Room

CTx = CTo, thus, calculate by the calculation below

Room1, 2
Maximum Capacity \times Room1, or 2 Capacity after the Temperature Correction/(Room1 to 4 Total Capacity after the Temperature Correction)
= $25.5 \times (5.6 \times 1.03) / (5.6 \times 1.03 \times 2 + 8.0 \times 0.94 \times 2)$
= 5.5 kW **OK: fulfills the load 5.4 kW**

Room3, 4
Maximum Capacity \times Room3 or 4 Capacity after the Temperature Correction/(Room1 to 4 Total Capacity after the Temperature Correction)
= $25.5 \times (8.0 \times 0.94) / (5.6 \times 1.03 \times 2 + 8.0 \times 0.94 \times 2)$
= 7.2 kW **OK: fulfills the load 7.1 kW**

Note: If CTx = CTi, please refer to the <Heating> section to calculate the Maximum Indoor Unit Capacity of Each Room.
Go on to the heating trial calculation since the selected units fulfill the cooling loads of Room 1 to 4.

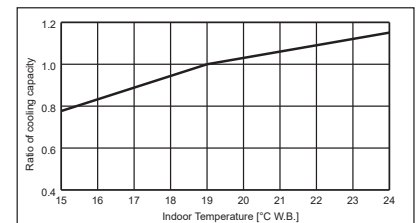


Figure 1 Indoor unit temperature correction
To be used to correct indoor unit only

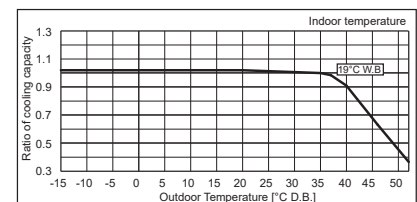


Figure 2 Outdoor unit temperature correction
To be used to correct outdoor unit only

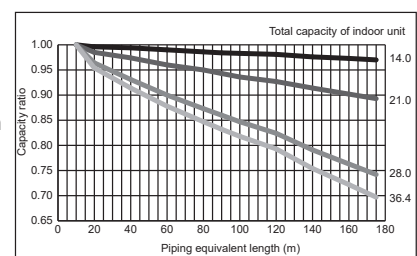


Figure 3 Correction of refrigerant piping length

<Heating>

Design Condition	
Outdoor Design Wet Bulb Temperature	2°C
Total Heating Load	25.0 kW
Room1, Room2	
Indoor Design Dry Bulb Temperature	24°C
Heating Load	6.0 kW
Room3, Room4	
Indoor Design Dry Bulb Temperature	25°C
Heating Load	6.5 kW
<Other>	
Indoor/Outdoor Equivalent Piping Length	30 m

Capacity of indoor unit

Unit: kW

P·FY Series	Model Number for indoor unit	Model 10	Model 15	Model 20	Model 25	Model 32	Model 40	Model 50	Model 63	Model 71	Model 80	Model 100	Model 125	Model 140	Model 200	Model 250
	Model Capacity	1.4	1.9	2.5	3.2	4.0	5.0	6.3	8.0	9.0	10.0	12.5	16.0	18.0	25.0	31.5

M Series	Model Number for indoor unit	Model 15	Model 18	Model 20	Model 22	Model 25	Model 35	Model 42	Model 50							
	Model Capacity	1.7	2.1	2.3	2.5	2.9	4.0	4.8	5.7	—	—	—	—	—	—	—

2. Heating Calculation

(1) Temporary Selection of Indoor Units

Room1, Room2	PEFY-P63	8.0 kW (Rated)
Room3, Room4	PEFY-P71	9.0 kW (Rated)

(2) Total Indoor Units Capacity

P63 + P63 + P71 + P71 = P268

(3) Selection of Outdoor Unit

The P300 outdoor unit is selected as total indoor units capacity is P268
PUMY-P300YBM **37.5 kW**

(4) Total Indoor Units Capacity Correction Calculation

Room1, Room2	Indoor Design Dry Bulb Temperature Correction (24°C)	0.84 (Refer to Figure 4)
Room3, Room4	Indoor Design Dry Bulb Temperature Correction (25°C)	0.80 (Refer to Figure 4)
Total Indoor Units Capacity (CTi)		
CTi = Σ (Indoor Unit Rating \times Indoor Design Temperature Correction)		
= $8.0 \times 0.84 + 8.0 \times 0.84 + 9.0 \times 0.80 + 9.0 \times 0.80$		
= 27.8 kW		

(5) Outdoor Unit Correction Calculation

Outdoor Design Wet Bulb Temperature Correction (2°C)	1.00 (Refer to Figure 5)
Piping Length Correction (30 m)	0.98 (Refer to Figure 6)
Defrost Correction	0.89 (Refer to Table 1)
Total Outdoor Unit Capacity (CTo)	
CTo = Outdoor Unit Rating \times Outdoor Design Temperature Correction \times Piping Length Correction \times Defrost Correction	
= $37.5 \times 1.00 \times 0.98 \times 0.89$	
= 32.7 kW	

(6) Determination of Maximum System Capacity

Comparison of Capacity between Total Indoor Units Capacity (CTi) and Total Outdoor Unit Capacity (CTo)
CTi = 27.8 < CTo = 32.7, thus, select CTi.
CTx = CTi = 27.8 kW

(7) Comparison with Essential Load

Against the essential load 25.0kW, the maximum system capacity is 27.8 kW: Proper outdoor units have been selected.

(8) Calculation of Maximum Indoor Unit Capacity of Each Room

CTx = CTi, thus, calculate by the calculation below

Room1, 2	Indoor Unit Rating \times Indoor Design Temperature Correction	
	= 8.0×0.84	
	= 6.7 kW	OK: fulfills the load 6.0 kW
Room3, 4	Indoor Unit Rating \times Indoor Design Temperature Correction	
	= 9.0×0.80	
	= 7.2 kW	OK: fulfills the load 6.5 kW

Note: If CTx = CTo, please refer to the <Cooling> section to calculate the Maximum Indoor Unit Capacity of Each Room.
Completed selecting units since the selected units fulfill the heating loads of Room 1 to 4.

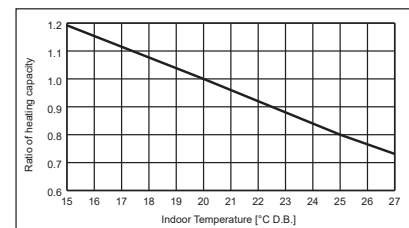


Figure 4 Indoor unit temperature correction
To be used to correct indoor unit only

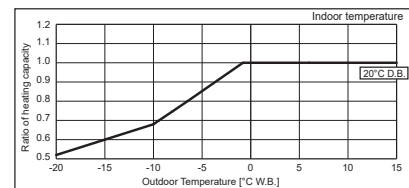


Figure 5 Outdoor unit temperature correction
To be used to correct outdoor unit only

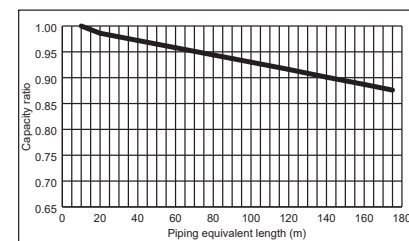


Figure 6 Correction of refrigerant piping length

Table 1 Table of correction factor at frost and defrost

Outdoor Intake Temperature (°C W.B.)	6	4	2	0	-2	-4	-6	-8	-10	-15	-20
Correction factor	1.00	0.98	0.89	0.88	0.89	0.90	0.95	0.95	0.95	0.95	0.95

4-2. CORRECTION BY TEMPERATURE

The outdoor units have varied capacity at different designing temperature. Using the nominal cooling/heating capacity value and the ratio below, the capacity can be observed at various temperature.

<Cooling>

Figure 7 Indoor unit temperature correction

To be used to correct indoor unit capacity only


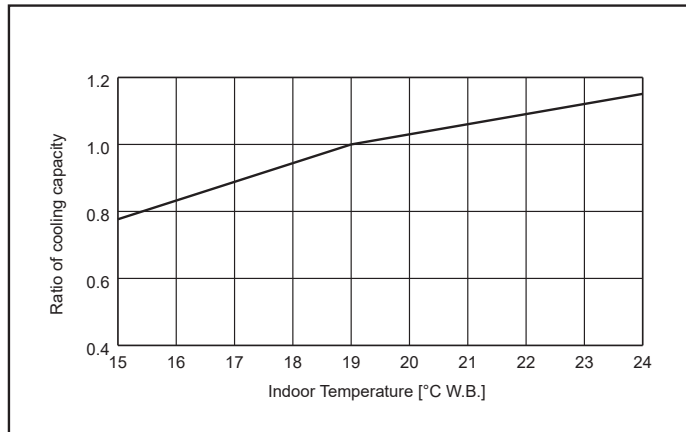


Figure 8 Outdoor unit temperature correction

To be used to correct outdoor unit capacity only

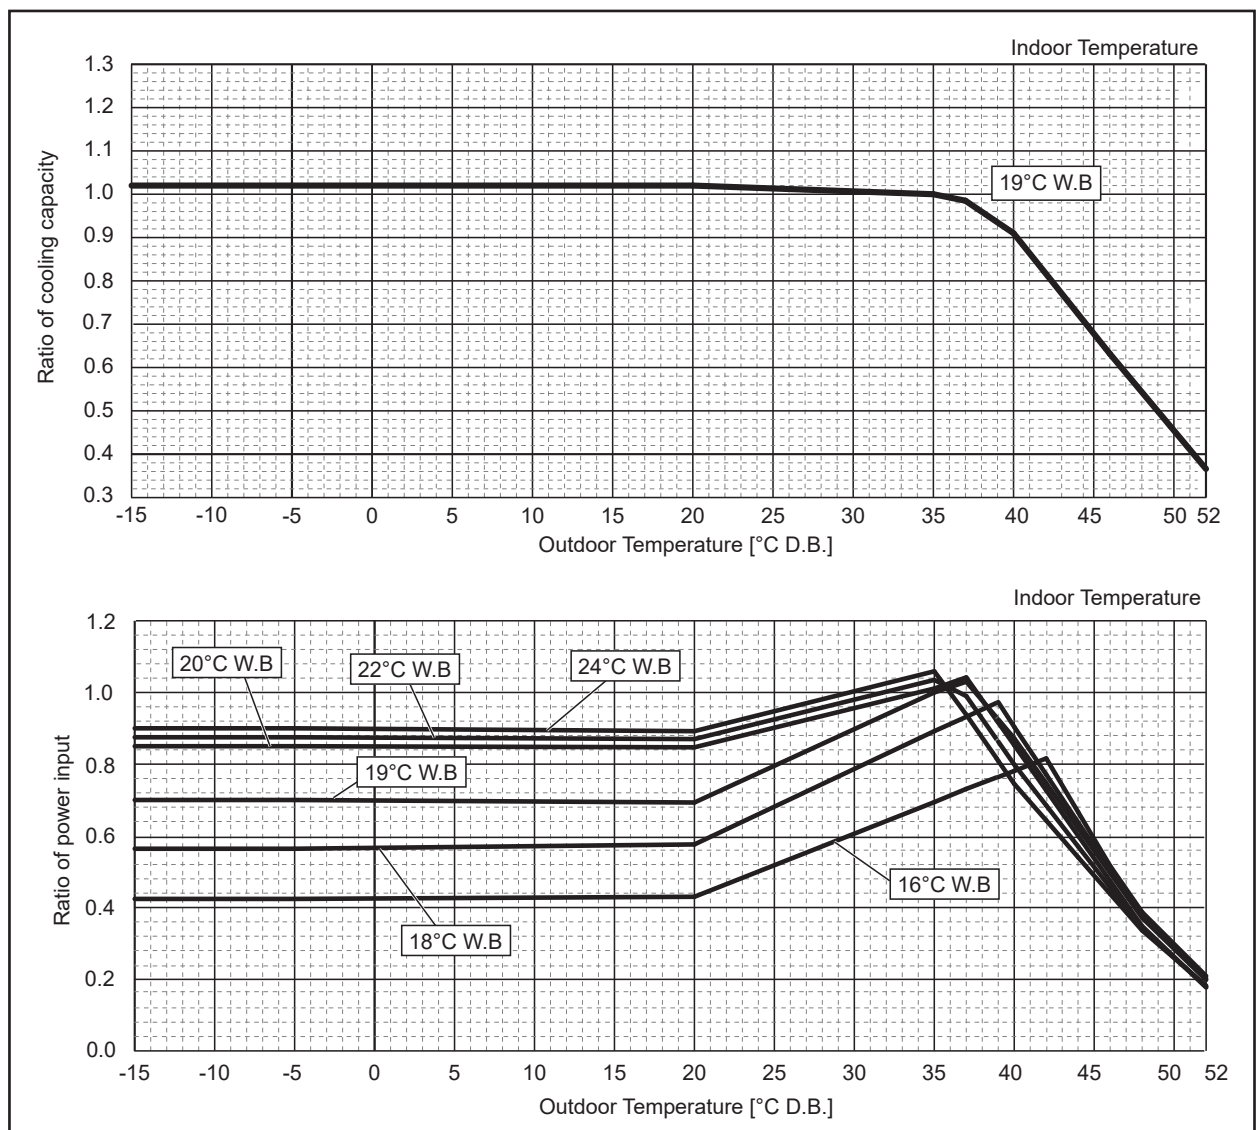

<Heating>

Figure 9 Indoor unit temperature correction

To be used to correct indoor unit capacity only


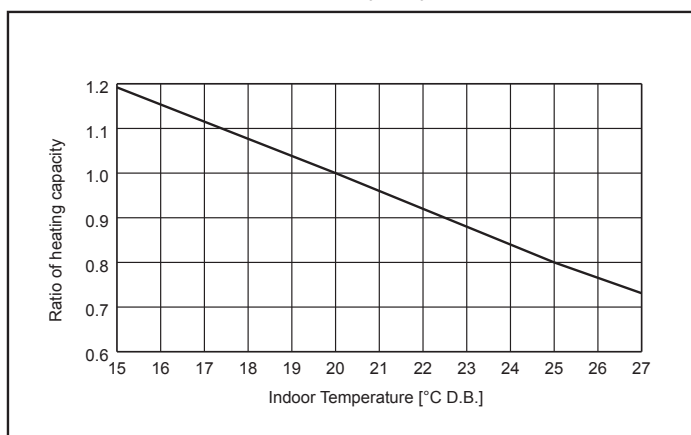


Figure 10 Outdoor unit temperature correction

To be used to correct outdoor unit capacity only



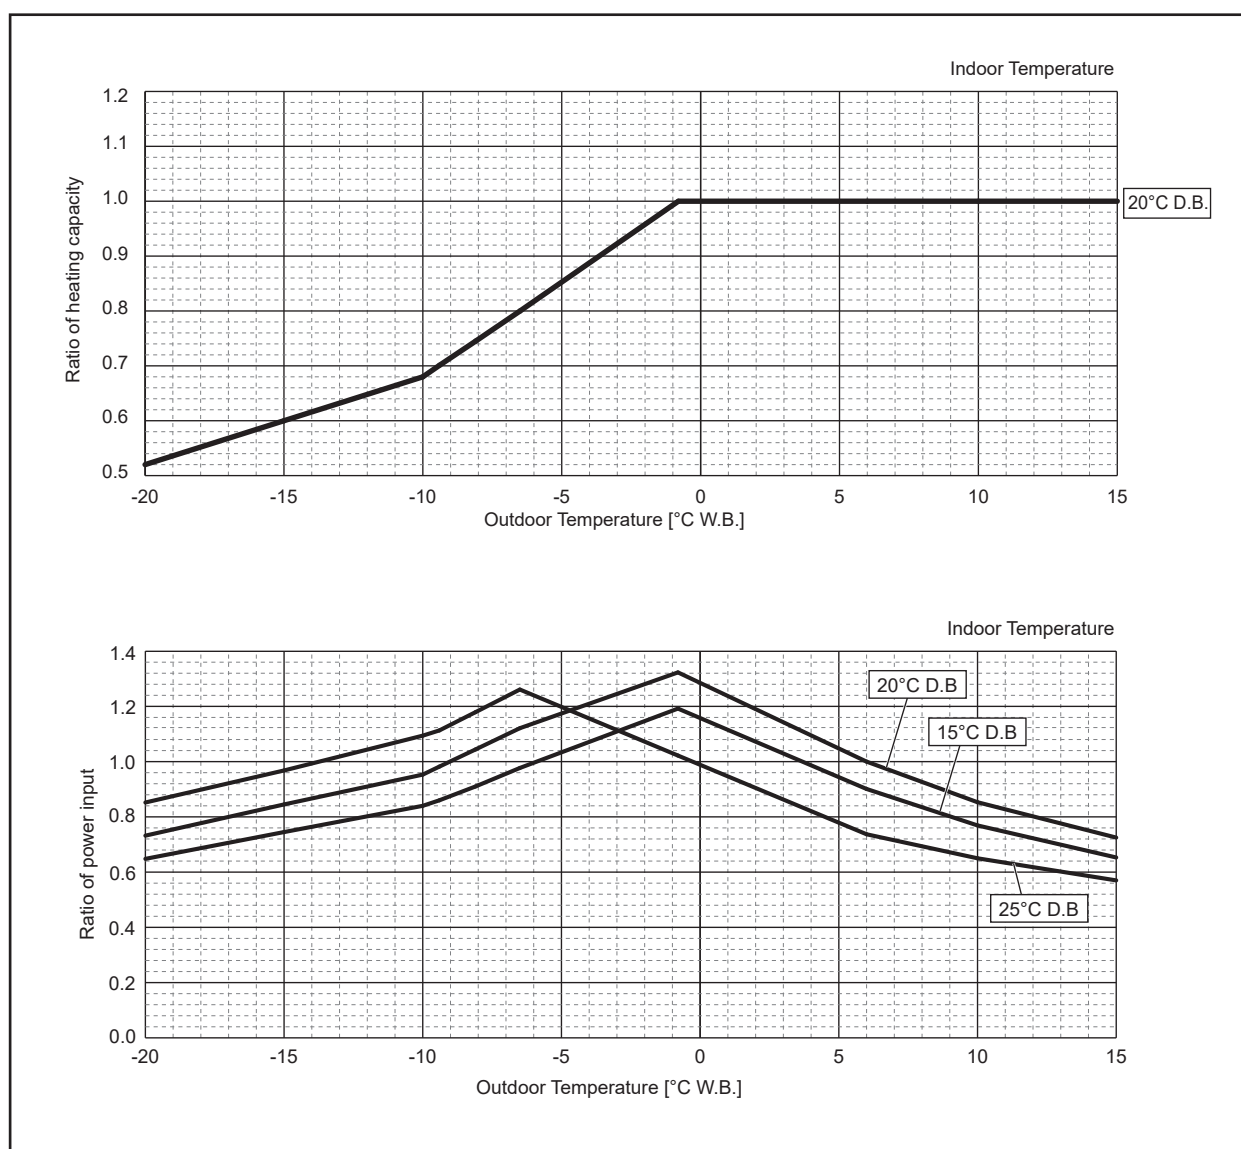



4-3. STANDARD CAPACITY DIAGRAM

Before calculating the sum of total capacity of indoor units, please convert the value into the kW model capacity following the formula on "4-1. SELECTION OF COOLING/HEATING UNITS".

4-3-1. PUMY-P250YBM




<Cooling>

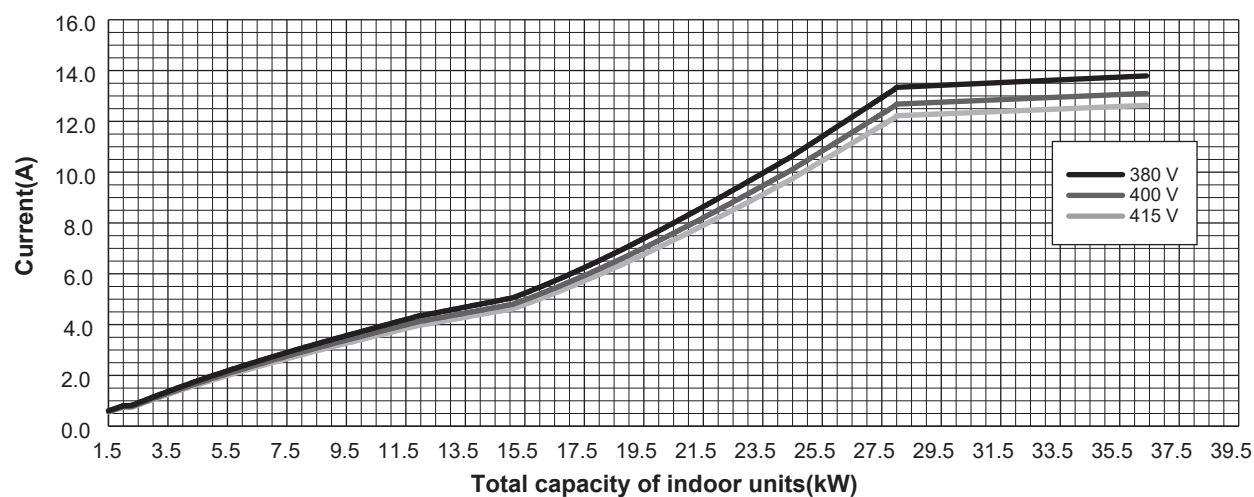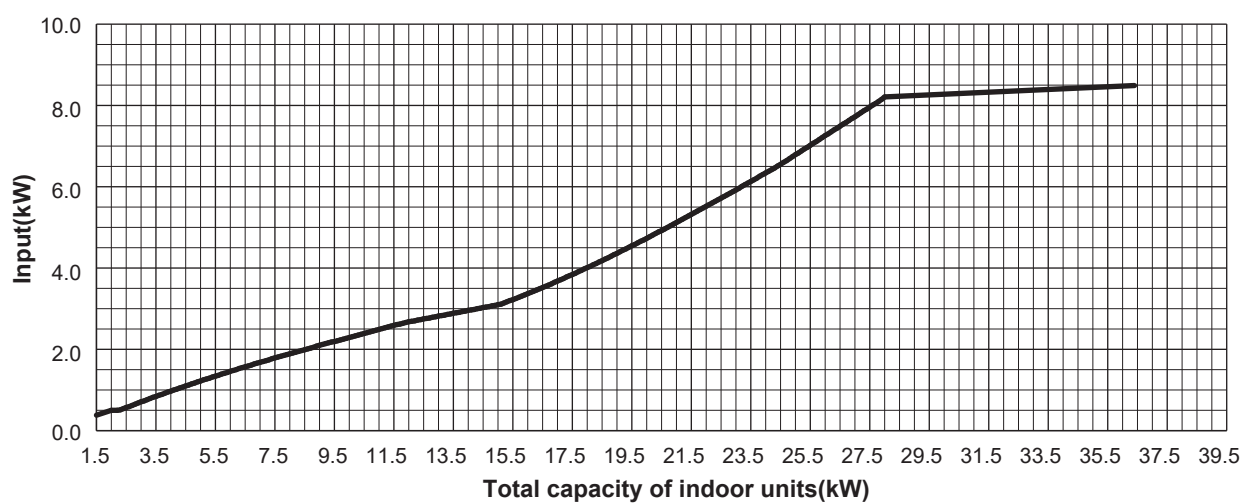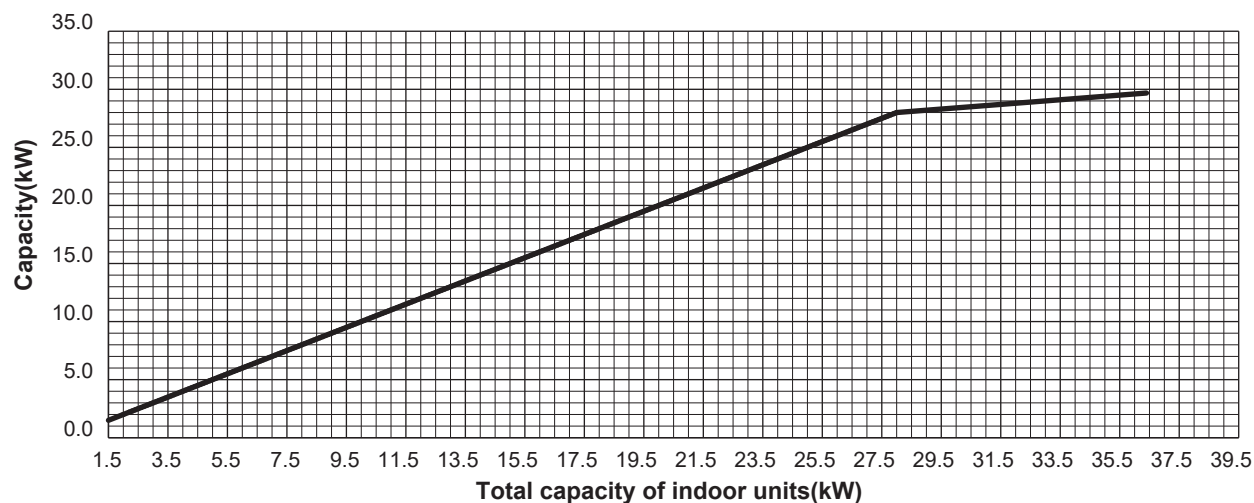






4-3-2. PUMY-P300YBM

<Cooling>

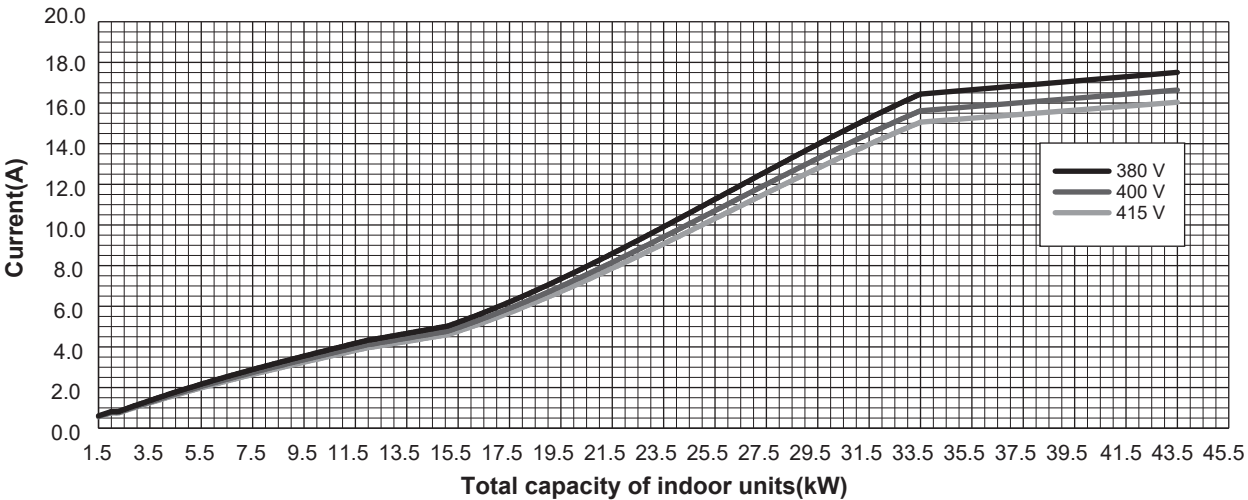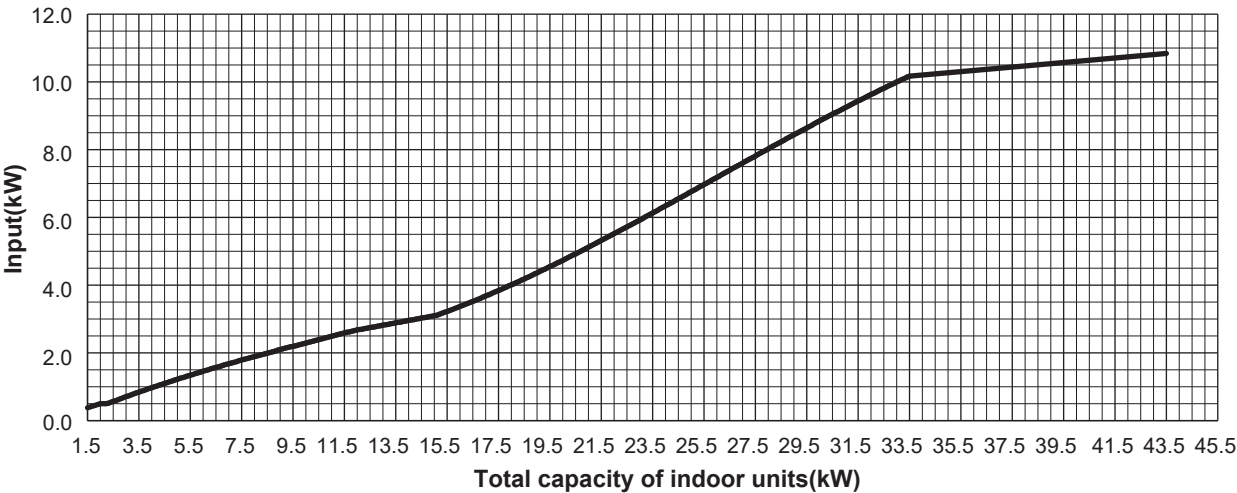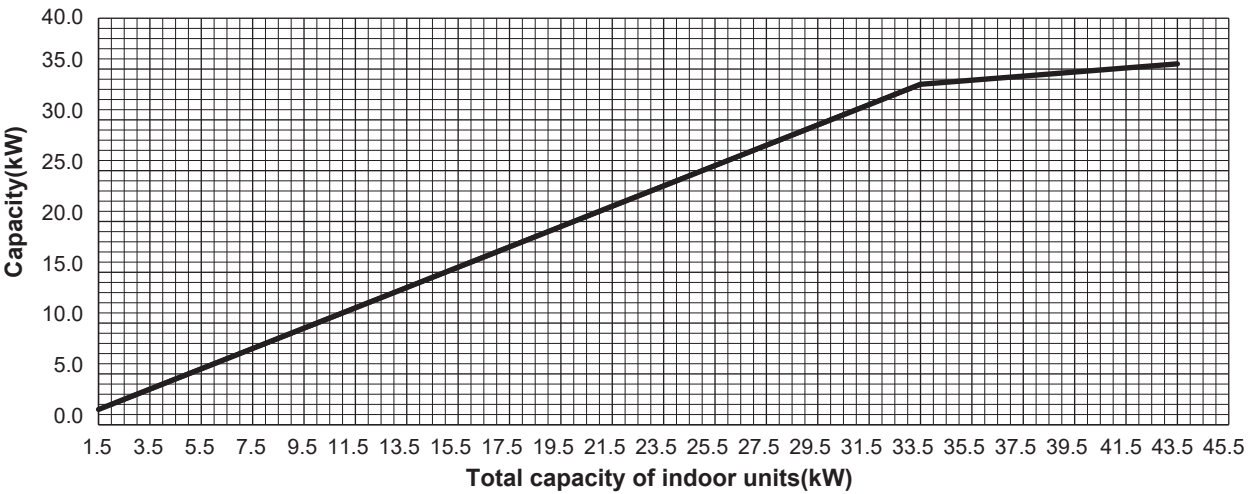

4-3-3. PUMY-P250YBM




<Heating>

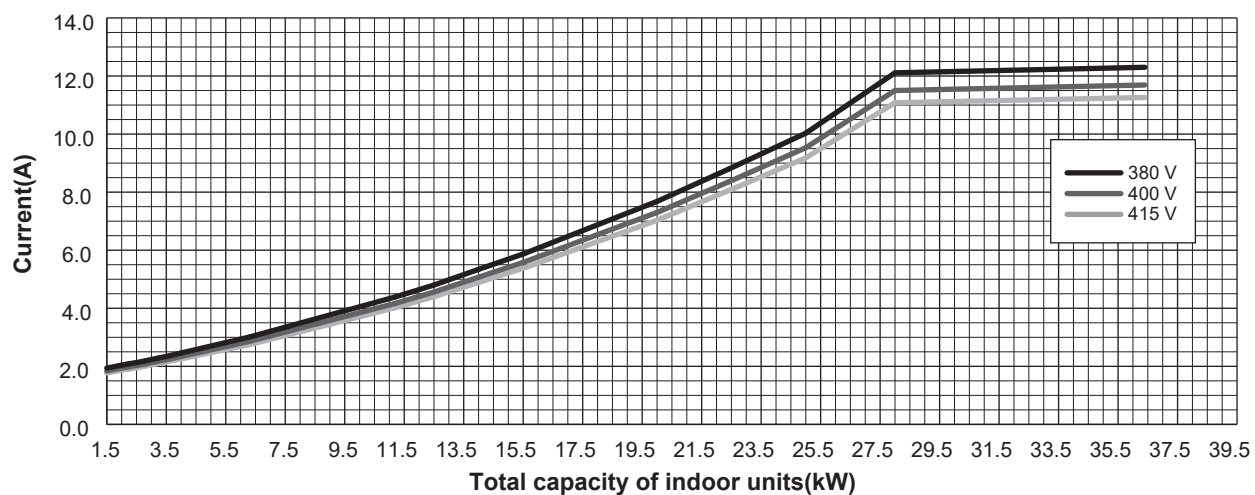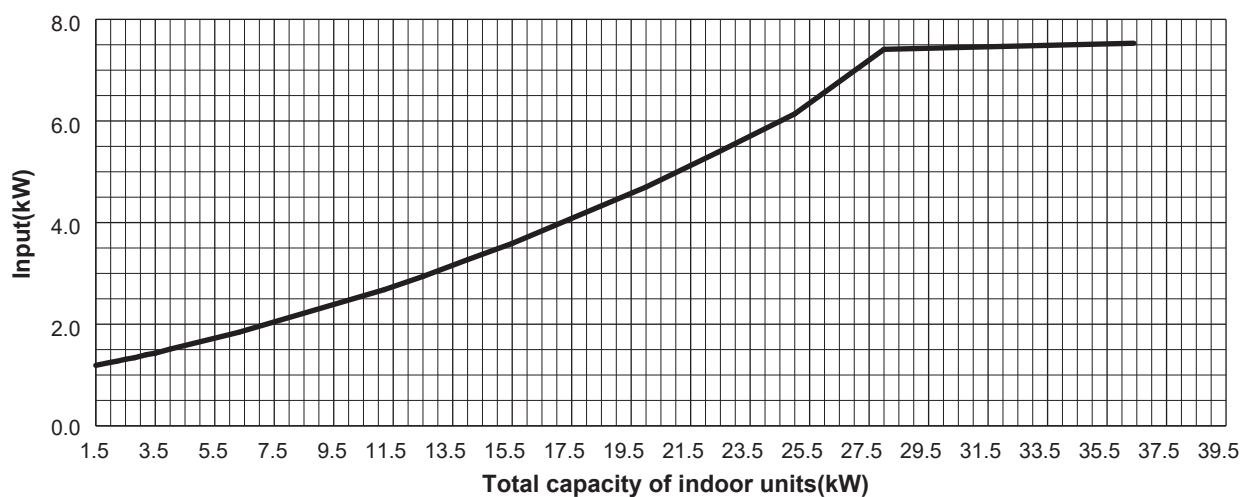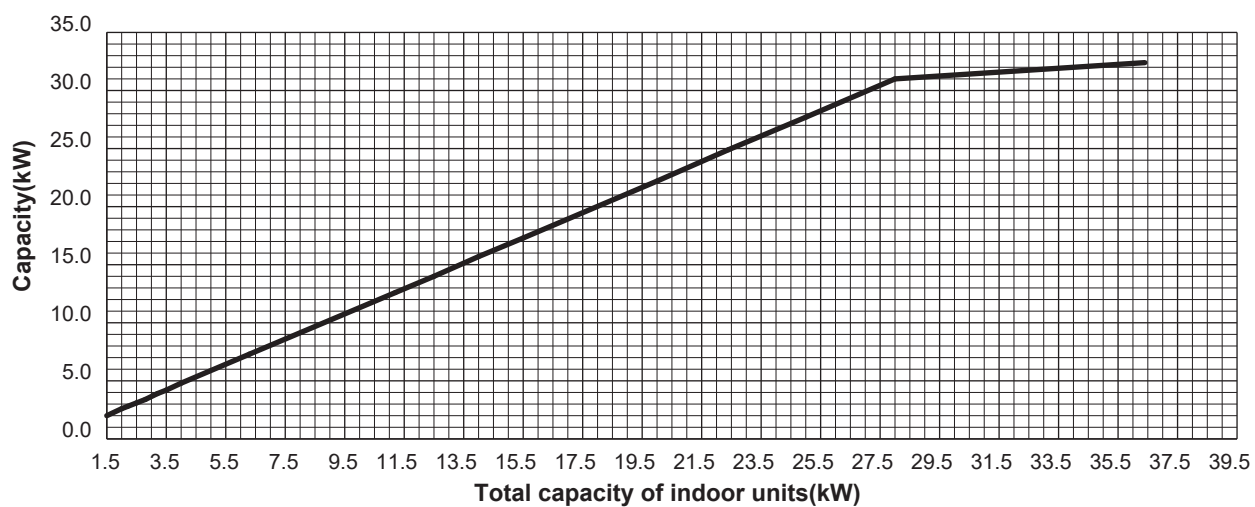



4-3-4. PUMY-P300YBM

<Heating>

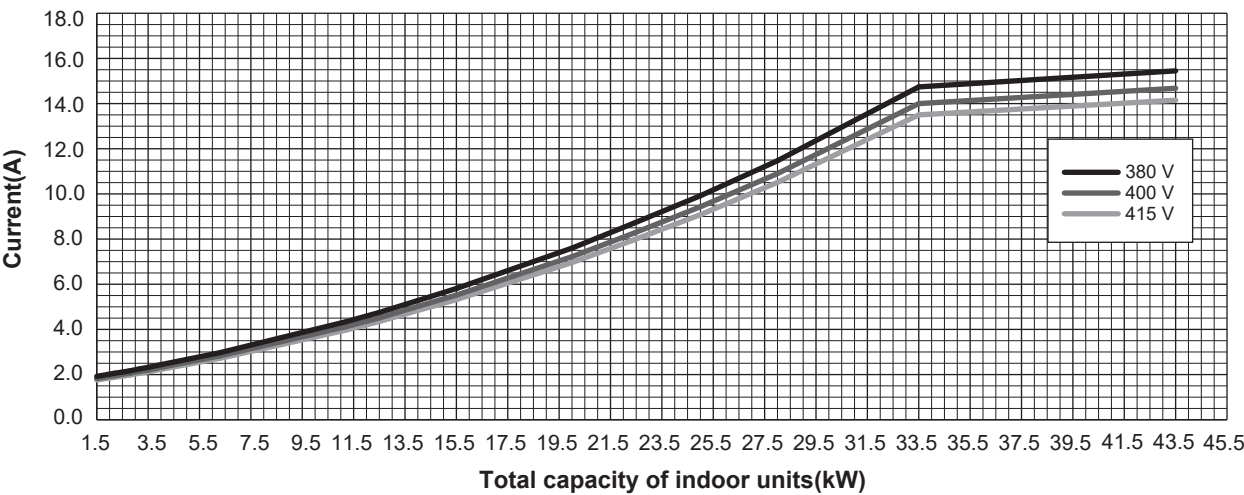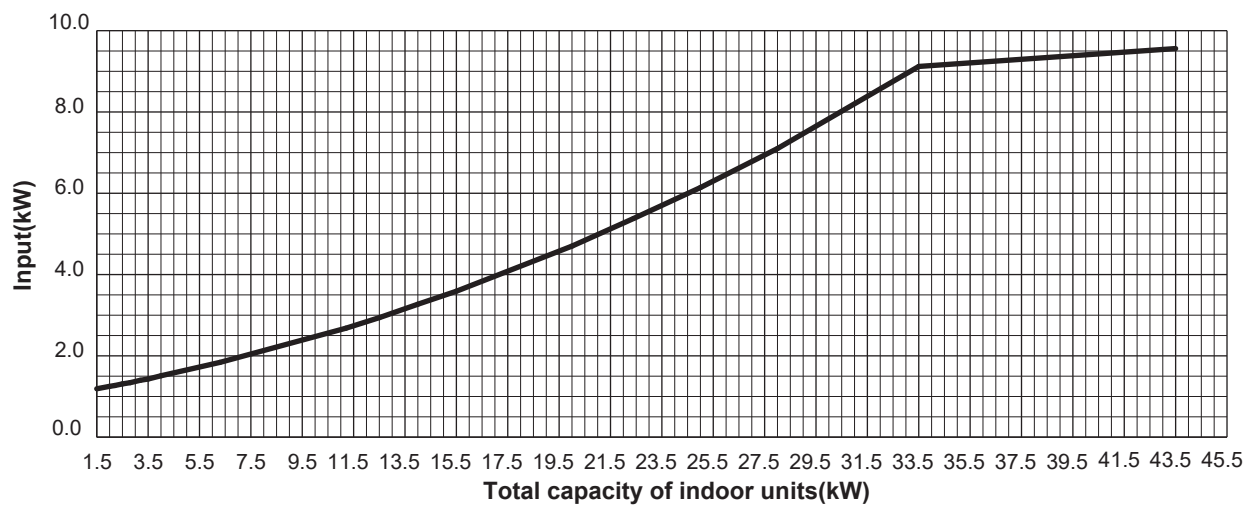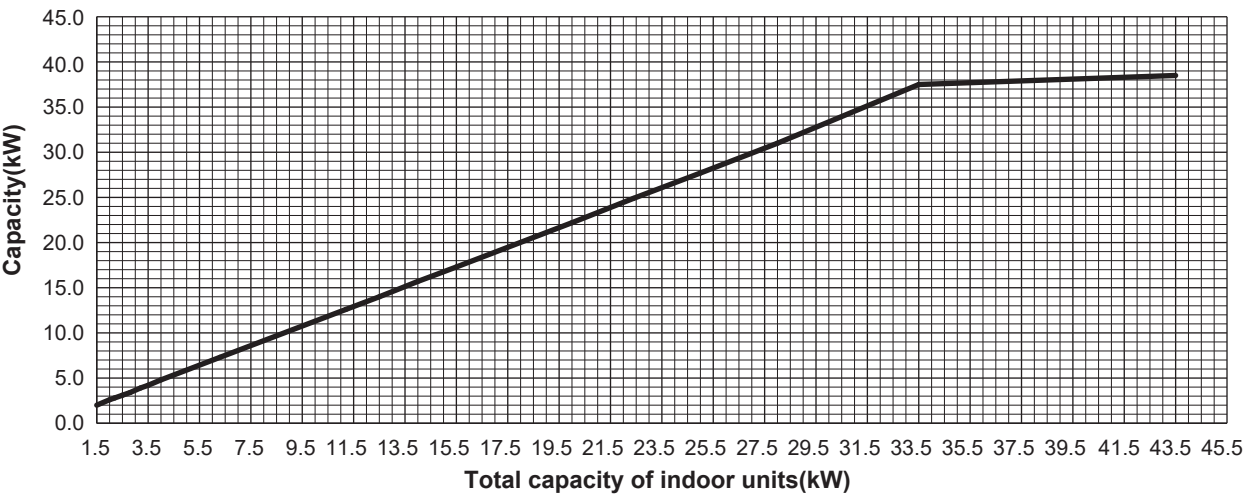

4-4. CORRECTING CAPACITY FOR CHANGES IN THE LENGTH OF REFRIGERANT PIPING

- During cooling, obtain the ratio (and the equivalent piping length) of the outdoor units rated capacity and the total in-use indoor capacity, and find the capacity ratio corresponding to the standard piping length from Figure 11. Then multiply by the cooling capacity from Figure 7 and 8 in "4-2. CORRECTION BY TEMPERATURE" to obtain the actual capacity.
- During heating, find the equivalent piping length, and find the capacity ratio corresponding to standard piping length from Figure 12. Then multiply by the heating capacity from Figure 9 and 10 in "4-2. CORRECTION BY TEMPERATURE" to obtain the actual capacity.

(1) Capacity Correction Curve

Figure 11 PUMY-P250YBM

<Cooling>

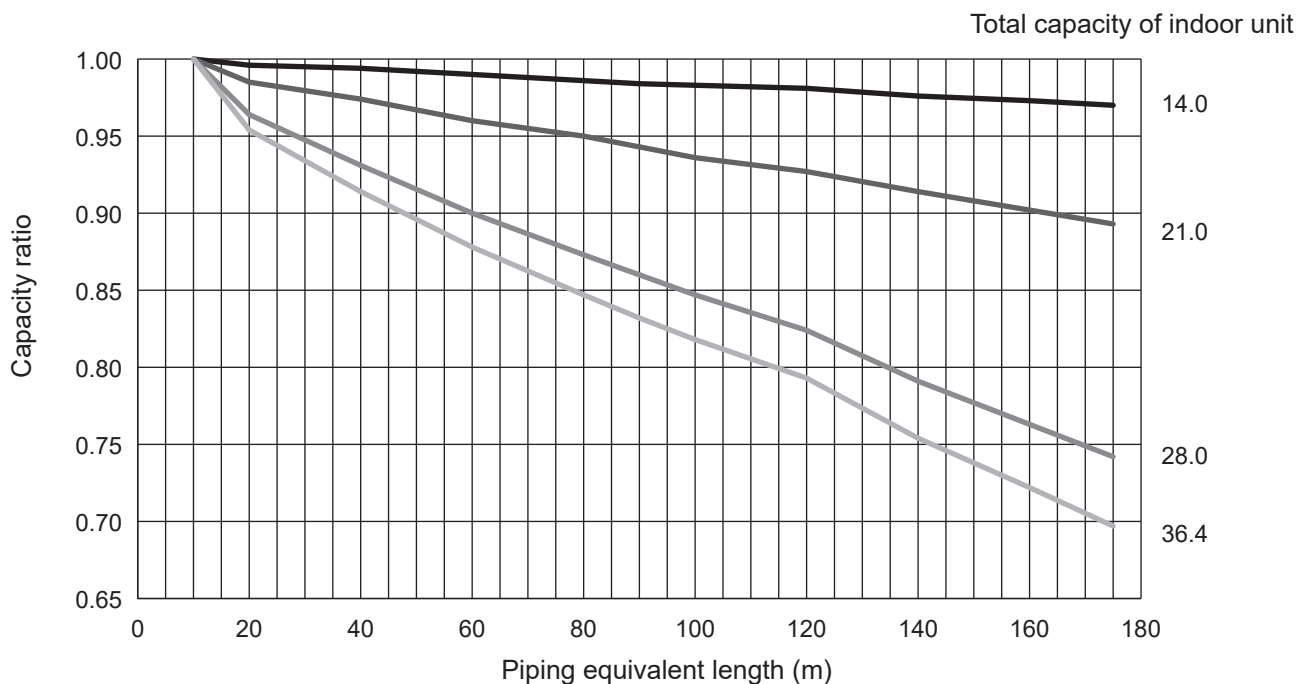


Figure 12 PUMY-P250YBM

<Heating>

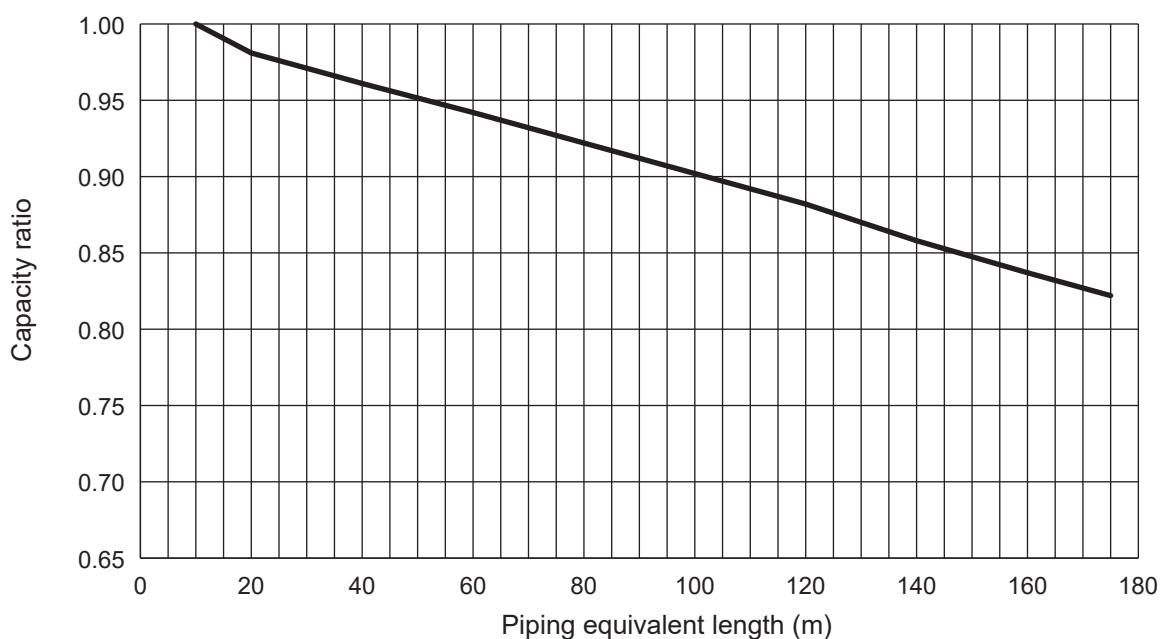


Figure 13 PUMY-P300YBM

<Cooling>


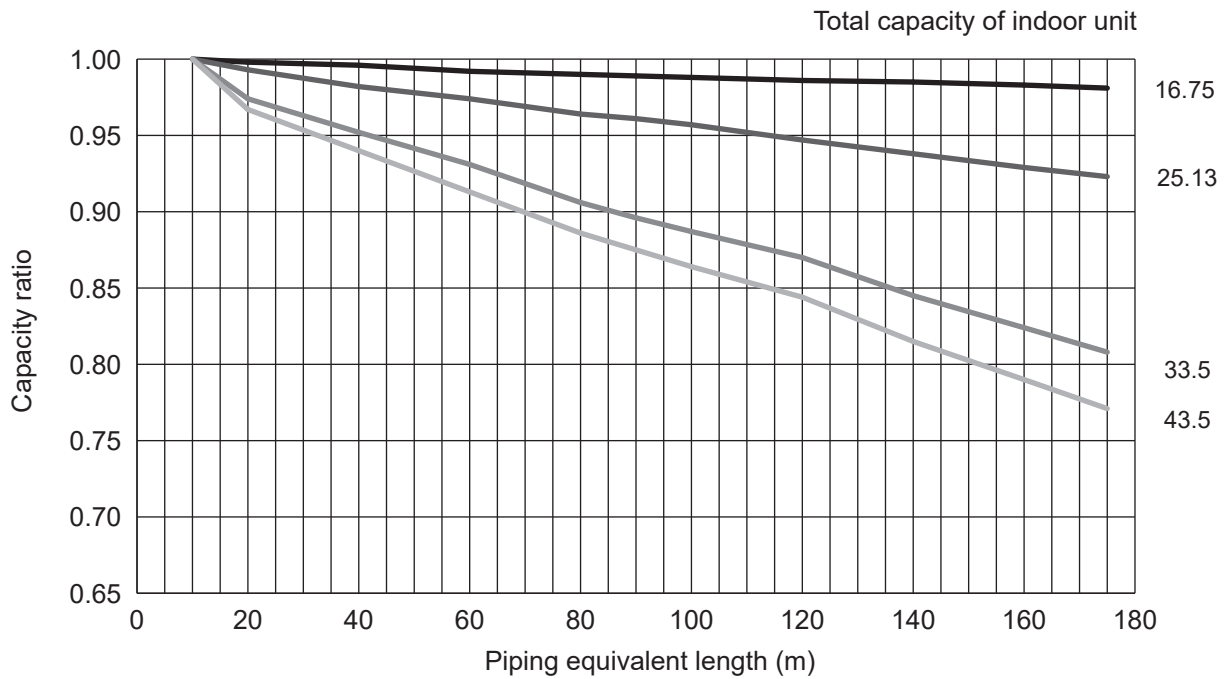


Figure 14 PUMY-P300YBM

<Heating>

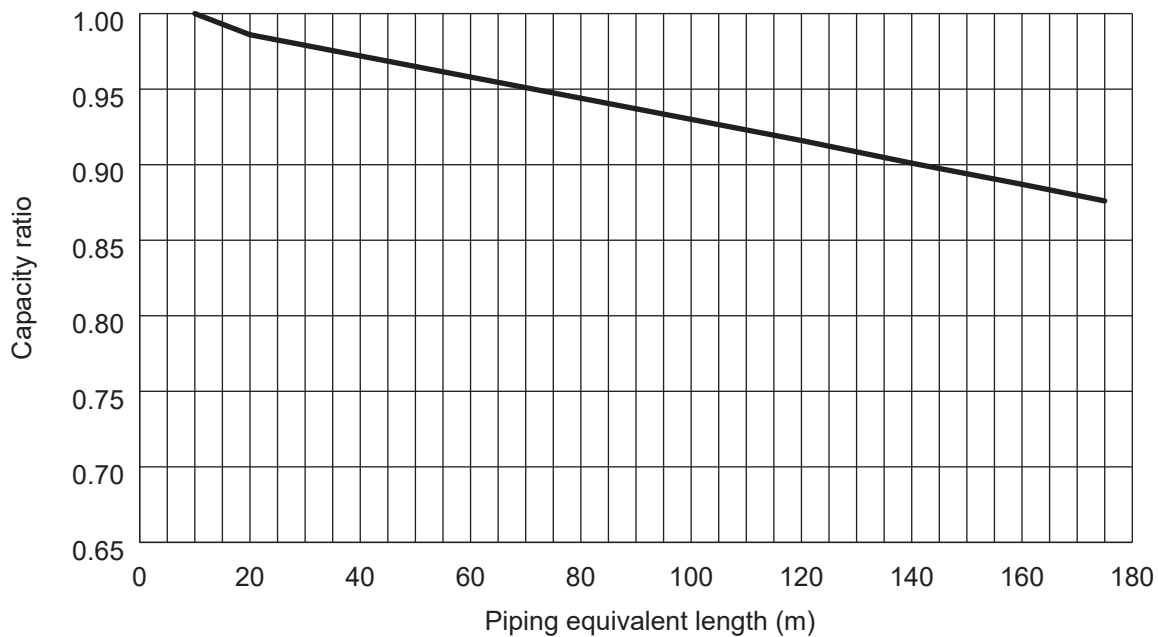

(2) Method for Obtaining the Equivalent Piping Length

Equivalent length = (length of piping to farthest indoor unit) + (0.3 × number of bends in the piping) (m)

4-4-1. Correction of Heating Capacity for Frost and Defrosting


If heating capacity has been reduced due to frost formation or defrosting, multiply the capacity by the appropriate correction factor from the following table to obtain the actual heating capacity.

Correction factor diagram



Outdoor Intake temperature (°C W.B.)	6	4	2	0	-2	-4	-6	-8	-10	-15	-20
Correction factor	1.00	0.98	0.89	0.88	0.89	0.90	0.95	0.95	0.95	0.95	0.95

4-5. NOISE CRITERION CURVES

PUMY-P250YBM

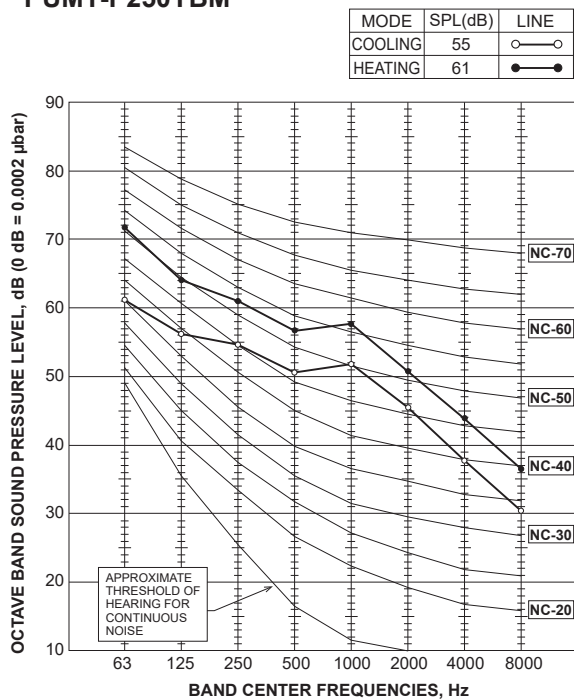


PUMY-P300YBM

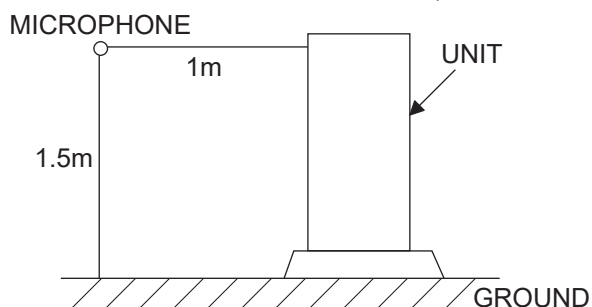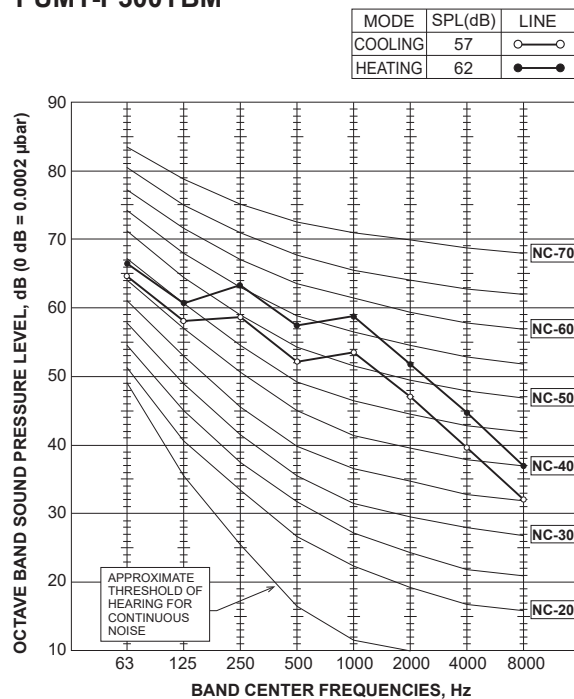

4-6. STANDARD OPERATION DATA (REFERENCE DATA)

Operation				PUMY-P250YBM		PUMY-P300YBM	
Operating conditions	Ambient temperature	Indoor	DB/WB	27°C/19°C	20°C/—	27°C/19°C	20°C/—
		Outdoor		35°C/24°C	7°C/6°C	35°C/24°C	7°C/6°C
	Indoor unit	No. of connected units	Unit	4		5	
		No. of units in operation		4		5	
	Piping	Model	m	63 x 4		63 x 4 + 50 x 1	
		Main pipe		5		5	
		Branch pipe		5		5	
	Fan speed	Total pipe length	—	25		30	
				Hi		Hi	
	Amount of refrigerant		kg	14.1		15.1	
Outdoor unit	Electric current		A	12.2	11.2	17.8	13.4
	Voltage		V	380		380	
	Compressor frequency		Hz	59	73	80	85
LEV opening	Branch box		Pulse	149	444	154	155
Pressure	High pressure/Low pressure		MPa	3.07/0.98	2.12/0.64	3.26/0.90	2.09/0.61
Temp. of each section	Outdoor unit	Discharge	°C	79.4	53.0	75.0	53.3
		Heat exchanger outlet		36.7	12.1	38.6	8.3
		Accumulator inlet		13.5	- 1.1	10.5	- 2.0
		Compressor inlet		21.5	- 2.2	9.9	- 3.1
	Indoor unit	LEV inlet		14.0	29.0	15.0	24.8
		Heat exchanger inlet		13.2	47.0	14.4	49.6

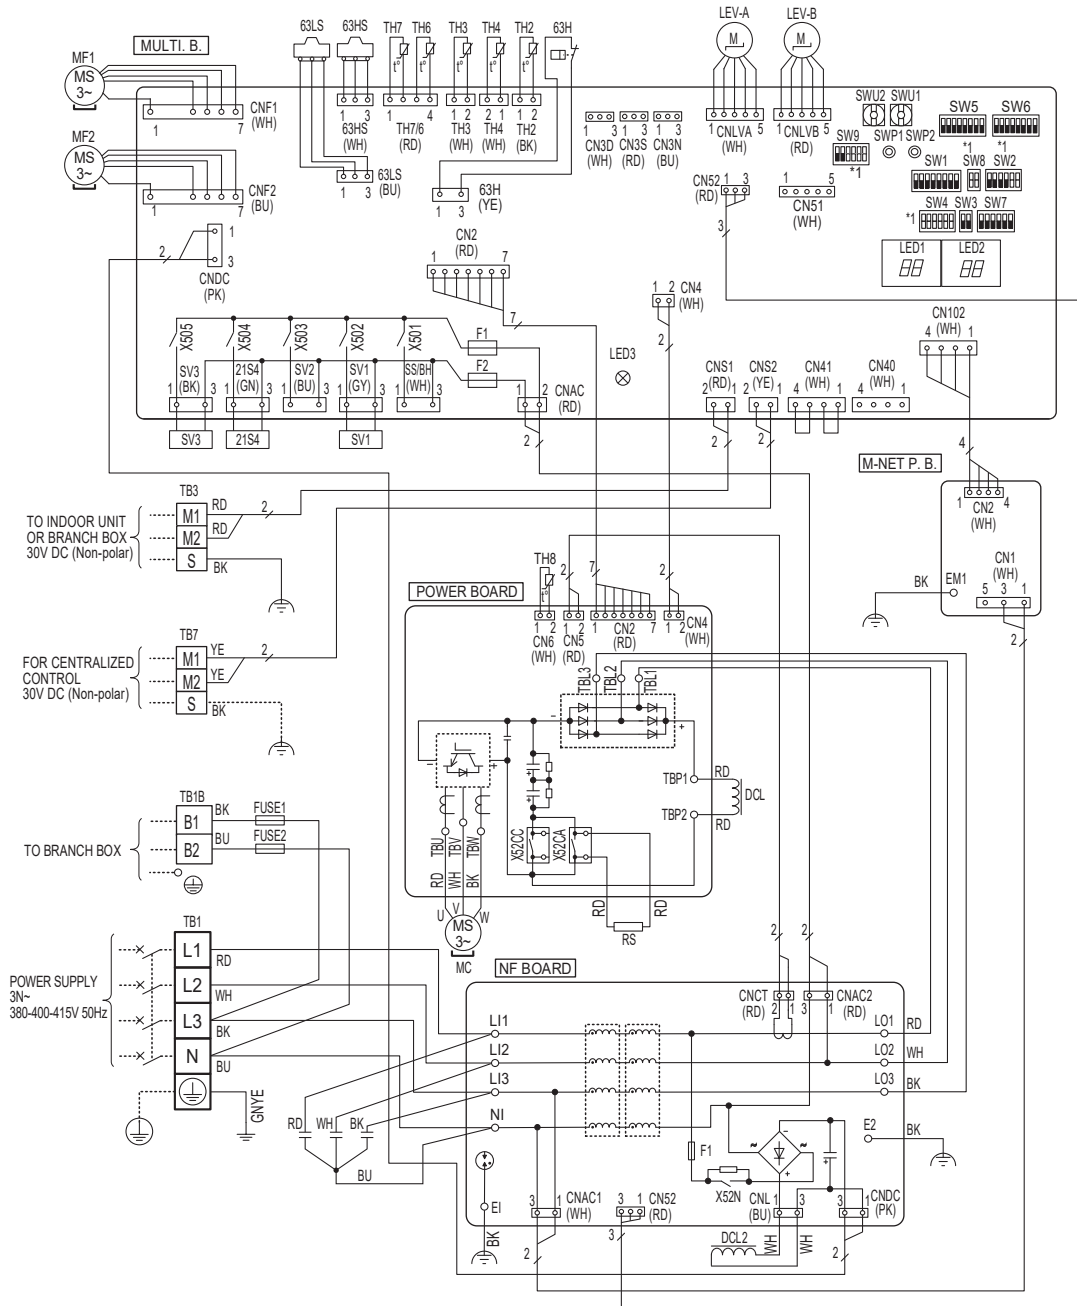

*1 MODEL SELECT
The black square (■) indicates a switch position.

MODELS	SW2	SW4	SW8	SW9
PUMY-P250YBM	ON OFF	ON OFF	ON OFF	ON OFF
PUMY-P300YBM	ON OFF	ON OFF	ON OFF	ON OFF


[LEGEND]

SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME
TB1	Terminal Block <Power Supply>	RS	Rush Current Protect Resistor	SW5	Switch <Function Selection>
TB1B	Terminal Block <Branch Box>	LEV-A, LEV-B	Linear Expansion Valve	SW6	Switch <Function Selection>
TB3	Terminal Block <Branch Box/Outdoor Transmission Line>	DCL	Reactor	SW7	Switch <Function Selection>
TB7	Terminal Block <Centralized Control Transmission Line>	DCL2	Reactor	SW8	Switch <Model Selection>
FUSE1, FUSE2	Fuse <T20AL250V>	POWER BOARD	Power Circuit Board	SW9	Switch <Function/Model Selection>
MC	Motor for Compressor	TB1, TB2, TB3	Connection Terminal <L1/L2/L3-Power Supply>	SWP1	Switch <Display Selection>
MF1, MF2	Fan Motor	TBP1, TBP2	Connection Terminal <Reactor>	SWP2	Switch <Display Selection>
63H	High Pressure Switch	TBU, TBV, TBW	Connection Terminal <U/V/W-Phase>	SWU1	Switch <Unit Address Selection, ones digit>
63HS	High Pressure Sensor	X52CA, X52CC	Relay with Connection Terminal	SWU2	Switch <Unit Address Selection, tens digit>
63LS	Low Pressure Sensor	NF BOARD	Noise Filter Circuit Board	SSBH	Connector <Connection for Option>
SV1	Solenoid Valve Coil <Bypass Valve>	L1, L2, L3, NI	Connection Terminal <L1/L2/L3-N-Power Supply>	CN3D	Connector <Connection for Option>
SV3	Solenoid Valve Coil <Oil return Valve>	LO1, LO2, LO3	Connection Terminal <L1/L2/L3-Power Supply>	CN3S	Connector <Connection for Option>
21S4	Solenoid Valve Coil <4-Way Valve>	E1, E2	Connection Terminal <Electrical Parts Box>	CN3N	Connector <Connection for Option>
TH2	Thermistor <HIC Pipe>	F1	Fuse <T10AL250V>	CN51	Connector <Connection for Option>
TH3	Thermistor <Outdoor Liquid Pipe>	MULTI.B.	Multi Controller Circuit Board	LED1, LED2	LED <Operation Inspection Display>
TH4	Thermistor <Compressor>	SW1	Switch <Display Selection>	LED3	LED <Power Supply to Main Microcomputer>
TH6	Thermistor <Suction Pipe>	SW2	Switch <Function/Model Selection>	F1, F2	Fuse <T6.3AL250V>
TH7	Thermistor <Ambient>	SW3	Switch <Test Run>	M-NET P.B.	M-NET Power Circuit Board
TH8	Thermistor <Heat Sink>	SW4	Switch <Model Selection>	EM1	Connection Terminal <Electrical Parts Box>



7-2. REFRIGERANT SYSTEM DIAGRAM

7-2-1. Connection without Branch box

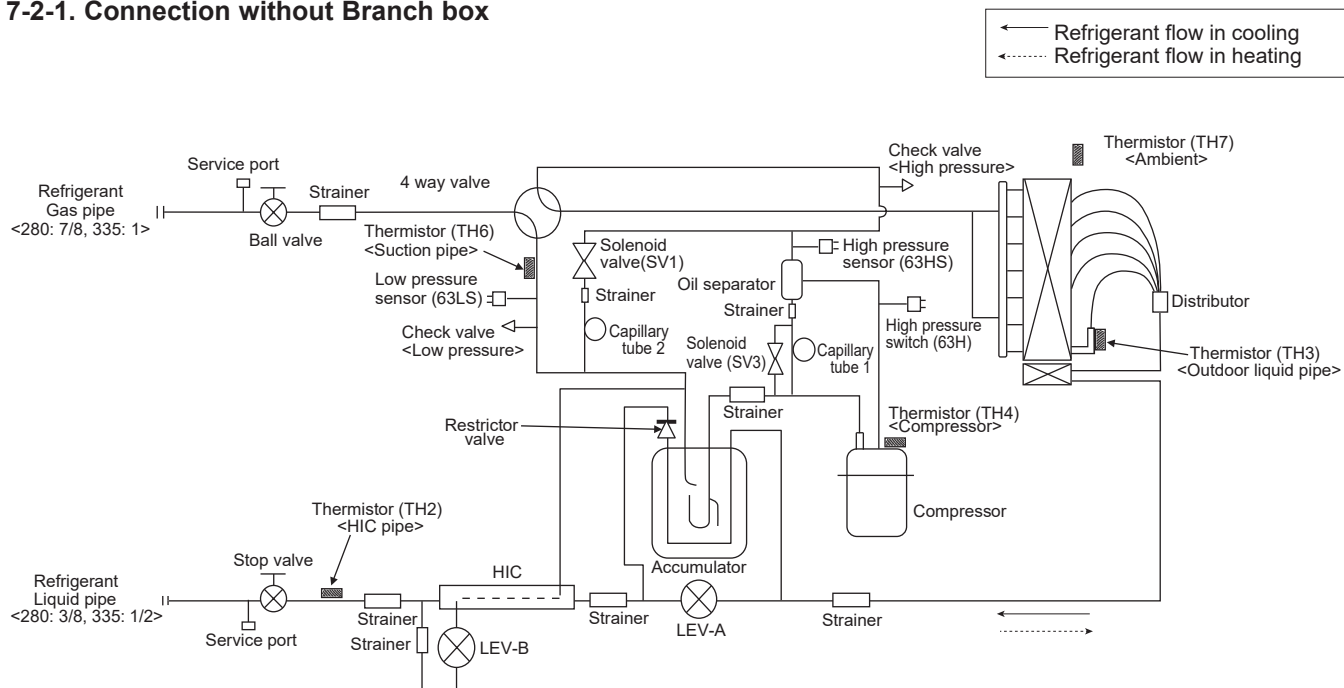

Unit: mm

Outdoor unit	Capillary tube 1	Capillary tube 2
PUMY-P250/300YBM	ø2.4×ø0.8×L600	ø4.0×ø3.0×L220

Refrigerant piping specifications <dimensions of flared connector>

Unit: mm <in>

Capacity		Liquid piping	Gas piping
Indoor unit	P15, 20, 25, 32, 40, 50	ø6.35 <1/4>	ø12.7 <1/2>
	P63, 80, 100, 125, 140	ø9.52 <3/8>	ø15.88 <5/8>
	P200	ø9.52 <3/8>	ø19.05 <3/4>
	P250	ø9.52 <3/8>	ø22.2 <7/8>
Outdoor unit	P250	ø9.52 <3/8> *	ø22.2 <7/8>
	P300	ø12.7 <1/2>	ø25.4 <1>

* Use ø12.7 when the farthest piping length is longer than 90 m or PEFY-P200 or/and 250 is/are connected.


Note:

When connecting the CONNECTION KIT (PAC-LV11M-J) and an M-series indoor unit, refer to the installation manual for the CONNECTION KIT.


7-2-2. Connection with Branch box

■ In case of using 1-branch box

Flare connection employed. (No. brazing)

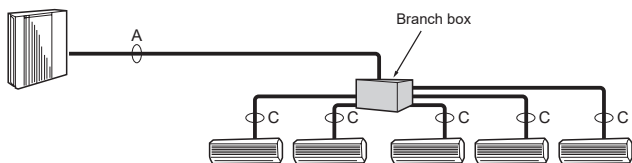

■ In case of using 2-branch boxes

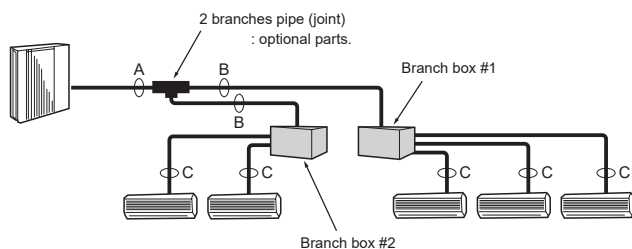

■ In case of using 3-branch boxes

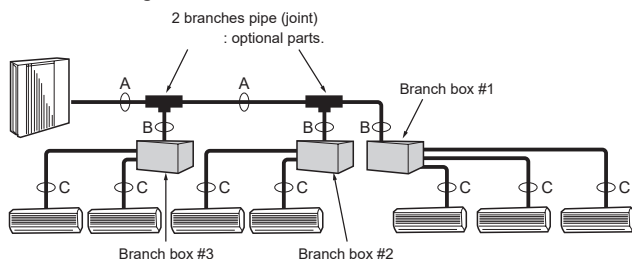


Fig. 7-1

(1) Valve size of branch box for outdoor unit

For liquid	ø9.52 mm
For gas	ø15.88 mm

(2) Valve size of branch box for indoor unit

A UNIT	Liquid pipe	ø6.35 mm
	Gas pipe	ø9.52 mm
B UNIT	Liquid pipe	ø6.35 mm
	Gas pipe	ø9.52 mm
C UNIT	Liquid pipe	ø6.35 mm
	Gas pipe	ø9.52 mm
D UNIT	Liquid pipe	ø6.35 mm
	Gas pipe	ø9.52 mm
E UNIT	Liquid pipe	ø6.35 mm
	Gas pipe	ø12.7 mm

* 3-branch type : only A, B, C unit




Fig. 7-2

Conversion formula

1/4 F	ø6.35
3/8 F	ø9.52
1/2 F	ø12.7
5/8 F	ø15.88
3/4 F	ø19.05
7/8 F	ø22.2
1 F	ø25.4




Fig. 7-3

Selecting pipe size (Fig. 7-1)

A

Model	Liquid pipe	Gas pipe
P250	ø9.52	ø22.2
P300	ø12.7	ø25.4

B

Total down-stream capacity of indoor units	Model	Liquid pipe	Gas pipe
- 16.0 kW	P250	ø9.52	ø15.88
	P300	ø12.7	
16.1 kW - 22.4 kW	P250	ø9.52	ø19.05
	P300	ø12.7	
22.5 kW -	P250	ø9.52	ø22.2
	P300	ø12.7	

C

The piping connection size differs according to the type and capacity of indoor units. Match the piping connection size of branch box with indoor unit.

If the piping connection size of branch box does not match the piping connection size of indoor unit, use optional different-diameter (deformed) joints to the branch box side.

(Connect deformed joint directly to the branch box side.)

Different-diameter joint (optional parts) (Fig. 7-2, 7-3)

Model name	Connected pipes diameter	Diameter A	Diameter B
	mm	mm	mm
MAC-A454JP	ø9.52 → ø12.7	ø9.52	ø12.7
MAC-A455JP	ø12.7 → ø9.52	ø12.7	ø9.52
MAC-A456JP	ø12.7 → ø15.88	ø12.7	ø15.88
PAC-493PI	ø6.35 → ø9.52	ø6.35	ø9.52
PAC-SG76RJ-E	ø9.52 → ø15.88	ø9.52	ø15.88
PAC-SG75RJ-E	ø15.88 → ø19.05	ø15.88	ø19.05
PAC-SG71RJ-E	ø15.88 *1 → ø22.2 *2	ø15.88 *1	ø22.2 *2
PAC-SG77RJ-E	ø15.88 *1 → ø25.4 *2	ø15.88 *1	ø25.4 *2

*1 When connecting to MSDD-50AR-E or a branch box, flare the pipes on-site.

Use the nuts that are included with the 2-branch pipe and branch box.

*2 Brazing

2 branch pipe (Joint) : Optional parts (According to the connection method, you can choose the favorite one.)

Model name	Connection method
MSDD-50AR-E	flare
MSDD-50BR-E	brazing

■ Installation procedure (2 branches pipe (Joint))

Refer to the installation manuals of MSDD-50AR-E and MSDD-50BR-E.

The lineup of a connectable indoor unit depends on the district/area/country.

■ Pipe size (Branch box-Indoor unit) *Case of M series Indoor unit

Indoor unit type	(kW)	15	20	22	25	35	42	50
	Pipe size (mm)	Liquid ø6.35	ø6.35	ø6.35	ø6.35	ø6.35	ø6.35	ø6.35
		Gas ø9.52	ø9.52	ø9.52	ø9.52	ø9.52	ø9.52	ø12.7

7-2-3. Mixed system (CITY MULTI indoor units and M series indoor units [Via Branch box])

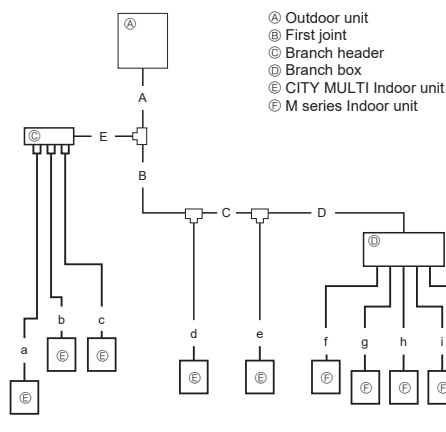


Fig. 7-4

Branch box pipe size


(1) Valve size of branch box for outdoor unit

For liquid	ø9.52 mm
For gas	ø15.88 mm

(2) Valve size of branch box for indoor unit

UNIT			
A UNIT	Liquid pipe	ø6.35 mm	
	Gas pipe	ø9.52 mm	
B UNIT	Liquid pipe	ø6.35 mm	
	Gas pipe	ø9.52 mm	
C UNIT	Liquid pipe	ø6.35 mm	
	Gas pipe	ø9.52 mm	
D UNIT	Liquid pipe	ø6.35 mm	
	Gas pipe	ø9.52 mm	
E UNIT	Liquid pipe	ø6.35 mm	
	Gas pipe	ø12.7 mm	

* 3-branch type : only A, B, C unit

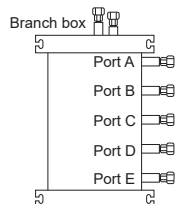

A

Model	Liquid pipe	Gas pipe
P250	ø9.52*	ø22.2
P300	ø12.7	ø25.4

B, C, D, E

Total down-stream capacity of indoor units	Model	Liquid pipe	Gas pipe
- 16.0 kW	P250	ø9.52*	ø15.88
	P300	ø12.7	
16.1 kW - 22.4 kW	P250	ø9.52*	ø19.05
	P300	ø12.7	
22.5 kW - 36.4 kW	P250	ø9.52*	ø22.2
	P300	ø12.7	
36.5 kW -	P300	ø12.7	ø25.4

* ø12.7 when connecting the indoor unit for PEFY-P200 or P250

a, b, c - j

Indoor unit series	Model number	A Liquid pipe	B Gas pipe
CITY MULTI	10 - 50	ø6.35	ø12.7
	63 - 140	ø9.52	ø15.88
	200	ø9.52	ø19.05
	250	ø9.52	ø22.2
M series	15 - 42	ø6.35	ø9.52
	50	ø6.35	ø12.7

2-branch joint	CMY-Y62-G-E
4-branch header	CMY-Y64-G-E
8-branch header	CMY-Y68-G-E

Different-diameter joint (optional parts) (Fig. 7-2, 7-3)

Model name	Connected pipes diameter	Diameter A	Diameter B
	mm		
MAC-A454JP	ø9.52 → ø12.7	ø9.52	ø12.7
MAC-A455JP	ø12.7 → ø9.52	ø12.7	ø9.52
MAC-A456JP	ø12.7 → ø15.88	ø12.7	ø15.88
PAC-493PI	ø6.35 → ø9.52	ø6.35	ø9.52
PAC-SG76RJ-E	ø9.52 → ø15.88	ø9.52	ø15.88
PAC-SG75RJ-E	ø15.88 → ø19.05	ø15.88	ø19.05
PAC-SG71RJ-E	ø15.88 *1 → ø22.2 *2	ø15.88 *1	ø22.2 *2
PAC-SG77RJ-E	ø15.88 *1 → ø25.4 *2	ø15.88 *1	ø25.4 *2

*1 When connecting to MSDD-50AR-E or a branch box, flare the pipes on-site.

Use the nuts that are included with the 2-branch pipe and branch box.

*2 Brazing

2 branch pipe (Joint) : Optional parts (According to the connection method, you can choose the favorite one.)




Model name	Connection method
MSDD-50AR-E	flare
MSDD-50BR-E	brazing

7-3. SYSTEM CONTROL

7-3-1. Example for the System




- Example for wiring control cables, wiring method and address setting, permissible lengths, and the constraint items are listed in the standard system with detailed explanation.

A. Example of an M-NET remote controller system (address setting is necessary.)

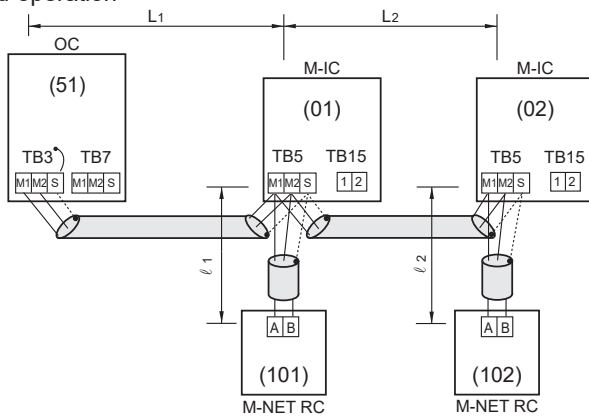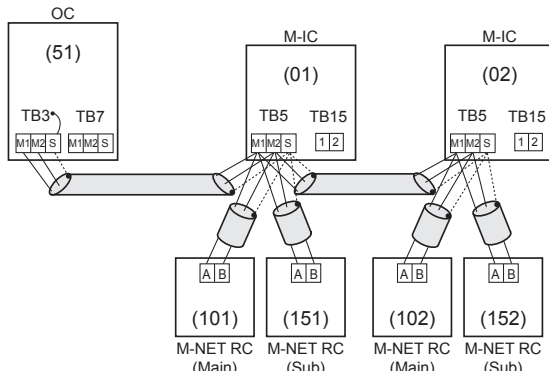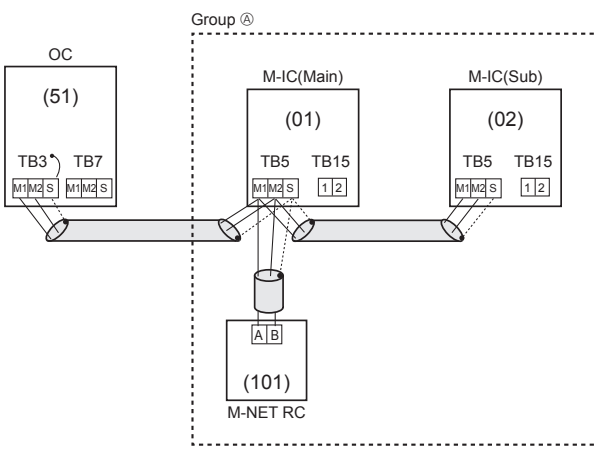
Example of wiring control cables		Wiring Method and Address Setting																
<div>1. Standard operation</div> <div></div> <div><ul style="list-style-type: none">• 1 M-NET remote controller for each CITY MULTI series indoor unit• There is no need for setting the 100 position on the M-NET remote controller.</div>		<div>a. Use feed wiring to connect terminals M1 and M2 on transmission cable block (TB3) for the outdoor unit (OC) to terminals M1 and M2 on the transmission cable block (TB5) of each CITY MULTI series indoor unit (M-IC). Use non-polarized 2-core wire.</div> <div>b. Connect terminals M1 and M2 on transmission cable terminal block (TB5) for each indoor unit with the terminal block (TB6) for M-NET the remote controller (M-NET RC).</div> <div>c. Set the address setting switch (on outdoor unit P.C.B) as shown below.</div> <table><tr><th>Unit</th><th>Range</th><th>Setting Method</th></tr><tr><td>CITY MULTI series indoor unit (M-IC)</td><td>001 to 050</td><td>—</td></tr><tr><td>Outdoor unit (OC)</td><td>051 to 100</td><td>Use the smallest address of all the indoor unit plus 50.</td></tr><tr><td>M-NET Remote controller (M-NET RC)</td><td>101 to 150</td><td>Indoor unit address plus 100</td></tr></table>		Unit	Range	Setting Method	CITY MULTI series indoor unit (M-IC)	001 to 050	—	Outdoor unit (OC)	051 to 100	Use the smallest address of all the indoor unit plus 50.	M-NET Remote controller (M-NET RC)	101 to 150	Indoor unit address plus 100			
Unit	Range	Setting Method																
CITY MULTI series indoor unit (M-IC)	001 to 050	—																
Outdoor unit (OC)	051 to 100	Use the smallest address of all the indoor unit plus 50.																
M-NET Remote controller (M-NET RC)	101 to 150	Indoor unit address plus 100																
<div>2. Operation using 2 M-NET remote controllers</div> <div></div> <div><ul style="list-style-type: none">• Using 2 M-NET remote controllers for each CITY MULTI series indoor unit.</div>		<div>a. Same as above 1.a</div> <div>b. Same as above 1.b</div> <div>c. Set address switch (on outdoor unit P.C.B) as shown below.</div> <table><tr><th>Unit</th><th>Range</th><th>Setting Method</th></tr><tr><td>CITY MULTI series indoor unit (M-IC)</td><td>001 to 050</td><td>—</td></tr><tr><td>Outdoor unit (OC)</td><td>051 to 100</td><td>Use the smallest address of all the indoor units plus 50.</td></tr><tr><td>Main M-NET Remote Controller (M-NET RC)</td><td>101 to 150</td><td>Indoor unit address plus 100</td></tr><tr><td>Sub M-NET Remote Controller (M-NET RC)</td><td>151 to 200</td><td>Indoor unit address plus 150</td></tr></table>		Unit	Range	Setting Method	CITY MULTI series indoor unit (M-IC)	001 to 050	—	Outdoor unit (OC)	051 to 100	Use the smallest address of all the indoor units plus 50.	Main M-NET Remote Controller (M-NET RC)	101 to 150	Indoor unit address plus 100	Sub M-NET Remote Controller (M-NET RC)	151 to 200	Indoor unit address plus 150
Unit	Range	Setting Method																
CITY MULTI series indoor unit (M-IC)	001 to 050	—																
Outdoor unit (OC)	051 to 100	Use the smallest address of all the indoor units plus 50.																
Main M-NET Remote Controller (M-NET RC)	101 to 150	Indoor unit address plus 100																
Sub M-NET Remote Controller (M-NET RC)	151 to 200	Indoor unit address plus 150																
<div>3. Group operation</div> <div></div> <div><ul style="list-style-type: none">• Multiple CITY MULTI series indoor units operated together by 1 M-NET remote controller</div>		<div>a. Same as above 1.a</div> <div>b. Connect terminals M1 and M2 on transmission cable terminal block (TB5) of the M-IC main unit with the most recent address within the same CITY MULTI series indoor unit (M-IC) group to terminal block (TB6) on the M-NET remote controller.</div> <div>c. Set the address setting switch (on outdoor unit P.C.B) as shown below.</div> <table><tr><th>Unit</th><th>Range</th><th>Setting Method</th></tr><tr><td>M-IC (Main)</td><td>001 to 050</td><td>Use the smallest address within the same group of CITY MULTI series indoor units.</td></tr><tr><td>M-IC (Sub)</td><td>001 to 050</td><td>Use an address, other than that of the M-IC (Main) from among the units within the same group of indoor units. This must be in sequence with the M-IC (Main).</td></tr><tr><td>Outdoor unit</td><td>051 to 100</td><td>Use the smallest address of all the CITY MULTI series indoor units plus 50.</td></tr><tr><td>Main M-NET Remote Controller (M-NET RC)</td><td>101 to 150</td><td>Set at an M-IC (Main) address within the same group plus 100.</td></tr></table> <div>d. Use the CITY MULTI series indoor unit (M-IC) within the group with the most functions as the M-IC (Main) unit.</div>		Unit	Range	Setting Method	M-IC (Main)	001 to 050	Use the smallest address within the same group of CITY MULTI series indoor units.	M-IC (Sub)	001 to 050	Use an address, other than that of the M-IC (Main) from among the units within the same group of indoor units. This must be in sequence with the M-IC (Main).	Outdoor unit	051 to 100	Use the smallest address of all the CITY MULTI series indoor units plus 50.	Main M-NET Remote Controller (M-NET RC)	101 to 150	Set at an M-IC (Main) address within the same group plus 100.
Unit	Range	Setting Method																
M-IC (Main)	001 to 050	Use the smallest address within the same group of CITY MULTI series indoor units.																
M-IC (Sub)	001 to 050	Use an address, other than that of the M-IC (Main) from among the units within the same group of indoor units. This must be in sequence with the M-IC (Main).																
Outdoor unit	051 to 100	Use the smallest address of all the CITY MULTI series indoor units plus 50.																
Main M-NET Remote Controller (M-NET RC)	101 to 150	Set at an M-IC (Main) address within the same group plus 100.																
Combinations of 1 through 3 above are possible																		

• Name, Symbol and the Maximum Remote controller Units for Connection


Name	Symbol	Maximum units for connection
Outdoor unit	OC	—
CITY MULTI series Indoor unit	M-IC	Refer to "2-1. SYSTEM CONSTRUCTION".
M-NET remote controller	M-NET RC	Maximum 2 M-NET RC for 1 indoor unit, Maximum 12 M-NET RC for 1 OC

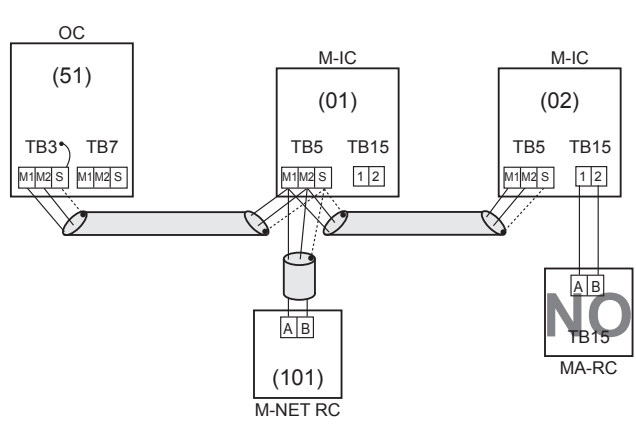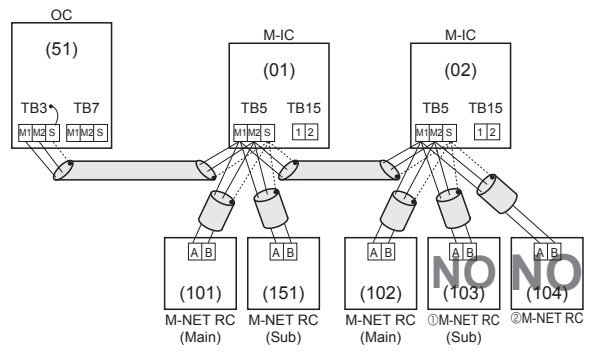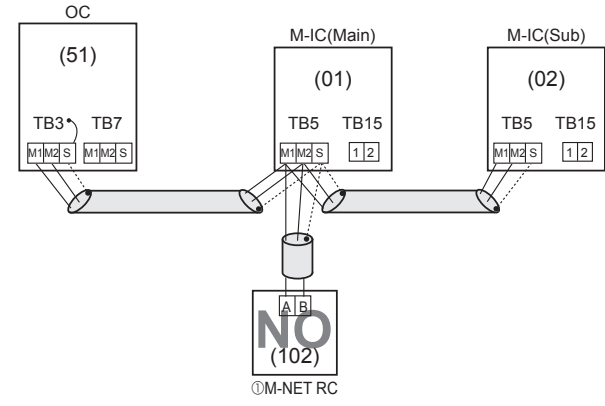Permissible Lengths	Constraint items
<p>Indoor/outdoor transmission line Maximum distance (1.25 mm²) $L_1 + L_2 \leq 200$ m M-NET Remote controller cable length 1. If 0.5 to 1.25 mm² $\ell_1, \ell_2 \leq 10$ m 2. If the length exceeds 10 m, the exceeding section should be 1.25 mm² and that section should be a value within the total extension length of the transmission cable and maximum transmission cable length.</p>	<ul style="list-style-type: none"> M-NET remote controller (M-NET RC) and MA remote controller (MA RC) cannot be used together. Do not connect anything with TB15 of CITY MULTI series indoor unit (M-IC). 
Same as above	 <ul style="list-style-type: none"> ① Use the CITY MULTI series indoor unit (M-IC) address plus 150 as the sub M-NET remote controller address. In this case, it should be 152. ② 3 or more M-NET remote controllers (M-NET RC) cannot be connected to 1 CITY MULTI series indoor unit.
Same as above	 <ul style="list-style-type: none"> ① The M-NET remote controller address is the CITY MULTI series indoor unit main address plus 100. In this case, it should be 101.

B. Example of a group operation system with 2 or more outdoor units and an M-NET remote controller.
(Address settings are necessary.)



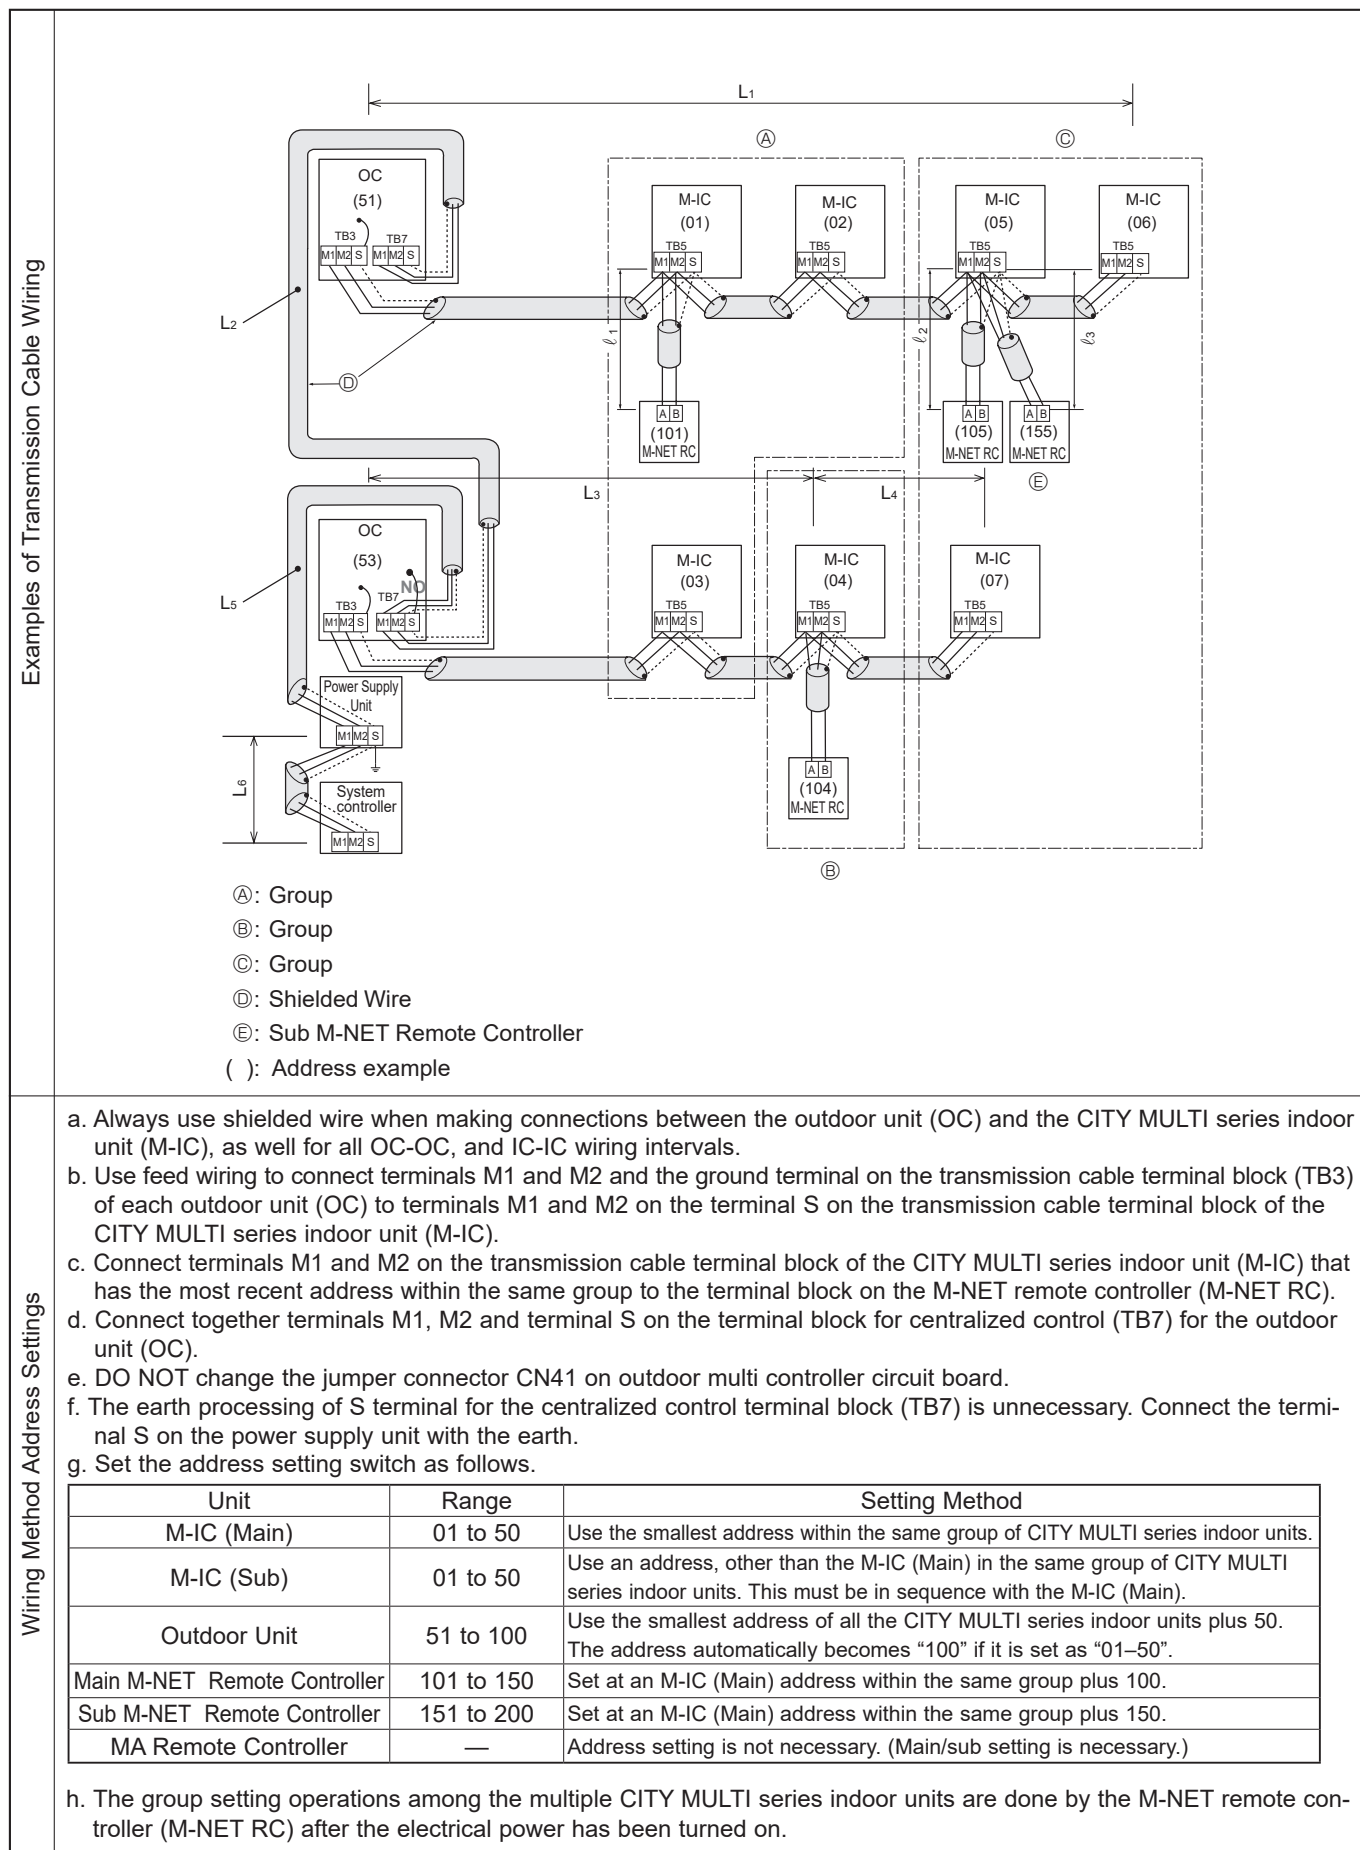





• Name, Symbol, and the Maximum Units for Connection

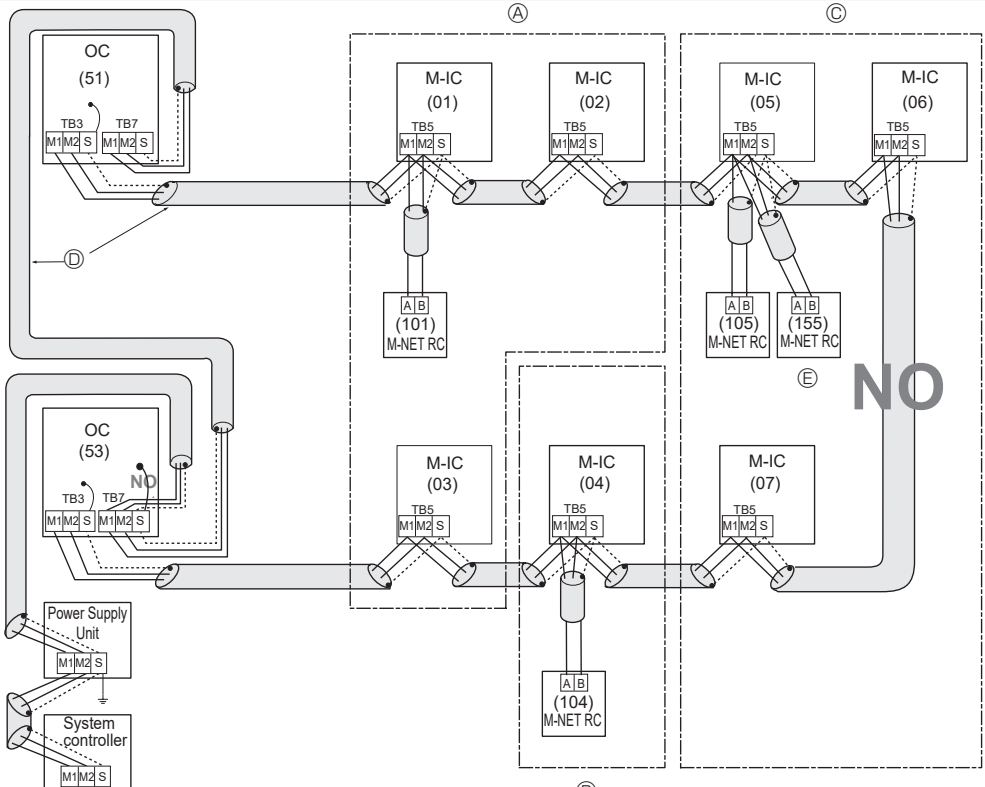Permissible Length	<ul style="list-style-type: none"> Maximum line distance via outdoor unit: $L_1+L_2+L_3+L_4, L_3+L_4+L_5+L_6, L_1+L_2+L_5+L_6 \leq 500$ meters (1.25 mm^2) Indoor/outdoor transmission line Maximum distance: $L_1, L_3+L_4, L_2+L_5, L_6 \leq 200$ m (1.25 mm^2) M-NET Remote controller cable length: $\ell_1, \ell_2 + \ell_3 \leq 10$ m (0.5 to 1.25 mm^2) <p>If the length exceeds 10 m, use a 1.25 mm^2 shielded wire.</p> <p>The section of the cable that exceeds 10 m must be included in the max length via outdoor units and max transmission cable length.</p>
Constraint items	 <p>(A) : Group</p> <p>(B) : Group</p> <p>(C) : Group</p> <p>(D) : Shielded Wire</p> <p>(E) : Sub M-NET Remote Controller</p> <p>() : Address example</p> <ul style="list-style-type: none"> Never connect together the terminal blocks (TB5) for transmission wires for CITY MULTI series indoor units (M-IC) that have been connected to different outdoor units (OC). Set all addresses to ensure that they are not overlapped. M-NET remote controller and MA remote controller cannot be connected with the CITY MULTI series indoor unit of the same group wiring together.


C. Example of an MA remote controller system (address setting is not necessary.)

NOTE: In the case of same group operation, need to set the address that is only main CITY MULTI series indoor unit.

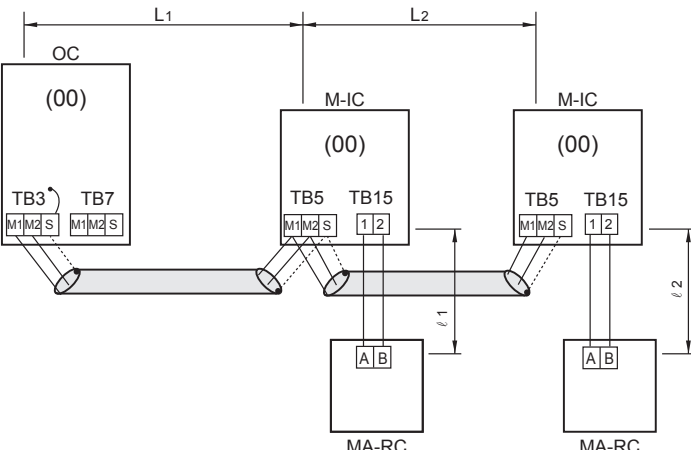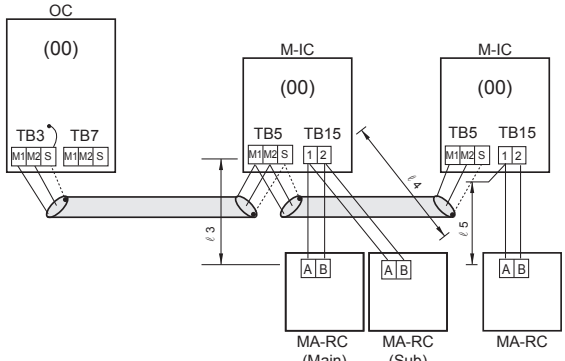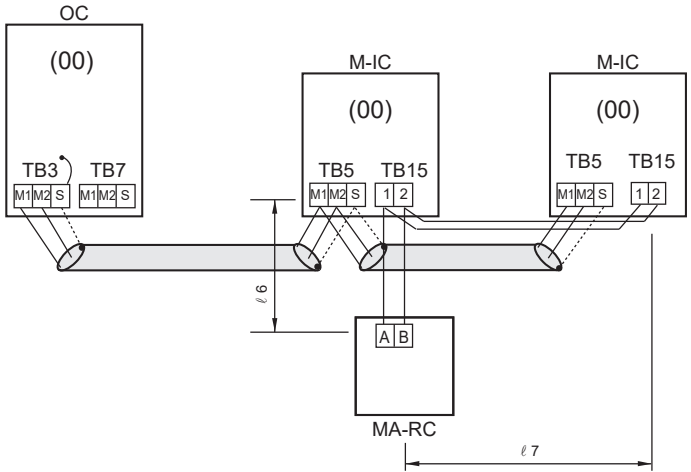
Example of wiring control cables	Wiring Method and Address Setting
<p>1. Standard operation</p>  <p>• 1 MA remote controller for each indoor unit.</p>	<p>a. Use feed wiring to connect terminals M1 and M2 on transmission cable block (TB3) for the outdoor unit (OC) to terminals M1 and M2 on the transmission cable block (TB5) of each CITY MULTI series indoor unit (M-IC). Use non-polarized 2-core wire.</p> <p>b. Connect terminals 1 and 2 on transmission cable terminal block (TB15) for each CITY MULTI series indoor unit with the terminal block for the MA remote controller (MA-RC).</p>
<p>2. Operation using 2 remote controllers</p>  <p>• Using 2 MA remote controllers for each CITY MULTI series indoor unit.</p>	<p>a. The same as above 1.a</p> <p>b. The same as above 1.b</p> <p>c. In the case of using 2 remote controllers, connect terminals 1 and 2 on transmission cable terminal block (TB15) for each indoor unit with the terminal block for 2 MA remote controllers.</p> <p>· Set either one of the MA remote controllers to "sub remote controller".</p> <p>Refer to the installation manual of MA remote controller.</p>
<p>3. Group operation</p>  <p>• Multiple indoor units operated together by 1 MA remote controller.</p>	<p>a. The same as above 1.a</p> <p>b. The same as above 1.b</p> <p>c. In the case of group operation using MA remote controller (MA-RC), connect terminals 1 and 2 on transmission cable terminal block (TB15) of each CITY MULTI series indoor unit. Use non-polarized 2-core wire.</p> <p>d. In the case of same group operation, need to set the address that is only main CITY MULTI series indoor unit. Please set the smallest address within number 01–50 of the CITY MULTI series indoor unit with the most functions in the same group.</p>
<p>Combinations of 1 through 3 above are possible.</p>	

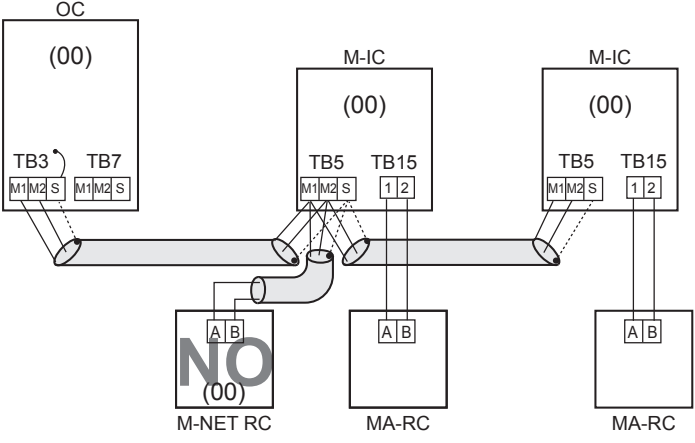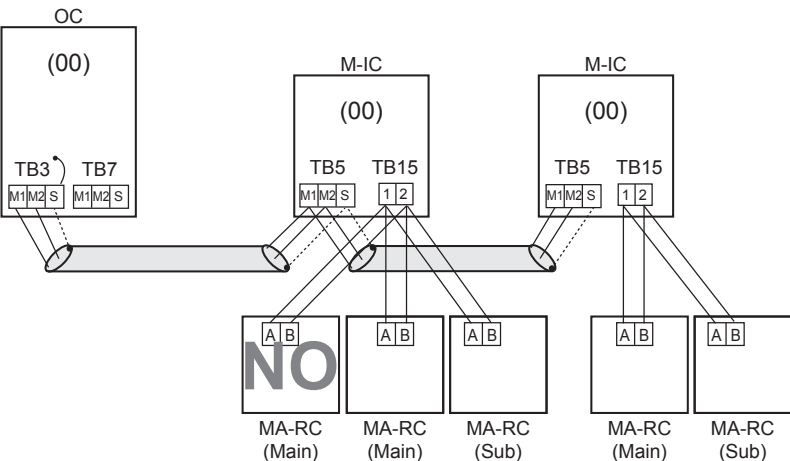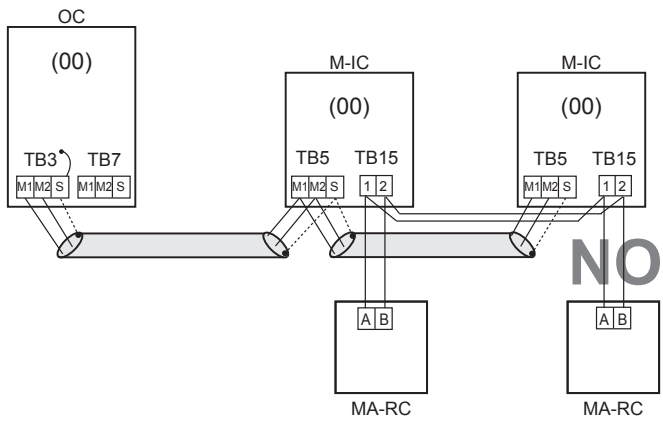Permissible Lengths	Constraint items
Indoor/outdoor transmission line Maximum distance: $L_1 + L_2 \leq 200 \text{ m}$ (1.25 mm ²) MA remote controller cable length: $\ell_1, \ell_2 \leq 200 \text{ m}$ (0.3 to 1.25 mm ²)	<p>The MA remote controller and the M-NET remote controller cannot be used together with the CITY MULTI series indoor unit of the same group. M-NET remote controller cannot be connected without address setting.</p> 
Indoor/outdoor transmission line Maximum distance: $L_1 + L_2 \leq 200 \text{ m}$ (1.25 mm ²) MA remote controller cable length: $\ell_3 + \ell_4, \ell_5 \leq 200 \text{ m}$ (0.3 to 1.25 mm ²)	<p>3 MA remote controllers or more cannot be connected with the CITY MULTI series indoor unit of the same group.</p> 
Indoor/outdoor transmission line Maximum distance: $L_1 + L_2 \leq 200 \text{ m}$ (1.25 mm ²) MA remote controller cable length: $\ell_6 + \ell_7 \leq 200 \text{ m}$ (0.3 to 1.25 mm ²)	<p>The second MA remote controller is connected with the terminal block (TB15) for the MA remote controller of the same CITY MULTI series indoor unit (M-IC) as the first MA remote control.</p> 


D. Example of a group operation with 2 or more outdoor units and an MA remote controller.
(Address settings are necessary.)

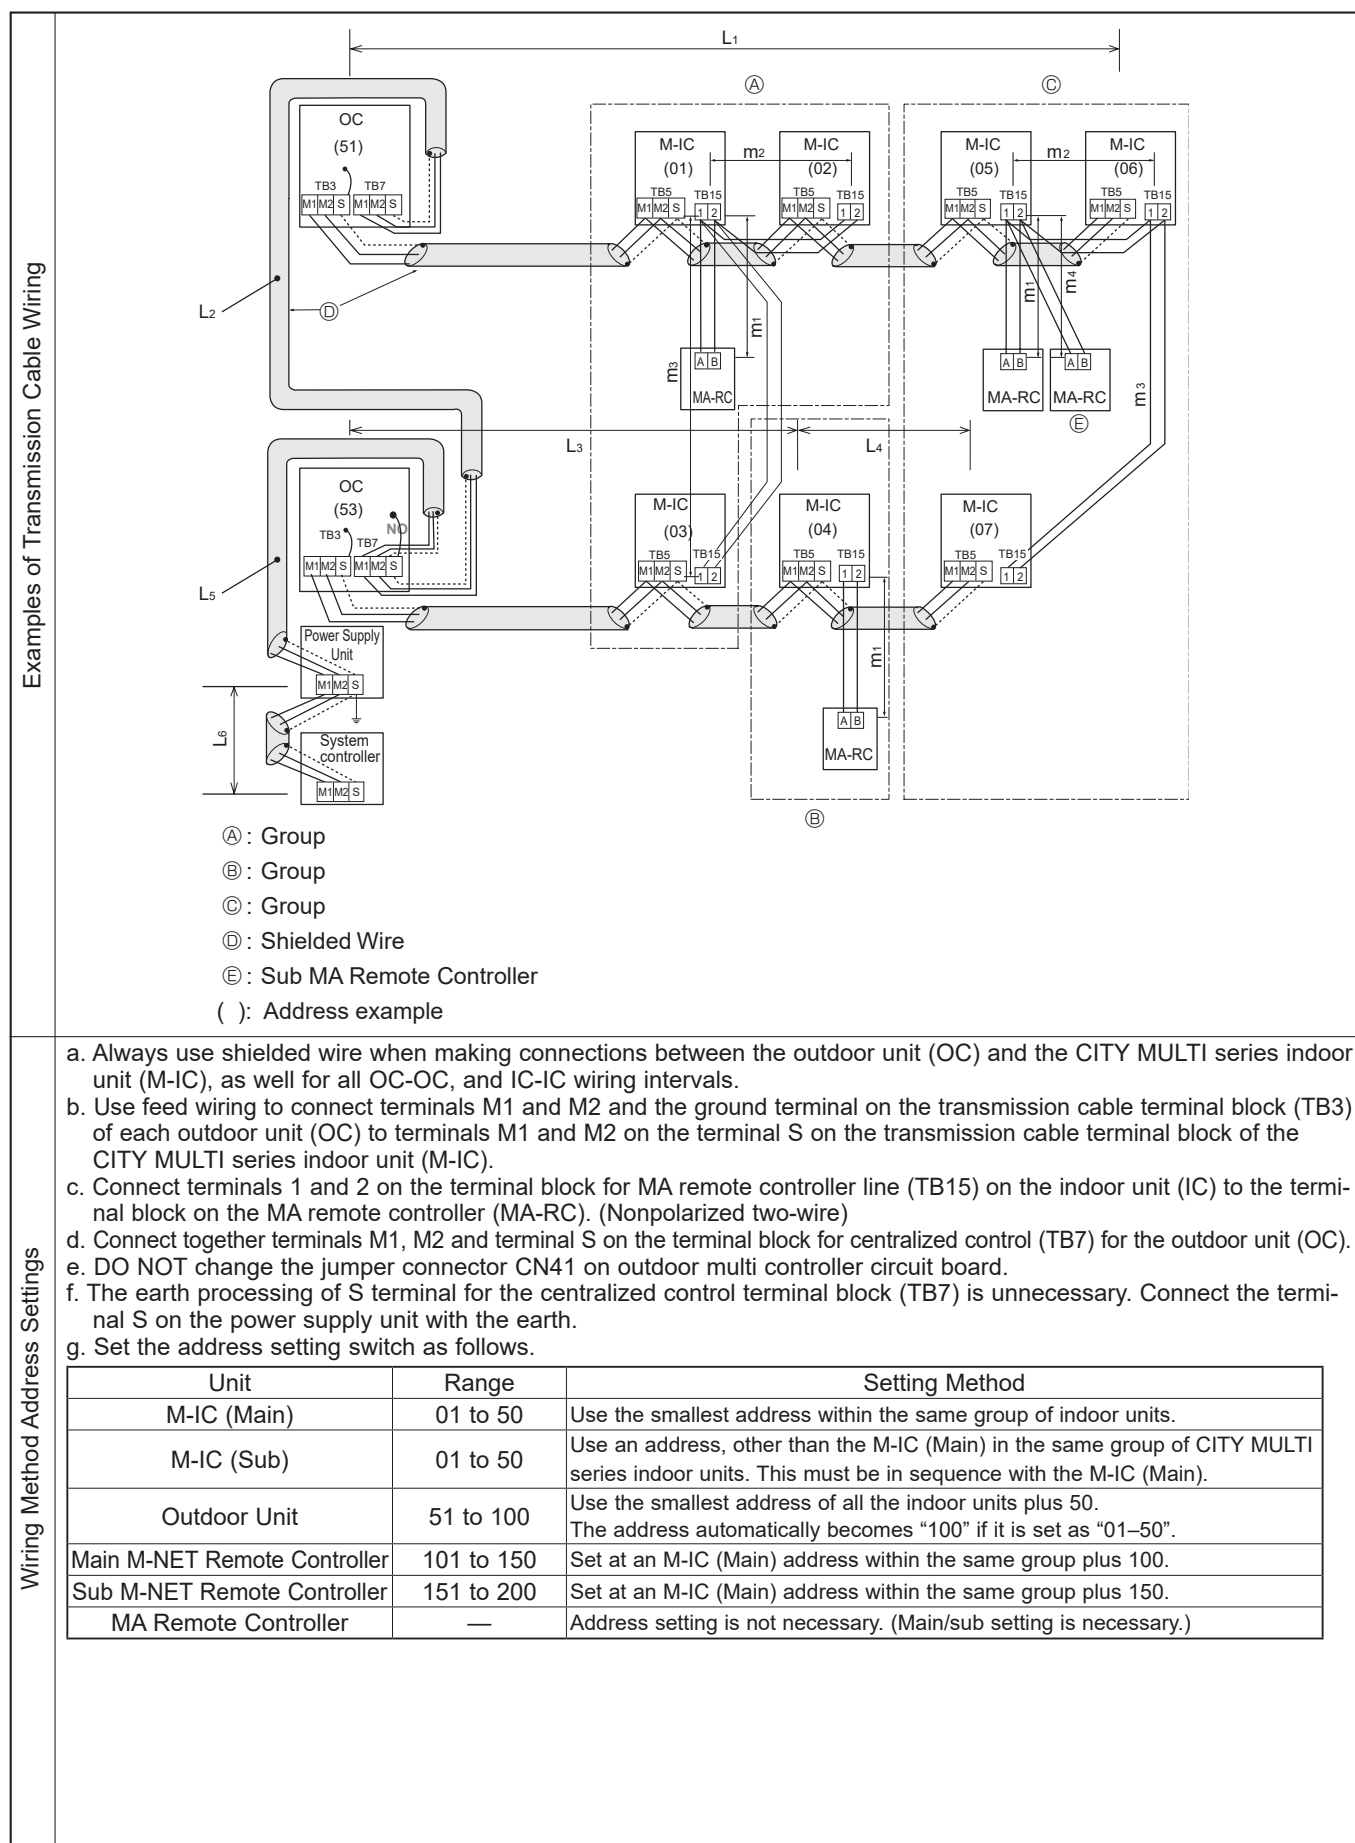

• Name, Symbol, and the Maximum Units for Connection

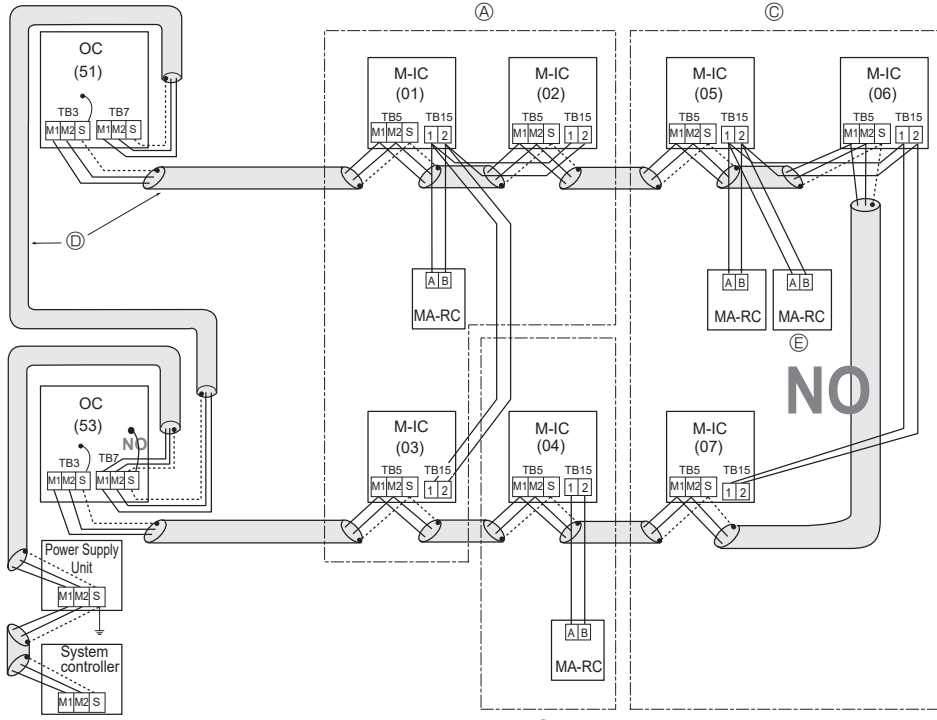Permissible Length	<p>Maximum line distance via outdoor unit (M-NET cable): $L_1+L_2+L_3+L_4$ and $L_1+L_2+L_6+L_7 \leq 500$ m (1.25 mm² more) Indoor/outdoor transmission line Maximum distance (M-NET cable): L_1 and L_3+L_4 and L_2+L_6 and $L_7 \leq 200$ m (1.25 mm² or more) MA Remote controller cable length: m_1 and $m_1+m_2+m_3$ and $m_1+m_2+m_3+m_4 \leq 200$ m (0.3 to 1.25 mm²)</p>
Constraint items	 <p>(A) : Group (B) : Group (C) : Group (D) : Shielded Wire (E) : Sub MA Remote Controller () : Address example</p> <ul style="list-style-type: none"> • Never connect together the terminal blocks (TB5) for transmission wires for CITY MULTI series indoor units (M-IC) that have been connected to different outdoor units (OC). • M-NET remote controller and MA remote controller cannot be connected with the CITY MULTI series indoor unit of the same group wiring together.


E. Example of a system using Branch Box and A-Control indoor unit

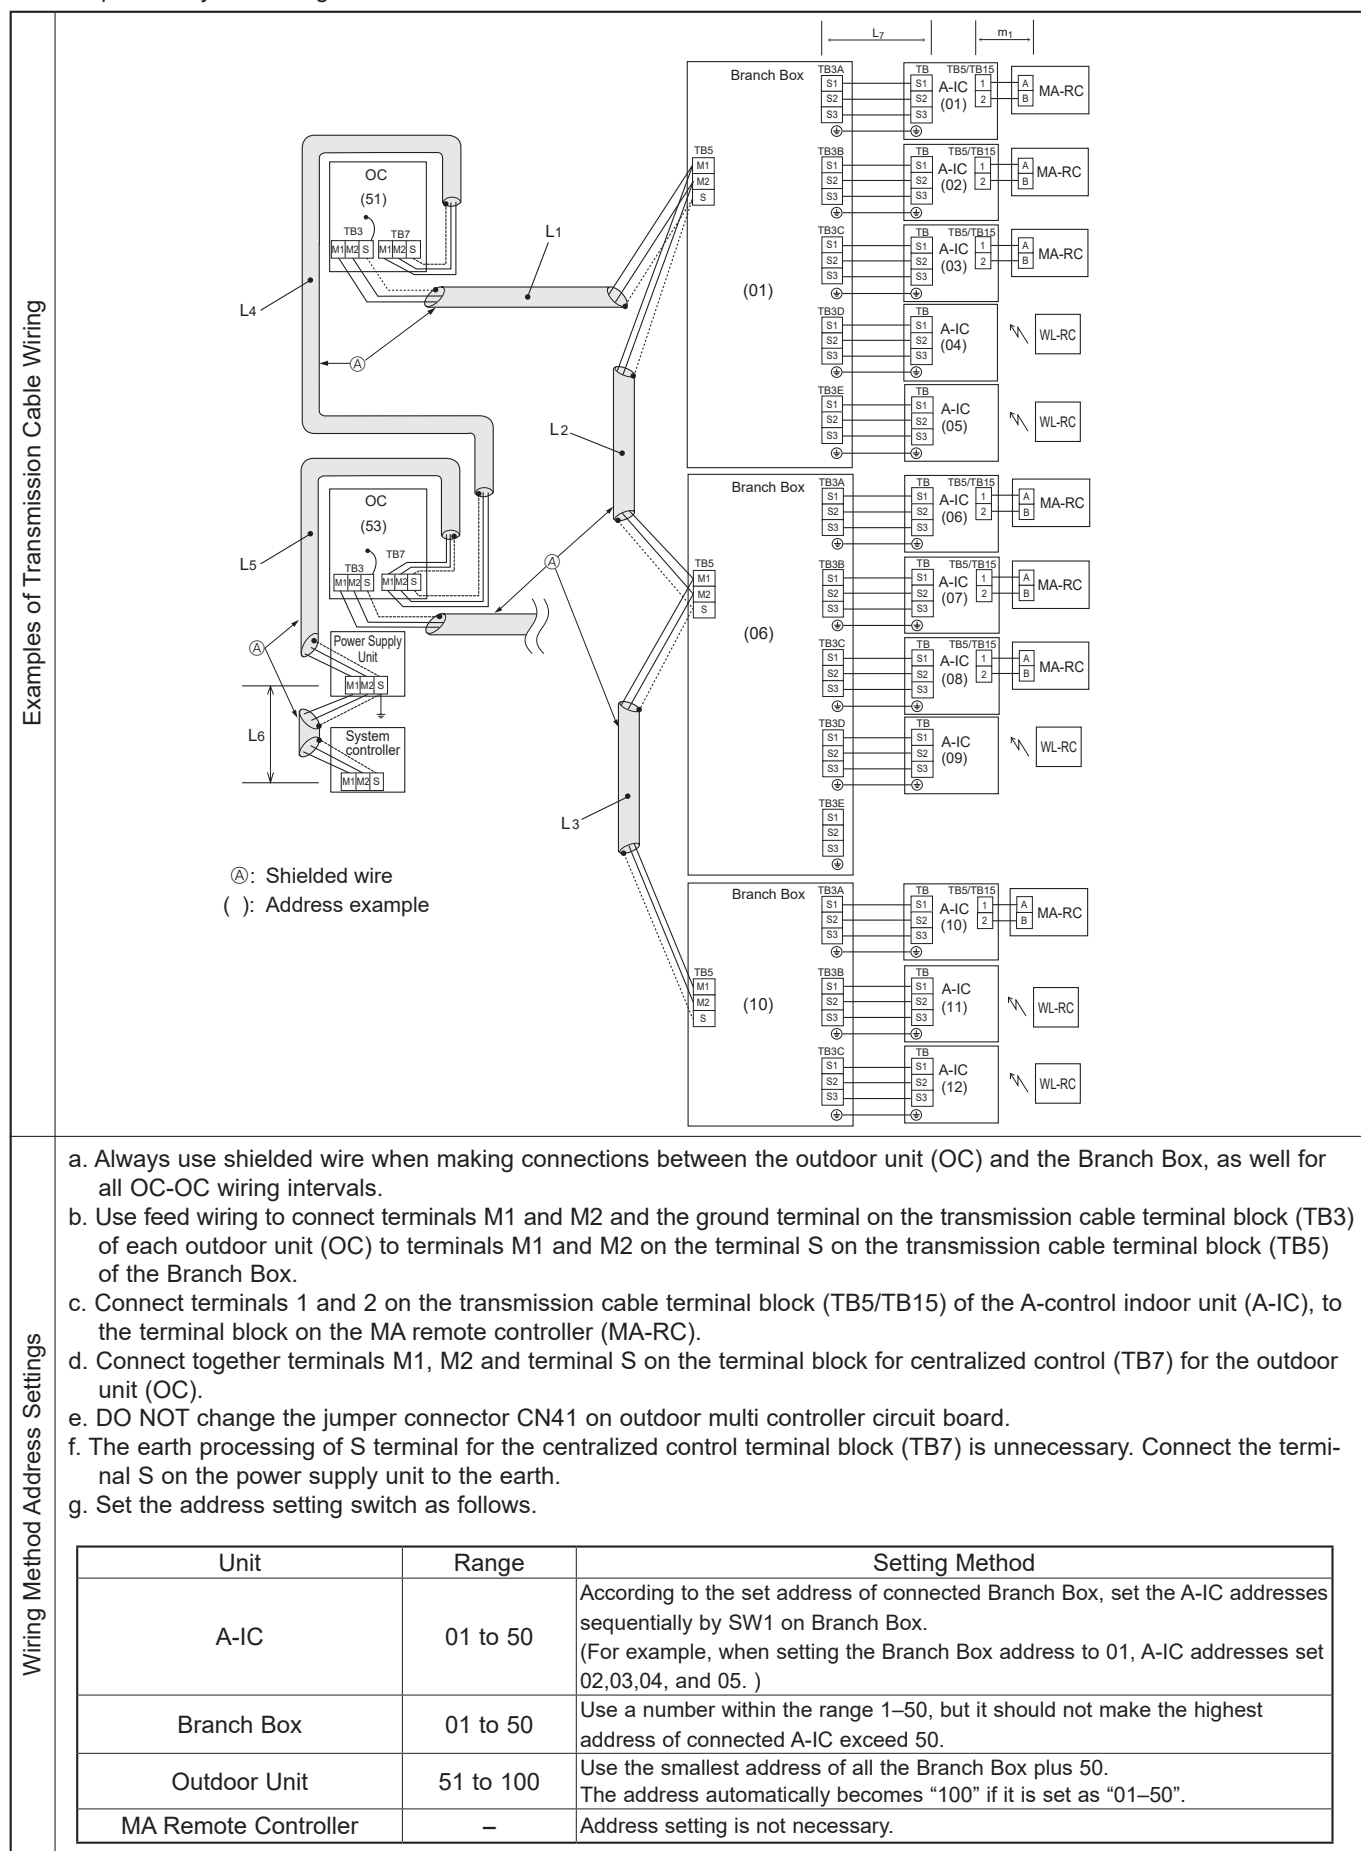

• Name, Symbol, and the Maximum Units for Connection

Permissible Length	<p>Maximum line distance via outdoor unit (M-NET cable): $L_1+L_2+L_3+L_4+L_5+L_6 \leq 500$ m (1.25 mm² or more)</p> <p>Branch box/outdoor transmission line Maximum distance (M-NET cable): $L_1+L_2+L_3, L_4+L_5, L_6 \leq 200$ m (1.25 mm² or more)</p> <p>Indoor/branch box transmission line Maximum distance (A-Control cable): $L_7 \leq 25$ m (1.5 mm²)</p> <p>Remote controller cable length: $m_1 \leq 200$ m (0.3 to 1.25 mm²)</p>
Constraint items	<p> (A) : Shielded wire () : Address example </p> <p> • Plural indoor units cannot be operated by an MA single remote controller. • Different refrigerant systems cannot be connected together. • M-NET Remote controller cannot be connected to this system. </p>

Example of a system using Branch Box and A-Control indoor unit

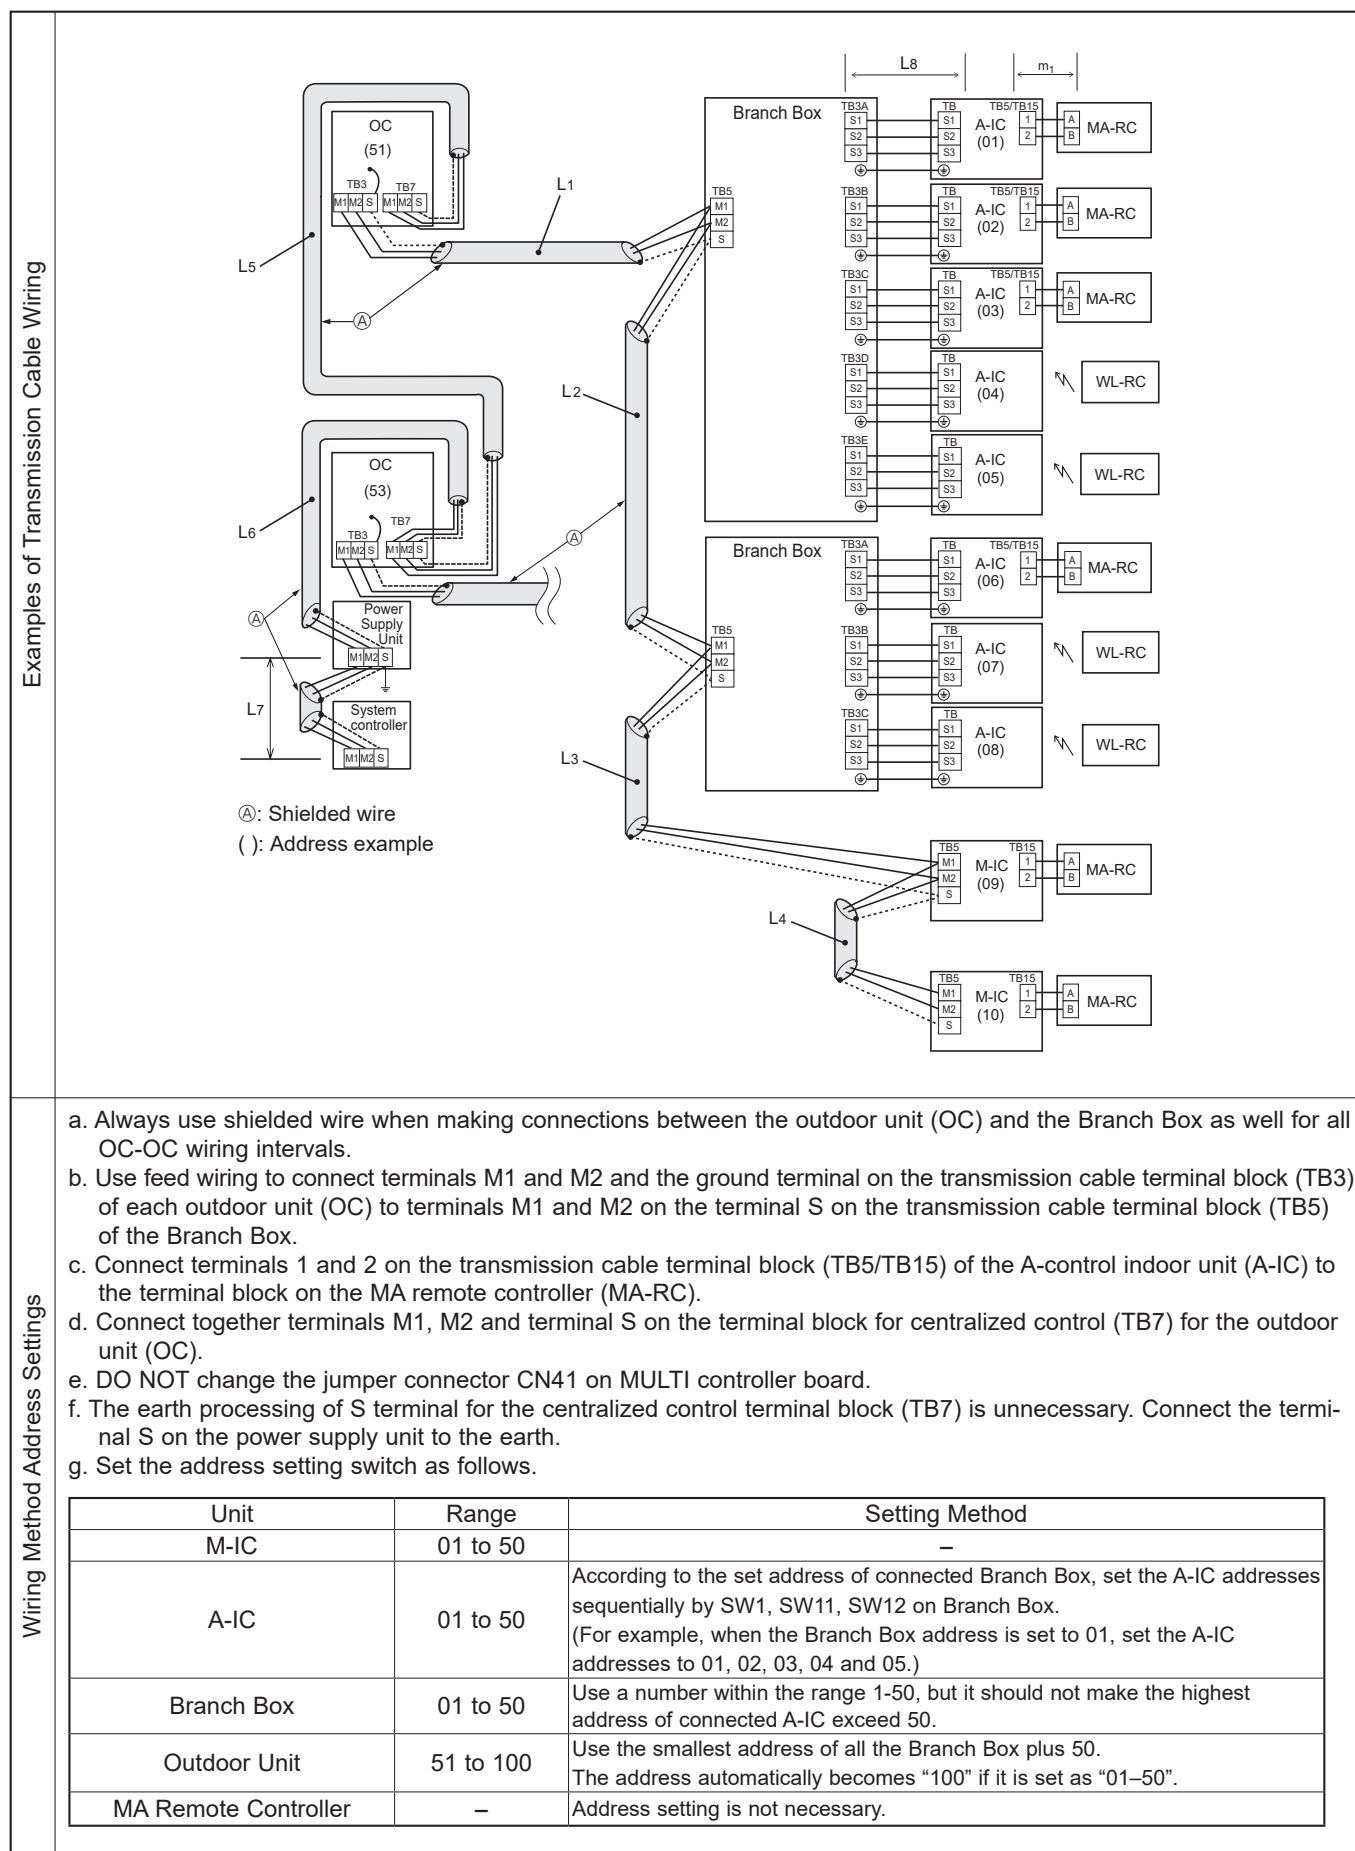


• Name, Symbol, and the Units for Connection

Permissible Length

Maximum line distance via outdoor unit (M-NET cable): $L_1+L_2+L_3+L_4+L_5+L_6+L_7 \leq 500$ m (1.25 mm² or more)
 Indoor/branch box/outdoor transmission line Maximum distance (M-NET cable): $L_1+L_2+L_3+L_4$, L_5+L_6 , $L_7 \leq 200$ m (1.25 mm² or more)
 Indoor/branch box transmission line Maximum distance (A-Control cable): $L_8 \leq 25$ m (1.5 mm²)
 Remote controller cable length: $m_1 \leq 200$ m (0.3 to 1.25 mm²)

Constraint items

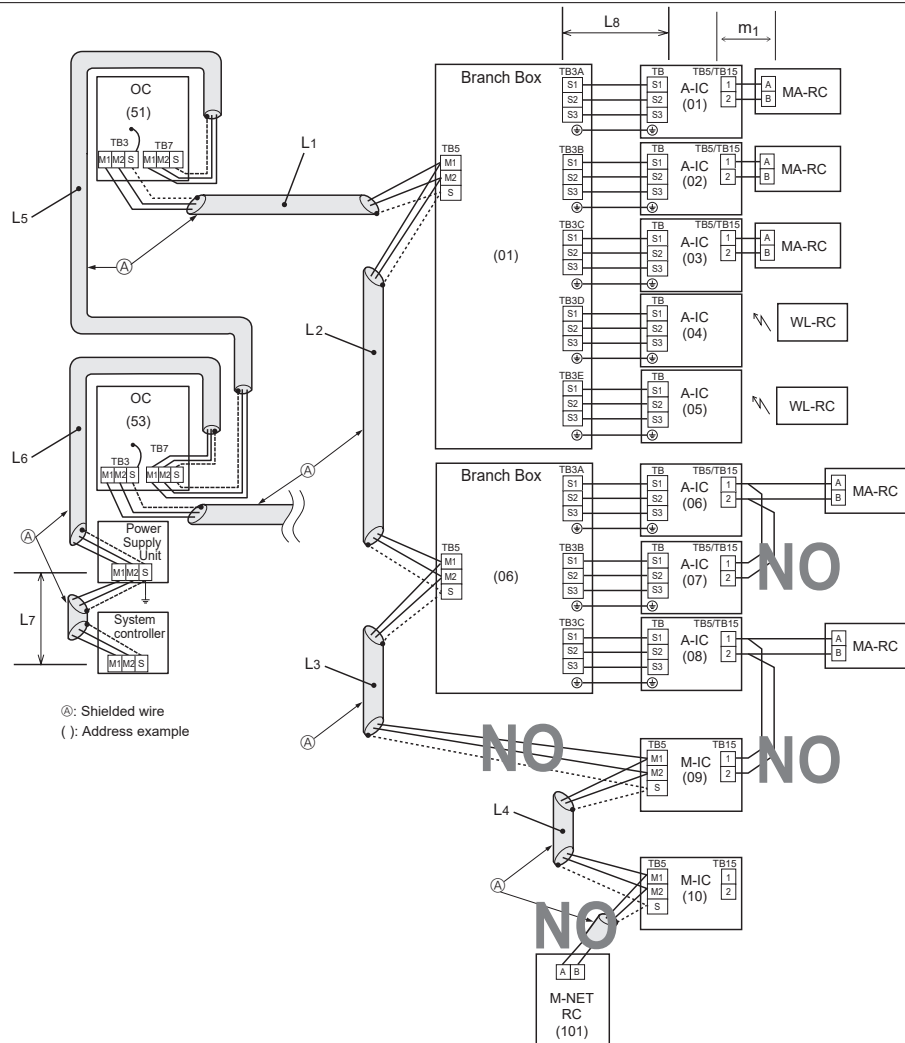

- Plural indoor units cannot be operated by a single remote controller.
- Different refrigerant systems cannot be connected together.
- M-NET Remote controller cannot be connected to this system.

8-1. CHECKPOINTS FOR TEST RUN

8-1-1. Procedures before test run

- (1) Before a test run, make sure that the following work is completed.
 - Installation related:
Make sure that the panel of cassette type and electrical wiring are done.
Otherwise electrical functions like auto vane will not operate normally.
 - Piping related:
Perform leakage test of refrigerant and drain piping.
Make sure that all joints are perfectly insulated.
Check stop valves on both liquid and gas side for full open.
 - Electrical wiring related:
Check ground wire, transmission cable, remote controller cable, and power supply cable for secure connection.
Make sure that all switch settings of address or adjustments for special specification systems are correctly settled.
- (2) Safety check:
With the insulation tester of 500V, inspect the insulation resistance.
Do not touch the transmission cable and remote controller cable with the tester.
The resistance should be over 1.0 MΩ. Do not proceed inspection if the resistance is less than 1.0 MΩ.
Inspect between the outdoor unit power supply terminal block and ground first, metallic parts like refrigerant pipes or the electrical box next, then inspect all electrical wiring of outdoor unit, indoor unit, and all linked equipment .
- (3) Before operation:
 - a) Turn the power supply switch of the outdoor unit to on for compressor protection. For a test run, wait at least 12 hours from this point.
 - b) Register control systems into remote controller(s). Never touch the on/off switch of the remote controller(s). Refer to "12-9. Special Function Operation and Settings for M-NET Remote Controller" as for settings. In MA remote controller(s), this registration is unnecessary.
- (4) More than 12 hours later from power supply to the outdoor unit, turn all power switch to on for the test run. Perform test run according to 12-4. While test running, make test run reports.

8-1-2. Test run for wired remote controller

Refer to 12-4. "TEST RUN" for operation procedure.

Note: When you deliver the unit after the test run, instruct the end user for proper usage of the system using owners' manual and the test run report you made to certificate normal operation. If abnormalities are detected during test run, refer to "8-1-3. Countermeasures for Error During Test Run". As for DIP switch setting of outdoor unit, refer to "8-4. INTERNAL SWITCH FUNCTION TABLE".

8-1-3. Countermeasures for Error During Test Run

- If a problem occurs during test run, a code number will appear on the remote controller (or LED on the outdoor unit), and the air conditioning system will automatically cease operating.

Determine the nature of the abnormality and apply corrective measures.

Check code (2 digits)	Check code (4 digits)	Trouble	Detected Unit			Remarks
			Indoor	Outdoor	Remote Controller	
Ed	0403	Serial communication error		○		Outdoor unit outdoor multi controller circuit board – Power circuit board communication trouble
U2	1102	Compressor temperature trouble		○		Check delay code 1202
UE	1302	High pressure trouble		○		Check delay code 1402
U7	1500	Superheat due to low discharge temperature trouble		○		Check delay code 1600
U2	1501	Refrigerant shortage trouble		○		Check delay code 1601
		Closed valve in cooling mode		○		Check delay code 1501
P6	1503	Freeze protection of Branch box or Indoor unit		○		
EF	1508	4-way valve trouble in heating mode		○		Check delay code 1608
PA	2500	Water leakage	○			
P5	2502	Drain overflow protection	○			
P4	2503	Drain sensor trouble	○			
UF	4100	Compressor current interruption (locked compressor)		○		Check delay code 4350
Pb	4114	Fan trouble (indoor)	○			
UP	4210	Compressor overcurrent interruption/failure in 12 VDC power supply circuit on power circuit board		○		
U9	4220	Undervoltage/overvoltage/PAM error/L1 open phase/power synchronization signal error		○		Check delay code 4320
U5	4230	Heat sink temperature trouble		○		Check delay code 4330
U6	4250	Power module trouble or overcurrent trouble		○		Check delay code 4350
U8	4400	Fan trouble (outdoor)		○		Check delay code 4500
U3	5101	Air inlet thermistor (TH21) open/short or	○			
		Compressor temperature thermistor (TH4) open/short		○		Check delay code 1202
U4	5102	Liquid pipe temperature thermistor (TH22) open/short or	○			
		Suction pipe temperature thermistor (TH6) open/short		○		Check delay code 1211
U4	5103	Gas pipe temperature thermistor (TH23) open/short	○			
U4	5105	Outdoor liquid pipe temperature thermistor (TH3) open/short		○		Check delay code 1205
U4	5106	Ambient thermistor (TH7) open/short		○		Check delay code 1221
U4	5109	HIC pipe temperature thermistor (TH2) open/short		○		Check delay code 1222
U4	5110	Heat sink temperature thermistor (TH8) open/short		○		Check delay code 1214
F5	5201	High pressure sensor (63HS) trouble		○		Check delay code 1402
F3	5202	Low pressure sensor (63LS) trouble		○		Check delay code 1400
UH	5300	Current sensor trouble		○		Check delay code 4310
P4	5701	Contact failure of drain float switch	○			
A0	6600	Duplex address error	○	○	○	Only M-NET Remote controller is detected.
A2	6602	Transmission processor hardware error	○	○	○	Only M-NET Remote controller is detected.
A3	6603	Transmission bus BUSY error	○	○	○	Only M-NET Remote controller is detected.
A6	6606	Signal communication error with transmission processor	○	○	○	Only M-NET Remote controller is detected.
A7	6607	No ACK error	○	○	○	Only M-NET Remote controller is detected.
A8	6608	No response frame error	○	○	○	Only M-NET Remote controller is detected.
E0/E4	6831	MA communication receive error (no receive signal)	○		○	Only MA Remote controller is detected.
E3/E5	6832	MA communication send error	○		○	Only MA Remote controller is detected.
E3/E5	6833	MA communication send error	○		○	Only MA Remote controller is detected.
E0/E4	6834	MA communication receive error	○		○	Only MA Remote controller is detected.
EF	7100	Total capacity error		○		
EF	7101	Capacity code error	○	○		
EF	7102	Connecting unit number error		○		
EF	7105	Address setting error		○		
EF	7130	Incompatible unit combination		○		

Notes:

- When the outdoor unit detects No ACK error/No response error, an object indoor unit is treated as a stop, and not assumed to be abnormal.
- Refer to the service manual of indoor unit or remote controller for the detail of error detected in indoor unit or remote controller.

Self-diagnosis function

The indoor and outdoor units can be diagnosed automatically using the self-diagnosis switch (SW1, SWP2) and LED1, LED2 (LED indication) found on the multi-controller of the outdoor unit.
LED indication : Set all contacts of SW1 to OFF.


During normal operation

The LED indicates the drive state of the controller in the outdoor unit.

Bit	1	2	3	4	5	6	7	8
Indication	Compressor operated	52C	21S4	SV1	(SV2)	SV3	—	Always lit

[Example]

When the compressor and SV1 are turned during cooling operation.



Serial communication error

Abnormal points and detection methods	Causes and checkpoints
If serial communication between the outdoor multi controller circuit board and outdoor power circuit board is defective.	① Wire breakage or contact failure of connector CN2 or CN4 ② Malfunction of communication circuit to power circuit board on outdoor multi controller circuit board ③ Malfunction of communication circuit on outdoor power circuit board

●Diagnosis of defects

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

Diagnosis	Remedy
<pre> graph TD A[Check the connection of the communication line (CN2 and CN4) between the outdoor controller board and power board.] --> B{Are they connected normally?} B -- No --> R1[Connect the CN2 and CN4 properly. Replace them in the case of breakage.] B -- Yes --> C[Check the wiring.] C --> D{Are they connected normally?} D -- No --> R2[Connect the wiring properly. Replace them in the case of breakage.] D -- Yes --> R3[The communication circuit of either the outdoor controller board or power board is defective. If unable to identify the defective circuit; ① Replace the outdoor controller board if it does not recover, ② Replace the outdoor power board.] </pre>	<p>Connect the CN2 and CN4 properly. Replace them in the case of breakage.</p> <p>Connect the wiring properly. Replace them in the case of breakage.</p> <p>The communication circuit of either the outdoor controller board or power board is defective. If unable to identify the defective circuit; ① Replace the outdoor controller board if it does not recover, ② Replace the outdoor power board.</p>


Compressor temperature trouble

Chart 1 of 2

Abnormal points and detection methods	Causes and checkpoints
<p>(1) If TH4 falls into following temperature conditions;</p> <ul style="list-style-type: none"> ●exceeds 110°C continuously for 5 minutes ●exceeds 125°C <p>(2) If a pressure detected by the high pressure sensor and converted to saturation temperature exceeds 40°C during defrosting, and TH4 exceeds 110°C.</p> <p>TH4: Thermistor <Compressor> LEV: Linear expansion valve</p>	<p>① Malfunction of stop valve ② Over-heated compressor operation caused by shortage of refrigerant ③ Defective thermistor ④ Defective outdoor multi controller circuit board ⑤ LEV performance failure ⑥ Defective indoor controller board ⑦ Clogged refrigerant system caused by foreign object ⑧ Refrigerant shortage (Refrigerant liquid accumulation in compressor while indoor unit is OFF/thermo-OFF.)</p>

●Diagnosis of defects

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

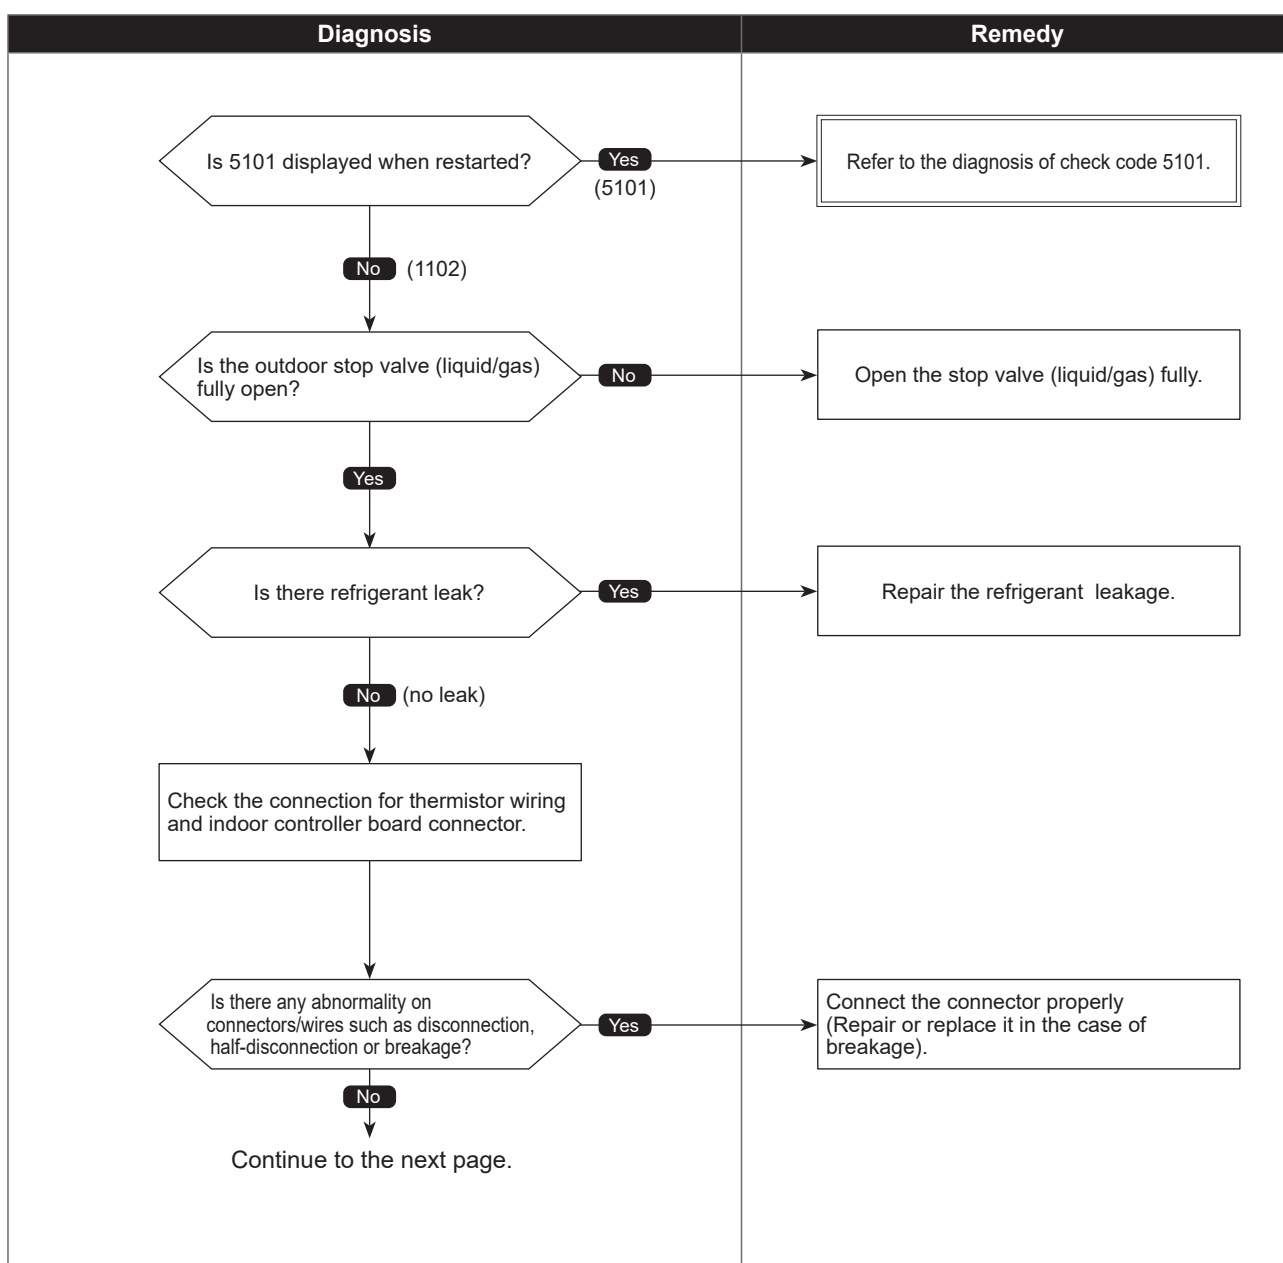


Compressor temperature trouble

Chart 2 of 2

●Diagnosis of defects

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

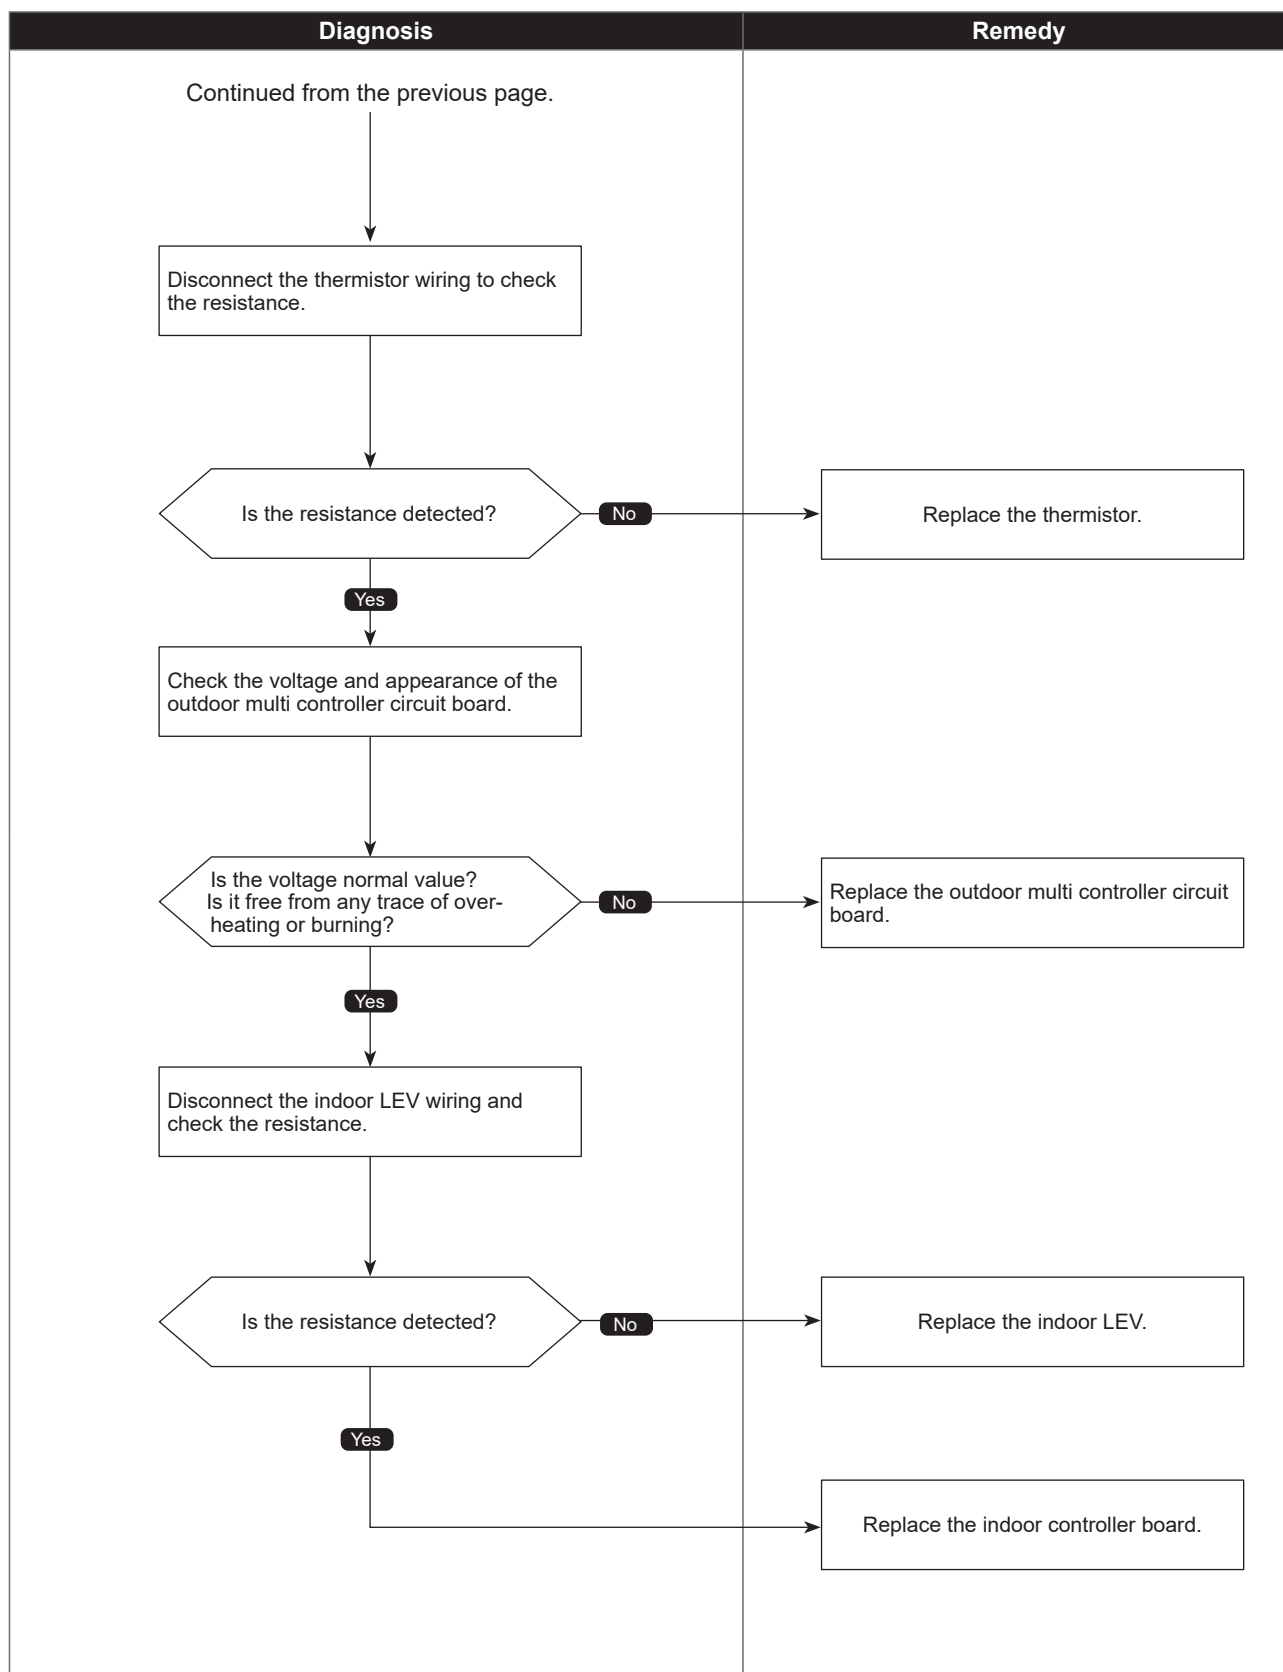


High pressure trouble

Chart 1 of 4

Abnormal points and detection methods	Causes and checkpoints
<p>(1) High pressure abnormality (63H operation) If 63H operates(*) during compressor operation. (* 4.15 MPa)</p> <p>(2) High pressure abnormality (63HS detected) 1. If a pressure detected by 63HS is 4.31 MPa or more during compressor operation. 2. If a pressure detected by 63HS is 4.14 MPa or more for 3 minutes during compressor operation.</p> <p>63H: High pressure switch 63HS: High pressure sensor LEV: Linear expansion valve SV1: Solenoid valve TH7: Thermistor <Ambient></p>	<p>① Defective operation of stop valve (not fully open) ② Clogged or broken pipe ③ Malfunction or locked outdoor fan motor ④ Short-cycle of outdoor unit ⑤ Dirt of outdoor heat exchanger ⑥ Remote controller transmitting error caused by noise interference ⑦ Contact failure of the outdoor multi controller circuit board connector ⑧ Defective outdoor multi controller circuit board ⑨ Short-cycle of indoor unit ⑩ Decreased airflow, clogged filter, or dirt on indoor unit. ⑪ Malfunction or locked indoor fan motor ⑫ Decreased airflow caused by defective inspection of outdoor temperature thermistor (It detects lower temperature than actual temperature.) ⑬ Indoor LEV performance failure ⑭ Malfunction of fan driving circuit ⑮ SV1 performance failure ⑯ Defective high pressure sensor ⑰ Defective high pressure sensor input circuit on outdoor multi controller circuit board</p>

●Diagnosis of defects

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

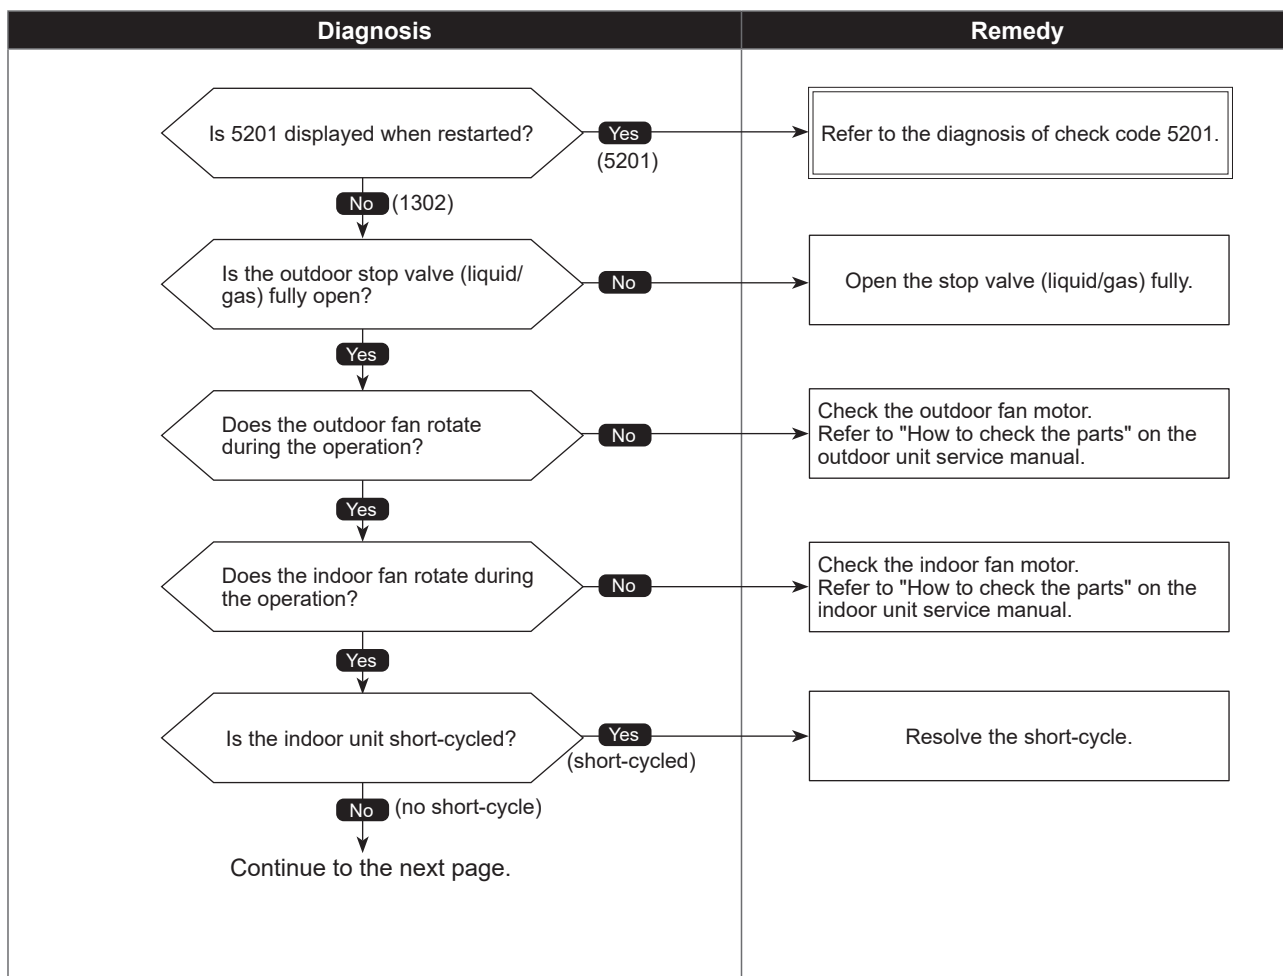


High pressure trouble

Chart 2 of 4


●Diagnosis of defects

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

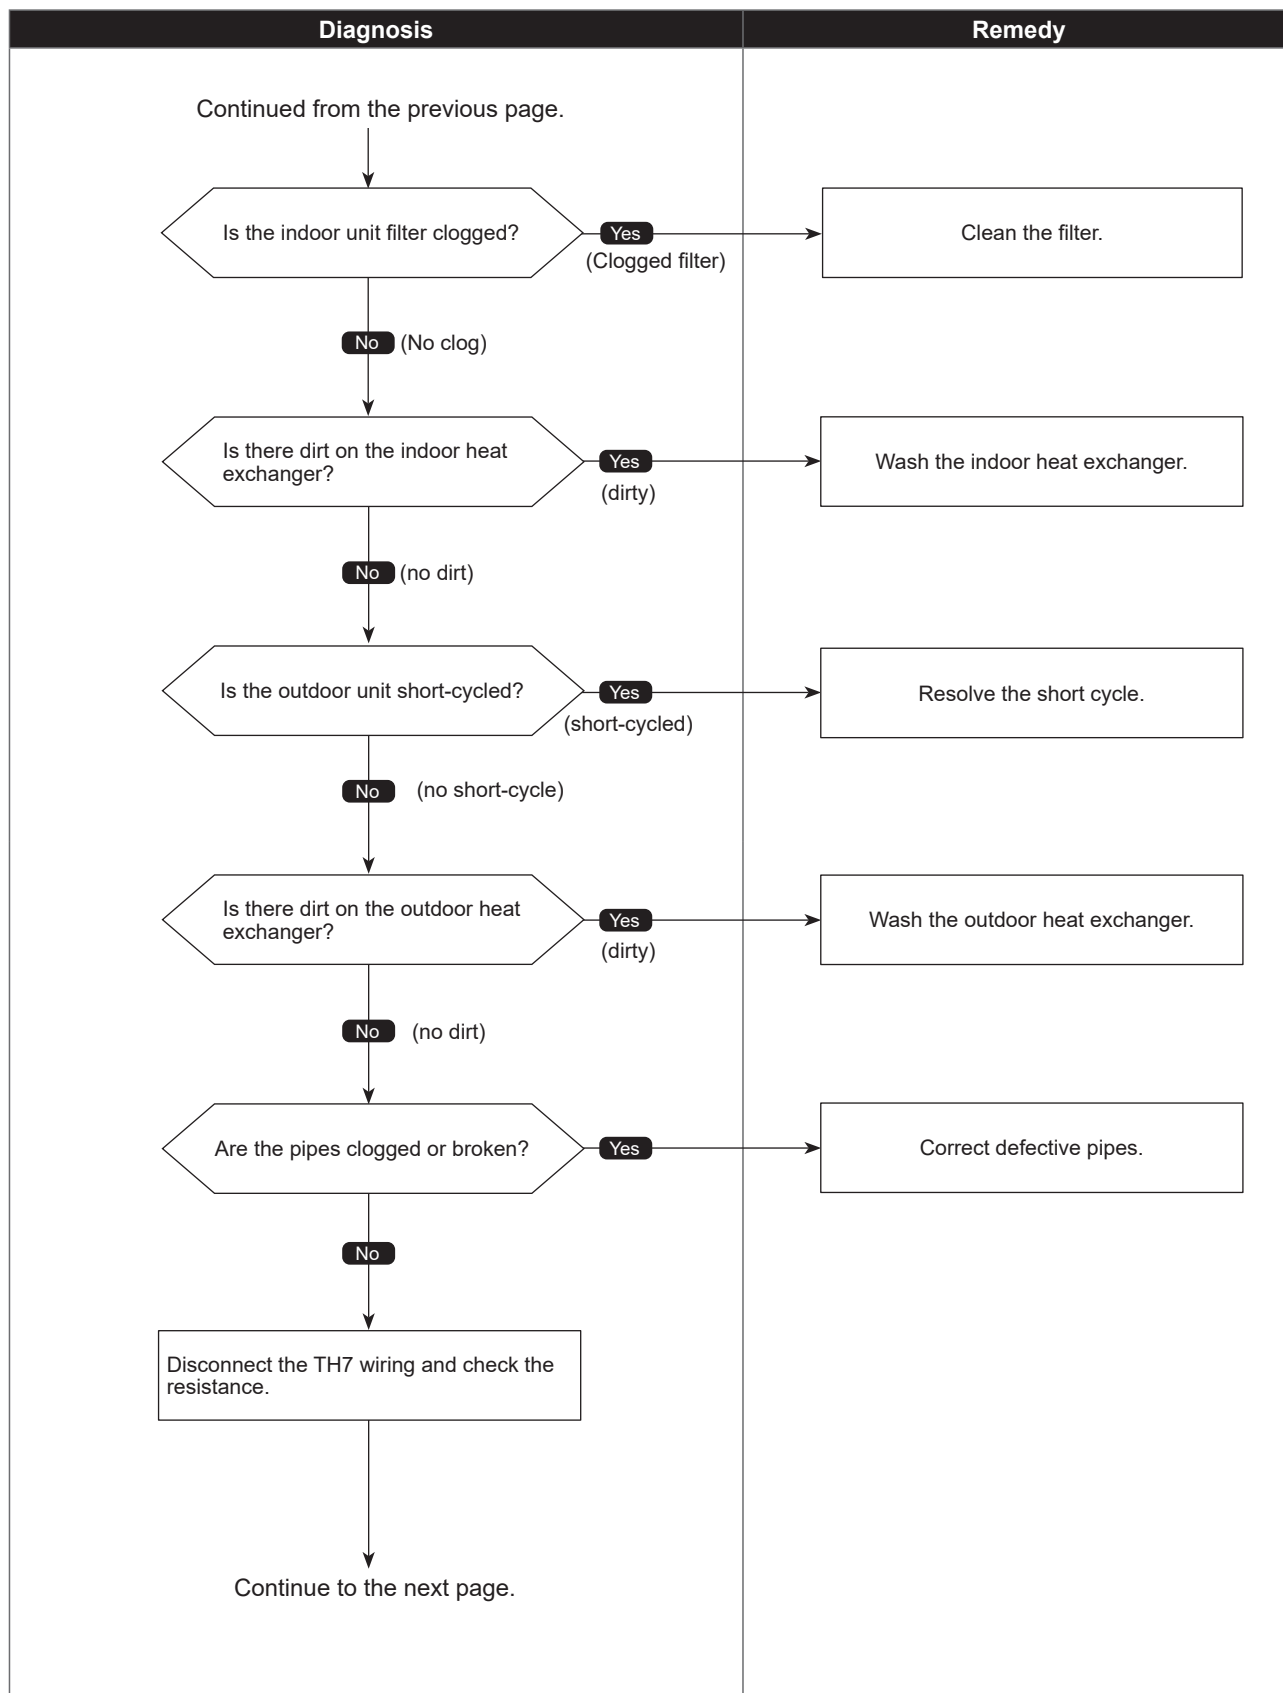

●Diagnosis of defects

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

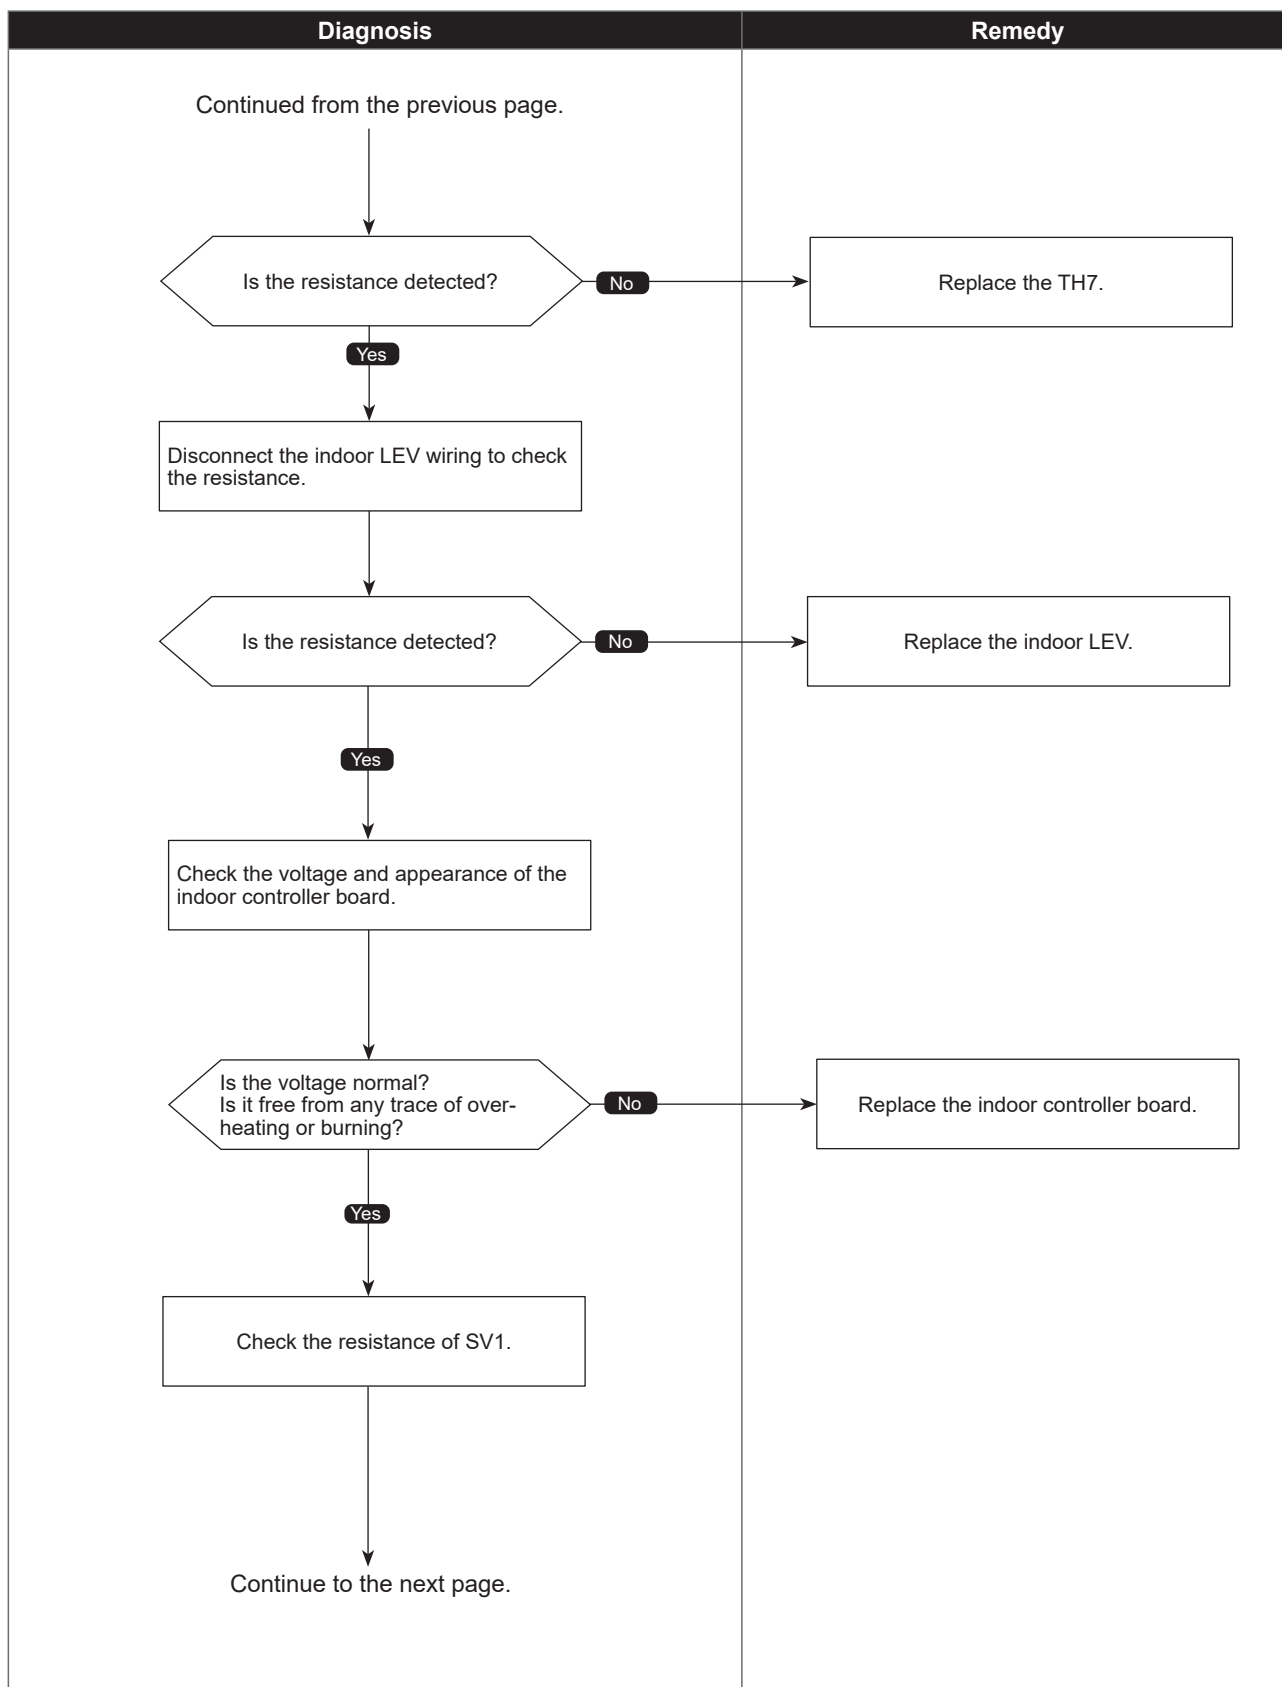


High pressure trouble

Chart 4 of 4

●Diagnosis of defects

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

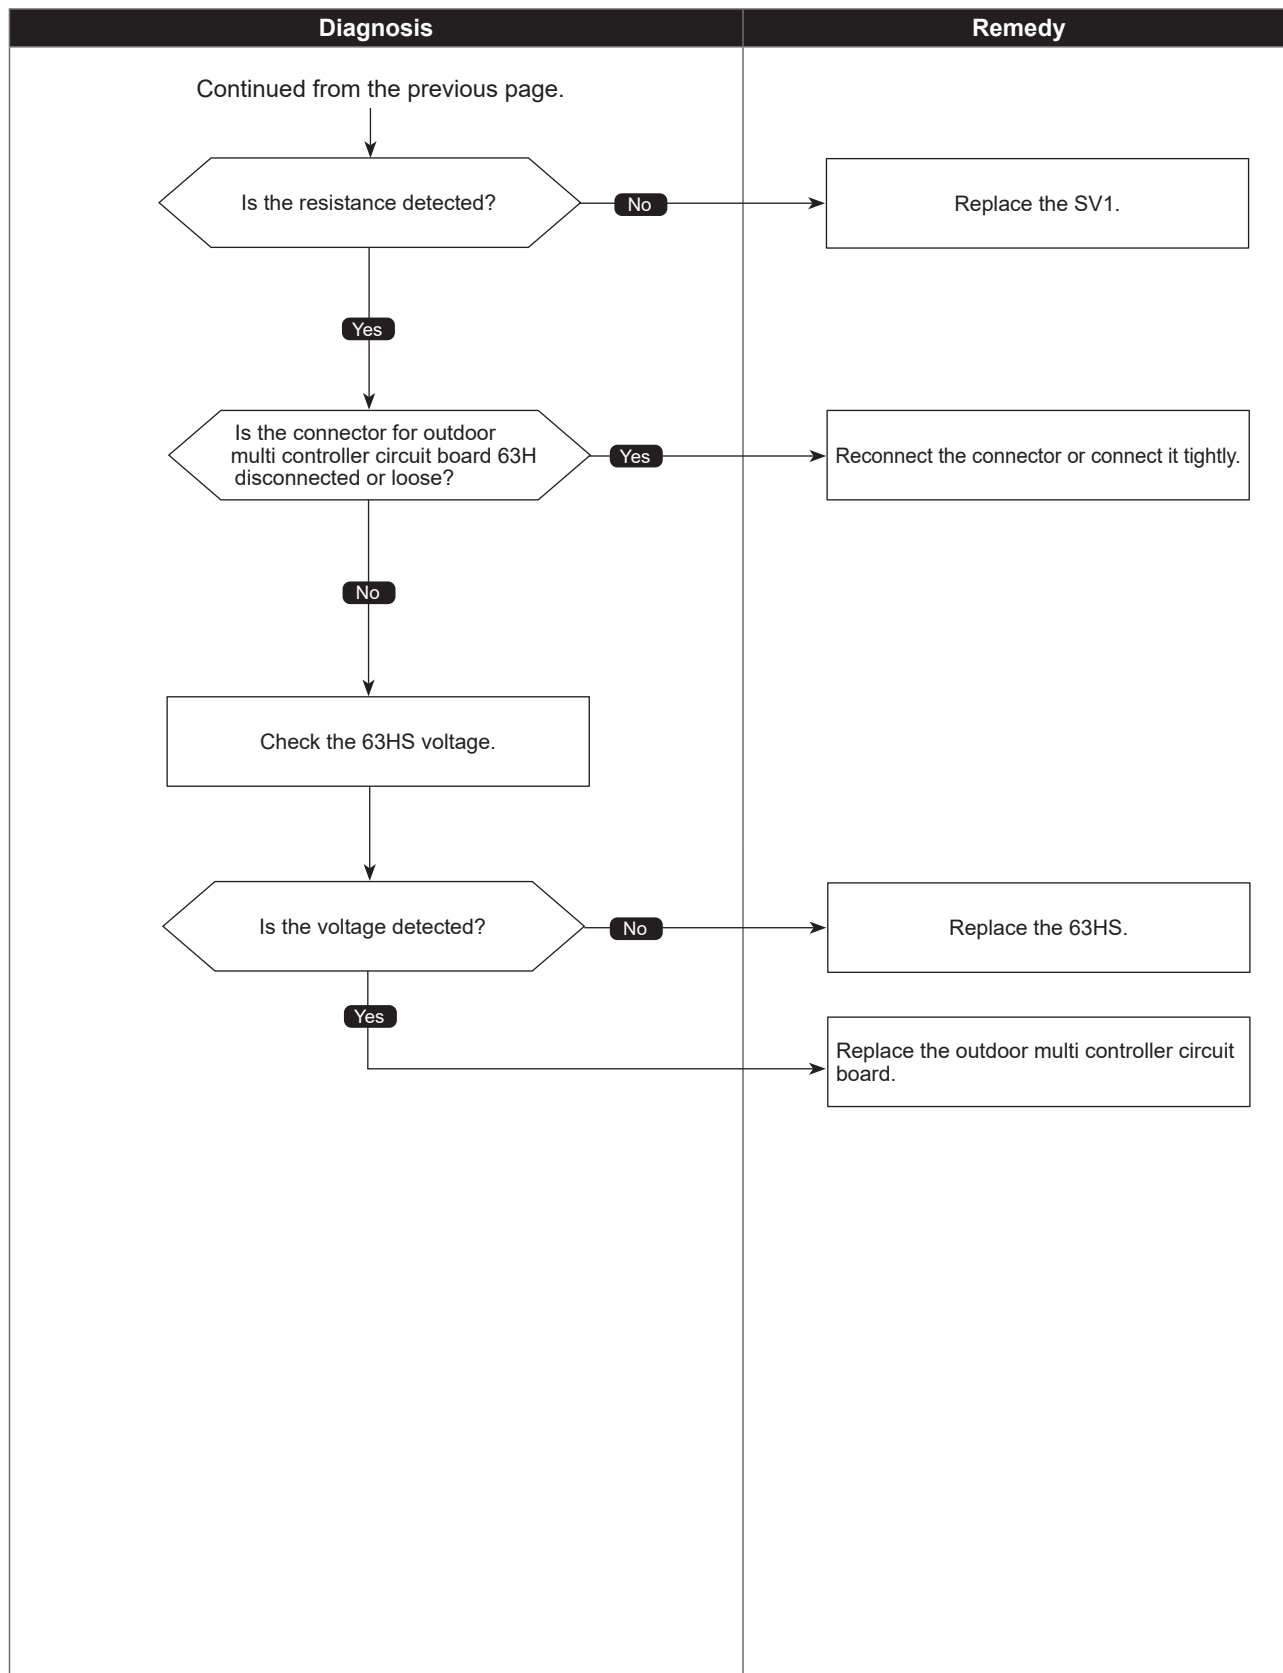


Superheat due to low discharge temperature trouble

Chart 1 of 2

Abnormal points and detection methods	Causes and checkpoints
<p>If the discharge superheat is continuously detected -15°C or less (*) for 5 minutes even though the indoor LEV has minimum open pulse after the compressor starts operating for 10 minutes.</p> <p>LEV: Linear expansion valve TH4: Thermistor <Compressor> 63HS: High pressure sensor</p> <p>*At this temperature, conditions for the abnormality detection will not be satisfied if no abnormality is detected on either TH4 or 63HS.</p>	<p>① Disconnection or loose connection of TH4 ② Defective holder of TH4 ③ Disconnection of LEV coil ④ Disconnection of LEV connector ⑤ LEV performance failure</p>

●Diagnosis of defects

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

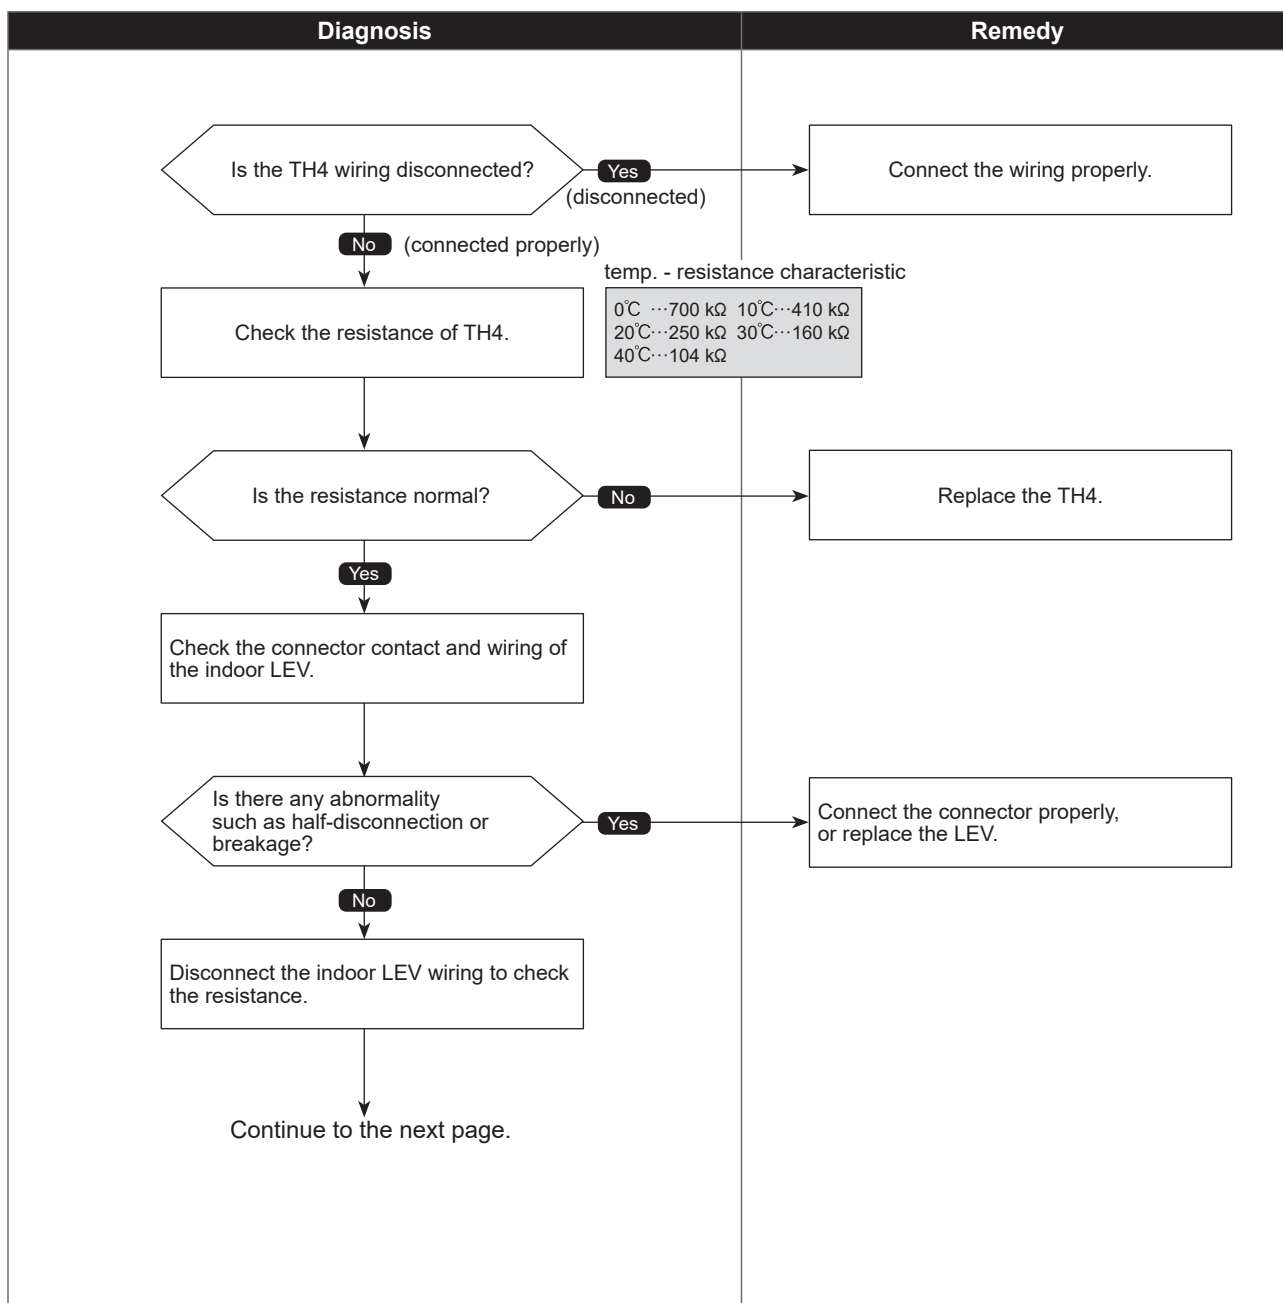


Superheat due to low discharge temperature trouble

Chart 2 of 2

●Diagnosis of defects

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

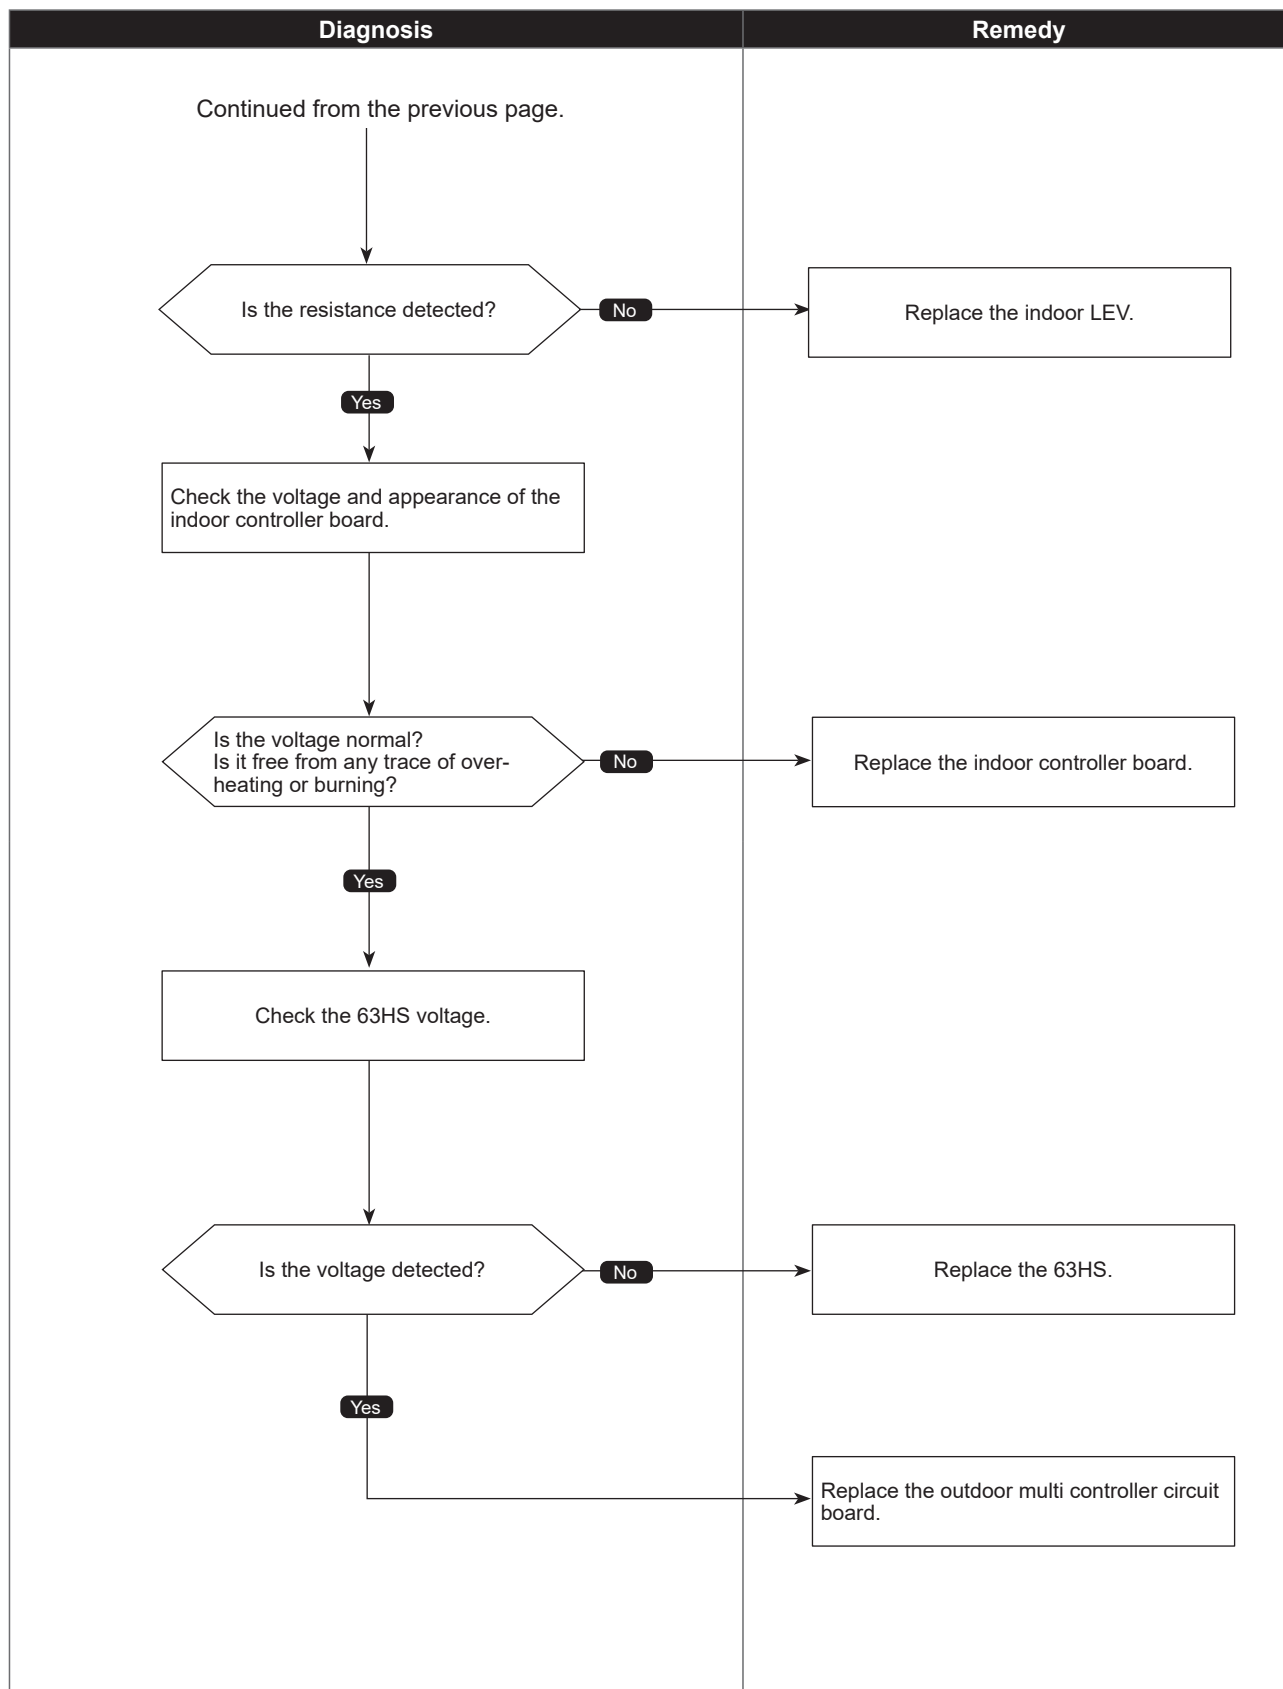


Refrigerant shortage trouble

Chart 1 of 2

Abnormal points and detection methods	Causes and checkpoints
<p>(1) When all of the following conditions have been satisfied for 15 consecutive minutes:</p> <ol style="list-style-type: none"> 1. The compressor is operating in HEAT mode. 2. Discharge super heat is 80°C or more. 3. Difference between TH7 and the TH3 applies to the formula of $(TH7-TH3 < 5^{\circ}C)$. 4. The saturation temperature converted from a high pressure sensor detects below 35°C. <p>(2) When all of the following conditions have been satisfied:</p> <ol style="list-style-type: none"> 1. The compressor is in operation. 2. When cooling, discharge superheat is 80°C or more, and the saturation temperature converted from a high pressure sensor is over -40°C. 3. When heating, discharge superheat is 90°C or more. 	<ol style="list-style-type: none"> ① Defective operation of stop valve (not fully open) ② Defective thermistor ③ Defective outdoor multi controller circuit board ④ Indoor LEV performance failure ⑤ Gas leakage or shortage ⑥ Defective 63HS <p>TH3: Thermistor <Outdoor liquid pipe> TH7: Thermistor <Ambient> LEV: Linear expansion valve 63HS: High pressure sensor</p>

●Diagnosis of defects

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

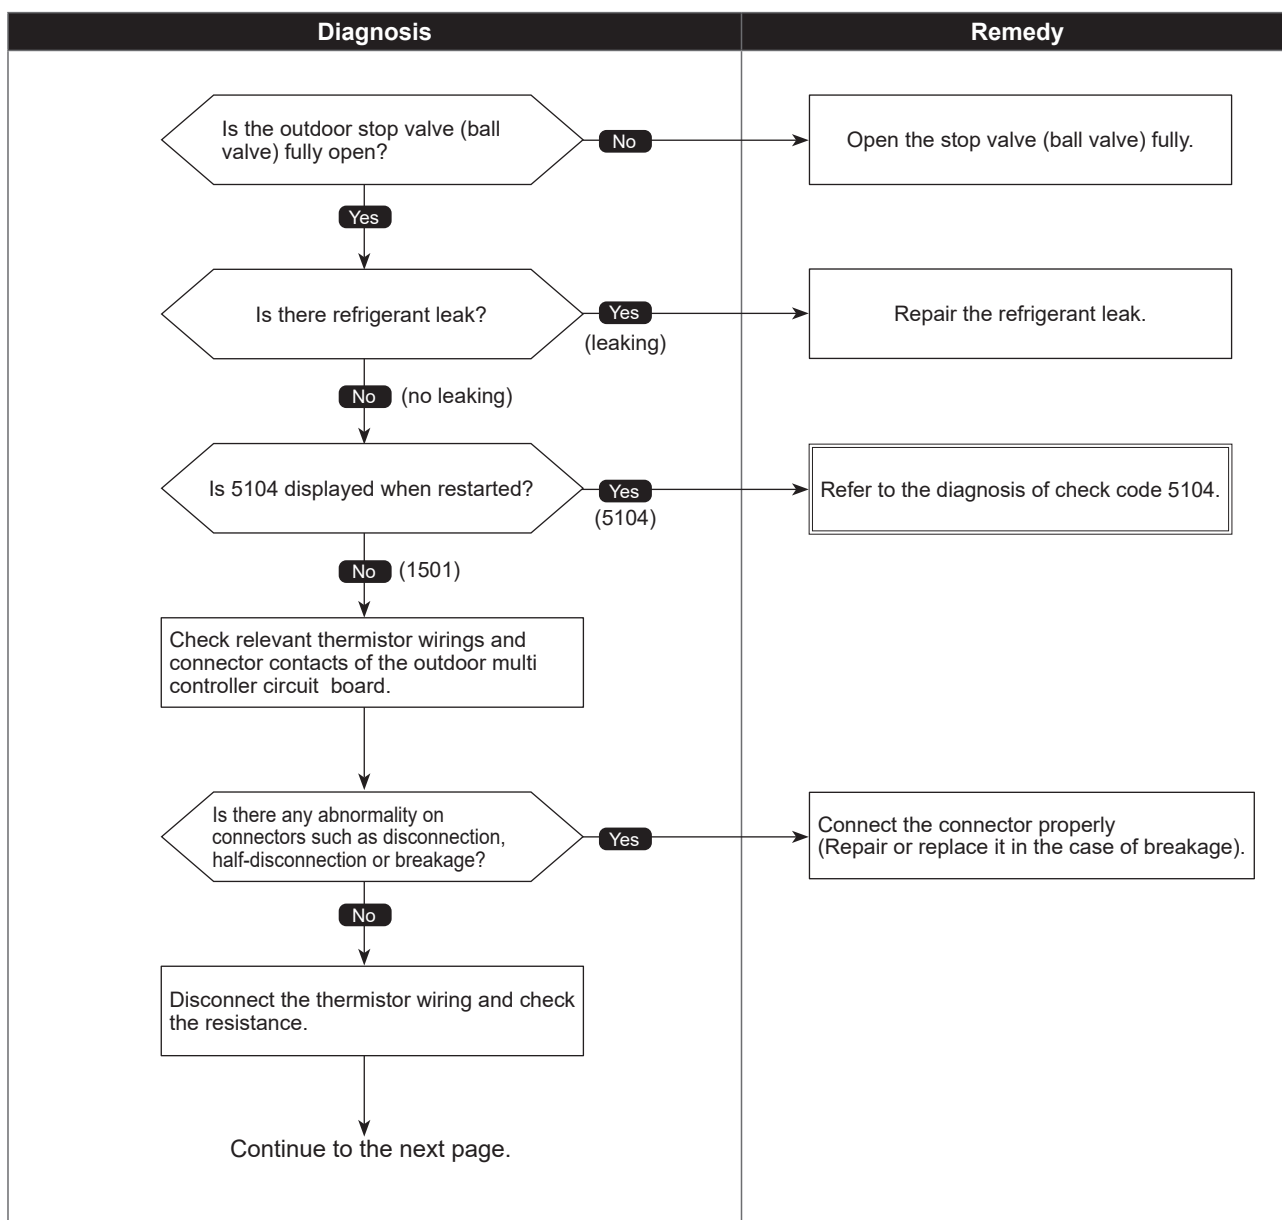


Refrigerant shortage trouble

Chart 2 of 2

●Diagnosis of defects

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

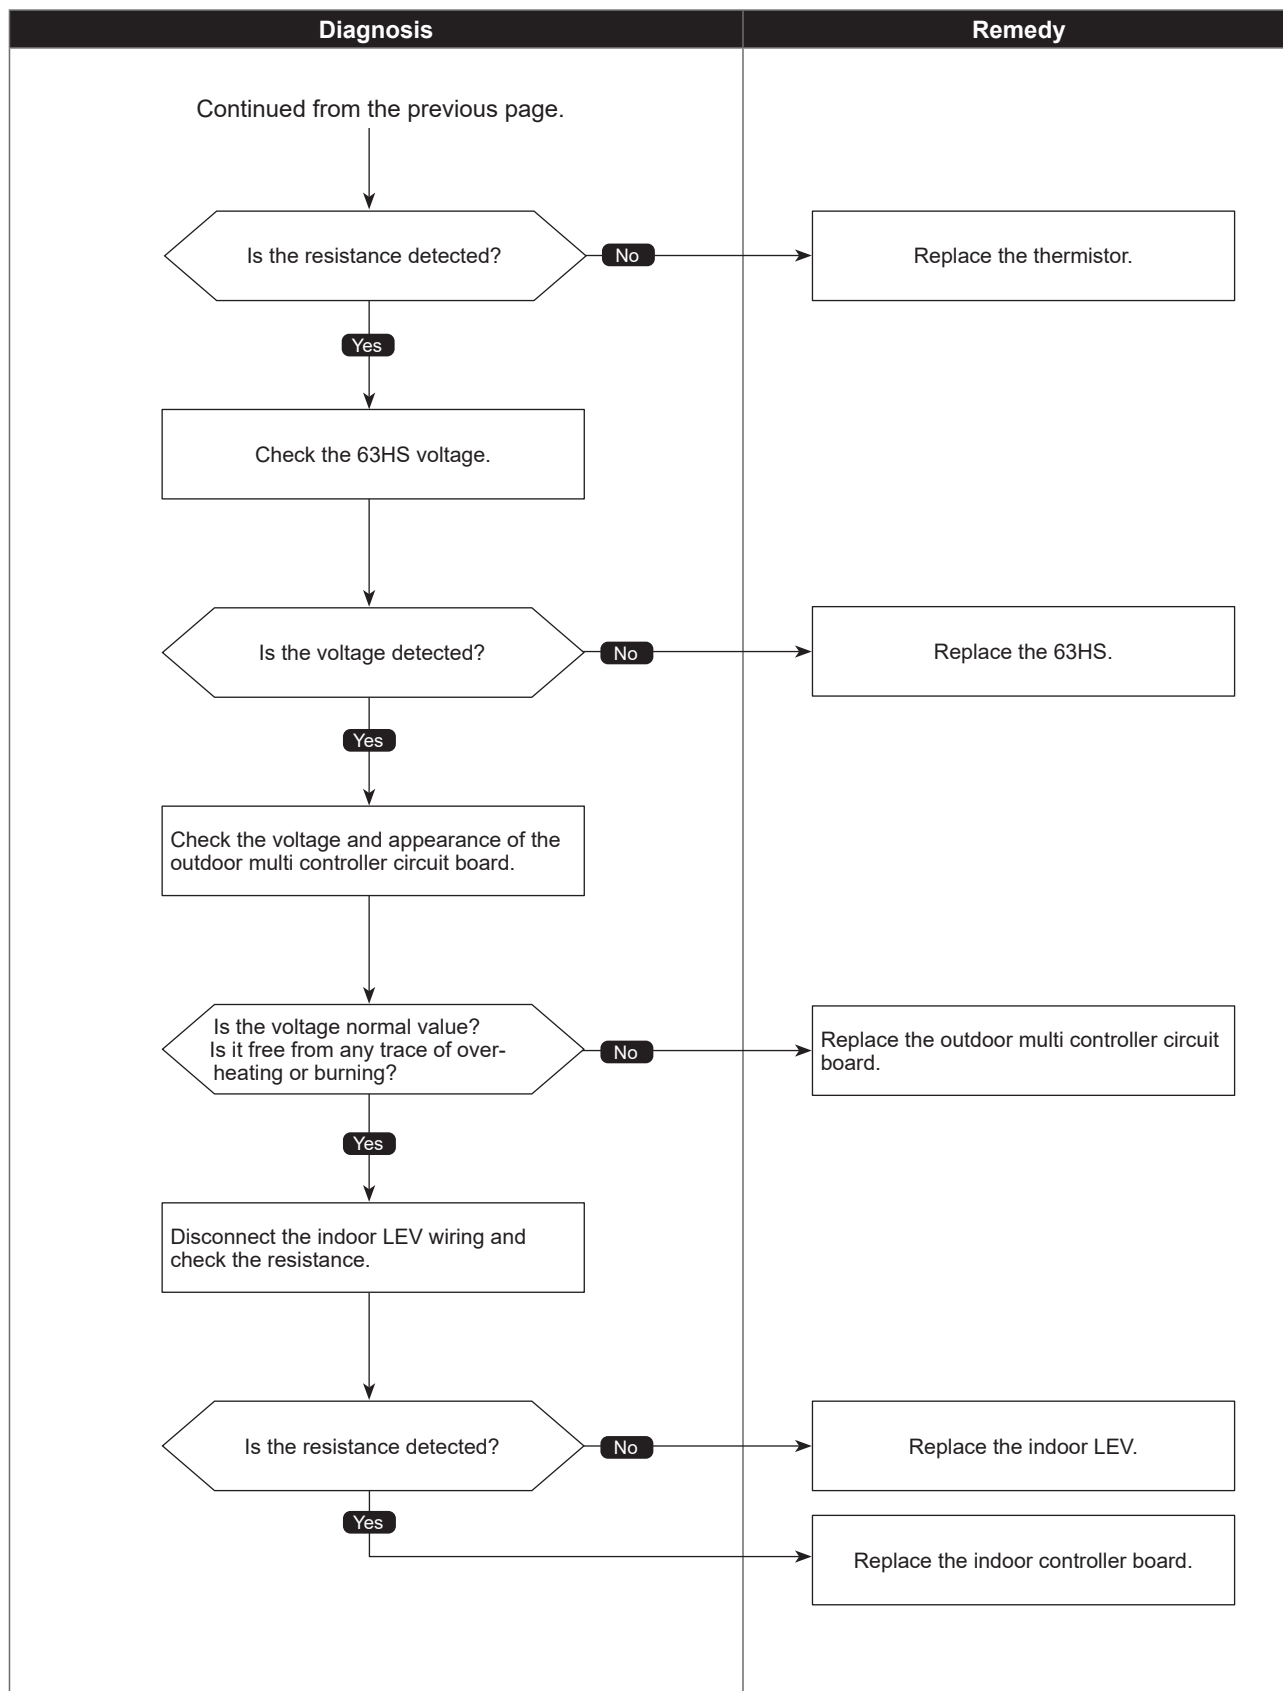

Closed valve in cooling mode

Abnormal points and detection methods	Causes and checkpoints
<p>If stop valve is closed during cooling operation.</p> <p>When both of the following temperature conditions have been satisfied for 20 minutes or more during cooling operation.</p> <ol style="list-style-type: none"> 1. TH22j-TH21j $\geq -2^{\circ}\text{C}$ 2. TH23j-TH21j $\geq -2^{\circ}\text{C}$ <p>Note: For indoor unit, the abnormality is detected if an operating unit satisfies the condition.</p>	<ol style="list-style-type: none"> ① Outdoor liquid/gas valve is closed. ② Malfunction of outdoor LEV (LEV-A)(blockage) <p>TH21: Indoor intake temperature thermistor TH22: Indoor liquid pipe temperature thermistor TH23: Indoor gas pipe temperature thermistor LEV: Linear expansion valve</p>

●Diagnosis of defects

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

Diagnosis	Remedy
<pre> graph TD Q1{{Is the outdoor stop valve (liquid/gas) fully open?}} Q1 -- No --> R1[Open the outdoor stop valve (liquid/gas) fully.] Q1 -- Yes --> P1[Disconnect the outdoor LEV wiring to check the resistance.] P1 --> Q2{{Is the resistance detected?}} Q2 -- No --> R2[Replace the outdoor LEV.] Q2 -- Yes --> R3[Replace the outdoor multi controller circuit board.] </pre>	

Check code


1503
(P6)

Freeze protection of branch box or indoor unit

Abnormal points and detection methods	Causes and checkpoints
<p>The purpose of the check code is to prevent indoor unit from freezing or dew condensation which is caused when a refrigerant keeps flowing into the unit in STOP.</p> <p>When all of the following conditions have been satisfied:</p> <ol style="list-style-type: none"> 1. The compressor is operating in COOL mode. 2. 15 minutes have passed after the startup of the compressor, or the change in the number of operating indoor units is made (including a change by turning thermo-ON/OFF). 3. After the condition 2 above is satisfied, the thermistor of indoor unit in STOP detects TH22j $\leq -5^{\circ}\text{C}$ [23°F] for 5 consecutive minutes. 	<ol style="list-style-type: none"> ① Wrong piping connection between indoor unit and branch box ② Miswiring between indoor unit and branch box ③ Miswiring of LEV in branch box or indoor unit ④ Malfunction of LEV in branch box or indoor unit

•Diagnosis of defects

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

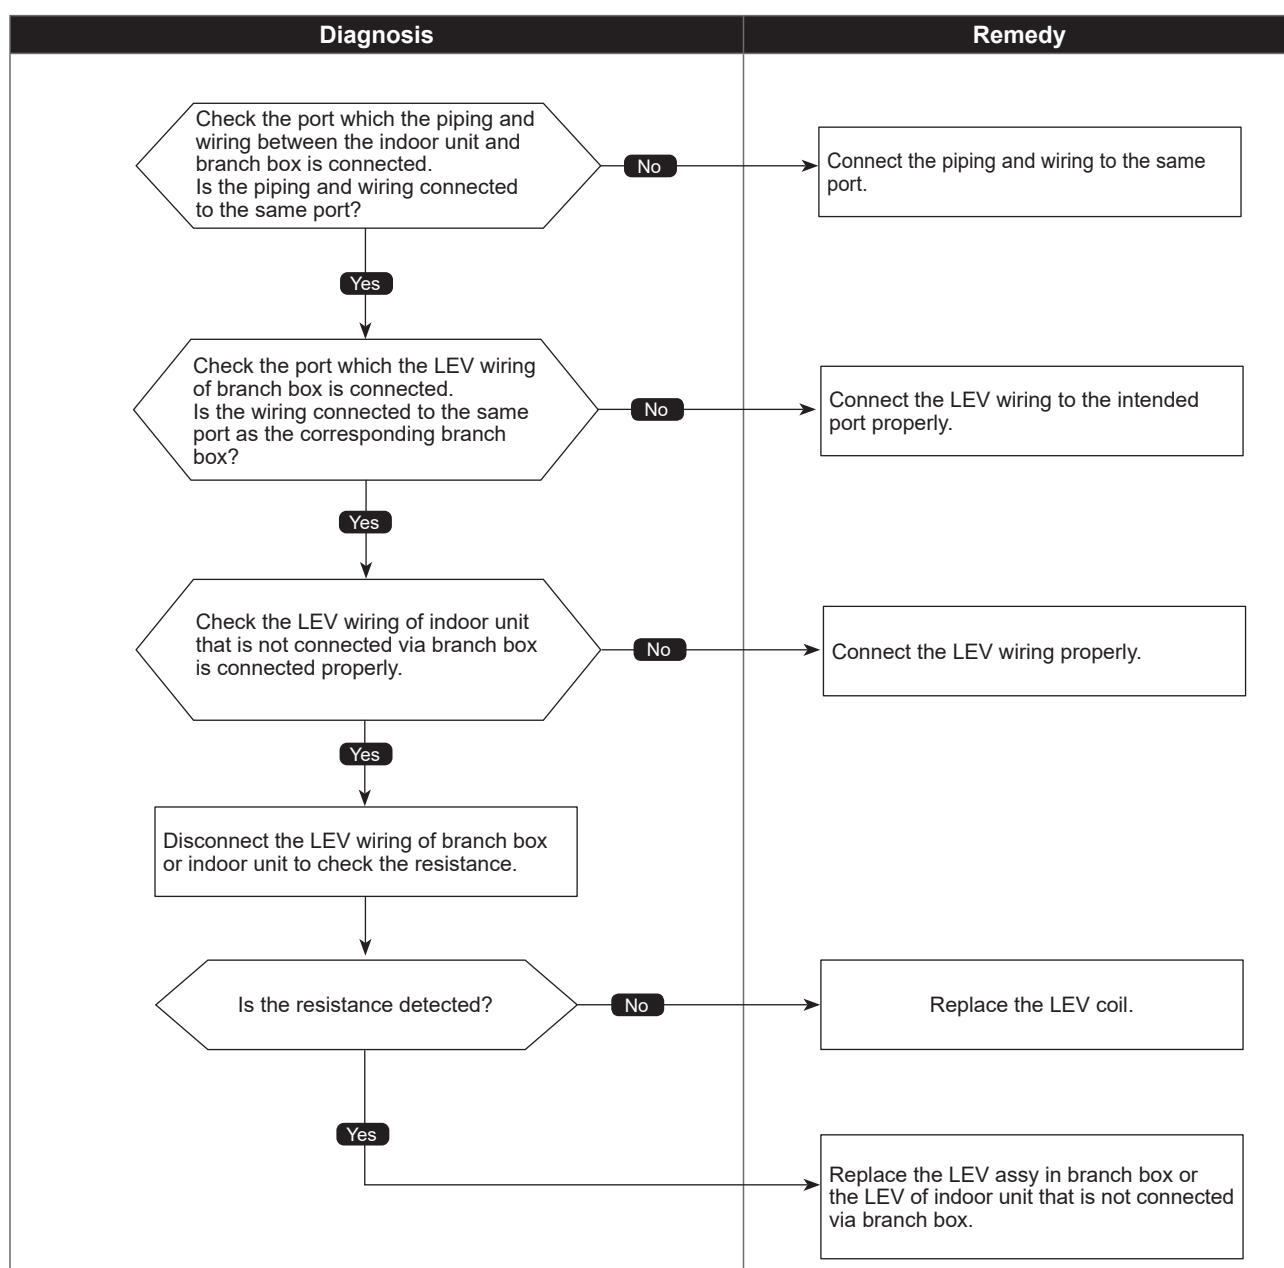

4-way valve trouble in heating mode

Abnormal points and detection methods	Causes and checkpoints
<p>If 4-way valve does not operate during heating operation.</p> <p>When any of the following temperature conditions is satisfied for 3 minutes or more during heating operation</p> <ol style="list-style-type: none"> 1. TH22j-TH21j $\leq -10^{\circ}\text{C}$ [-18°F] 2. TH23j-TH21j $\leq -10^{\circ}\text{C}$ [-18°F] 3. TH22j $\leq 3^{\circ}\text{C}$ [37.4°F] 4. TH23j $\leq 3^{\circ}\text{C}$ [37.4°F] <p>Note: For indoor unit, the abnormality is detected if an operating unit satisfies the condition.</p>	<ol style="list-style-type: none"> ① 4-way valve failure ② Disconnection or failure of 4-way valve coil ③ Clogged drain pipe ④ Disconnection or loose connection of connectors ⑤ Malfunction of input circuit on outdoor multi controller circuit board ⑥ Defective outdoor power circuit board <p>TH21: Indoor intake temperature thermistor (RT11 or TH1) TH22: Indoor liquid pipe temperature thermistor (RT13 or TH2) TH23: Indoor gas pipe temperature thermistor (TH-A to E)</p>

●Diagnosis of defects

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

Diagnosis	Remedy
<p>Is the connector for outdoor multi controller circuit board or 4-way valve coil disconnected or loose?</p> <p>Yes</p> <p>No</p> <p>Disconnect the connector for outdoor multi controller circuit board or 4-way valve coil to check the resistance.</p> <p>Is the resistance detected?</p> <p>No</p> <p>Yes</p> <p>Please refer to "8-6. HOW TO CHECK THE PARTS" for ohm values.</p> <p>Check the voltage and appearance of the outdoor multi controller circuit board.</p> <p>Is the detected voltage normal? Is it free from any trace of over-heating or burning?</p> <p>No</p> <p>Yes</p>	<p>Reconnect the connector or connect it tightly.</p> <p>Replace the 4-way valve coil.</p> <p>Replace the outdoor multi controller circuit board.</p> <p>Replace the 4-way valve.</p>


Compressor current interruption (Locked compressor)

Chart 1 of 2

Abnormal points and detection methods	Causes and checkpoints
If overcurrent of compressor is detected within 30 seconds since the compressor starts operating.	① Closed stop valve ② Decrease of power supply voltage ③ Looseness, disconnection or converse of compressor wiring connection ④ Incorrect DIP-SW setting of model selection on the outdoor controller board ⑤ Defective compressor ⑥ Defective outdoor power circuit board

●Diagnosis of defects

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

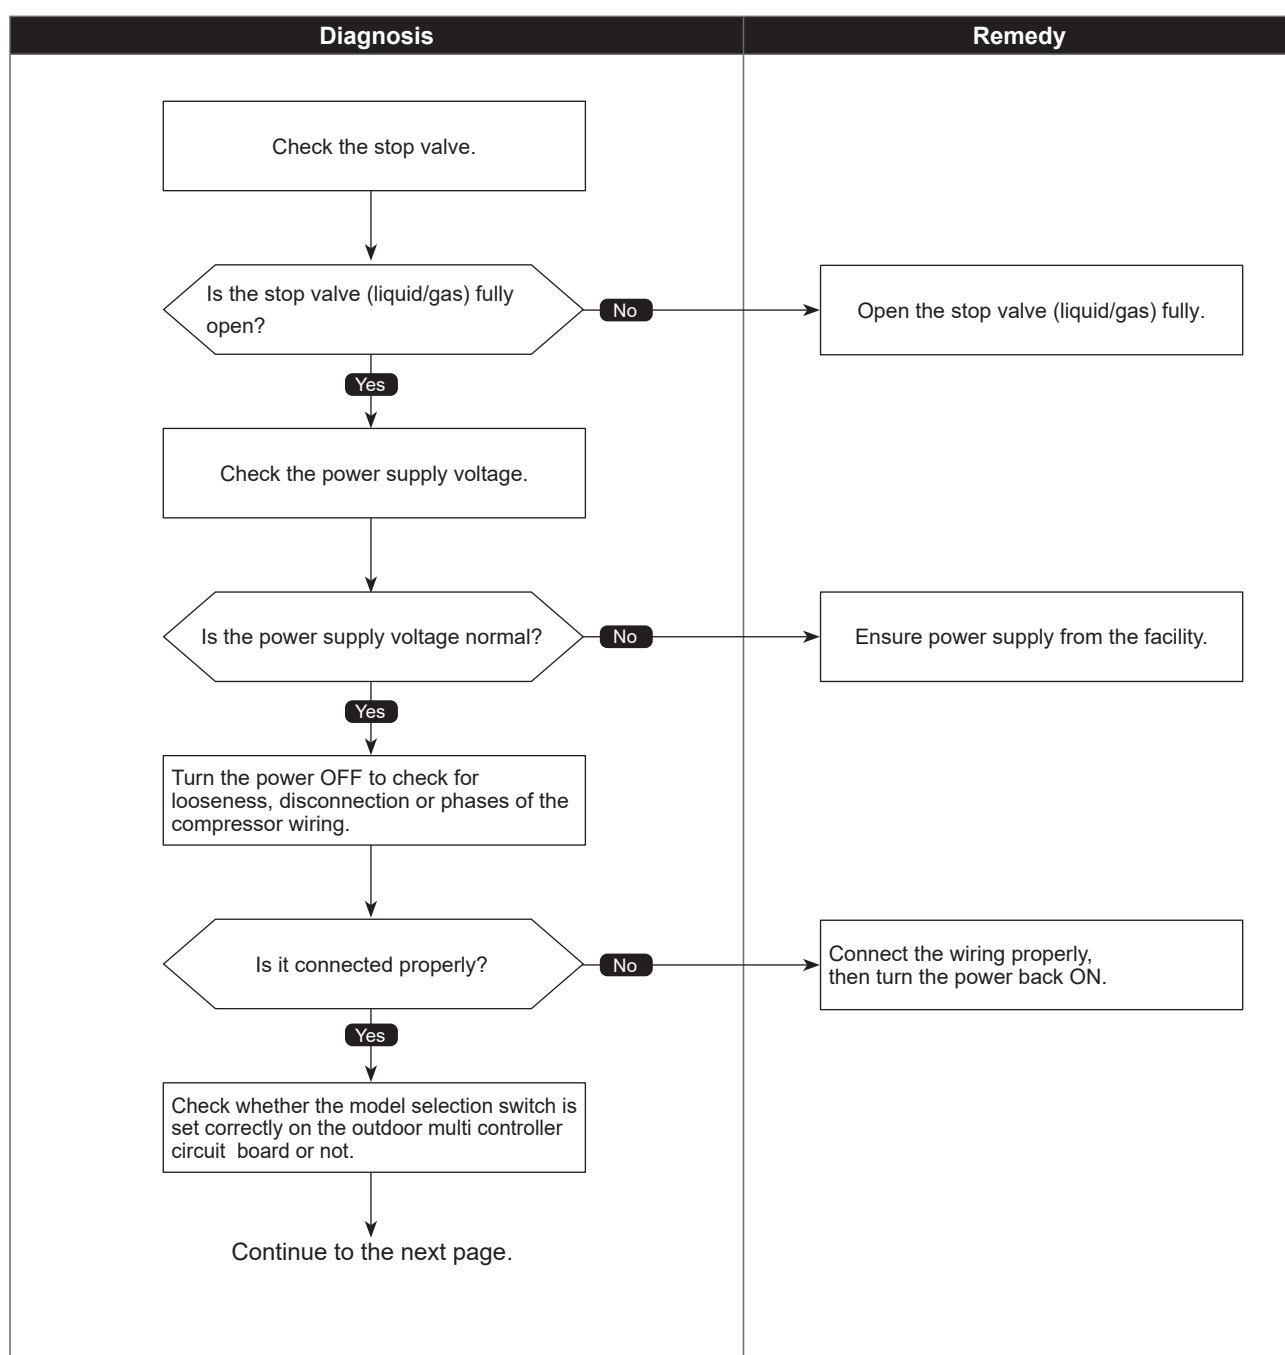


Compressor current interruption (Locked compressor)

Chart 2 of 2

●Diagnosis of defects

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

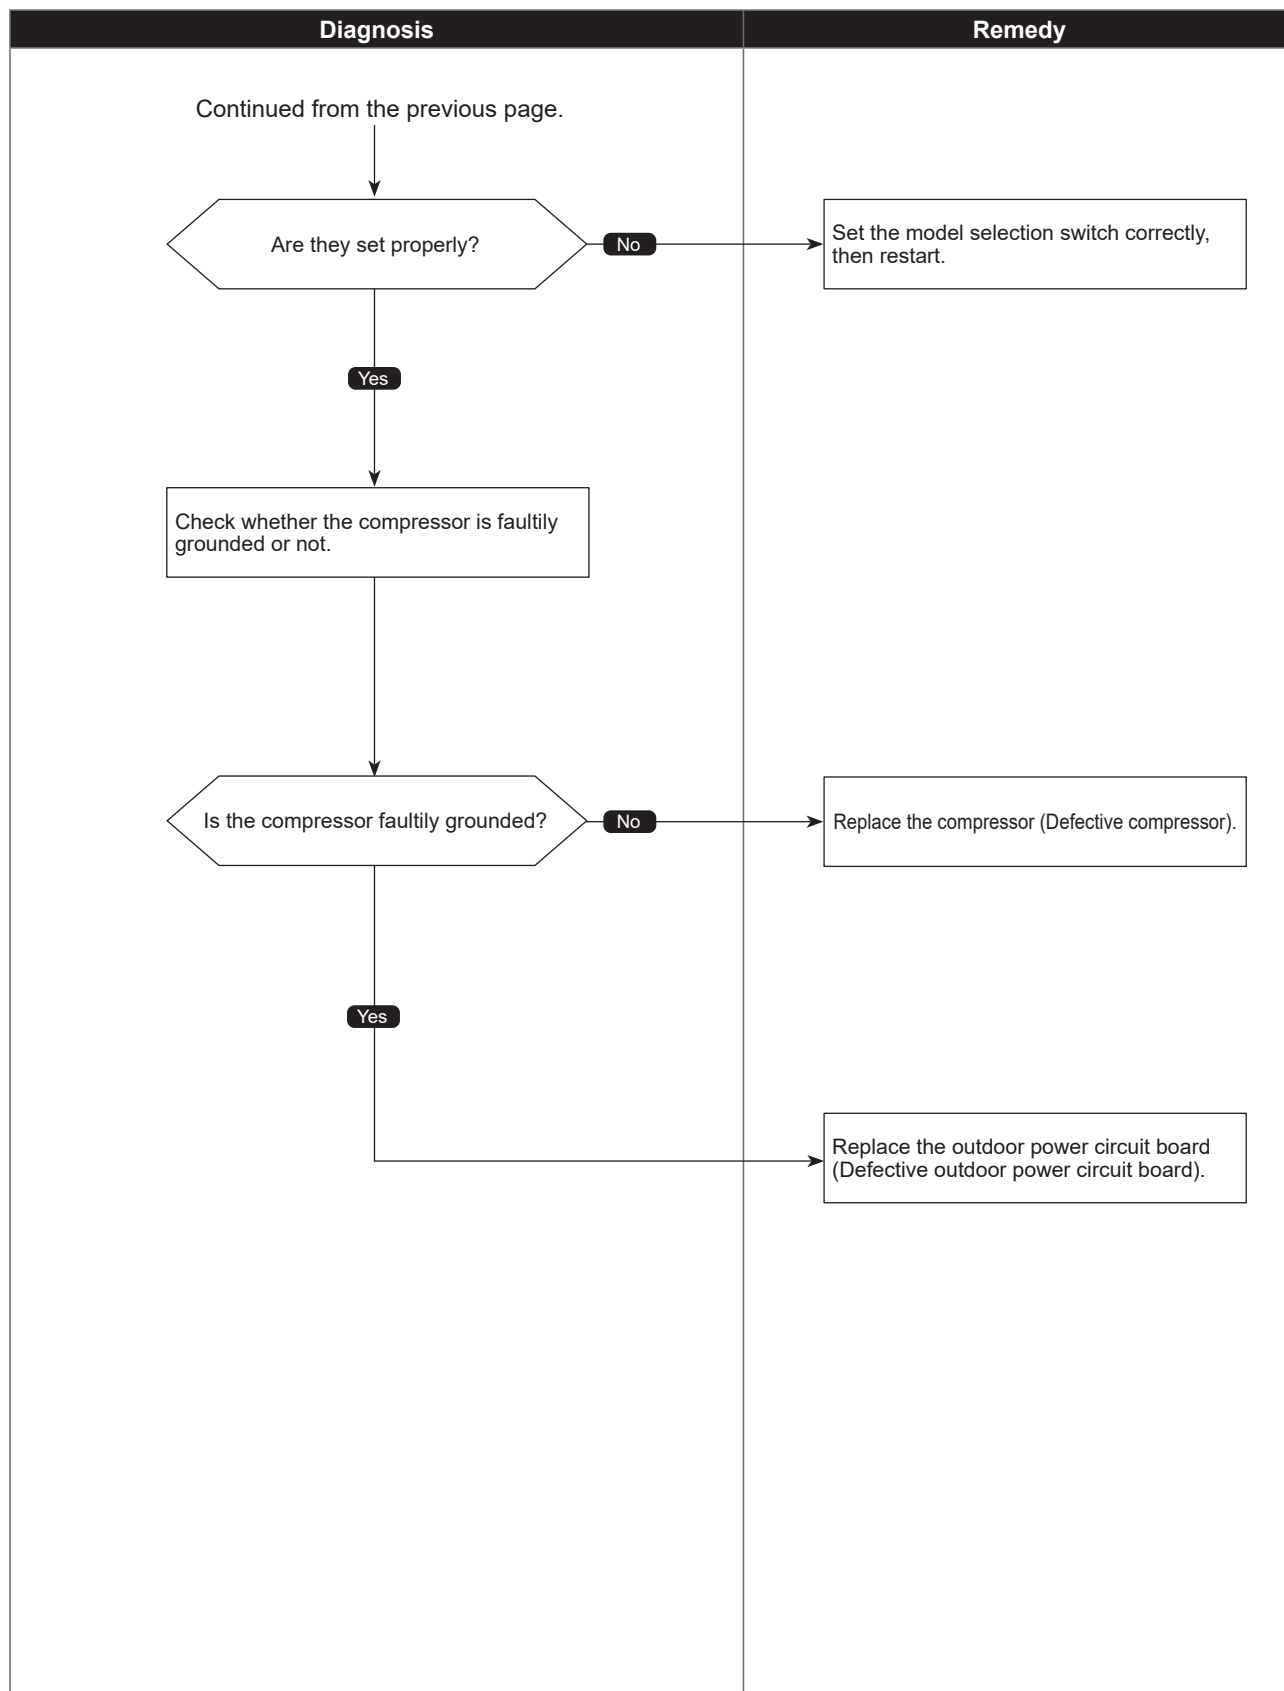


Compressor overcurrent interruption/failure in 12 VDC power supply circuit on power circuit board

Chart 1 of 2

Abnormal points and detection methods	Causes and checkpoints
① If overcurrent of compressor is detected after 30 seconds since the compressor starts operating. ② If 12 VDC power is not supplied from the 12 VDC supply circuit on the power circuit board.	① Closed outdoor stop valve ② Decrease of power supply voltage ③ Looseness, disconnection or reverse phase of compressor wiring connection ④ Malfunction of indoor/outdoor fan ⑤ Short-cycle of indoor/outdoor unit ⑥ Model selection error upon replacement of outdoor multi controller circuit board ⑦ Malfunction of input circuit on outdoor multi controller circuit board ⑧ Defective compressor ⑨ Defective outdoor power circuit board

●Diagnosis of defects

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

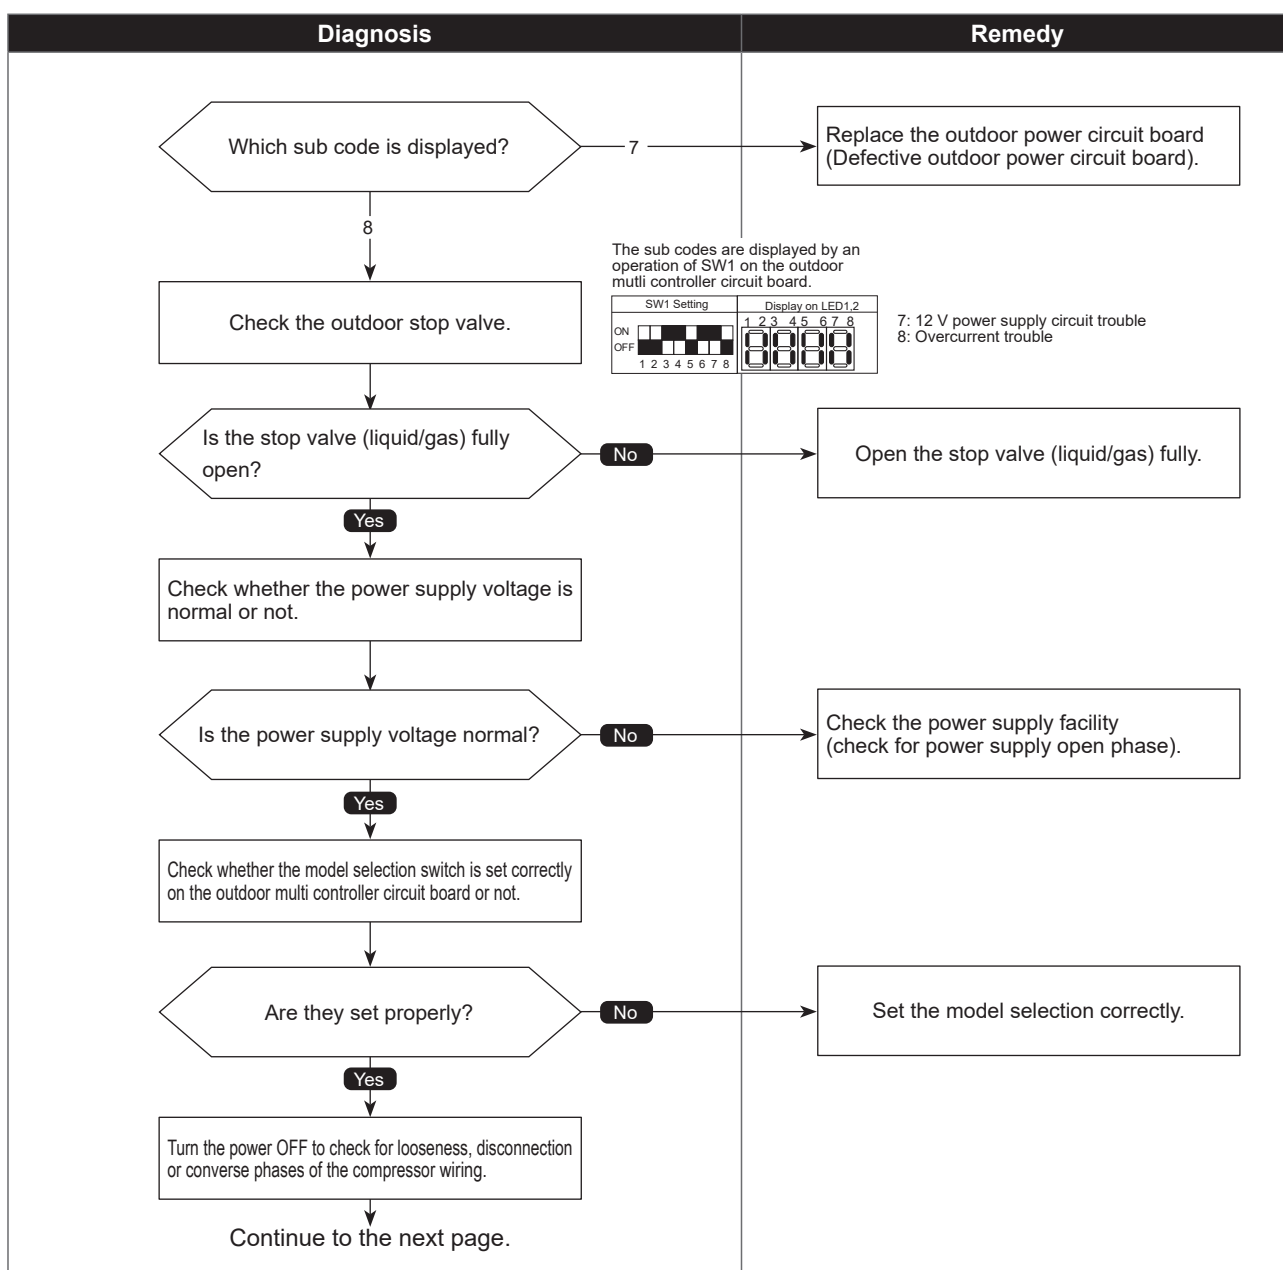


Compressor overcurrent interruption/failure in 12 VDC power supply circuit on power circuit board

Chart 2 of 2

•Diagnosis of defects

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

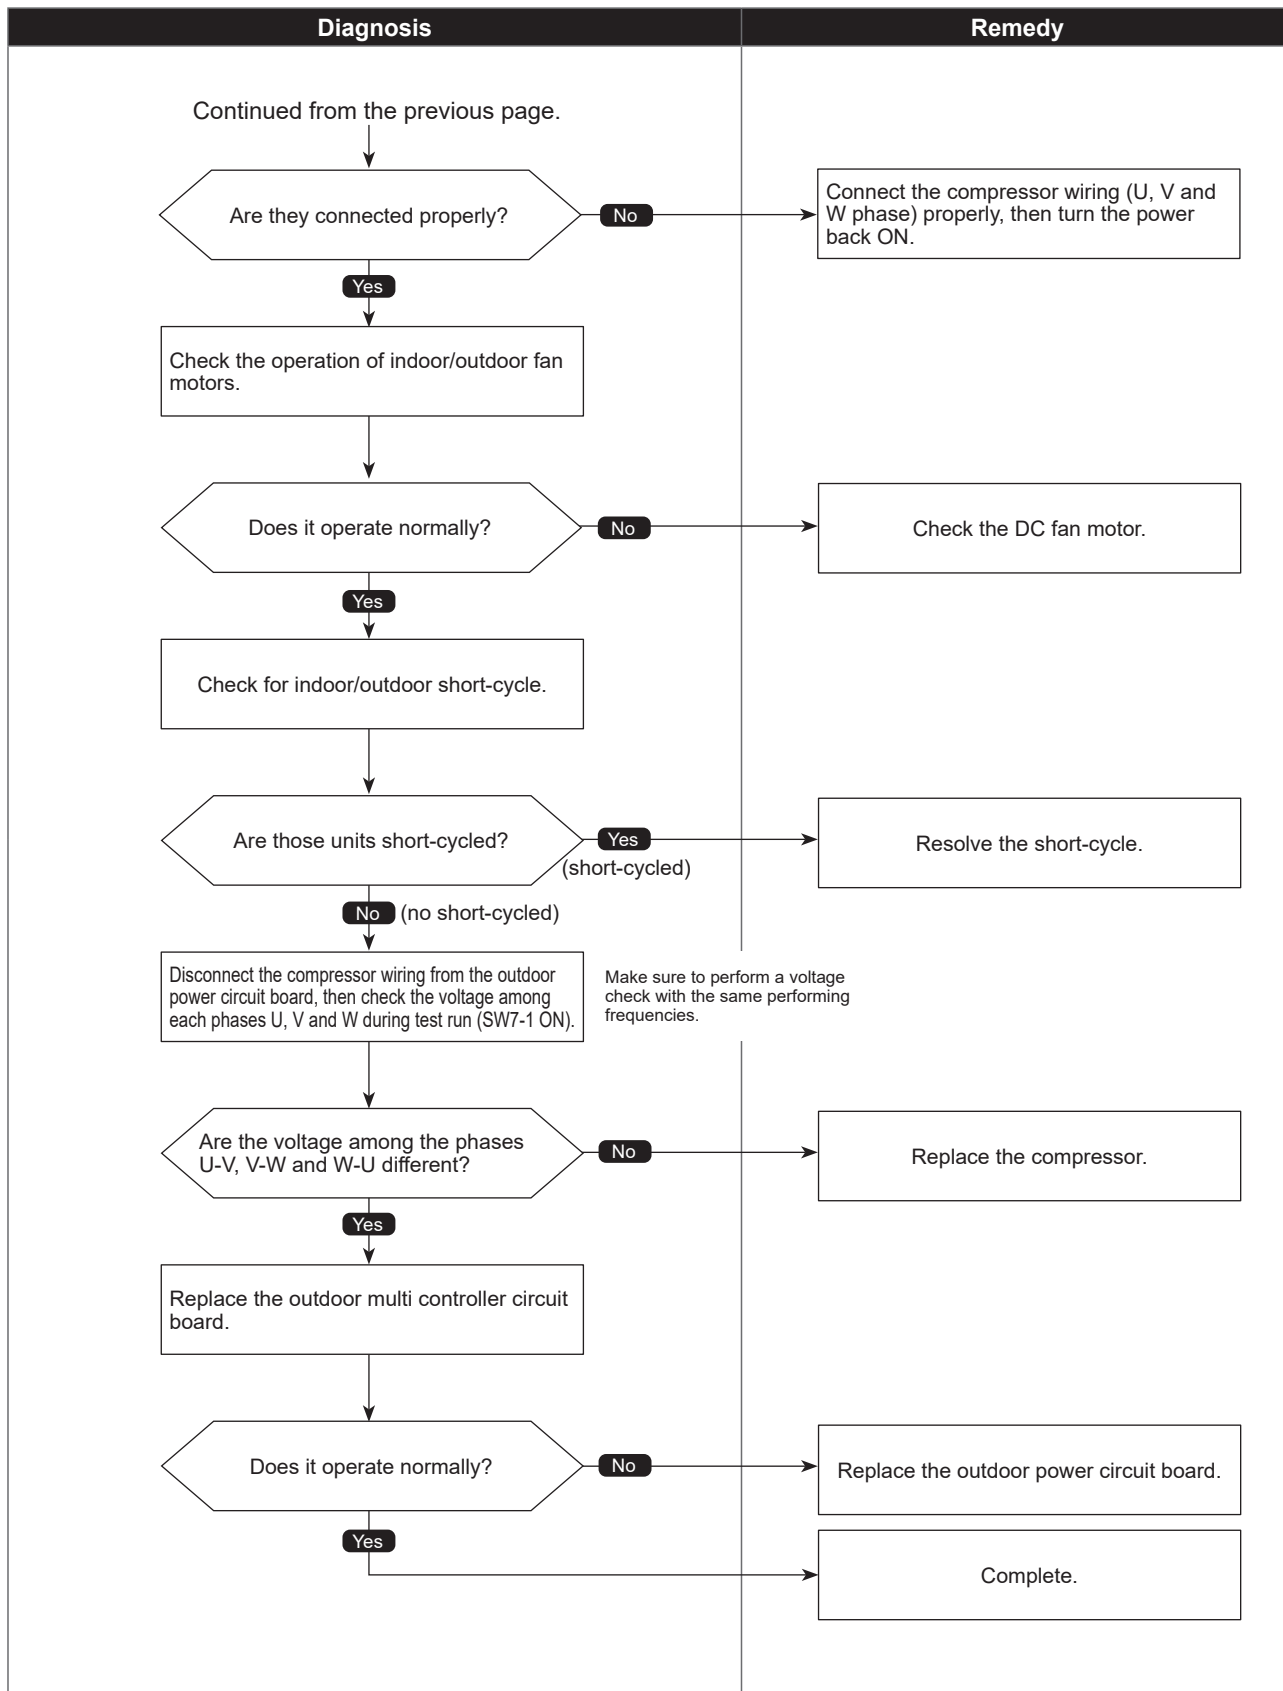

Voltage shortage /Overvoltage/PAM error/L1 open phase/ Primary current sensor error/Power synchronization signal error

Chart 1 of 2


Abnormal points and detection methods	Causes and checkpoints
<p>If any of following symptoms are detected;</p> <ul style="list-style-type: none"> ●Decrease of DC bus voltage to 200 V (Single-phase), 350 V (3-phase) ●Increase of DC bus voltage to 400 V (Single-phase), 760 V (3-phase) ●DC bus voltage stays at 310 V or less for consecutive 30 seconds when the operational frequency is over 20 Hz. ●When any of following conditions is satisfied while the detections value of primary current is 0.1 A or less. <ul style="list-style-type: none"> 1. The operational frequency is 40 Hz or more. 2. The compressor current is 6 A or more. 	<ul style="list-style-type: none"> ① Decrease/increase of power supply voltage ② L1 open-phase (3-phase only) ③ Primary current sensor failure ④ Disconnection of compressor wiring ⑤ Malfunction of 52C relay ⑥ Defective outdoor power circuit board ⑦ Malfunction of 52C relay driving circuit on outdoor multi controller circuit board ⑧ Disconnection of CN5 (3-phase only) ⑨ Disconnection of CN2 ⑩ Malfunction of primary current detecting circuit on outdoor power circuit board ⑪ Malfunction of resistor connected to 52C relay on outdoor power circuit board (3-phase only)

- Diagnosis of defects
Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

Single phase: single phase model

3-phase: three phase for wire model

The black square (■) indicates a switch position.

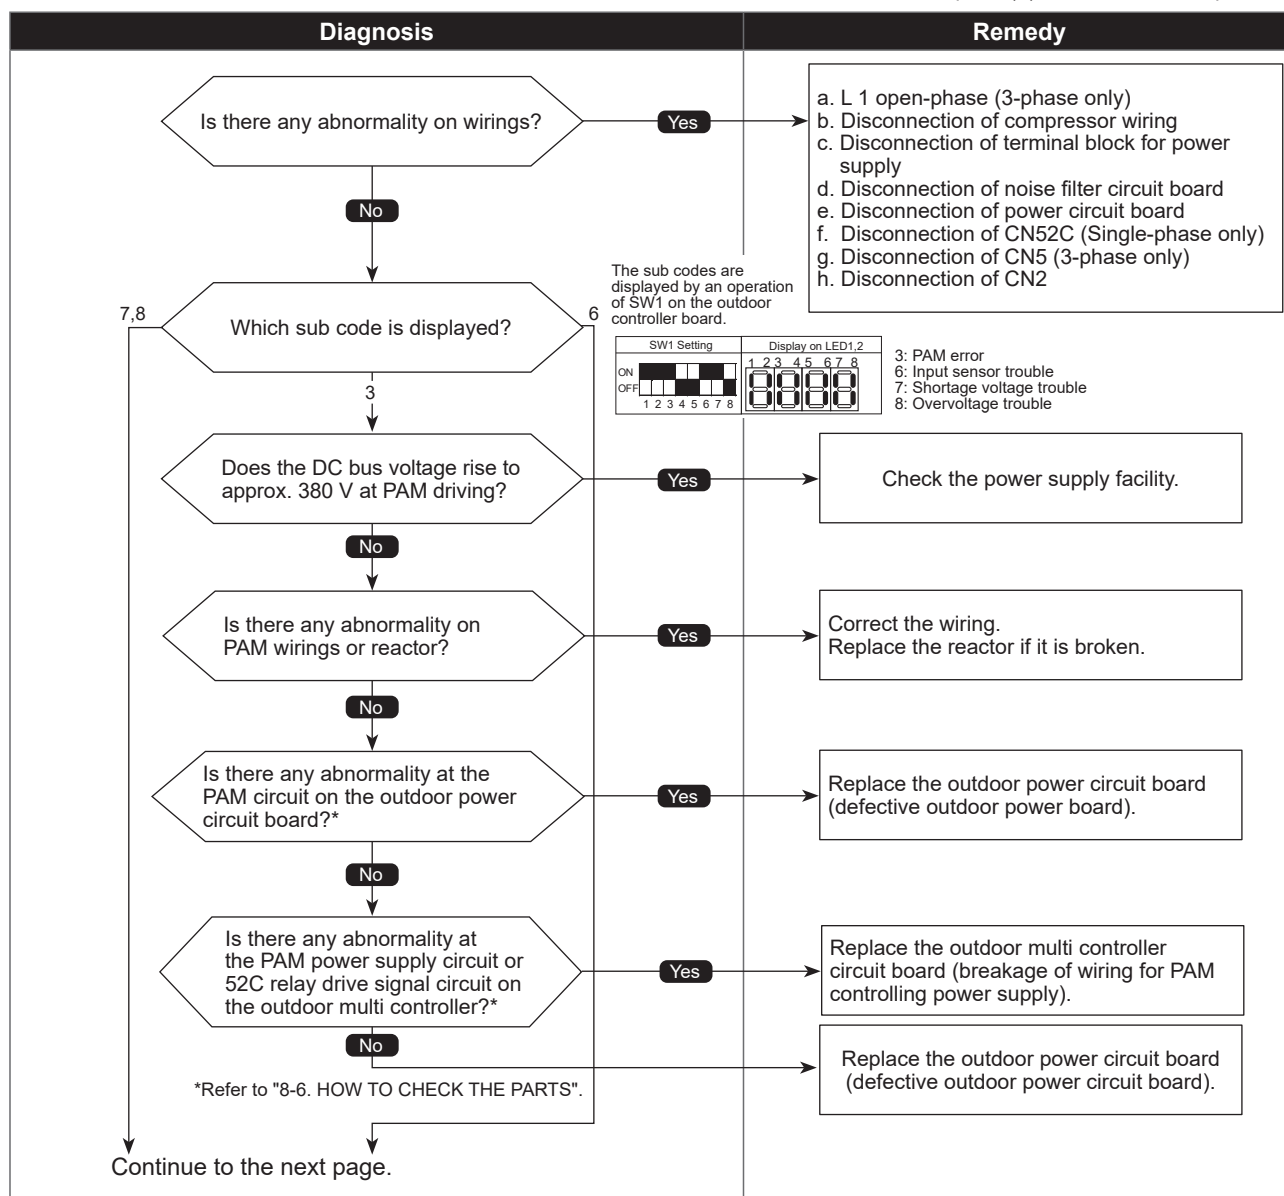


Voltage shortage/overvoltage/PAM error/L1 open phase/primary current sensor error/power synchronization signal error

Chart 2 of 2

●Diagnosis of defects

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

The black square (■) indicates a switch position.

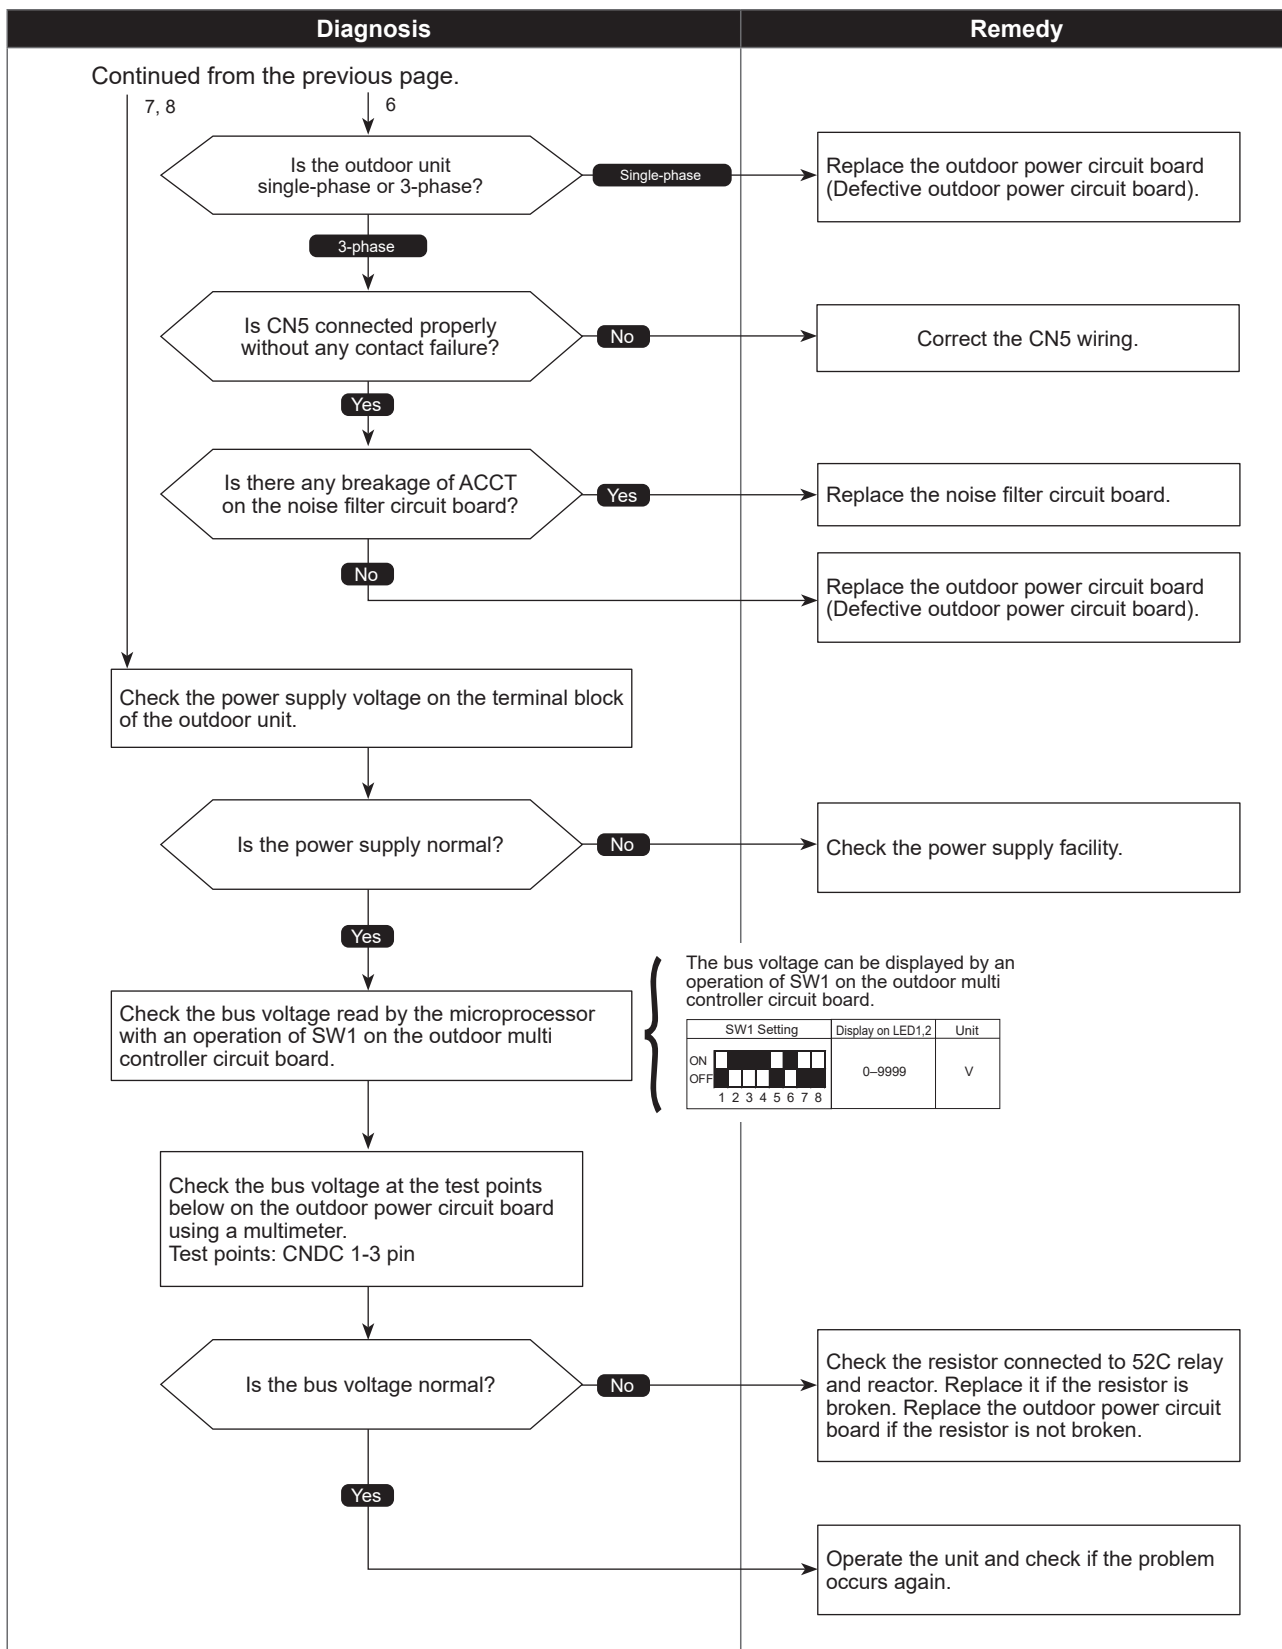


Heat sink temperature trouble

Abnormal points and detection methods	Causes and checkpoints
<p>If TH8 detects a temperature outside the specified range during compressor operation.</p> <p>TH8: Thermistor <Heat sink></p>	<p>① Blocked outdoor fan</p> <p>② Malfunction of outdoor fan motor</p> <p>③ Blocked airflow path</p> <p>④ Rise of ambient temperature</p> <p>⑤ Characteristic defect of thermistor</p> <p>⑥ Malfunction of input circuit on outdoor power circuit board</p> <p>⑦ Malfunction of outdoor fan driving circuit</p>

●Diagnosis of defects

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

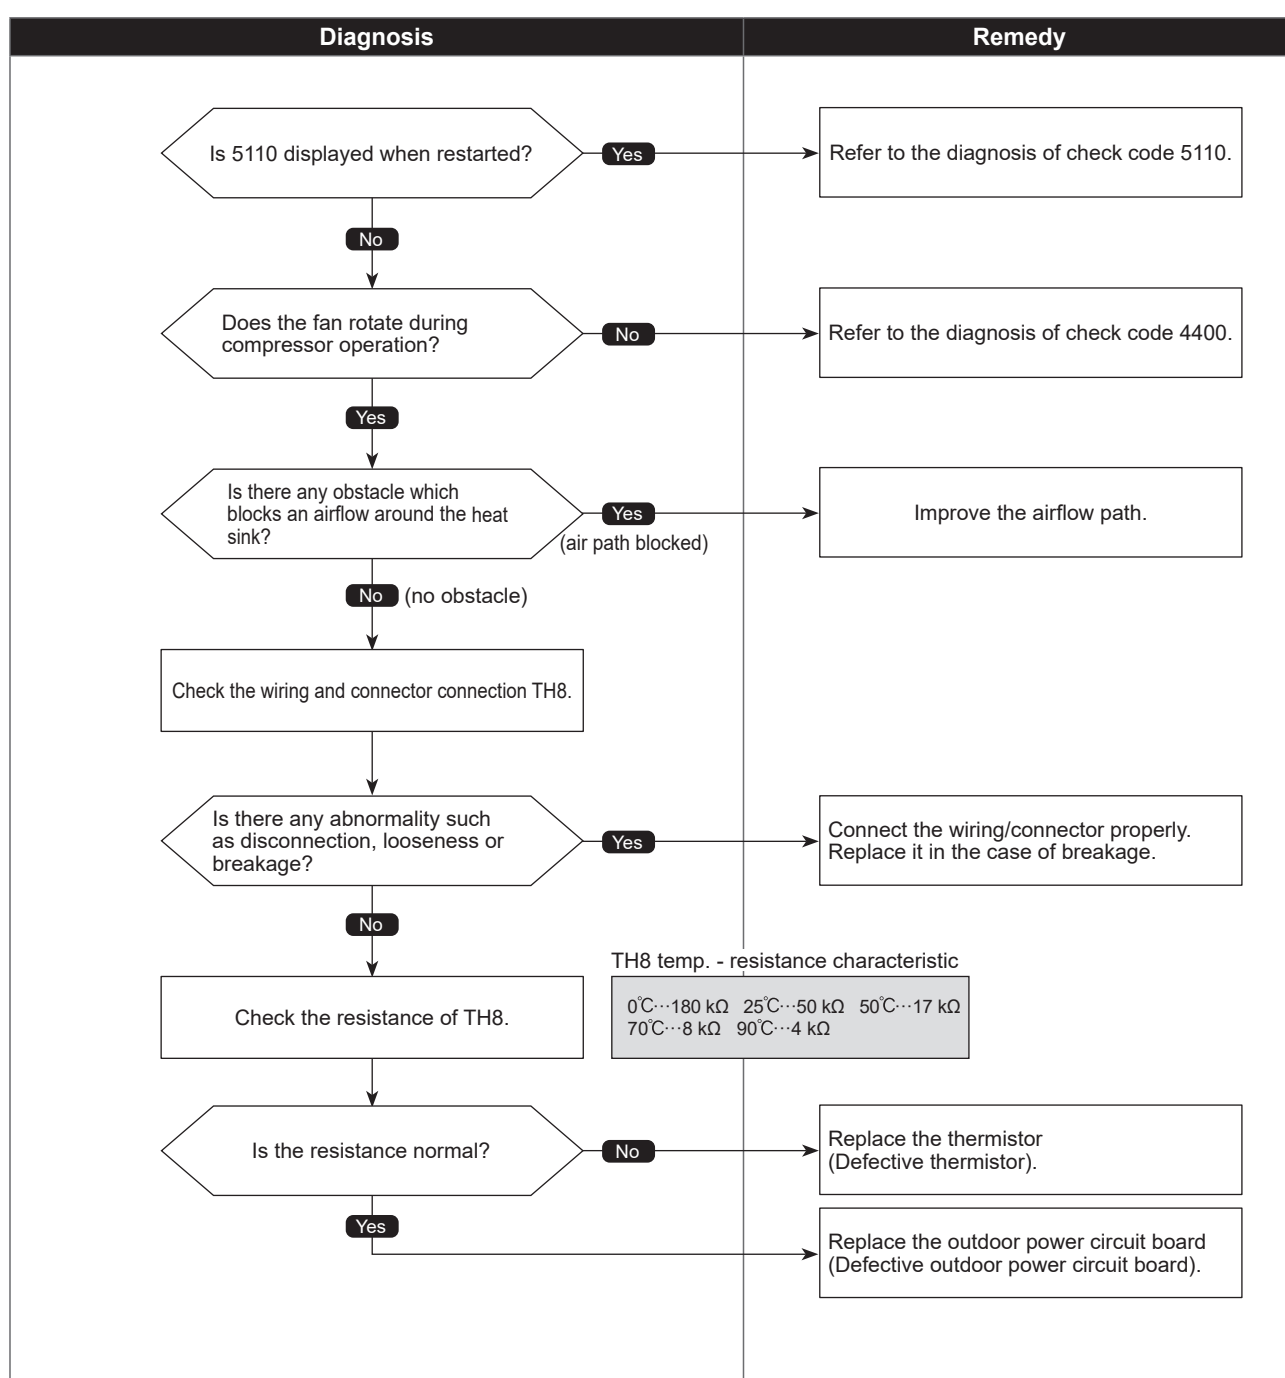

Power module trouble or overcurrent trouble

Abnormal points and detection methods	Causes and checkpoints
If overcurrent of DC bus or compressor is detected 30 seconds after the compressor starts operating. To determine the source of abnormality, either the compressor or the power module, drive the power module forcibly.	① Closed outdoor stop valve ② Decrease of power supply voltage ③ Disconnection, looseness or conversed connection of compressor wiring ④ Defective compressor ⑤ Defective outdoor power circuit board

●Diagnosis of defects

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.


Diagnosis	Remedy
<p>Check the outdoor stop valve.</p> <p>Is the stop valve (liquid/gas) fully open?</p> <p>Yes</p> <p>Check whether the power supply voltage is normal or not.</p> <p>Is the power supply voltage normal?</p> <p>Yes</p> <p>Turn the power OFF to check for looseness, disconnection or phases of the compressor wiring.</p> <p>Are the wirings normal?</p> <p>Yes</p> <p>Disconnect the wiring to check the power module.</p> <p>Does it operate normally?</p> <p>Yes</p>	<p>Open the stop valve (liquid/gas) fully.</p> <p>Ensure power supply from facility.</p> <p>Connect the compressor wiring (U, V and W phase) properly, then turn the power back ON.</p> <p>Replace the outdoor power circuit board or outdoor multi controller circuit board (Defective power circuit board).</p> <p>Replace the compressor (Defective compressor).</p>

Fan trouble (Outdoor unit)

Abnormal points and detection methods	Causes and checkpoints
If no rotational frequency is detected, or detected a value outside the specified range during fan motor operation.	① Malfunction of fan motor ② Disconnection of CNF connector ③ Defective outdoor multi controller circuit board

●Diagnosis of defects

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

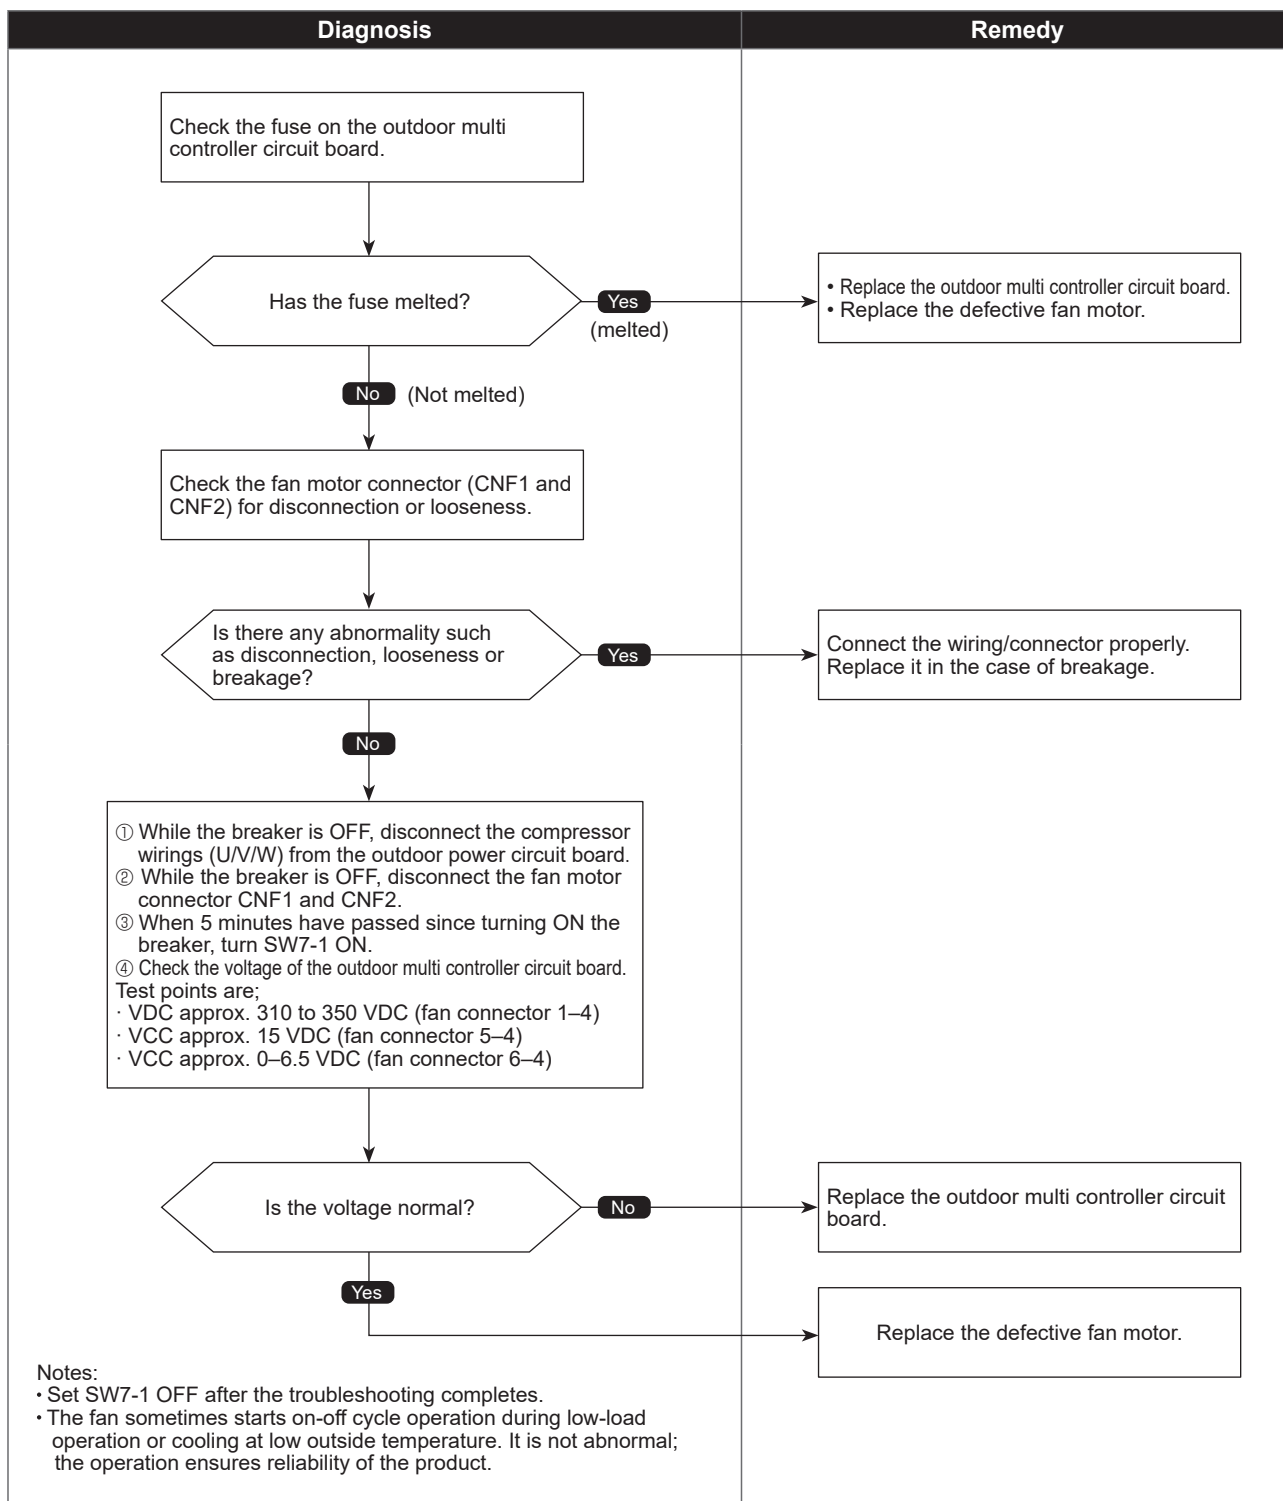

Compressor temperature thermistor (TH4) open/short







<Detected in outdoor unit>

Abnormal points and detection methods	Causes and checkpoints
<p>If TH4 detects to be open/short. (The open/short detection is disabled for 10 minutes after compressor starts, during defrosting operation, or for 10 minutes after returning from the defrosting operation.) Open: 3°C or less Short: 217°C or more TH4: Thermistor <Compressor></p>	<p>① Disconnection or contact failure of connectors ② Characteristic defect of thermistor ③ Defective outdoor multi controller circuit board</p>

●Diagnosis of defects

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

The black square (■) indicates a switch position.

Diagnosis	Remedy												
<div>Check the wiring and connector connection of TH4.</div> <div>Is there any abnormality such as disconnection, looseness or breakage?</div> <div>No</div> <div>Disconnect the connector to check the resistance of TH4 using a multimeter.</div> <div>Is the detected resistance normal?</div> <div>No</div> <div>Check the temperature of TH4.</div> <div>Is the detected temperature normal?</div> <div>Yes</div>	<div>Connect the wiring/connector properly. Replace the connector in the case of breakage.</div> <div>Replace the thermistor.</div> <div><div>The detected temperature of TH4 can be displayed by an operation of SW1 on the outdoor multi controller circuit board.</div><table><tr><th>SW1 Setting</th><th>Display on LED1, 2</th><th>Unit</th></tr><tr><td>ON</td><td></td><td></td></tr><tr><td>OFF</td><td></td><td></td></tr><tr><td></td><td>1 2 3 4 5 6 7 8</td><td></td></tr></table></div> <div>Replace the outdoor multi controller circuit board (Malfunction of thermistor circuit).</div> <div>No abnormality (A connector contact failure is suspected.)</div>	SW1 Setting	Display on LED1, 2	Unit	ON			OFF				1 2 3 4 5 6 7 8	
SW1 Setting	Display on LED1, 2	Unit											
ON													
OFF													
	1 2 3 4 5 6 7 8												

Suction pipe temperature thermistor (TH6) open/short

<Detected in outdoor unit>

Abnormal points and detection methods	Causes and checkpoints
<p>If TH6 detects to be open/short. (The open/short detection is disabled during 10 seconds to 10 minutes after compressor starts, during defrosting operation, or for 10 minutes after returning from the defrosting operation.) Open: -40°C or less Short: 90°C or more TH6: Thermistor <Suction pipe></p>	<p>① Disconnection or contact failure of connectors ② Characteristic defect of thermistor ③ Defective outdoor multi controller circuit board</p>

●Diagnosis of defects

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

The black square (■) indicates a switch position.

Diagnosis	Remedy
<p>Check the wiring and connector connection of TH6.</p>	
<p>Is there any abnormality such as disconnection, looseness or breakage?</p>	<p>Yes → Connect the wiring/connector properly. Replace it in the case of breakage.</p>
<p>No</p> <p>Disconnect the connector to check the resistance of TH6 using a multimeter.</p>	
<p>Is the detected resistance normal?</p>	<p>No → Replace the thermistor.</p>
<p>Yes</p> <p>Check the temperature of TH6.</p>	
<p>Is the detected temperature normal?</p>	<p>No → Replace the outdoor multi controller circuit board (Malfunction of thermistor circuit).</p>
<p>Yes</p>	<p>No abnormality (A connector contact failure is suspected.)</p>

The detected temperature of TH6 can be displayed by an operation of SW1 on the outdoor multi controller circuit board.

SW1 Setting	Display on LED1,2	Unit
ON	1 2 3 4 5 6 7 8	-99.9~999.9 °C
OFF		


Outdoor liquid pipe temperature thermistor (TH3) open/short

Abnormal points and detection methods	Causes and checkpoints
<p>If TH3 detects to be open/short. (The open/short detection is disabled during 10 seconds to 10 minutes after compressor starts, during defrosting operation, or for 10 minutes after returning from the defrosting operation.) Open: -40°C or less Short: 90°C or more TH3: Thermistor <Outdoor liquid pipe></p>	<p>① Disconnection or contact failure of connectors ② Characteristic defect of thermistor ③ Defective outdoor multi controller circuit board</p>

●Diagnosis of defects

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

The black square (■) indicates a switch position.

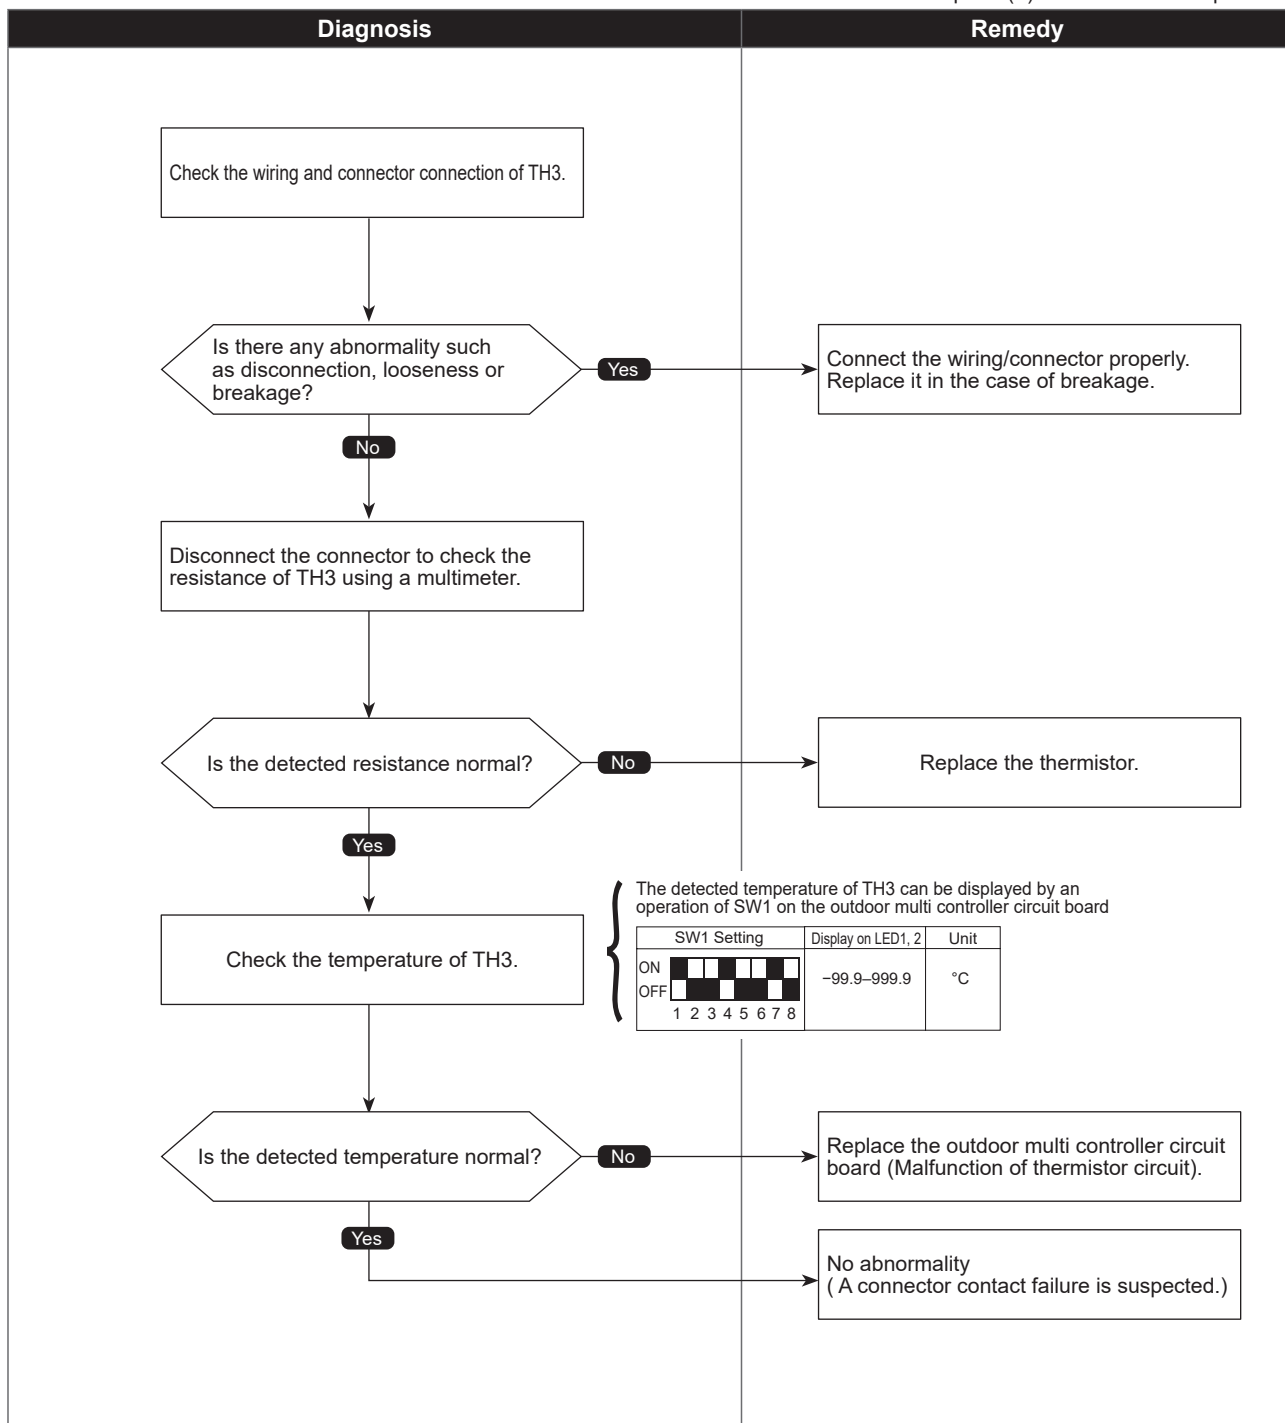


Ambient temperature thermistor (TH7) open/short

Abnormal points and detection methods	Causes and checkpoints
If TH7 detects to be open/short. Open: -40°C or less Short: 90°C or more TH7: Thermistor <Ambient>	① Disconnection or contact failure of connectors ② Characteristic defect of thermistor ③ Defective outdoor multi controller circuit board

●Diagnosis of defects

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

The black square (■) indicates a switch position.

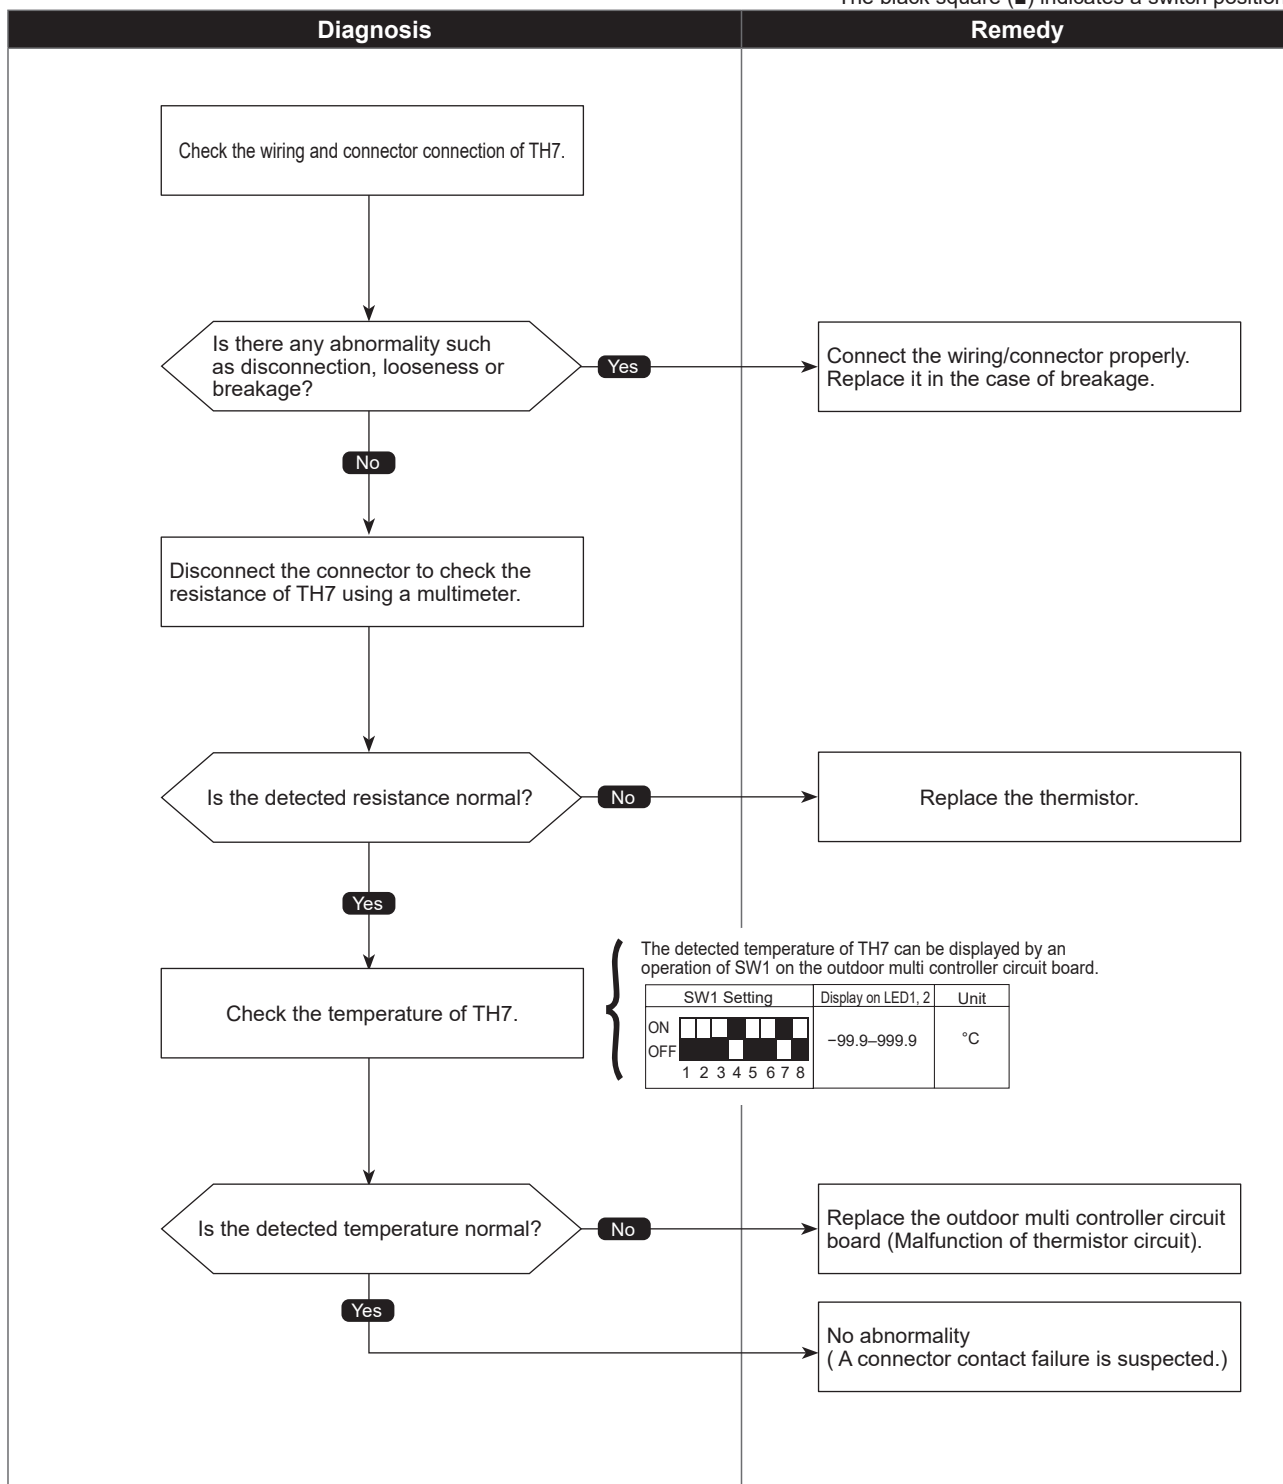


HIC pipe temperature thermistor (TH2) open/short

Abnormal points and detection methods	Causes and checkpoints
If TH2 detects to be open/short. Open: -40°C or less Short: 90°C or more TH2: Thermistor <HIC pipe>	① Disconnection or contact failure of connectors ② Characteristic defect of thermistor ③ Defective outdoor multi controller circuit board

●Diagnosis of defects

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

The black square (■) indicates a switch position.

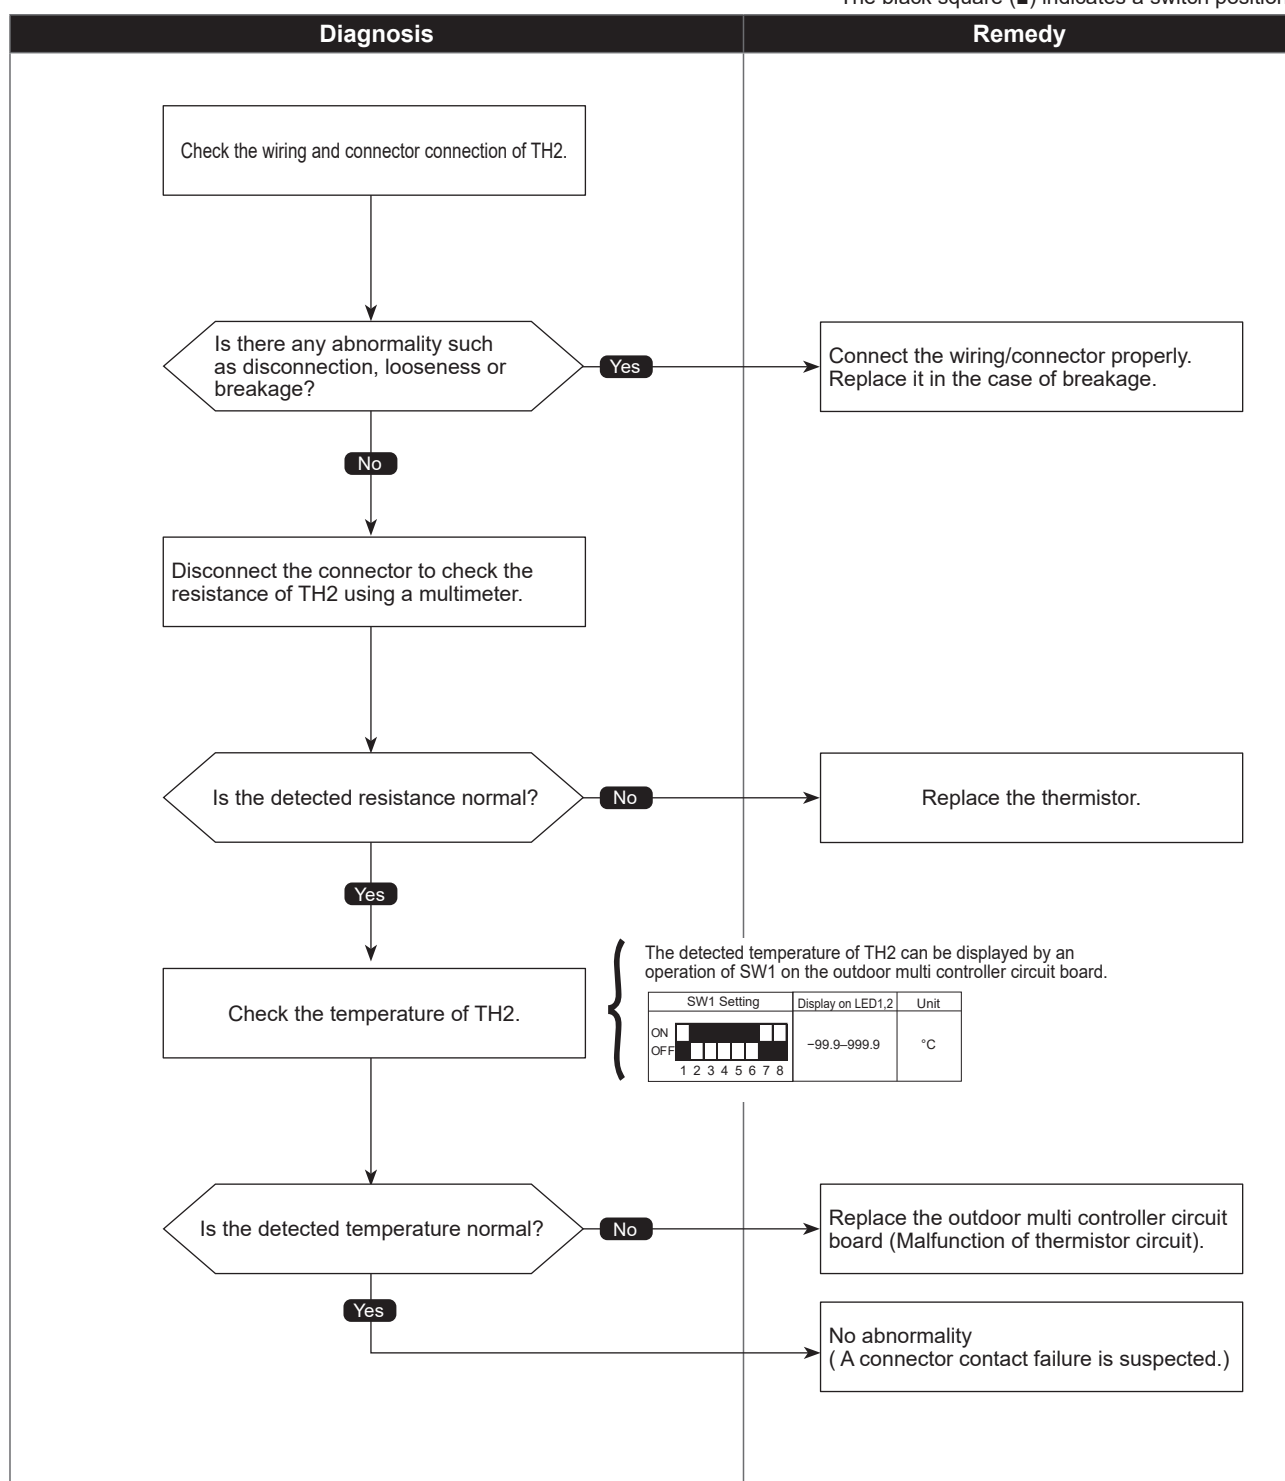


Heat sink temperature thermistor(TH8) open/short

Abnormal points and detection methods	Causes and checkpoints
<p>If TH8 (Internal thermistor) detects to be open/short.</p> <p>Open: -34.8°C or less</p> <p>Short: 102°C or more</p> <p>TH8: Thermistor <Heat sink></p>	<p>① Disconnection or contact failure of connectors</p> <p>② Characteristic defect of thermistor</p> <p>③ Defective outdoor multi controller circuit board</p>

●Diagnosis of defects

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

The black square (■) indicates a switch position.

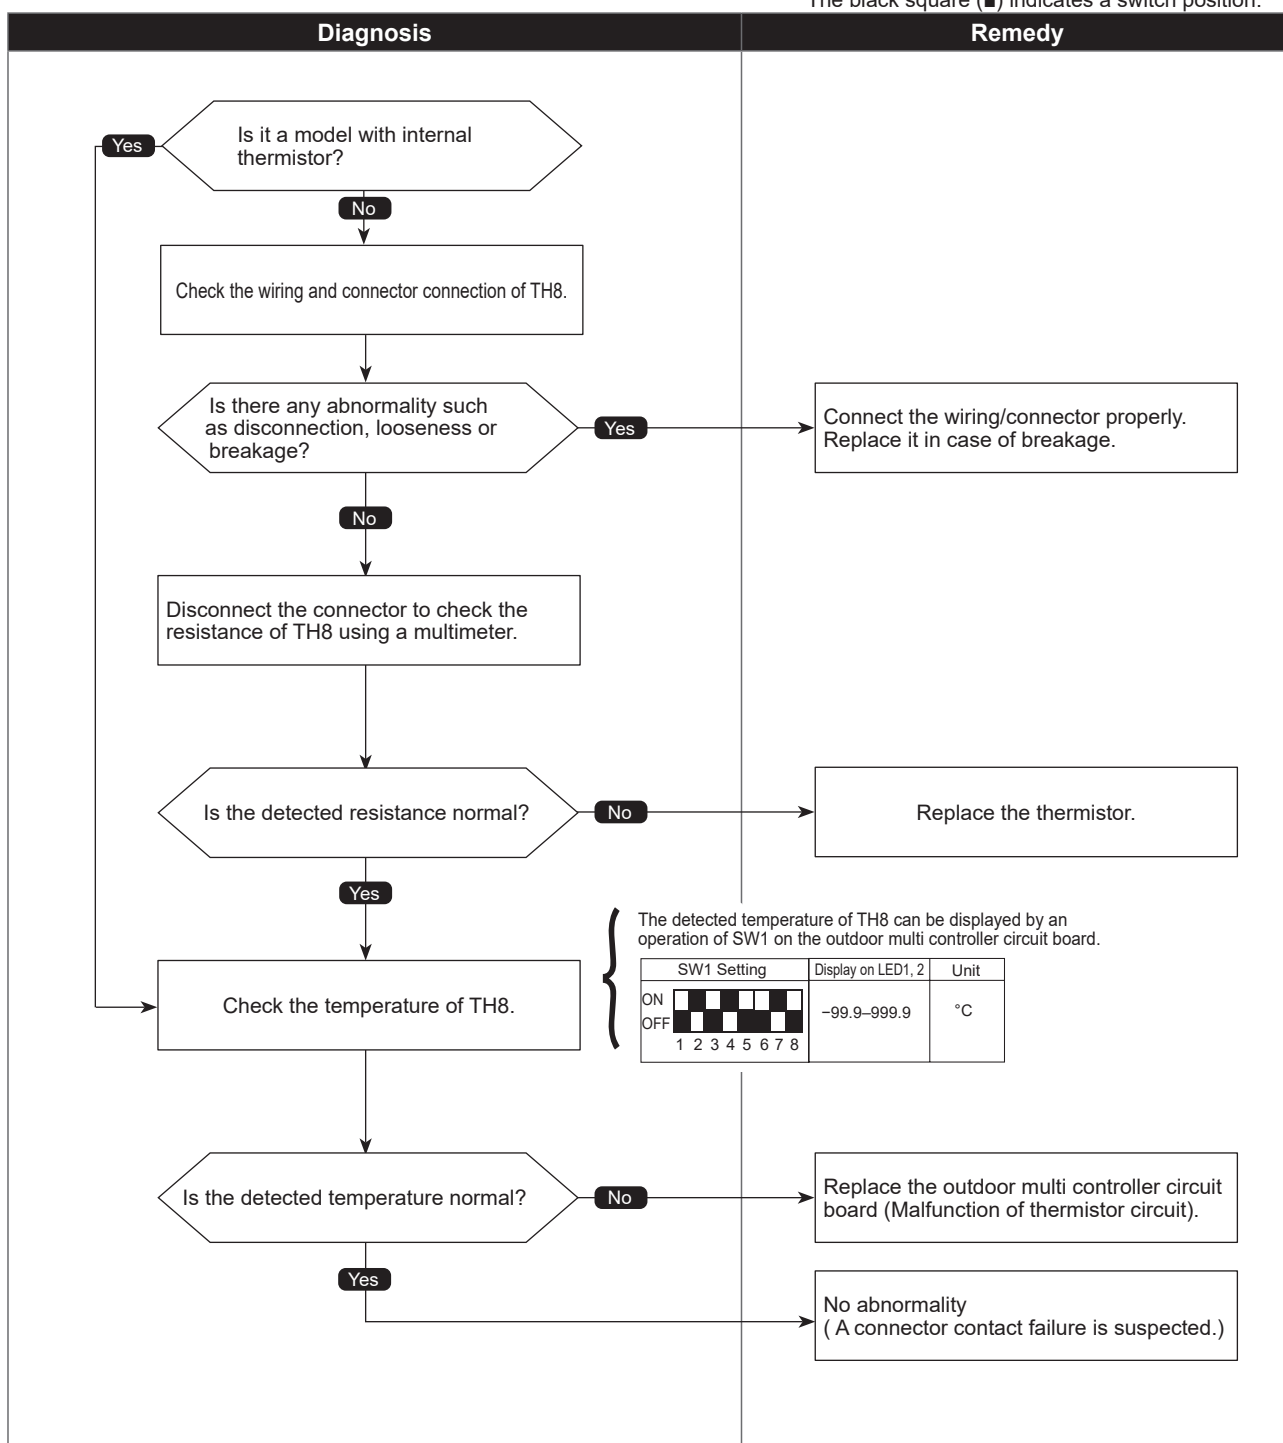


High pressure sensor (63HS) trouble

Abnormal points and detection methods	Causes and checkpoints
<p>① When the detected pressure in the high pressure sensor is 1kgf/cm² or less during operation, the compressor stops operation and enters into an anti-restart mode for 3 minutes.</p> <p>② When the detected pressure is 1kgf/cm² or less immediately before restarting, the compressor falls into an abnormal stop with check code <5201>.</p> <p>③ For 3 minutes after compressor restarting, during defrosting operation, and for 3 minutes after returning from defrosting operation, above mentioned symptoms are not determined as abnormal.</p>	<p>① Defective high pressure sensor</p> <p>② Decrease of internal pressure caused by gas leakage</p> <p>③ Disconnection or contact failure of connector</p> <p>④ Malfunction of input circuit on outdoor multi controller circuit board</p>

●Diagnosis of defects

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

The black square (■) indicates a switch position.

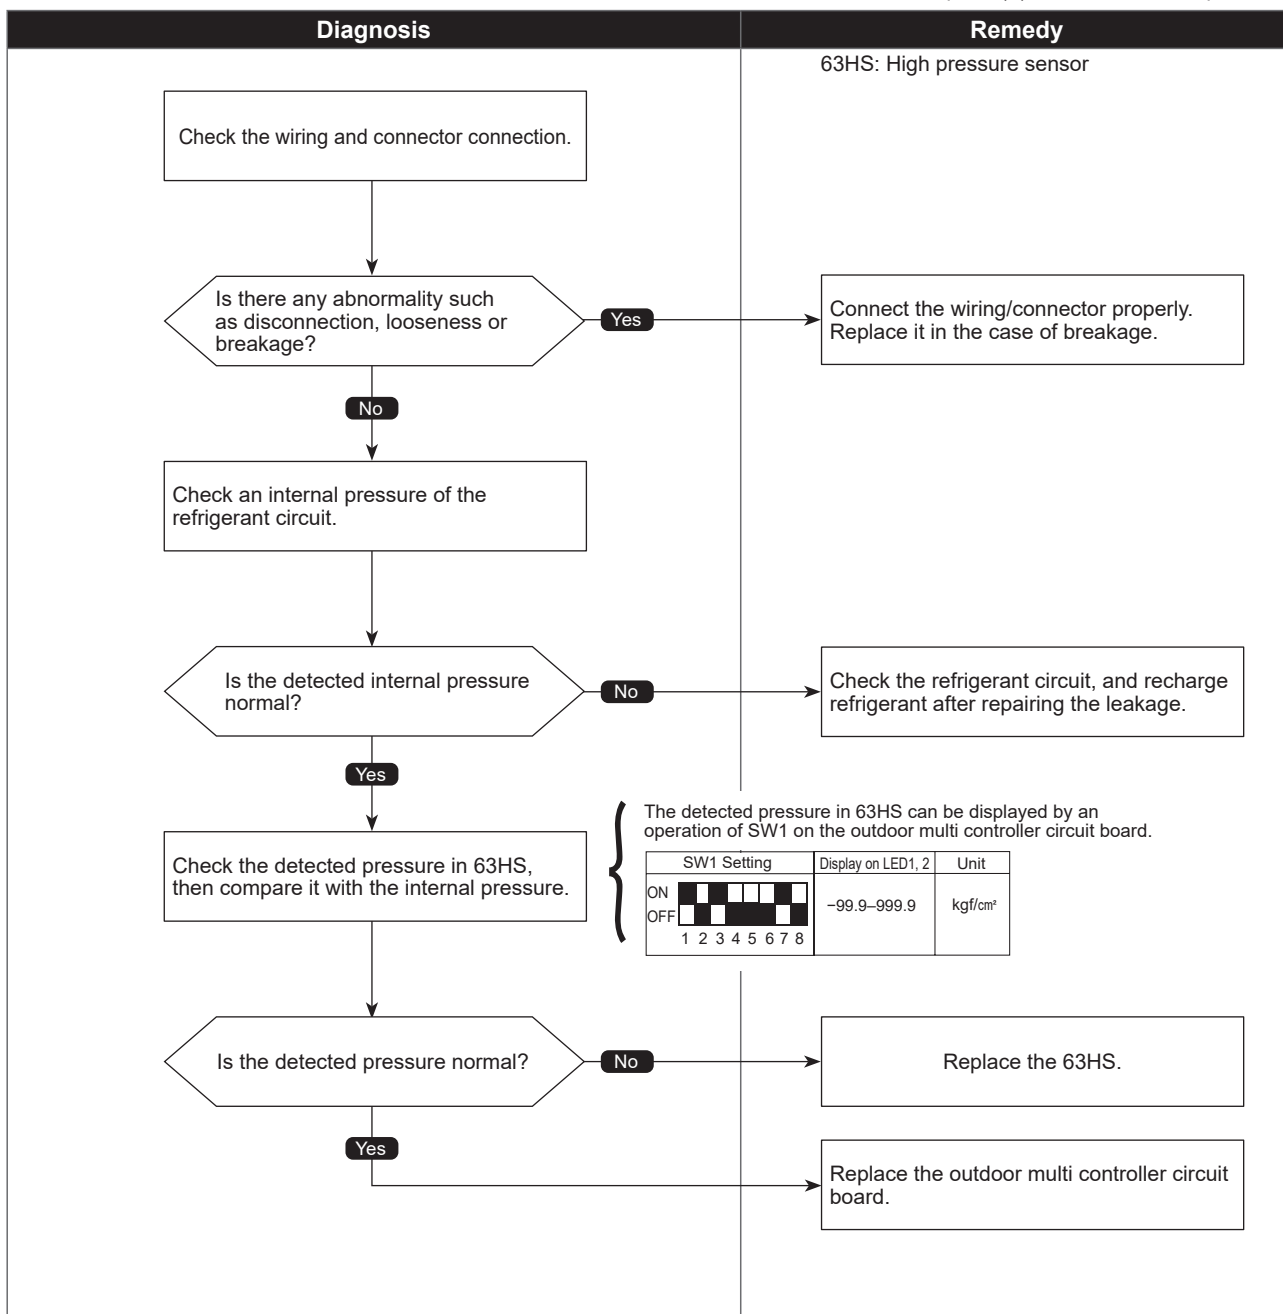

Low pressure sensor (63LS) trouble

Abnormal points and detection methods	Causes and checkpoints
<p>① When the detected pressure in the low pressure sensor is -2.3kgf/cm^2 or less, or 23.1kgf/cm^2 or more during operation, the compressor stops operation with check code <5202>.</p> <p>② For 3 minutes after compressor restarting, during defrosting operation, and for 3 minutes after returning from defrosting operation, above mentioned symptoms are not determined as abnormal.</p>	<p>① Defective low pressure sensor</p> <p>② Decrease of internal pressure caused by gas leakage</p> <p>③ Disconnection or contact failure of connector</p> <p>④ Malfunction of input circuit on outdoor multi controller circuit board</p>

●Diagnosis of defects

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

The black square (■) indicates a switch position.

Diagnosis	Remedy											
<div>Check the wiring and connector connection.</div> <div>Is there any abnormality such as disconnection, looseness or breakage?</div> <div>No</div> <div>Check an internal pressure of the refrigerant circuit.</div> <div>Is the detected internal pressure normal?</div> <div>No</div> <div>Check the detected pressure in 63LS, then compare it with the internal pressure.</div> <div>Is the detected pressure normal?</div> <div>No</div> <div>Yes</div>	<div>63LS: Low pressure sensor</div> <div>Connect the wiring/connector properly. Replace it in the case of breakage.</div> <div>Check the refrigerant circuit, and recharge refrigerant after repairing the leakage.</div> <div><div>The detected pressure in 63LS can be displayed by an operation of SW1 on the outdoor multi controller circuit board.</div><table><tr><th>SW1 Setting</th><th>Display on LED1,2</th><th>Unit</th></tr><tr><td>ON</td><td><div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div></div></td><td rowspan="2">~99.9~999.9 kgf/cm²</td></tr><tr><td>OFF</td><td><div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div></div></td></tr><tr><td></td><td>1 2 3 4 5 6 7 8</td><td></td></tr></table></div> <div>Replace the 63LS.</div> <div>Replace the outdoor multi controller circuit board.</div>	SW1 Setting	Display on LED1,2	Unit	ON	<div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div></div>	~99.9~999.9 kgf/cm²	OFF	<div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div></div>		1 2 3 4 5 6 7 8	
SW1 Setting	Display on LED1,2	Unit										
ON	<div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div></div>	~99.9~999.9 kgf/cm²										
OFF	<div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div></div>											
	1 2 3 4 5 6 7 8											

Current sensor trouble

Abnormal points and detection methods	Causes and checkpoints
If the detected current sensor input value (primary current) during compressor operation is outside the specified range.	① Decrease/trouble of power supply voltage ② Disconnection of compressor wiring ③ Input sensor trouble on outdoor power circuit board

●Diagnosis of defects

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

Diagnosis	Remedy				
<p>Check the input current at the time of abnormal stop.</p> <p>Does it satisfy the condition 1(*) in the lower right?</p> <p>Yes</p> <p>*Applicable only for single phase model.</p> <p>No</p> <p>Check the compressor wiring for disconnection or looseness.</p> <p>Is there any abnormality such as disconnection or looseness?</p> <p>Yes</p> <p>No</p>	<p>The power supply voltage is decreased or abnormal. Check the power supply facility.</p> <p>Condition 1:</p> <table> <tr> <th>Model</th><th>Error detecting condition</th></tr> <tr> <td>Single phase model</td><td>34 A or more for 10 consecutive seconds, or 38 A or more</td></tr> </table> <p>Connect the compressor wiring properly.</p> <p>Replace the outdoor power circuit board (Malfunction of current sensor circuit).</p>	Model	Error detecting condition	Single phase model	34 A or more for 10 consecutive seconds, or 38 A or more
Model	Error detecting condition				
Single phase model	34 A or more for 10 consecutive seconds, or 38 A or more				

Check code

6600
(A0)

Duplex address error

Abnormal points and detection methods	Causes and checkpoints
If 2 or more units with the same address are exist.	① There are 2 units or more with the same address in their controller among outdoor unit, indoor unit, Fresh Master, Lossnay or remote controller ② Noise interference on indoor/outdoor connectors

●Diagnosis of defects

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

Diagnosis	Remedy
<p>Search for a unit with the same address as the source of abnormality.</p> <p>Is there any unit with the same address?</p> <p>Yes</p> <p>No</p> <p>Turn the power back ON.</p> <p>Does it operate normally?</p> <p>No</p> <p>Yes</p>	<p>Correct the address, and turn the power OFF of indoor/outdoor unit, Fresh Master or Lossnay simultaneously for 2 minutes or more, then turn the power back ON.</p> <p>Malfunction of sending/receiving circuit on indoor/outdoor unit is suspected. Check the transmission pulse and noise on transmission wiring.</p> <p>There is no abnormality on the AC unit. It might be caused by an external noise, so check the transmission line to remove the factor(s).</p>

Transmission processor hardware error

Abnormal points and detection methods	Causes and checkpoints
If the transmission line shows "1" although the transmission processor transmitted "0".	① A transmitting data collision occurred because of a wiring work or polarity change has performed while the power is ON on either of the indoor/outdoor unit, Fresh Master or Lossnay ② Malfunction of transmitting circuit on transmission processor ③ Noise interference on indoor/outdoor connectors

●Diagnosis of defects

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.


Diagnosis	Remedy
<pre> graph TD Q1{{A wiring work was performed while the power OFF.}} Q1 -- No --> R1[If the wiring work was performed while the power ON, turn the power OFF of indoor/outdoor unit, Fresh Master or Lossnay simultaneously for 2 minutes or more, then turn the power back ON.] Q1 -- Yes --> P1[Turn the power back ON.] P1 --> Q2{{Does it operate normally?}} Q2 -- No --> R2[Replace the indoor/outdoor controller board.] Q2 -- Yes --> R3[There is no abnormality on the AC unit. It might be caused by an external noise, so check the transmission line to remove the factor(s).] </pre>	<div> <p>If the wiring work was performed while the power ON, turn the power OFF of indoor/outdoor unit, Fresh Master or Lossnay simultaneously for 2 minutes or more, then turn the power back ON.</p> </div> <div> <p>Replace the indoor/outdoor controller board.</p> </div> <div> <p>There is no abnormality on the AC unit. It might be caused by an external noise, so check the transmission line to remove the factor(s).</p> </div>

Transmission bus BUSY error

Abnormal points and detection methods	Causes and checkpoints
<p>① An abnormality when no transmission status caused by transmitting data collision continues for 8 to 10 minutes.</p> <p>② An abnormality when data cannot be output on the transmission line consecutively because of noise etc. for 8 to 10 minutes.</p>	<p>① The transmission processor is unable to transmit due to a short-cycle voltage such as noise is mixed on the transmission line.</p> <p>② The transmission processor is unable to transmit due to an increase of transmission data amount caused by a miswiring of the terminal block (transmission line) (TB3) and the terminal block (centralized control line) (TB7) on the outdoor unit.</p> <p>③ The share on transmission line becomes high due to a mixed transmission caused by a malfunction of repeater on the outdoor unit, which is a function to connect/disconnect transmission from/to control system and centralized control system.</p>

●Diagnosis of defects

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

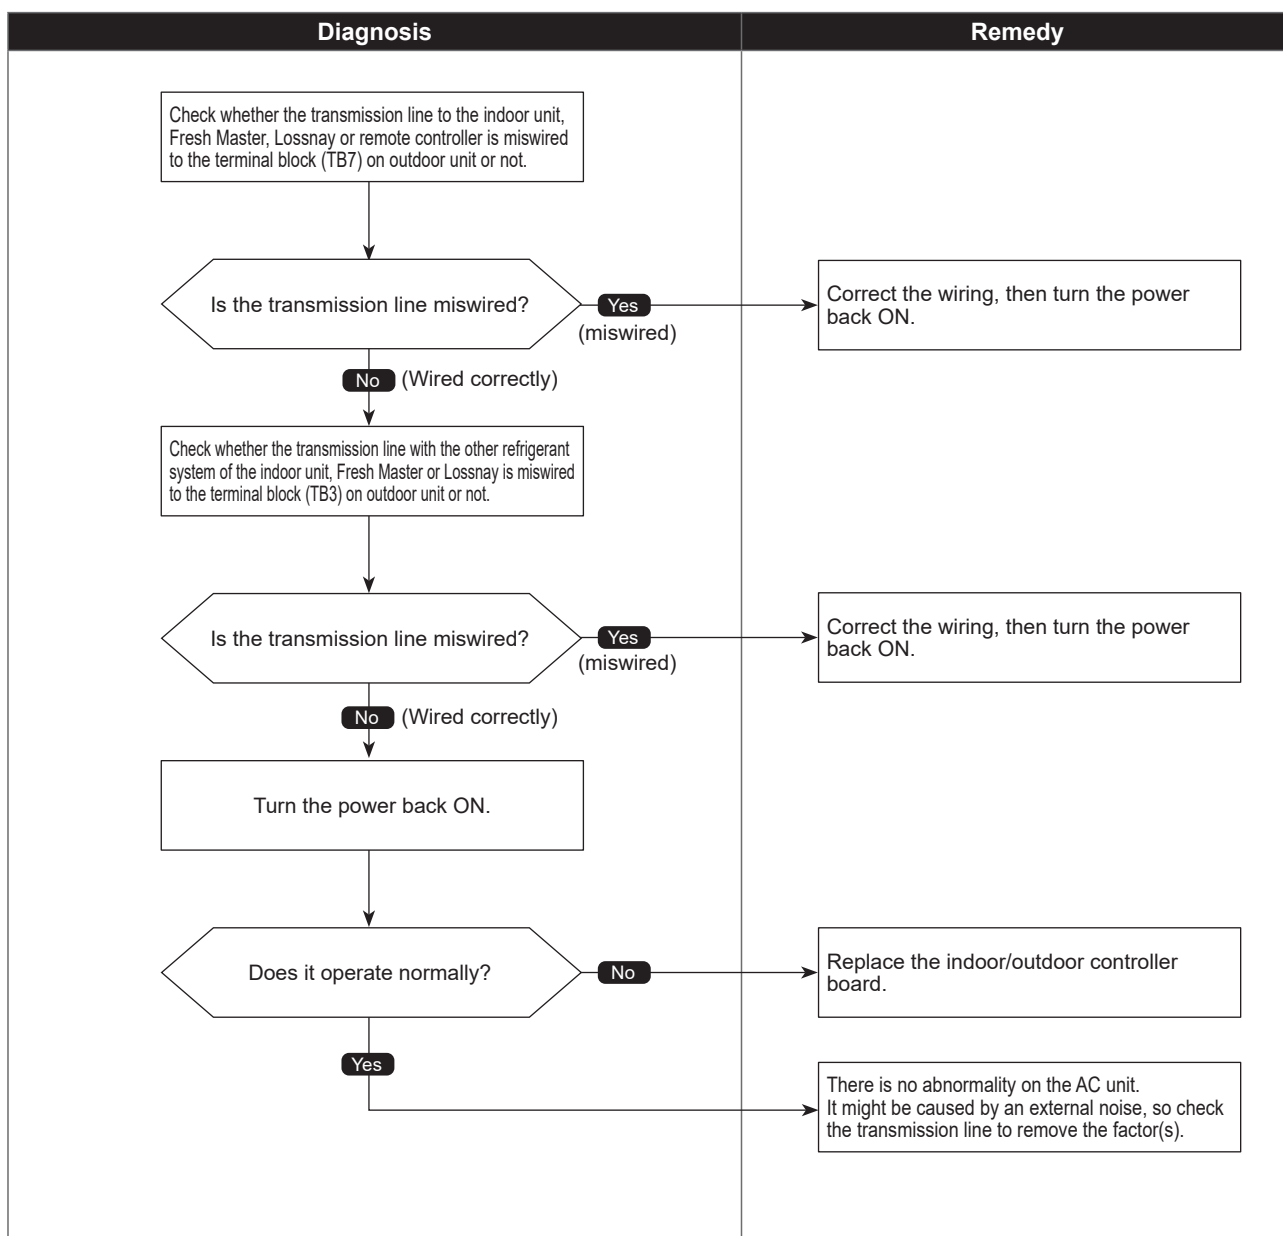

Check code

6606
(A6)

Signal communication error with transmission processor

Abnormal points and detection methods	Causes and checkpoints
① If the data of unit/transmission processor were not normally transmitted. ② If the address transmission from the unit processor was not normally transmitted.	① Accidental disturbance such as noise or lightning surge ② Hardware malfunction of transmission processor

●Diagnosis of defects

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

Diagnosis	Remedy
<div data-bbox="304 692 730 784" style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> Turn the power OFF of indoor/outdoor unit, Fresh Master, Lossnay and remote controller simultaneously for 2 minutes or more, then turn the power back ON. </div> <div data-bbox="304 929 730 1021" style="border: 1px solid black; padding: 10px; margin-bottom: 10px;"> Does it operate normally? </div> <div data-bbox="485 1043 541 1070" style="border: 1px solid black; padding: 2px; display: inline-block; margin-bottom: 10px;"> Yes </div> <div data-bbox="746 963 798 990" style="border: 1px solid black; padding: 2px; display: inline-block;"> No </div>	<div data-bbox="967 949 1393 1021" style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> Replace the controller. (Defect of error source controller). </div> <div data-bbox="967 1070 1393 1155" style="border: 1px solid black; padding: 5px;"> There is no abnormality on the AC unit. It might be caused by an external noise, so check the transmission line to remove the factor(s). </div>

No ACK error

Chart 1 of 4

Abnormal points and detection methods	Causes and checkpoints
<p>① Represents a common error detection An abnormality detected by the sending side controller when receiving no ACK from the receiving side, though signal was once sent. The sending side searches the error in 30 seconds interval for 6 times continuously.</p>	<p>① The previous address unit does not exist since the address switch was changed while in electric continuity status.</p> <p>② Decline of transmission voltage/signal caused by tolerance over on transmission line ·At the furthest end: 200 m ·On remote controller line: (12 m)</p> <p>③ Decline of transmission voltage/signal due to unmatched transmission line types ·Types for shield line: CVVS, CPEVS or MVVS ·Line diameter: 1.25 mm² or more</p> <p>④ Decline of transmission voltage/signal due to excessive number of connected units</p> <p>⑤ Malfunction due to accidental disturbance such as noise or lightning surge</p> <p>⑥ Defect of error source controller</p>
<p>② The cause of displayed address and attribute is on the outdoor unit side An abnormality detected by the indoor unit if receiving no ACK when transmitting signal from the indoor unit to the outdoor unit.</p>	<p>① Contact failure of indoor/outdoor unit transmission line</p> <p>② Disconnection of transmission connector (CN2M) on indoor unit</p> <p>③ Malfunction of sending/receiving circuit on indoor/outdoor unit</p> <p>④ Disconnection of the connectors on the circuit board</p>
<p>③ The cause of displayed address and attribute is on the indoor unit side An abnormality detected by the remote controller if receiving no ACK when sending data from the remote controller to the indoor unit.</p>	<p>① While operating with multi refrigerant system indoor units, an abnormality is detected when the indoor unit transmit signal to the remote controller during the other refrigerant-system outdoor unit is turned OFF, or within 2 minutes after it turned back ON.</p> <p>② Contact failure of indoor unit or remote controller transmission line</p> <p>③ Disconnection of transmission connector (CN2M) on indoor unit</p> <p>④ Malfunction of sending/receiving circuit on indoor unit or remote controller</p>
<p>④ The cause of the displayed address and attribute is on the remote controller side An abnormality detected by the indoor unit if receiving no ACK when transmitting signal from the indoor unit to the remote controller.</p>	<p>① While operating with multi refrigerant system indoor units, an abnormality is detected when the indoor unit transmit signal to the remote controller during the other refrigerant-system outdoor unit is turned OFF, or within 2 minutes after it turned back ON.</p> <p>② Contact failure of indoor unit or remote controller transmission line</p> <p>③ Disconnection of transmission connector (CN2M) on indoor unit</p> <p>④ Malfunction of sending/receiving circuit on indoor unit or remote controller</p>

No ACK error

Chart 2 of 4

Abnormal points and detection methods	Causes and checkpoints
<p>⑤ The cause of displayed address and attribute is on the Fresh Master side An abnormality detected by the indoor unit if receiving no ACK when transmitting signal from the indoor unit to the Fresh Master.</p>	<p>① While the indoor unit is operating with multi refrigerant system Fresh Master, an abnormality is detected when the indoor unit transmits signal to the remote controller while the outdoor unit with the same refrigerant system as the Fresh Master is turned OFF, or within 2 minutes after it turned back ON.</p> <p>② Contact failure of indoor unit or Fresh Master transmission line</p> <p>③ Disconnection of transmission connector (CN2M) on indoor unit or Fresh Master</p> <p>④ Malfunction of sending/receiving circuit on indoor unit or Fresh Master</p>
<p>⑥ The cause of displayed address and attribute is on Lossnay side An abnormality detected by the indoor unit if receiving no ACK when the indoor unit transmit signal to the Lossnay.</p>	<p>① An abnormality is detected when the indoor unit transmits signal to Lossnay while the Lossnay is turned OFF.</p> <p>② While the indoor unit is operating with the other refrigerant Lossnay, an abnormality is detected when the indoor unit transmits signal to the Lossnay while the outdoor unit with the same refrigerant system as the Lossnay is turned OFF, or within 2 minutes after it turned back ON.</p> <p>③ Contact failure of indoor unit or Lossnay transmission line</p> <p>④ Disconnection of transmission connector (CN2M) on indoor unit</p> <p>⑤ Malfunction of sending/receiving circuit on indoor unit or Lossnay</p>
<p>⑦ The controller of displayed address and attribute is not recognized</p>	<p>① The previous address unit does not exist since the address switch was changed while in electric continuity status.</p> <p>② An abnormality detected at transmitting from the indoor unit since the Fresh Master/Lossnay address are changed after synchronized setting of Fresh Master/Lossnay by the remote controller.</p>

No ACK error


Chart 3 of 4

●Diagnosis of defects

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

Note:

When the address of the outdoor unit is displayed as abnormal, the outdoor circuit board may be faulty. If the unit is not restored after conducting the following procedure, check the outdoor circuit board.

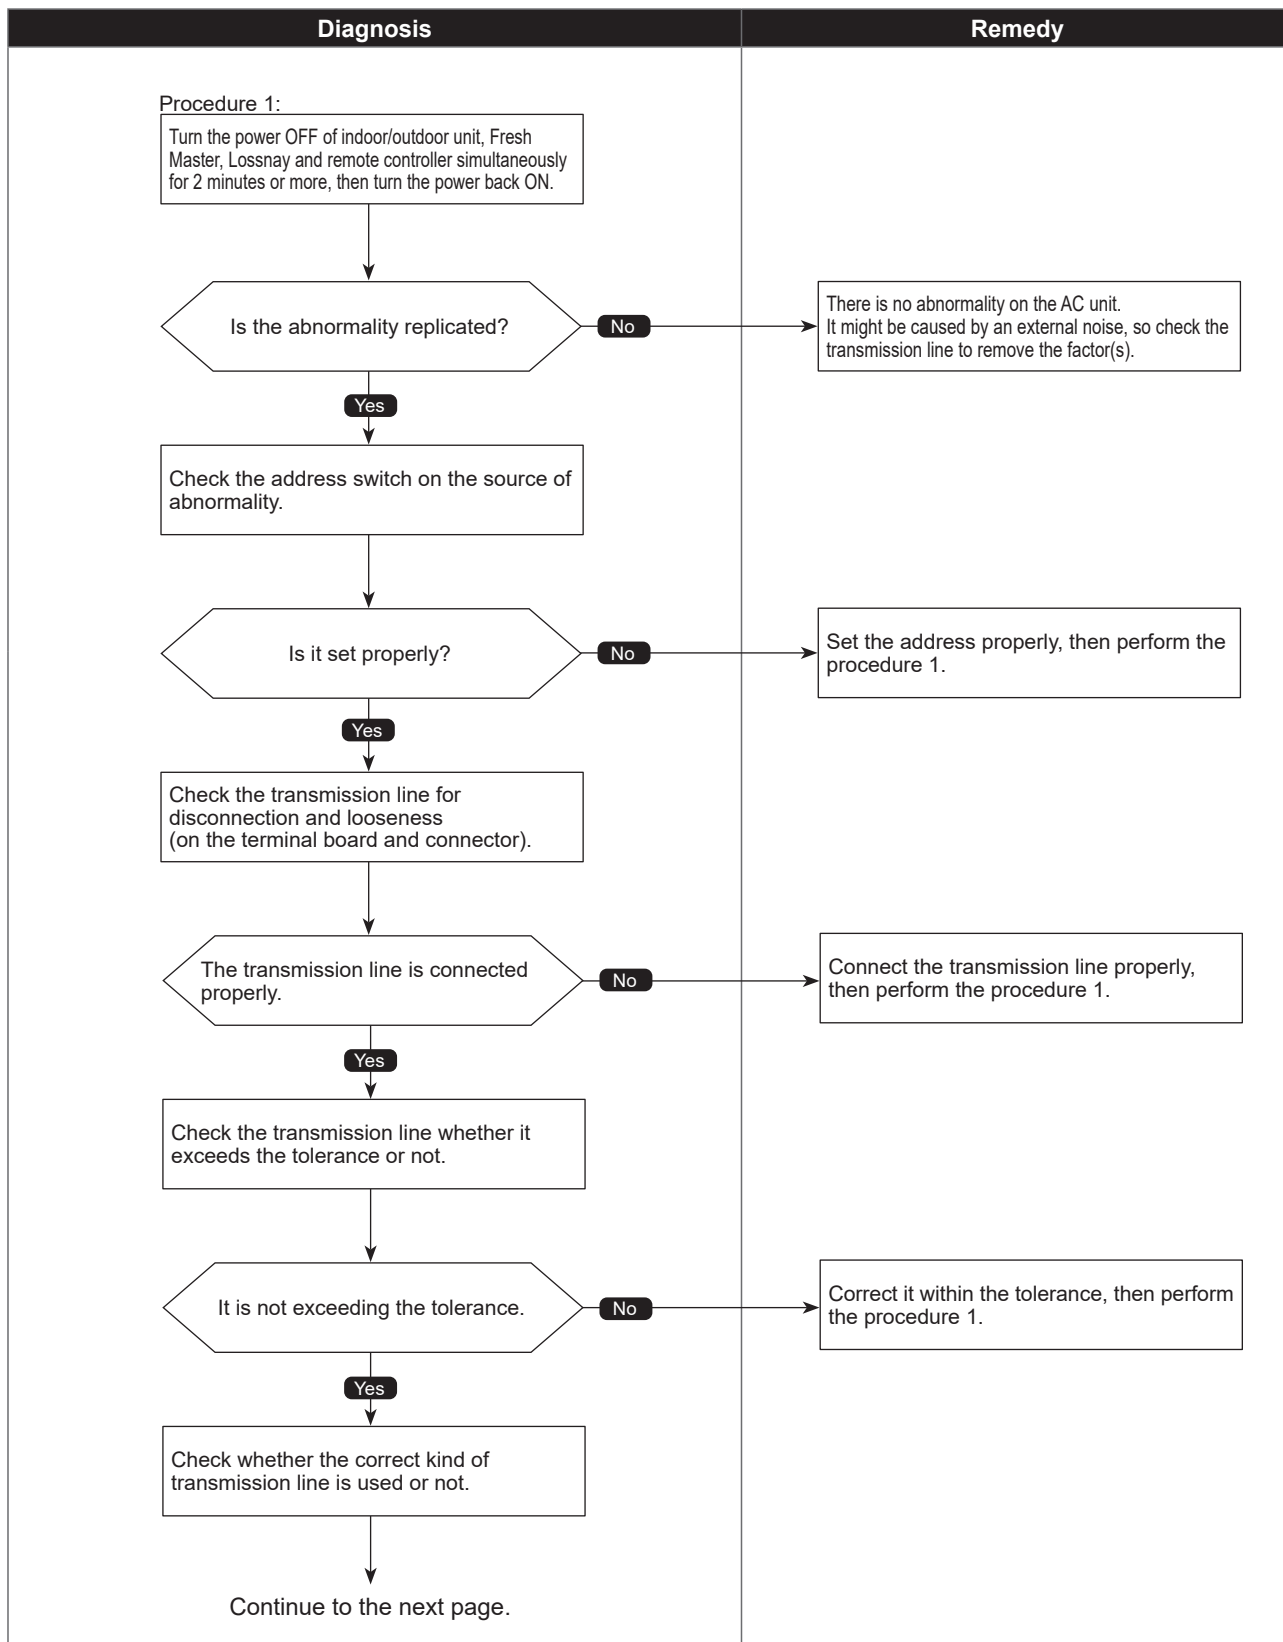


No ACK error

Chart 4 of 4

●Diagnosis of defects

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

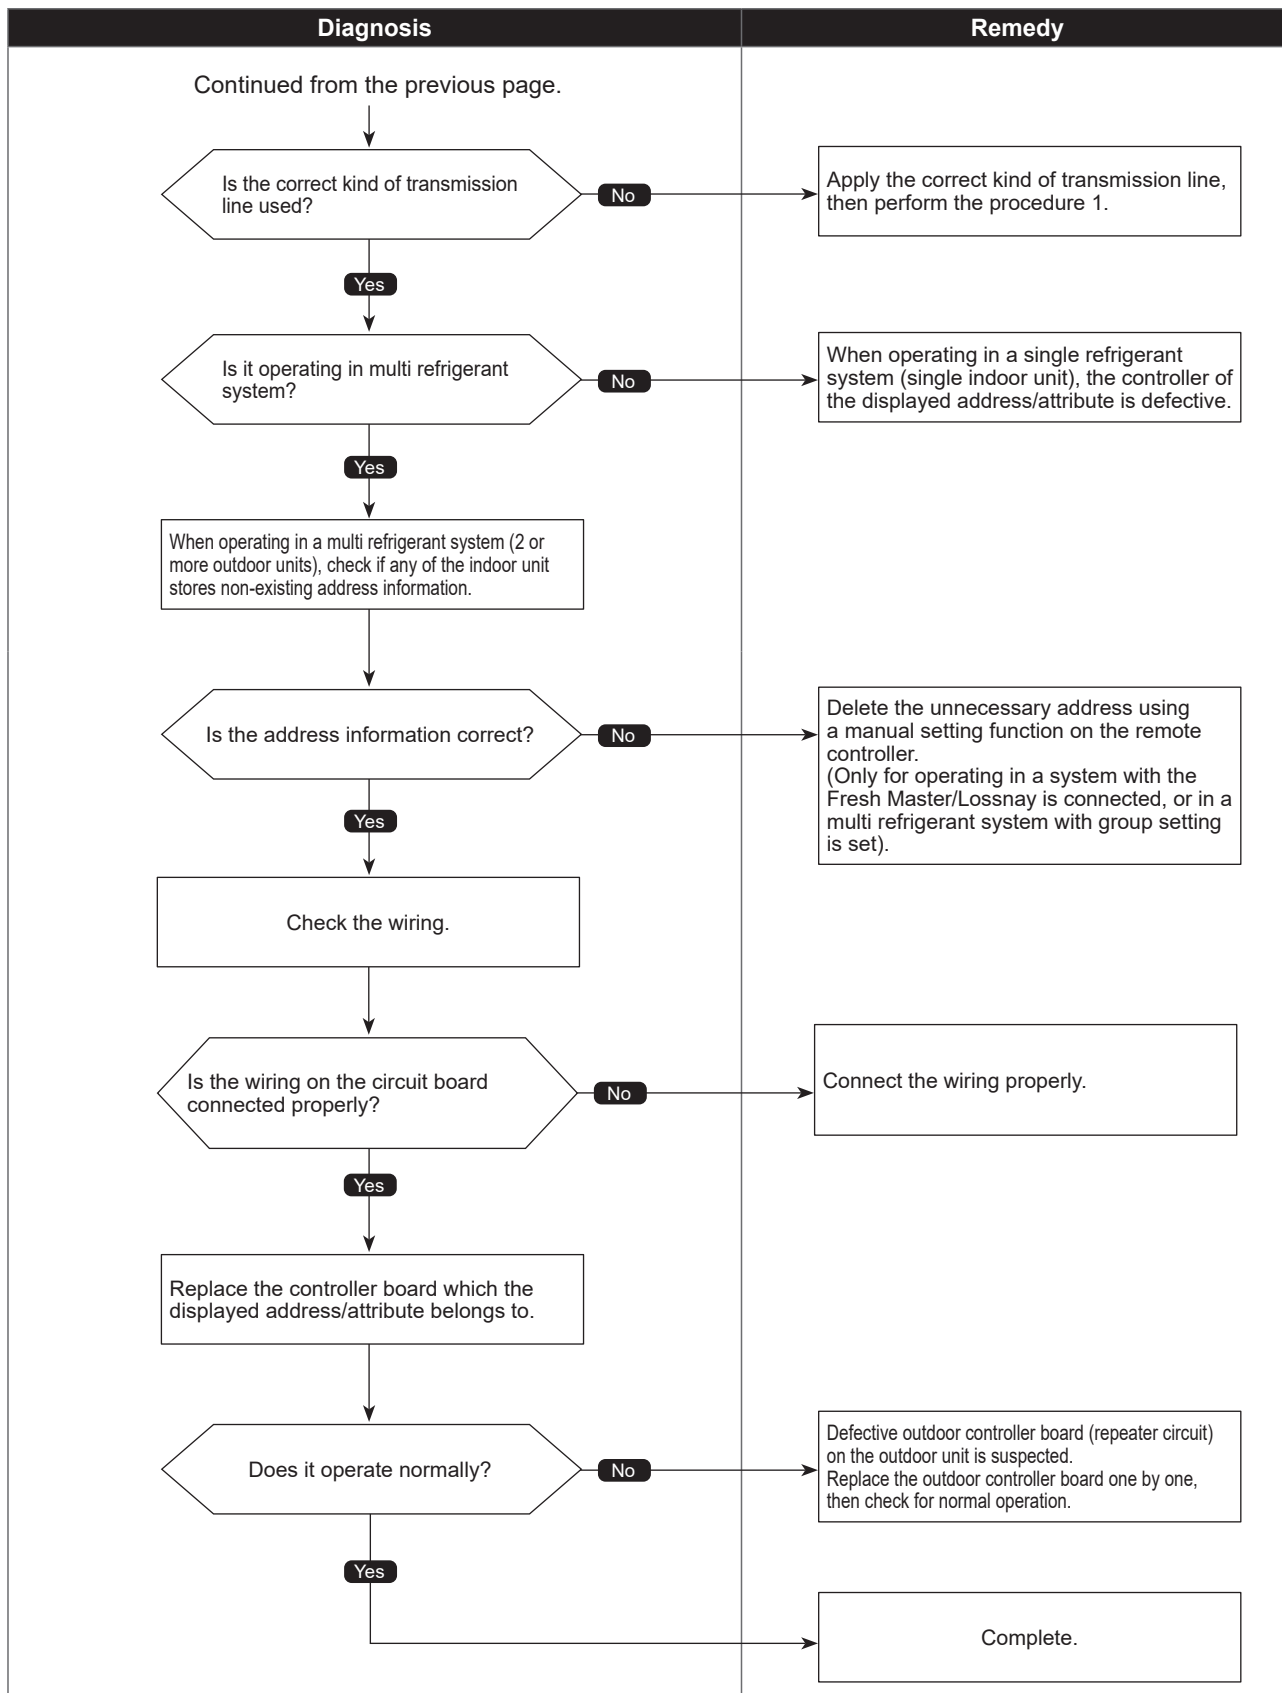


No response frame error

Abnormal points and detection methods	Causes and checkpoints
If receiving no response command while already received ACK. The sending side searches the error in 30 seconds interval for 6 times continuously.	① Continuous failure of transmission due to noise, etc ② Decline of transmission voltage/signal caused by tolerance over on transmission line ·At the furthest end: 200 m ·On remote controller line: (12 m) ③ Decline of transmission voltage/signal due to unmatched transmission line types ·Types for shield line: CVVS, CPEVS or MVVS ·Line diameter: 1.25 mm ² or more ④ Accidental malfunction of error source controller

●Diagnosis of defects

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

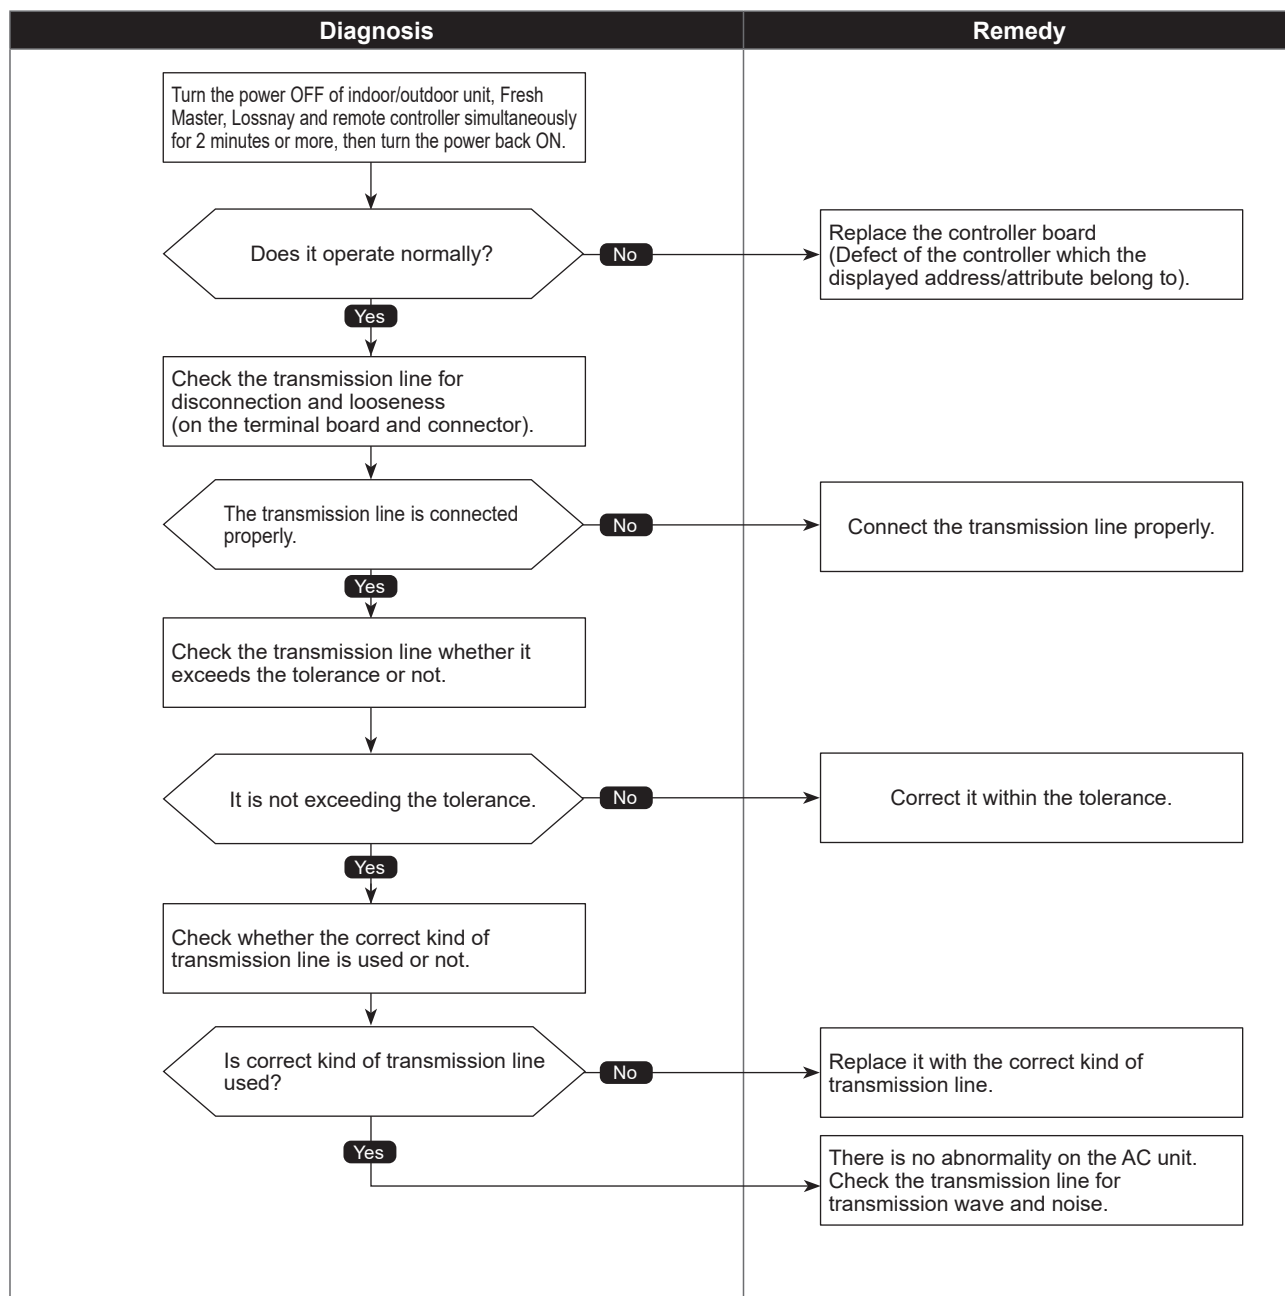


MA communication receive error

Chart 1 of 2

Abnormal points and detection methods	Causes and checkpoints
<p>Detected in remote controller or indoor unit:</p> <p>① When the main or sub remote controller cannot receive signal from indoor unit which has the "0" address.</p> <p>② When the sub remote controller cannot receive signal.</p> <p>③ When the indoor controller board cannot receive signal from remote controller or another indoor unit.</p> <p>④ When the indoor controller board cannot receive signal.</p>	<p>① Contact failure of remote controller wirings</p> <p>② Irregular Wiring (A wiring length, number of connecting remote controllers or indoor units, or a wiring thickness does not meet the conditions specified in the chapter "Electrical Work" in the indoor unit Installation Manual.)</p> <p>③ Malfunction of the remote controller sending/receiving circuit on indoor unit with the LED2 is blinking.</p> <p>④ Malfunction of the remote controller sending/receiving circuit</p> <p>⑤ Remote controller transmitting error caused by noise interference</p>

●Diagnosis of defects

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards

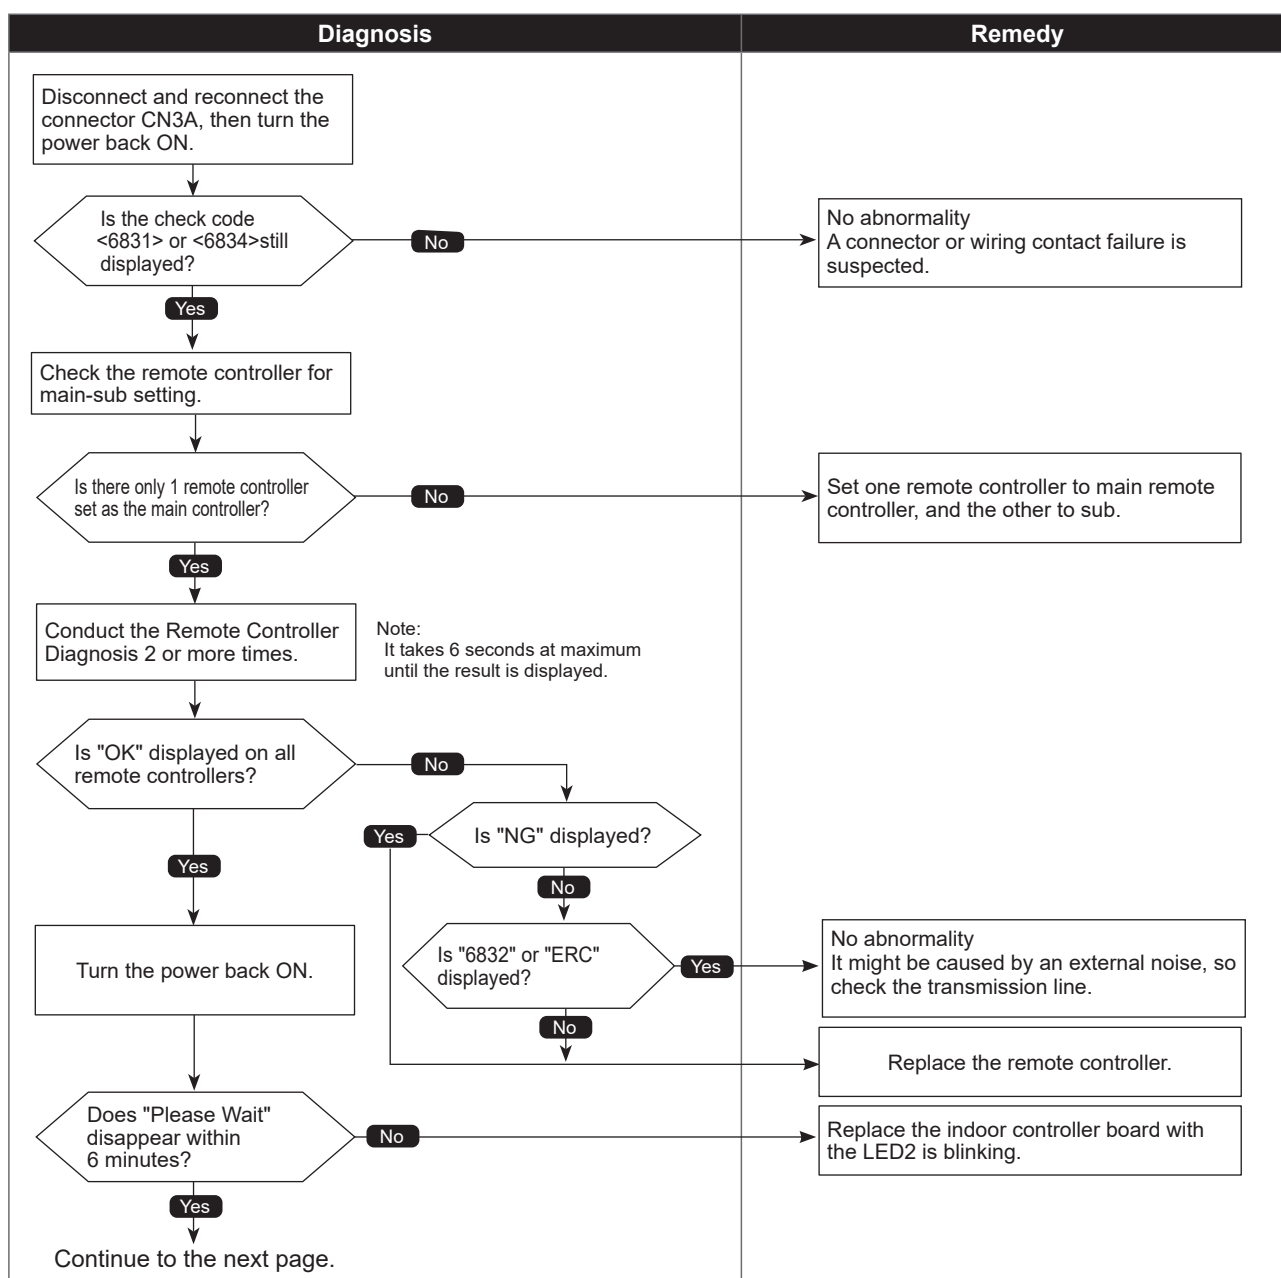


MA communication receive error

Chart 2 of 2

●Diagnosis of defects

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards

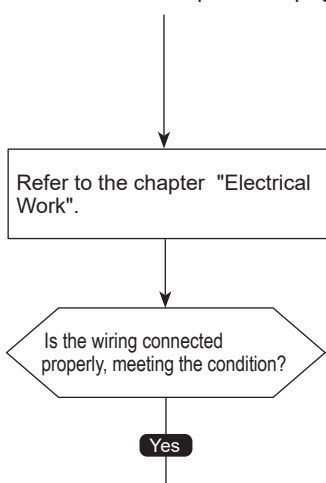Diagnosis	Remedy
<p>Continued from the previous page.</p>  <pre> graph TD Start([Continued from the previous page.]) --> Step1[Refer to the chapter "Electrical Work".] Step1 --> Decision{Is the wiring connected properly, meeting the condition?} Decision -- No --> Remedy1[Connect the wiring properly as specified in the chapter "Electrical Work" in the indoor unit Installation Manual.] Decision -- Yes --> Remedy2[No abnormality It might be caused by an external noise, so check the transmission line to remove the factor(s).] </pre>	<p>Connect the wiring properly as specified in the chapter "Electrical Work" in the indoor unit Installation Manual.</p> <p>No abnormality It might be caused by an external noise, so check the transmission line to remove the factor(s).</p>


MA communication send error

Chart 1 of 2

Abnormal points and detection methods	Causes and checkpoints
Detected in remote controller or indoor unit.	① There are 2 remote controllers set as main. ② Malfunction of remote controller sending/receiving circuit ③ Malfunction of sending/receiving circuit on indoor controller board ④ Remote controller transmitting error caused by noise interference

●Diagnosis of defects

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards

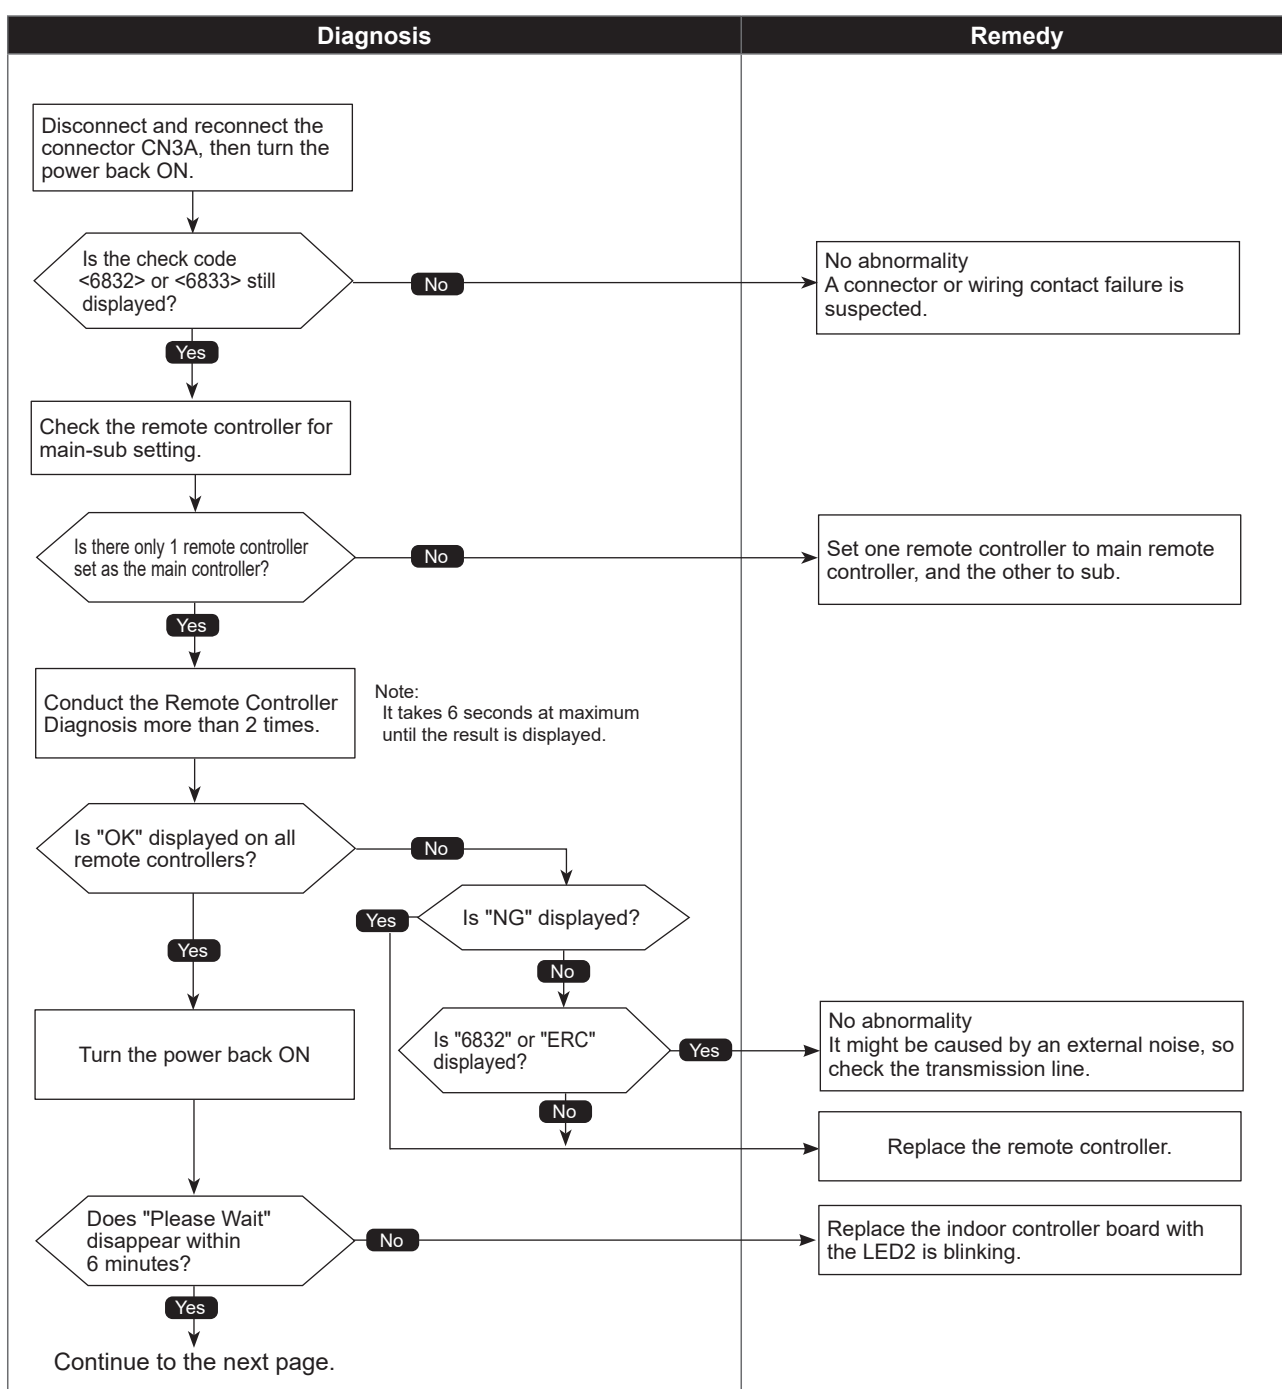


MA communication send error

Chart 2 of 2

●Diagnosis of defects

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards

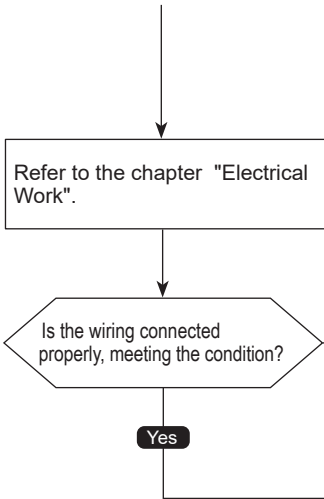Diagnosis	Remedy
<p>Continued from the previous page.</p>  <pre> graph TD A[Continued from the previous page.] --> B[Refer to the chapter "Electrical Work".] B --> C{Is the wiring connected properly, meeting the condition?} C -- No --> D[Connect the wiring properly as specified in the chapter "Electrical Work" in the indoor unit Installation Manual.] C -- Yes --> E[No abnormality It might be caused by an external noise, so check the transmission line to remove the factor(s).] </pre>	<p>Connect the wiring properly as specified in the chapter "Electrical Work" in the indoor unit Installation Manual.</p> <p>No abnormality It might be caused by an external noise, so check the transmission line to remove the factor(s).</p>

Check code

7100
(EF)

Total capacity error

Abnormal points and detection methods

When the total capacity of connected indoor units exceeds the specified capacity (130% of the outdoor unit capacity), check code <7100> is displayed.

Causes and checkpoints

- ① The total capacity of connected indoor units exceeds the specified capacity.
- ② The model name code of the outdoor unit is registered wrongly.

•Diagnosis of defects

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

Diagnosis

Remedy

Check the total capacity of connected indoor units.

Is the total under 130% of outdoor unit capacity?

No

Correct it so that the total capacity of connected indoor units is under 130% of the outdoor unit capacity.

Yes

Check the capacity code switch (SW2 on the indoor controller board) on the connected indoor unit.

Is it set properly?

No

Set the switch properly.

Yes

Check the model selection switch (SW4 on the outdoor multi controller circuit board) of the outdoor unit.

Is it set properly?

No

Set the switch properly.

Yes

Complete.

Check code

7101
(EF)

Capacity code error

Abnormal points and detection methods

When a connected indoor unit is incompatible, check code <7101> is displayed.

Causes and checkpoints

The model name of connected indoor unit (model code) is read as incompatible.

The connectable indoor units are:

- P10 to P250 model (code 2 to 50)
- When connecting via branch box : P15 to P50 model (code 4 to 9)

●Diagnosis of defects

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

Diagnosis

Check the model selection switch (refer to indoor unit service manual) of the connected indoor unit.

Is it set properly?

No

Yes

Remedy

Set the switch properly.

The model code of the connected indoor unit can be displayed by an operation of SW1 on the outdoor unit.

Check code

7102
(EF)

Connecting unit number error

Abnormal points and detection methods

When the connected indoor unit exceeds the limit, check code <7102> is displayed.

Causes and checkpoints

Connecting more indoor units and branch boxes than the limit.
If connecting status does not comply with the following limit;

- ① Connectable up to 30 indoor units
- ② Connect at least 1 indoor unit (If connected none).
- ③ Connectable up to 3 branch boxes

•Diagnosis of defects

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

Diagnosis

Check whether the connecting unit exceeds the limit or not.

Does it exceed the limit?

Yes

No

Check if at least 1 indoor unit is connected.

Is an indoor unit connected?

No

Yes

Remedy

Connect less number of units than the limit.

* The model code of the connected indoor unit can be displayed by an operation of SW1 on the outdoor unit.

Connect indoor unit.

Check whether the M-NET line to the indoor unit is connected or not.

Address setting error

Chart 1 of 2

Abnormal points and detection methods	Causes and checkpoints
The address setting of connected unit is wrong.	There is a unit without correct address setting in the range specified in "7-3. SYSTEM CONTROL".

●Diagnosis of defects

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

Diagnosis	Remedy
<p><Outdoor unit></p> <p>Check whether the outdoor unit address is set in 000, or in the range of 51 to 100.</p> <p>Is the address setting correct?</p> <p>No</p> <p>Yes</p>	<p>Set the address properly, then turn the power OFF of indoor/outdoor unit, Fresh Master, Lossnay and remote controller simultaneously for 2 minutes or more, and turn the power back ON.</p> <p>Replace the outdoor multi controller circuit board.</p>
<p><Indoor unit></p> <p>Check whether the indoor unit address is set in 00, or in the range of 01 to 50.</p> <p>Is the address setting correct?</p> <p>No</p> <p>Yes</p>	<p>Set the address properly, then turn the power OFF of indoor/outdoor unit, Fresh Master, Lossnay and remote controller simultaneously for 2 minutes or more, and turn the power back ON.</p> <p>Replace the indoor controller board.</p>
<p><Branch box></p> <p>Check whether the branch box address is set in 00, or in the range of 01 to 46.</p> <p>Is the address setting correct?</p> <p>No</p> <p>Yes</p>	<p>Set the address properly, then turn the power OFF of indoor/outdoor unit, Fresh Master, Lossnay and remote controller simultaneously for 2 minutes or more, and turn the power back ON.</p> <p>Replace the branch box controller board.</p>

Address setting error

●Diagnosis of defects

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

Diagnosis	Remedy
<M-NET RC (main)>	
<p>Check whether the M-NET RC (main) address is set in 000, or in the range of 101 to 150.</p>	
<p>Is the address setting correct?</p>	
<p>No</p>	<p>Set the address properly, then turn the power OFF of indoor/outdoor unit, Fresh Master, Lossnay and remote controller simultaneously for 2 minutes or more, and turn the power back ON.</p>
<p>Yes</p>	<p>Replace the M-NET RC (main).</p>
<M-NET RC (sub)>	
<p>Check whether the M-NET RC (sub) address is set in 000, or in the range of 151 to 200.</p>	
<p>Is the address setting correct?</p>	
<p>No</p>	<p>Set the address properly, then turn the power OFF of indoor/outdoor unit, Fresh Master, Lossnay and remote controller simultaneously for 2 minutes or more, and turn the power back ON.</p>
<p>Yes</p>	<p>Replace the M-NET RC (sub).</p>

Check code

7130
(EF)

Incompatible unit combination error

Abnormal points and detection methods

When the connected indoor unit is not compatible with the outdoor unit, the outdoor unit detects the error at startup.

Causes and checkpoints

Connecting indoor unit (s) which is not authorized to connect to the outdoor unit.

•Diagnosis of defects

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

Diagnosis

Refer to the service manual of the outdoor unit or the connected indoor unit for the authorized combination.

Is the indoor unit authorized to connect with the outdoor unit?

No

Yes

Check whether the model selection switch is set correctly. Are they correct?

No

Yes

Remedy

Replace the indoor unit (s) to the connectable one.



Set the model selection switch correctly, then restart.

Replace the outdoor controller board.

8-2. REMOTE CONTROLLER DIAGNOSIS

Refer to 12-8. "REMOTE CONTROLLER CHECK" for MA remote controller system.






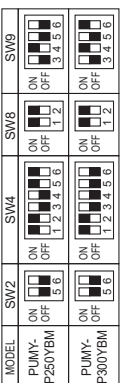
8-3. THE FOLLOWING SYMPTOM DO NOT REPRESENT TROUBLE (EMERGENCY)

Symptom	Display of remote controller	Cause
Even the cooling (heating) operation selection button is pressed, the indoor unit cannot be operated.	"Cooling (Heating)" blinks	The indoor unit cannot cool (Heat) if other indoor units are heating (Cooling).
The auto vane runs freely.	Normal display	Because of the control operation of auto vane, it may change over to horizontal blow automatically from the downward blow in cooling because the downward blow operation has been continued for 1 hour. At defrosting in heating, hot adjusting and thermostat OFF, it automatically changes over to horizontal blow.
Fan setting changes during heating.	Normal display	Ultra-low speed operation is commenced at thermostat OFF. Light air automatically change over to set value by time or piping temperature at thermostat ON.
Fan stops during heating operation.	"Heat Defrost" 	The fan stops during defrosting.
Fan does not stop while operation has been stopped.	Light out	Fan runs for 1 minute after stopping to exhaust residual heat (only in heating).
No setting of fan while start SW has been turned on.	"Heat Standby" 	Ultra-low speed operation for 5 minutes after SW ON or until piping temperature reaches 35°C. Then low speed operates for 2 minutes and operates at the normal set air volume. (Hot adjust control)
Indoor unit remote controller shows "Please Wait" indicator for about 2 minutes when turning ON power supply.	"Please Wait" blinks	The system is in the process of startup. Operate remote controller again after "Please Wait" disappears.
Drain pump does not stop while unit has been stopped.	Light out	After a stop of cooling operation, unit continues to operate drain pump for 3 minutes and then stops.
Drain pump continues to operate while unit has been stopped.	—	Unit continues to operate drain pump if drainage is generated, even during a stop.


8-4. INTERNAL SWITCH FUNCTION TABLE

PUMY-P250YBM PUMY-P300YBM

The black square (■) indicates a switch position.

Switch	Step	Function	Operation in Each Switch Setting		Remarks	Purpose	Additional Information
			ON	OFF			
SWU1 ones digit SWU2 tens digit	Rotary switch				<Initial settings> 	—	—
	Rotary switch				<Initial settings> 	—	—
SW1 Digital Display Switch	1-8				ON OFF 1 2 3 4 5 6 7 8	—	—
	1	Selects operating system startup	With centralized controller	Without centralized controller		Turn ON when the centralized controller is connected to the outdoor unit.	<ul style="list-style-type: none"> SW2-1 must be turned ON if a central controller is connected to the system. An example of this would be a TC-24, EB50A, AG160, AE50 or AE200. If SW2-1 is not turned on, while using a central controller, in rare circumstances problems may be encountered such as indoor units not responding to group commands. Therefore, turning SW2-1 ON is recommended if a central controller is used. Group setting of 2 or more A-I-C units which is connected to branch box via centralized controller is not allowed.
	2	Connection Information Clear Switch	Clear	Do not clear	ON OFF 1 2 3 4 5 6	When relocating units or connecting additional units.	—
	3	Abnormal data clear switch input	Clear abnormal data	Normal		To delete an error history.	—
	4	Pump down	ON	OFF		To facilitate outdoor unit the pumping down operation. Frequency = Fixed to 65 Hz Indoor linear expansion valve = Fully open Outdoor fan step = Fixed to 14	Please refer to a section referring to the pumping down on outdoor units Installation Manuals. It might not be possible to collect all the refrigerant if the amount is excessive. Do not perform pump down work when there is a gas leak. The intake of air or other gases causes abnormally high pressure in the refrigeration cycle, which may cause explosion or injury.
SW2 Function Switch	5	—	—	—		—	—
	6	—	—	—		—	—
SW3 Trial operation	1	ON/OFF from outdoor unit	ON	OFF	<Initial settings> ON OFF 1 2	—	—
	2	Mode setting	Heating	Cooling		—	—
SW2/ SW4/ SW8/ SW9 Model Switch	1-6	MODEL SELECTION			<Initial settings> Set for each capacity.	—	—
	1	—	—	—	<Initial settings> ON OFF 1 2 3 4 5 6 7 8	—	—
	2	Change the indoor unit's LEV opening at startup	Enable	Normal		To set the LEV opening at startup higher than usual. (+ 150 pulses) To improve the operation with the LEV almost clogged.	The refrigerant flow noise at startup become louder.
	3	—	—	—		—	—
	4	—	—	—		—	—
	5	Change the indoor unit's LEV opening at defrost	Enable	Normal		To set the LEV opening higher than usual during defrosting operation. (Only Oj ≤ 10 is valid, + 300 pulses) To avoid the discharge temperature increase and provide efficient defrosting operation.	The refrigerant flow noise during the defrosting operation become louder.

Continue to the next page.



The black square (■) indicates a switch position.


Switch	Step	Function	Operation in Each Switch Setting		Remarks	Purpose	Additional Information
			ON	OFF			
SW5 function switch	6	Switching the target sub cool (Heating mode)	Enable	Normal	<Initial settings> <div><div>ON</div><div>OFF</div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div><div>6</div><div>7</div><div>8</div></div>	To decrease the target sub cool value. To reduce the discharge temperature decrease due to refrigerant liquid accumulation in the units.	A refrigerant flow noise might be generated if the sub cool value is too small.
	7	While the outdoor unit is in HEAT operation, additionally increase about 50 to 70 pulses of the LEV opening on the indoor unit which is in FAN, STOP, COOL or thermo-OFF. *1	Active	Inactive	Can be set when OFF or during operation	To additionally increase about 50 to 70 pulses of the LEV opening for units other than in HEAT operation. To avoid a refrigerant shortage (less capacity) due to refrigerant liquid accumulation in the units which is not in operation.	A refrigerant flow noise might be generated in units other than the one in operation.
	8	While the outdoor unit is in HEAT operation, fully close the linear expansion valve on the indoor unit which is in FAN or COOL. *2	Enable	Normal		To reduce the room temperature increase by setting the LEV opening lower for the indoor units in FAN or COOL.	The refrigerant is more likely to collect in the indoor units in FAN or COOL, which can cause refrigerant shortage of units. (Results in less capacity and increase of discharge temperature.)
	1	—	—	—	—	—	—
SW6 function switch	2	Switching the primary current limitation	Enable	Normal	<Initial settings> <div><div>ON</div><div>OFF</div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div><div>6</div></div>	This switch is used to lower the primary current limit -3.0 A.	The performance of the unit might be somewhat reduced since the frequency would not rise enough due to the lowered current limitation.
	3	—	—	—	—	—	—
	4	Change of defrosting control	Enable (For high humidity)	Normal		To shorten the defrosting prohibition time in high humidity (or heavy snow) region, in order to reduce malfunctions caused by frost .	The performance of the HEAT operation is somewhat reduced since the defrosting operation is frequently performed.
	5	External static pressure mode	Enable	Normal		To raise the fan rotation to raise the performance when an external static pressure is applied.	It can support the external static pressure up to 30 Pa. The power input and the sound level become larger due to increasing the outdoor unit's fan rotation.
	6	Switching the target discharge pressure (Pdm)	Enable	Normal	Can be set when OFF or during operation	To raise the performance by setting the Pdm higher during HEAT operation.	Power consumption is raised due to a higher frequency. (The performance would not be raise at the maximum operating frequency.)
	7	Switching (1) the target evaporation temperature (ETm)	Enable	Normal	SW6-7 SW6-8 Target ETm (°C)	To raise/reduce the performance by changing the target ETm during COOL operation.	Switching it to raise the performance, it raises the power consumption, and produces more dew condensation.
SW7 function switch	8	Switching (2) the target evaporation temperature (ETm)	Enable	Normal		Switch to raise the performance: raises the performance Switch to reduce the performance: prevents dew condensation	Switching it to reduce the performance, it makes the performance insufficient.
	1	Ignore current sensor abnormality and rotational frequency abnormality of outdoor fan motor	Enable	Normal	<Initial settings> <div><div>ON</div><div>OFF</div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div><div>6</div></div>	To perform a test run for electrical parts alone without running the compressor. Also, to perform the troubleshooting of electrical parts without operating the outdoor unit's fan.	Make sure to connect the connectors to the compressor after checking the electrical parts. Be careful not to get electrical shock while working on electrical parts.
	2	—	—	—	—	—	—
	3	—	—	—	—	—	—
	4	Maximum frequency down at 1 hour after COOL operation	Enable	Normal	Can be set when OFF or during operation	To reduce dew condensation on the indoor unit by lowering the frequency.	The performance might be insufficient.
	5	—	—	—	—	—	—
SW9 Function Switch	6	Manual defrost	Manual defrost	Normal		Turn ON when it is necessary to perform the defrosting operation forcibly. (Effective only at startup, or 10 minutes after the last defrosting operation)	It performs the defrosting operation forcibly. (HEAT operation is stopped temporarily.)
	1	Auto change over from remote controller (1C with the minimum address)	Enable	Disable	<Initial settings> <P250> <div><div>ON</div><div>OFF</div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div><div>6</div></div>	Enables the indoor unit with the minimum address to select AUTO mode, and switches the operation mode of the other indoor units to the same mode.	Cannot be set when the centralized control is ON.
	2	Switching the Silent/Demand mode	Demand control	Silent mode	Can be set when OFF or during operation	—	About the Silent mode/Demand control setting, refer to "8-5. OUTDOOR UNIT INPUT/OUTPUT CONNECTOR".
	3	—	—	—	—	—	—
	4	—	—	—	—	—	—
	5	—	—	—	—	—	—
6	—	—	—	—	—	—	

*1 SW5-7 Opens the indoor linear expansion valve as a countermeasure against the indoor unit in FAN, COOL, STOP, or thermo-OFF operation with refrigerant-shortage status due to an accumulation of liquid refrigerant.

*2 SW5-8 Countermeasure against room temperature rise for indoor unit in FAN and COOL mode.

8-5. OUTDOOR UNIT INPUT/OUTPUT CONNECTOR


• State (CN51)

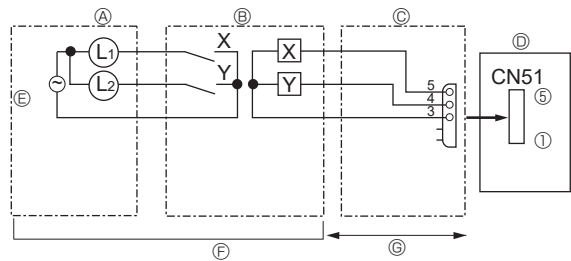

- A Distant control board
- B Relay circuit
- C External output adapter (PAC-SA88HA-E)
- D Outdoor unit control board
- E Lamp power supply
- F Procure locally
- G Maximum 10 m

L1: Error display lamp
L2: Compressor operation lamp
X, Y: Relay (coil rating: ≤ 0.9 W. 12 VDC)

• Auto change over (CN3N)

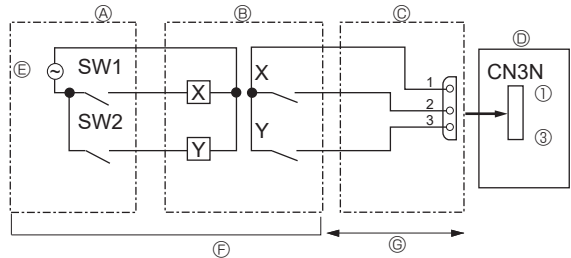


- A Remote control panel
- B Relay circuit
- C External input adapter (PAC-SC36NA-E)
- D Outdoor unit control board
- E Relay power supply
- F Procure locally
- G Maximum 10 m

SW1: Switch
SW2: Switch
X, Y: Relay (contact rating: ≥ 0.1 A. 15 VDC)
(min. applicable load: ≤ 1 mA)

	ON	OFF
SW1	Heating	Cooling
SW2	Validity of SW1	Invalidity of SW1

• Silent Mode/Demand Control (CN3D)

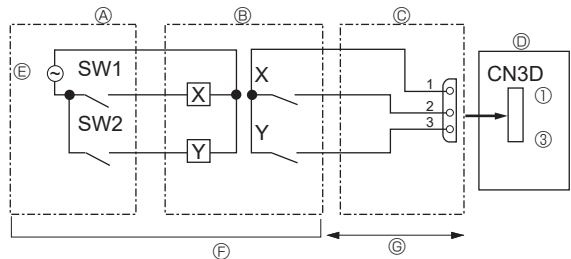




- A Remote control panel
- B Relay circuit
- C External input adapter (PAC-SC36NA-E)
- D Outdoor unit control board
- E Relay power supply
- F Procure locally
- G Maximum 10 m

SW1: Switch
SW2: Switch
X, Y: Relay (contact rating: ≥ 0.1 A. 15 VDC)
(min. applicable load: ≤ 1 mA)

The silent mode and the demand control are selected by switching the DIP switch 9-2 on outdoor controller board. It is possible to set it to the following power consumption (compared with ratings) by setting SW1, 2.

	Outdoor controller board DIP SW9-2	SW1	SW2	Function	
				Cooling	Heating
Silent mode	OFF	OFF	OFF	Normal	Normal
		ON	OFF	Silent mode	Silent mode
		OFF	ON	Super silent mode 1	Silent mode
		ON	ON	Super silent mode 2	Silent mode
Demand control	ON	OFF	OFF	100% (Normal)	
		ON	OFF	75%	
		ON	ON	50%	
		OFF	ON	0% (Stop)	

8-6. HOW TO CHECK THE PARTS

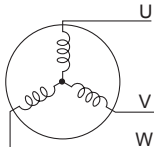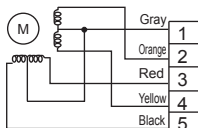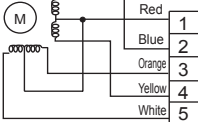Parts name	Checkpoints														
Thermistor (TH2) <HIC Pipe> Thermistor (TH3) <Outdoor Liquid Pipe> Thermistor (TH4) <Compressor> Thermistor (TH6) <Suction Pipe> Thermistor (TH7) <Ambient> Thermistor (TH8) <Heat Sink>	Disconnect the connector then measure the resistance with a multimeter. (At the ambient temperature 10 to 30°C) <table><tr><td></td><td>Normal</td><td>Abnormal</td></tr><tr><td>TH4</td><td>160 to 410 kΩ</td><td rowspan="5">Open or short</td></tr><tr><td>TH2</td><td rowspan="4">4.3 to 9.6 kΩ</td></tr><tr><td>TH3</td></tr><tr><td>TH6</td></tr><tr><td>TH7</td></tr><tr><td>TH8</td><td>39 to 105 kΩ</td></tr></table>		Normal	Abnormal	TH4	160 to 410 kΩ	Open or short	TH2	4.3 to 9.6 kΩ	TH3	TH6	TH7	TH8	39 to 105 kΩ	
	Normal	Abnormal													
TH4	160 to 410 kΩ	Open or short													
TH2	4.3 to 9.6 kΩ														
TH3															
TH6															
TH7															
TH8	39 to 105 kΩ														
Fan motor (MF1, MF2)	Refer to the next page.														
Solenoid valve coil <4-way valve> (21S4)	Measure the resistance between the terminals with a multimeter. (At the ambient temperature 20°C) <table><tr><td>Normal</td><td>Abnormal</td></tr><tr><td>2085 ± 208.5 Ω</td><td>Open or short</td></tr></table>	Normal	Abnormal	2085 ± 208.5 Ω	Open or short										
Normal	Abnormal														
2085 ± 208.5 Ω	Open or short														
Motor for compressor (MC) <div></div>	Measure the resistance between the terminals with a multimeter. (Winding temperature 20°C) <table><tr><td>Normal</td><td>Abnormal</td></tr><tr><td>0.237 ± 0.012 Ω</td><td>Open or short</td></tr></table>	Normal	Abnormal	0.237 ± 0.012 Ω	Open or short										
Normal	Abnormal														
0.237 ± 0.012 Ω	Open or short														
Solenoid valve coil <Bypass valve> (SV1) <Oil return valve> (SV3)	Measure the resistance between the terminals with a multimeter. (At the ambient temperature 20°C) <table><tr><td>Normal</td><td>Abnormal</td></tr><tr><td>1182.5 ± 83 Ω</td><td>Open or short</td></tr></table>	Normal	Abnormal	1182.5 ± 83 Ω	Open or short										
Normal	Abnormal														
1182.5 ± 83 Ω	Open or short														
Linear expansion Valve (LEV-A) <div></div>	<table><tr><td colspan="4">Normal</td><td>Abnormal</td></tr><tr><td>Gray - Black</td><td>Gray - Red</td><td>Gray - Yellow</td><td>Gray - Orange</td><td rowspan="2">Open or short</td></tr><tr><td colspan="4">46 ± 3 Ω</td></tr></table>	Normal				Abnormal	Gray - Black	Gray - Red	Gray - Yellow	Gray - Orange	Open or short	46 ± 3 Ω			
Normal				Abnormal											
Gray - Black	Gray - Red	Gray - Yellow	Gray - Orange	Open or short											
46 ± 3 Ω															
Linear expansion Valve (LEV-B) <div></div>	<table><tr><td colspan="4">Normal</td><td>Abnormal</td></tr><tr><td>Red - White</td><td>Red - Orange</td><td>Red - Yellow</td><td>Red - Blue</td><td rowspan="2">Open or short</td></tr><tr><td colspan="4">46 ± 4 Ω</td></tr></table>	Normal				Abnormal	Red - White	Red - Orange	Red - Yellow	Red - Blue	Open or short	46 ± 4 Ω			
Normal				Abnormal											
Red - White	Red - Orange	Red - Yellow	Red - Blue	Open or short											
46 ± 4 Ω															


Check method of DC fan motor (fan motor/outdoor multi controller circuit board)

1. Notes:

- High voltage is applied to the connector (CNF1, 2) for the fan motor. Pay attention to the service.
- Do not pull out the connector (CNF1, 2) for the motor with the power supply on.
(It causes trouble of the outdoor multi controller circuit board and fan motor.)

2. Self check

Symptom: The outdoor fan cannot rotate.

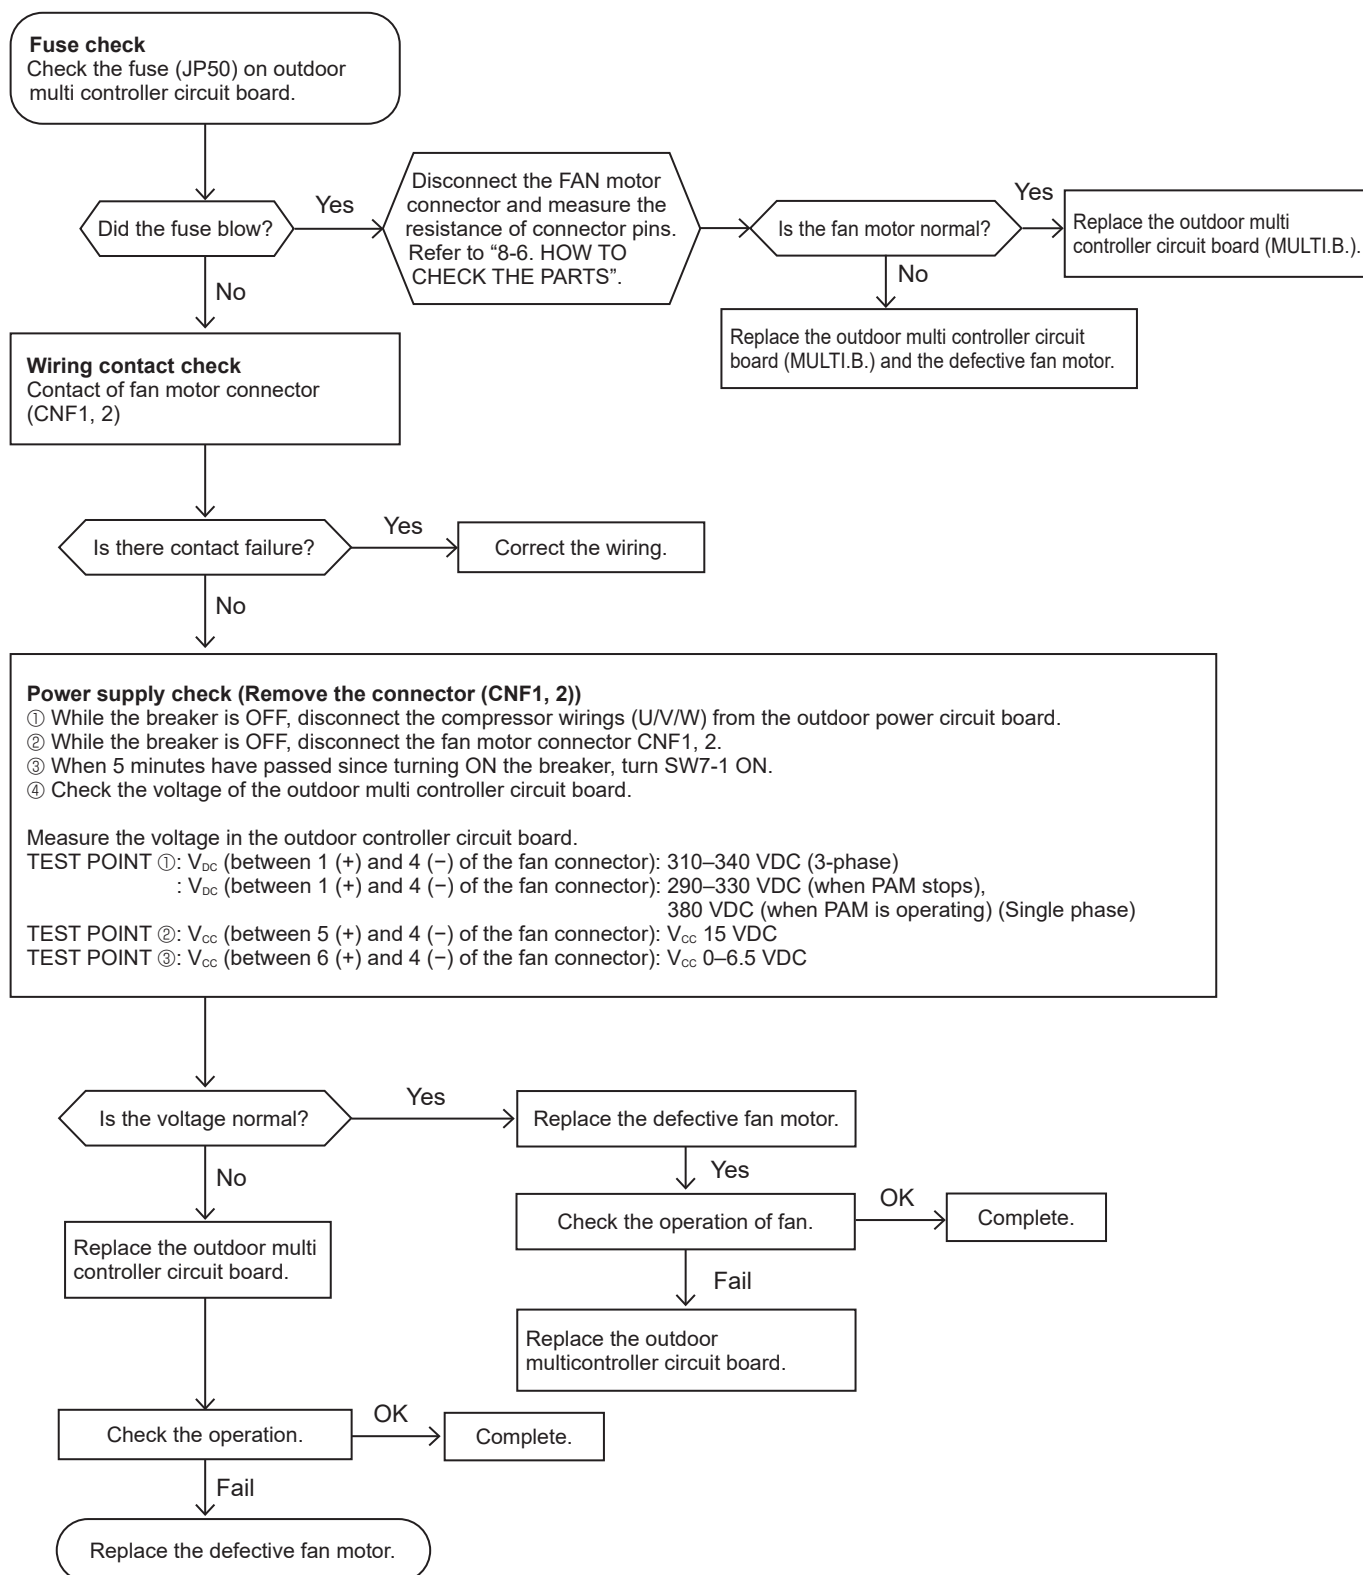

Note: Turn SW7-1 OFF after the troubleshooting completes.

The fan sometimes starts on-off cycle operation during low-load operation or cooling at low ambient temperature.
It is not abnormal; the operation ensures reliability of the product.

8-7. HOW TO CHECK THE COMPONENTS

<Thermistor feature chart>

Low temperature thermistors


- Thermistor <HIC Pipe> (TH2)
- Thermistor <Outdoor Liquid Pipe> (TH3)
- Thermistor <Suction Pipe> (TH6)
- Thermistor <Ambient> (TH7)

Thermistor R0 = 15 kΩ ± 3 %

B constant = 3480 ± 1 %

$$R_t = 15 \exp \left\{ 3480 \left(\frac{1}{273+t} - \frac{1}{273} \right) \right\}$$

0°C	15 kΩ	30°C	4.3 kΩ
10°C	9.6 kΩ	40°C	3.0 kΩ
20°C	6.3 kΩ		
25°C	5.2 kΩ		

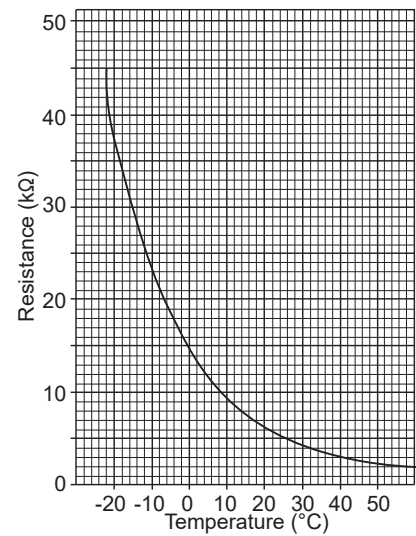

Medium temperature thermistor


- Thermistor <Heat Sink> (TH8)

Thermistor R50 = 17 kΩ ± 2 %

B constant = 4150 ± 3 %

$$R_t = 17 \exp \left\{ 4150 \left(\frac{1}{273+t} - \frac{1}{323} \right) \right\}$$

0°C	180 kΩ
25°C	50 kΩ
50°C	17 kΩ
70°C	8 kΩ
90°C	4 kΩ

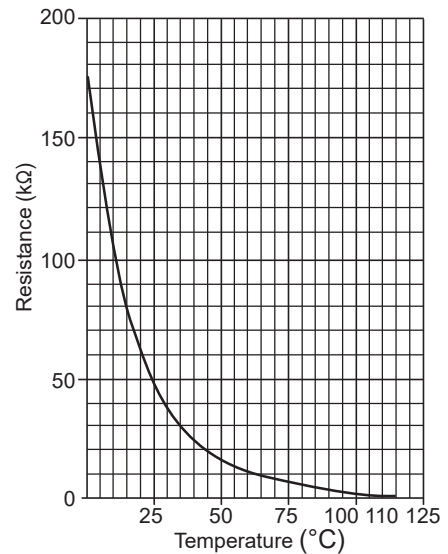

High temperature thermistor


- Thermistor <Compressor> (TH4)

Thermistor R120 = 7.465 kΩ ± 2 %

B constant = 4057 ± 2 %

$$R_t = 7.465 \exp \left\{ 4057 \left(\frac{1}{273+t} - \frac{1}{393} \right) \right\}$$

20°C	250 kΩ	70°C	34 kΩ
30°C	160 kΩ	80°C	24 kΩ
40°C	104 kΩ	90°C	17.5 kΩ
50°C	70 kΩ	100°C	13.0 kΩ
60°C	48 kΩ	110°C	9.8 kΩ

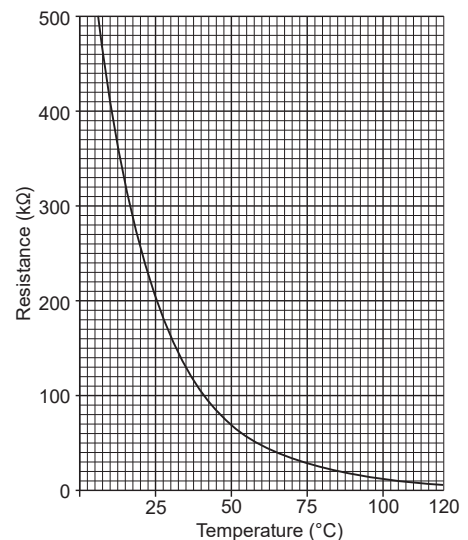

<HIGH PRESSURE SENSOR>

• Comparing the High Pressure Sensor Measurement and Gauge Pressure

By configuring the digital display setting switch (SW1) as shown in the figure below, the pressure as measured by the high pressure sensor appears on the LED1 on the control board.



The figure at left shows that the switches 1 through 4 are set to ON and 5 through 8 are set to OFF.

(1) While the outdoor unit is stopped, compare the gauge pressure and the pressure displayed on self-diagnosis LED1, 2.

- 1) When the gauge pressure is between 0 and 0.098 MPaG [14 PSIG], internal pressure is caused due to gas leak.
- 2) When the pressure displayed on self-diagnosis LED1, 2 is between 0 and 0.098 MPaG [14 PSIG], the connector may be defective or be disconnected. Check the connector and go to (4).
- 3) When the pressure displayed on self-diagnosis LED1, 2 exceeds 5.0 MPaG [725 PSIG], go to (3).
- 4) If other than 1), 2) or 3), compare the pressures while the sensor is running. Go to (2).

(2) Compare the gauge pressure and the pressure displayed on self-diagnosis LED1,2 after 15 minutes have passed since the start of operation. (Compare them by MPaG [PSIG] unit.)

- 1) When the difference between both pressures is within 0.25 MPaG [36 PSIG], both the high pressure sensor and the control board are normal.
- 2) When the difference between both pressures exceeds 0.25 MPaG [36 PSIG], the high pressure sensor has a problem. (performance deterioration)
- 3) When the pressure displayed on self-diagnosis LED1, 2 does not change, the high pressure sensor has a problem.

(3) Remove the high pressure sensor from the control board to check the pressure on the self-diagnosis LED1, 2.

- 1) When the pressure displayed on self-diagnosis LED1, 2 is between 0 and 0.098 MPaG [14 PSIG], the high pressure sensor has a problem.
- 2) When the pressure displayed on self-diagnosis LED1, 2 is approximately 5.0 MPaG [725 PSIG], the control board has a problem.

(4) Remove the high pressure sensor from the control board, and short-circuit between the pin 2 and pin 3 connectors (63HS) to check the pressure with self-diagnosis LED1, 2.



- 1) When the pressure displayed on the self-diagnosis LED1, 2 exceeds 5.0 MPaG [725 PSIG], the high pressure sensor has a problem.
- 2) If other than 1), the control board has a problem.

• High Pressure Sensor Configuration (63HS)

The high pressure sensor consists of the circuit shown in the figure below. If 5 VDC is applied between the red and the black wires, voltage corresponding to the pressure between the white and the black wires will be output, and the value of this voltage will be converted by the microprocessor. The output voltage is 0.078 V per 0.098 MPaG [14 PSIG].

Note: The pressure sensor on the body side is designed to connect to the connector. The connector pin number on the body side is different from that on the control board side.

	Body side	Control board side
Vcc	Pin 1	Pin 3
Vout	Pin 2	Pin 2
GND	Pin 3	Pin 1

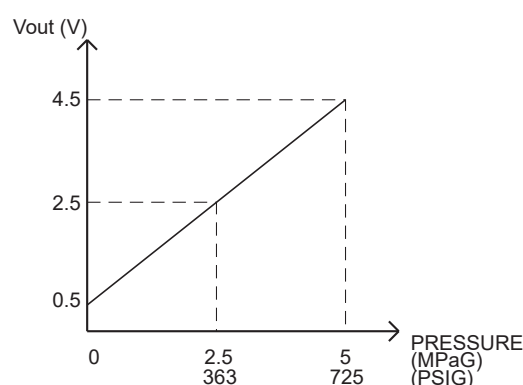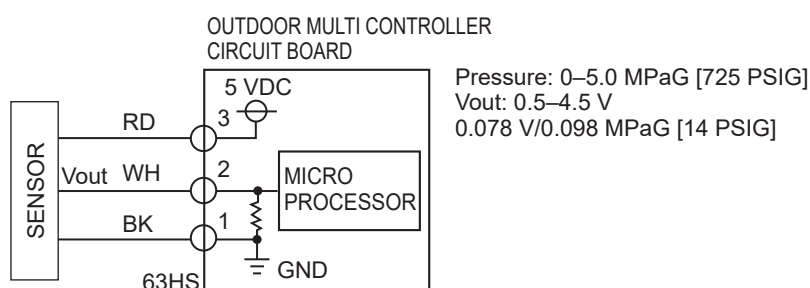


- ③—①: 5 V(DC)
②—①: Output Vout (DC)

<LOW PRESSURE SENSOR>

• Comparing the Low Pressure Sensor Measurement and Gauge Pressure

By configuring the digital display setting switch (SW1) as shown in the figure below, the pressure as measured by the low pressure sensor appears on the LED1 on the control board.

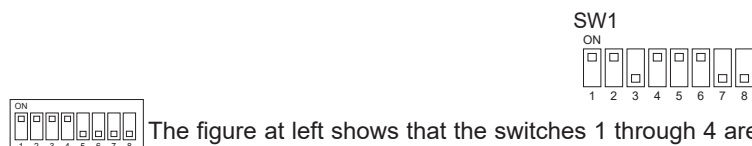

The figure at left shows that the switches 1 through 4 are set to ON and 5 through 8 are set to OFF.


- (1) **While the outdoor unit is stopped, compare the gauge pressure and the pressure displayed on self-diagnosis LED1, 2.**
 - 1) When the gauge pressure is between 0 and 0.098 MPaG [14 PSIG], internal pressure is caused due to gas leak.
 - 2) When the pressure displayed on self-diagnosis LED1, 2 is between 0 and 0.098 MPaG [14 PSIG], the connector may be defective or be disconnected. Check the connector and go to (4).
 - 3) When the outdoor temperature is 30°C [86°F] or less, and the pressure displayed on self-diagnosis LED1, 2 exceeds 1.7 MPaG [247 PSIG], go to (3).
When the outdoor temperature exceeds 30°C [86°F], and the pressure displayed on self-diagnosis LED1, 2 exceeds 1.7 MPaG [247 PSIG], go to (5).
 - 4) If other than 1), 2) or 3), compare the pressures while the sensor is running. Go to (2).
- (2) **Compare the gauge pressure and the pressure displayed on self-diagnosis LED1, 2 after 15 minutes have passed since the start of operation. (Compare them by MPaG [PSIG] unit .)**
 - 1) When the difference between both pressures is within 0.2 MPaG [29 PSIG], both the low pressure sensor and the control board are normal.
 - 2) When the difference between both pressures exceeds 0.2 MPaG [29 PSIG], the low pressure sensor has a problem. (performance deterioration)
 - 3) When the pressure displayed on the self-diagnosis LED1, 2 does not change, the low pressure sensor has a problem.
- (3) **Remove the low pressure sensor from the control board to check the pressure with the self-diagnosis LED1, 2 display.**
 - 1) When the pressure displayed on the self-diagnosis LED1,2 is between 0 and 0.098 MPaG [14 PSIG], the low pressure sensor has a problem.
 - 2) When the pressure displayed on self-diagnosis LED1, 2 is approximately 1.7 MPaG [247 PSIG], the control board has a problem.
- (4) **Remove the low pressure sensor from the control board, and short-circuit between the pin 2 and pin 3 connectors (63LS) to check the pressure with the self-diagnosis LED1, 2.**
 - 1) When the pressure displayed on the self-diagnosis LED1, 2 exceeds 1.7 MPaG [247 PSIG], the low pressure sensor has a problem.
 - 2) If other than 1), the control board has a problem.
- (5) **Remove the high pressure sensor (63HS) from the control board, and insert it into the connector for the low pressure sensor (63LS) to check the pressure with the self-diagnosis LED1, 2.**
 - 1) When the pressure displayed on the self-diagnosis LED1, 2 exceeds 1.7 MPaG [247 PSIG], the control board has a problem.
 - 2) If other than 1), go to (2).

• Low Pressure Sensor Configuration (63LS)


The low pressure sensor consists of the circuit shown in the figure below. If 5 VDC is applied between the red and the black wires, voltage corresponding to the pressure between the white and the black wires will be output, and the value of this voltage will be converted by the microprocessor. The output voltage is 0.173 V per 0.098 MPaG [14 PSIG].

Note: The pressure sensor on the body side is designed to connect to the connector. The connector pin number on the body side is different from that on the control board side.

	Body side	Control board side
Vcc	Pin 1	Pin 3
Vout	Pin 2	Pin 2
GND	Pin 3	Pin 1

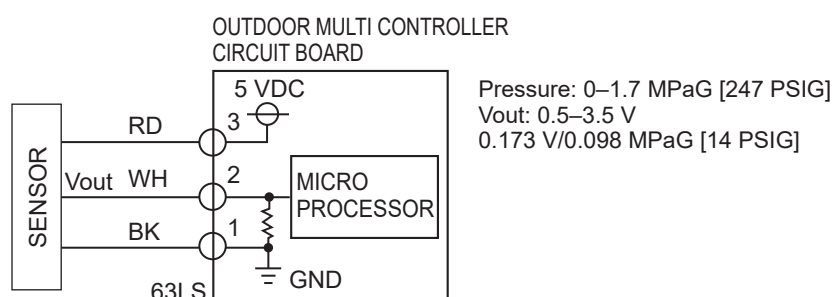


- ③—①: 5 V (DC)
②—①: Output Vout (DC)

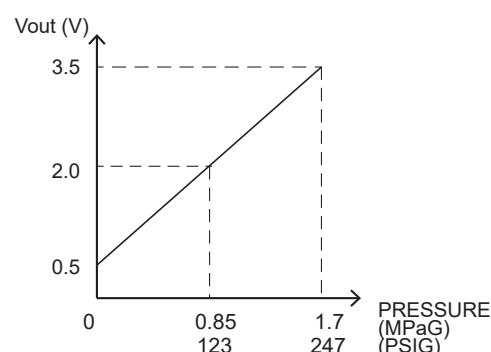

8-8. TEST POINT DIAGRAM

Outdoor multi controller circuit board

<CAUTION> TEST POINT ① is high voltage.

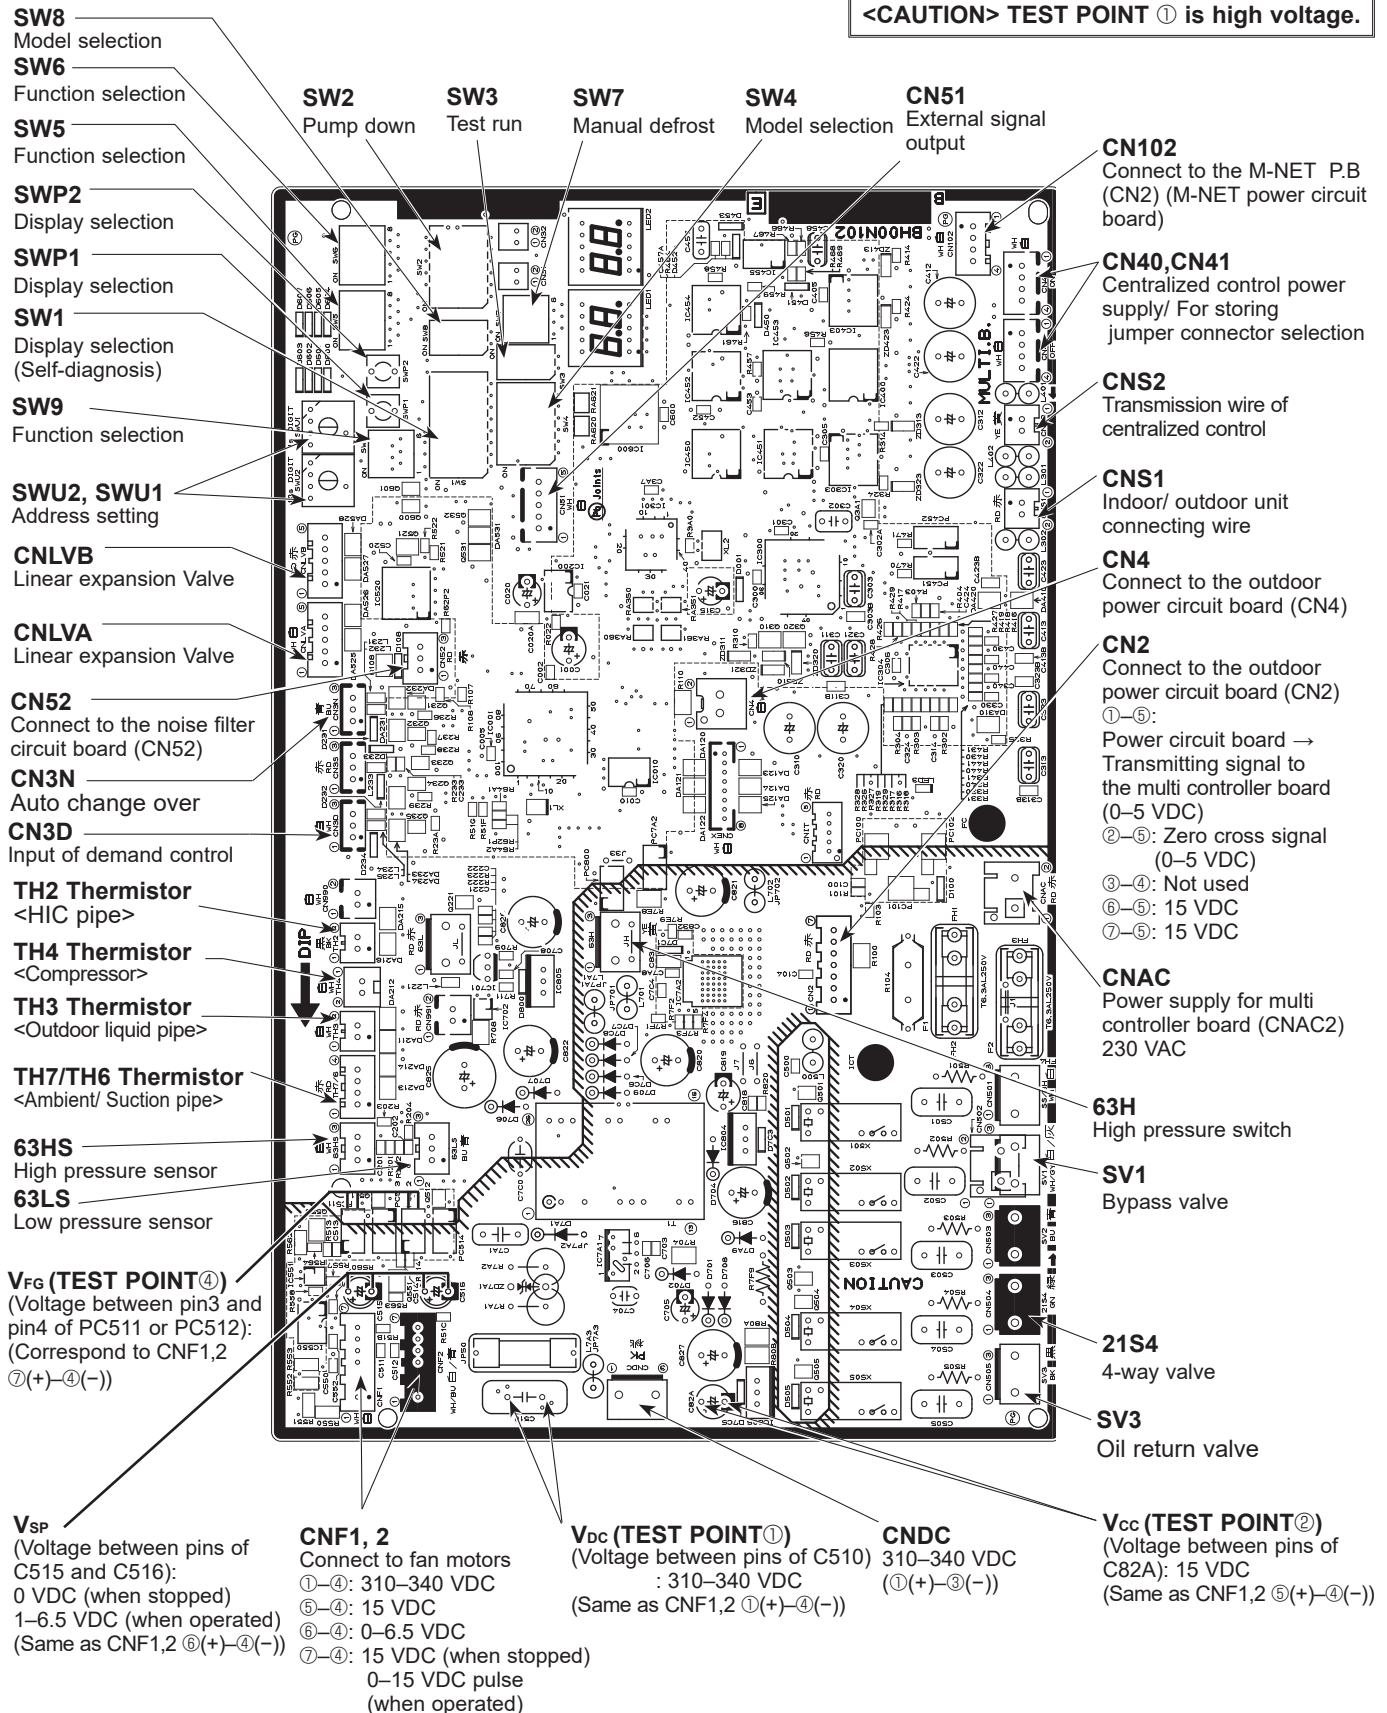

Outdoor power circuit board

Brief Check of POWER MODULE

If they are short-circuited, it means that they are broken.
Measure the resistance in the following points (connectors, etc.).

1. Check of Diode module (DS10)

L1 - P1, L2 - P1, L3 - P1, L1 - N1, L2 - N1, L3 - N1

2. Check of IPM (IC700)

P2 - U, P2 - V, P2 - W, N2 - U, N2 - V, N2 - W

Note: The marks L1, L2, L3, N1, N2, P1, P2, U, V and W shown in the diagram are not actually printed on the board.

TBU, TBV, TBW

Connect to the compressor (MC)
Voltage among phases:
10–400 VAC

TBP2
Connect to the DCL

TAB connector on X52CA
Connect to the RS resistor

TBP1
Connect to the DCL

IPM (IC700)

Diode module (DS10)

TBL3
TBL2
TBL1
Connect to the outdoor noise filter circuit board (LO1, LO2, LO3) 400 VAC

CN6
Thermistor <Heat Sink> (TH8)

CN5
Detection of primary current (Connect to the outdoor noise filter circuit board (CNCT))

CN4
Connect to the outdoor controller circuit board (CN4)

CN2

Connect to the outdoor controller circuit board (CN2)

- ①–⑤: Power circuit board → Transmitting signal to the controller board (0–5 VDC)
- ②–⑤: Zero cross signal (0–5 VDC)
- ③–④: Not used
- ⑥–⑤: 15 VDC
- ⑦–⑤: 15 VDC

[⑤ : ⊖ ①, ②, ⑥, ⑦ : ⊕]

Outdoor noise filter circuit board

CNCT

Primary current
Connect to the outdoor
power circuit board
(CN5)

LO1, LO2, LO3 POWER SUPPLY

LO1-LO2/LO2-LO3/
LO3-LO1: 400 VAC
input
Connect to the outdoor
power circuit board
(TBL1, TBL2, TBL3)

LI1, LI2, LI3, NI POWER SUPPLY

LI1-LI2/LI2-LI3/LI3-LI1: 400 VAC input
LI1-NI/LI2-NI/LI3-NI: 230 VAC input
Connect to the terminal block (TB1)

CNAC1 230 VAC

Connect to the M-NET power circuit board (CN1)

EI

Connect to the electrical parts box

E3

Connect to the electrical
parts box

CNDC

Connect to the outdoor
multi controller circuit
board (CNDC)

CNAC2 230 VAC

Connect to the outdoor
multi controller circuit
board (CNAC)

E2


Connect to the electrical
parts box

CNL

Connect to the DCL2

CN52

Connect to the outdoor
multi controller circuit
board (CN52)

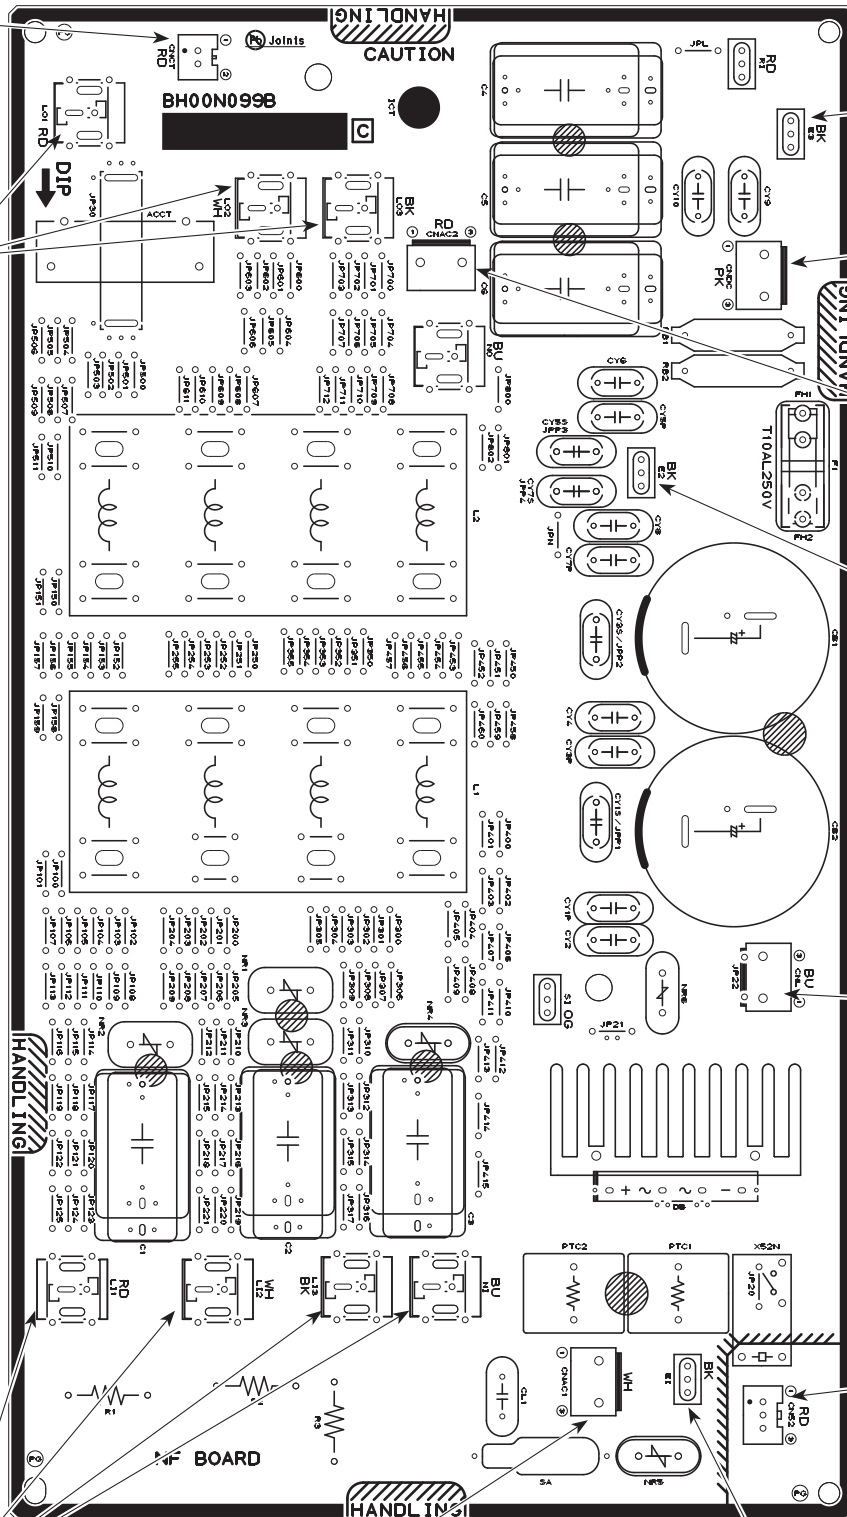

8-9. OUTDOOR UNIT FUNCTIONS

SW: setting
0....OFF
1....ON

No.	SW1 setting 12345678	Display mode	Display on the LED1, 2 (display data)								Notes
			1	2	3	4	5	6	7	8	
0	00000000	Relay output display	Compressor operation	52C	21S4	SV1	SV2	SV3	-	Always lighting	ON: light on OFF: light off •When abnormality occurs, check display.
1	10000000	Check display	0000-9999 (Alternating display of addresses and check code)	No.2 unit check	No.3 unit check	No.4 unit check	No.5 unit check	No.6 unit check	No.7 unit check	No.8 unit check	Light on at time of abnormality
2	01000000	Indoor unit check status	No.1 unit check	No.10 unit check	No.11 unit check	No.12 unit check	No.13 unit check	No.14 unit check	No.15 unit check	No.16 unit check	
3	11000000		No.9 unit check	No.18 unit check	No.19 unit check	No.20 unit check	No.21 unit check	No.22 unit check	No.23 unit check	No.24 unit check	
4	00100000		No.17 unit check	No.26 unit check	No.27 unit check	No.28 unit check	No.29 unit check	No.30 unit check	-	-	
5	10100000	Protection input	High pressure abnormality	Superheat due to low discharge temperature	Compressor shell temperature abnormality	TH4 abnormality	TH3 abnormality	Outdoor fan rotation frequency abnormality	TH7 abnormality	TH8 abnormality	Display of detected microprocessor protection or abnormality
6	01100000	Protection input	Heat sink overheating	Compressor over current interception	Voltage abnormality	Insufficient refrigerant amount abnormality	Current sensor/primary current abnormality	63LS abnormality	63HS abnormality	start over current interception abnormality delay	
7	11100000	Protection input	Abnormality in the number of indoor units	Address double setting abnormality	Indoor unit capacity error	Over capacity	Indoor unit address error	Outdoor unit address error	Current sensor open/short	serial communication (outdoor unit)	
8	00010000	Abnormality delay display 1	High pressure abnormality delay	Superheat due to low discharge temperature delay	Compressor shell temperature abnormality delay	TH4 abnormality delay	TH3 abnormality delay	Outdoor fan rotation frequency abnormality delay	TH7 abnormality delay	TH8 abnormality delay	
9	10010000	Abnormality delay display 2	Heat sink overheating delay	Compressor over current interception delay	Voltage abnormality delay	Insufficient refrigerant amount abnormality delay	Current sensor/primary current abnormality delay	63LS abnormality delay	63HS abnormality delay	start over current interception abnormality delay	Display of all abnormalities remaining in abnormality delay
10	01010000	Abnormality delay display 3	63LS abnormality delay	TH2 abnormality delay	4-way valve abnormality delay	Delay caused by closed valve in cooling mode	Power module abnormality delay	TH6 abnormality delay	Current sensor open/short delay	Delay of failure in 12 VDC power supply circuit on power circuit board	
11	11010000	Abnormality delay history 1	High pressure abnormality delay	Superheat due to low discharge temperature delay	Compressor shell temperature abnormality delay	TH4 abnormality delay	TH3 abnormality delay	Outdoor fan rotation frequency abnormality delay	TH7 abnormality delay	TH8 abnormality delay	
12	00110000	Abnormality delay history 2	Heat sink overheating delay	Compressor over current interception delay	Voltage abnormality delay	Insufficient refrigerant amount abnormality delay	Current sensor/primary current abnormality delay	63LS abnormality delay	63HS abnormality delay	start over current interception abnormality delay	
13	10110000	Abnormality delay history 3	63LS abnormality delay	TH2 abnormality delay	4-way valve abnormality delay	Delay caused by closed valve in cooling mode	Power module abnormality delay	TH6 abnormality delay	Current sensor open/short delay	Delay of failure in 12 VDC power supply circuit on power circuit board	Display of all abnormalities up to present (including abnormality delays) • History record in 1 is the latest; records become older in sequence; history record in 10 is the oldest.
14	01110000	Abnormality code history 1 (the latest)	Abnormality code history 1	Superheat due to low discharge temperature delay	Compressor shell temperature abnormality delay	TH4 abnormality delay	TH3 abnormality delay	Outdoor fan rotation frequency abnormality delay	TH7 abnormality delay	TH8 abnormality delay	
15	11110000	Abnormality code history 2	Abnormality code history 2	Compressor over current interception delay	Voltage abnormality delay	Insufficient refrigerant amount abnormality delay	Current sensor/primary current abnormality delay	63LS abnormality delay	63HS abnormality delay	start over current interception abnormality delay	
16	00001000	Abnormality code history 3	Abnormality code history 3	TH2 abnormality delay	4-way valve abnormality delay	Delay caused by closed valve in cooling mode	Power module abnormality delay	TH6 abnormality delay	Current sensor open/short delay	Delay of failure in 12 VDC power supply circuit on power circuit board	
17	10001000	Abnormality code history 4	Abnormality code history 4	High pressure abnormality delay	Superheat due to low discharge temperature delay	Compressor shell temperature abnormality delay	TH4 abnormality delay	TH3 abnormality delay	Outdoor fan rotation frequency abnormality delay	TH7 abnormality delay	Display of all abnormalities up to present (including abnormality delays) • History record in 1 is the latest; records become older in sequence; history record in 10 is the oldest.
18	01001000	Abnormality code history 5	Abnormality code history 5	Compressor over current interception delay	Voltage abnormality delay	Insufficient refrigerant amount abnormality delay	Current sensor/primary current abnormality delay	63LS abnormality delay	63HS abnormality delay	start over current interception abnormality delay	
19	11001000	Abnormality code history 6	Abnormality code history 6	TH2 abnormality delay	4-way valve abnormality delay	Delay caused by closed valve in cooling mode	Power module abnormality delay	TH6 abnormality delay	Current sensor open/short delay	Delay of failure in 12 VDC power supply circuit on power circuit board	
20	00101000	Abnormality code history 7	Abnormality code history 7	High pressure abnormality delay	Superheat due to low discharge temperature delay	Compressor shell temperature abnormality delay	TH4 abnormality delay	TH3 abnormality delay	Outdoor fan rotation frequency abnormality delay	TH7 abnormality delay	
21	10101000	Abnormality code history 8	Abnormality code history 8	Compressor over current interception delay	Voltage abnormality delay	Insufficient refrigerant amount abnormality delay	Current sensor/primary current abnormality delay	63LS abnormality delay	63HS abnormality delay	start over current interception abnormality delay	
22	01101000	Abnormality code history 9	Abnormality code history 9	TH2 abnormality delay	4-way valve abnormality delay	Delay caused by closed valve in cooling mode	Power module abnormality delay	TH6 abnormality delay	Current sensor open/short delay	Delay of failure in 12 VDC power supply circuit on power circuit board	
23	11101000	Abnormality code history 10 (the oldest)	Abnormality code history 10	High pressure abnormality delay	Superheat due to low discharge temperature delay	Compressor shell temperature abnormality delay	TH4 abnormality delay	TH3 abnormality delay	Outdoor fan rotation frequency abnormality delay	TH7 abnormality delay	
23	11101000	Abnormality code history 10 (the oldest)	Abnormality code history 10	High pressure sensor (63HS)	Discharge superheat (SHd)	High pressure sensor (63HS)	Discharge superheat (SHd)	4500	Outdoor fan motor	-	

		Display on the LED1, 2 (display data)										Notes
No.	SW1 setting	Display mode		1	2	3	4	5	6	7	8	
24	00011000	Cumulative time	0-9999 (unit: 1 hour)									Display of cumulative compressor operating time
25	10011000	Cumulative time	0-9999 (unit: 10 hour)									
26	01011000	Outdoor unit operation display	Compressor energizing /no	Compressor operating prohibition / no	Compressor in operation / stop	Abnormality detection (check) / normal	-	-	-	-	Light ON / Light OFF	
27	11011000	Indoor unit operation mode	No.1 unit mode	No.2 unit mode	No.3 unit mode	No.4 unit mode	No.5 unit mode	No.6 unit mode	No.7 unit mode	No.8 unit mode	Cooling: light on Heating: light blinking Stop fan: light off	
28	00111000		No.9 unit mode	No.10 unit mode	No.11 unit mode	No.12 unit mode	No.13 unit mode	No.14 unit mode	No.15 unit mode	No.16 unit mode		
29	10111000		No.17 unit mode	No.18 unit mode	No.19 unit mode	No.20 unit mode	No.21 unit mode	No.22 unit mode	No.23 unit mode	No.24 unit mode		
30	01111000		No.25 unit mode	No.26 unit mode	No.27 unit mode	No.28 unit mode	No.29 unit mode	No.30 unit mode	-	-		
31	11111000	Indoor unit operation display	No.1 unit operation	No.2 unit operation	No.3 unit operation	No.4 unit operation	No.5 unit operation	No.6 unit operation	No.7 unit operation	No.8 unit operation	Thermo ON: light on Thermo OFF: light off	
32	00000100		No.9 unit operation	No.10 unit operation	No.11 unit operation	No.12 unit operation	No.13 unit operation	No.14 unit operation	No.15 unit operation	No.16 unit operation		
33	10000100		No.17 unit operation	No.18 unit operation	No.19 unit operation	No.20 unit operation	No.21 unit operation	No.22 unit operation	No.23 unit operation	No.24 unit operation		
34	01000100		No.25 unit operation	No.26 unit operation	No.27 unit operation	No.28 unit operation	No.29 unit operation	No.30 unit operation	-	-		
35	11000100	Capacity code (No. 1 to 30 indoor units)	0-255									Address and display data are alternately displayed every second. Pressing SWP2 changes the displayed unit in ascending order; it returns to No. 1 after No. 30.
36	00100100	IC operation mode (No. 1 to 30 units)	STOP	Fan	Cooling thermo-ON	Cooling thermo-OFF	Heating thermo-ON	Heating thermo-OFF	-	-		
37	10100100	OC operation mode	Compressor ON/OFF	Heating/Cooling	Abnormal/normal	DEFROST/no	Refrigerant recovery / no	Excitation current / no	3-min delay / no	-	Light on / light off	
38	01100100	External connection status	CN3N1-3 input	CN3N1-2 input	CN3S1-2 input	CN3D1-3 input	CN3D1-2 input	-	-	-	Input: light off No input: light on	
39	11100100	Communication demand capacity	0-255 (%)									Display of communication demand capacity
40	00010100	Number of compressor ON/OFF	0000-9999 (unit: x10)									Display a count of compressor operation/stop
41	10010100	Compressor operating current	0-999.9 (Arms)									Display detected current
42	01010100	Input current of outdoor unit										
43	11010100	Thermo-ON operating time	0000-9999 (unit: x10)									Display cumulative time of thermo-ON operation
44	00110100	Total capacity of thermo-ON	0-255									Display total capacity code of indoor units with thermo-ON
45	10110100	Number of indoor units	0-255									Display number of connected indoor units
46	01110100	DC bus voltage	0-9999 (V)									Display bus voltage
47	11110100	State of LEV control	Cooling/Heating: Td overheating prevention	Cooling: SHd decrease prevention	Cooling/Heating: Min.Sj correction depends on Td	Cooling/Heating: Min.Sj correction depends on Shd	Heating: LEV opening correction depends on Pd	Heating: LEV opening correction depends on Td	Cooling: Correction of high compression ratio prevention	-	Display active LEV control	
48	00001100	State of compressor frequency control 1	Condensing temperature limit control	Compressor temperature control	-	Discharge temp. (heating) backup control	Pd abnormality control (heating)	Pd Back up control(heating)	-	Freeze prevention control at the beginning of SHd	Display active compressor frequency control (High pressure and overheating control: only when connected to Ecodan)	
49	10001100	State of compressor frequency control 2	Heat sink overheating prevention control	Secondary current control	Input current control	Unbalance control of 3-phase power supply	Frequency restrain of receipt voltage change	Low pressure decrease prevention	Hz-up inhibit control at the beginning of SHd	High pressure and overheating control		
50	01001100	Protection input	63LS abnormality	HIC abnormality	-	Frozen protection	4-way valve disconnection abnormality	Delay caused by closed valve in cooling mode	TH6 abnormality	Power module abnormality	Display detected microprocessor protection or abnormality	
51	11001100	The second current value when microprocessor of POWER BOARD abnormality is detected	0-999.9 (Arms)									Display data at time of abnormality
52	00101100	Heatsink temperature when microprocessor of POWER BOARD abnormality is detected	-99.9-999.9 (°C)									

No.	SW1 setting 12345678	Display mode	Display on the LED1, 2 (display data)								Notes
			1	2	3	4	5	6	7	8	
53	10101100	Outdoor LEV-A opening pulse	0-2000 (pulse)								Display of data at time of abnormality and abnormality delay
54	01101100	Outdoor LEV-A opening pulse abnormality delay									
55	11101100	Outdoor LEV-A opening pulse abnormality									
56	00011100	Outdoor LEV-B opening pulse									
57	10011100	Outdoor LEV-B opening pulse abnormality delay									
58	01011100	Outdoor LEV-B opening pulse abnormality									
59	11011100	63LS (Low pressure)									
60	00111100	63LS abnormality delay									
61	10111100	63LS abnormality	-99.9-999.9 (Kg/cm ²)								Display of data from sensor
62	01111100	TH2 (HIC pipe)	-99.9-999.9 (Kg/cm ²)								Display of data at time of abnormality and abnormality delay
63	11111100	TH2 (HIC) abnormality delay	-99.9-999.9 (°C)								Display of data from thermistor
64	00000010	TH2 (HIC) abnormality	-99.9-999.9 (°C)								Display of data at time of abnormality and abnormality delay
65	10000010	Operational frequency	0-255 (Hz)								Display of actual operating frequency
66	01000010	Target frequency	0-255 (Hz)								Display of target frequency
67	11000010	Outdoor fan control step number	0-15								Display of number of outdoor fan control steps (target)
68	00100010	Indoor LEV Opening pulse (No. 1 to 30 units)	0-2000 (pulse)								Address and display data are alternately displayed every second. Pressing SWP2 changes the displayed unit in ascending order; it returns to No. 1 after No. 30.
69	10100010	High pressure sensor (Pt)	-99.9-999.9 (Kg/cm ²)								Display of detected data of outdoor unit sensors and thermistors
70	01100010	TH4 (Compressor) data									
71	11100010	TH6 (Suction pipe) data									
72	00010010	TH7 (Ambient) data	-99.9-999.9 (°C)								
73	10010010	TH3 (Outdoor liquid pipe) data									Address and display data are alternately displayed every second. Pressing SWP2 changes the displayed unit in ascending order; it returns to No. 1 after No. 30.
74	01010010	TH8 (Heat sink) data									
75	11010010	TH23 (Gas) data (No. 1 to 30 indoor units)	-99.9-999.9 (°C)								
76	00110010	TH22 (Liquid) data (No. 1 to 30 indoor units)	-99.9-999.9 (°C)								
77	10110010	TH21 (Intake) data (No. 1 to 30 indoor units)	-99.9-999.9 (°C)								Display of outdoor subcool (SC) data
78	01110010	Outdoor SC (cooling)	-99.9-999.9 (°C)								
79	11110010	Target subcool step	-2-4								
80	00001010	Indoor SC/SH (No. 1 to 30 units)	-99.9-999.9 (°C) during heating: subcool (SC)/during cooling: superheat (SH) (Fixed to "0" during cooling operation)								Address and display data are alternately displayed every second. Pressing SWP2 changes the displayed unit in ascending order; it returns to No. 1 after No. 30.

No.		SW1 setting	Display mode	Display on the LED1, 2 (display data)								Notes
		12345678		1	2	3	4	5	6	7	8	
81	10001010		Discharge superheat (SHd)	-99.9~999.9 (°C)								Display of outdoor discharge superheat (SHd) data
82	01001010		Target Ptdisplay (heating)	Pdm (0.0~30.0) (kgf/cm ²)								Display of all control target data
83	11001010		Target ET display (cooling)	ETm (-2.0~23.0) (°C)								
84	00101010		Target outdoor SC (cooling)	SCm (0.0~20.0) (°C)								
85	10101010		Target indoor SC/SH (No. 1 to 30 units)	SCm/SHm (0.0~20.0) (°C)								Address and display data are alternately displayed every second. Pressing SWP2 changes the displayed unit in ascending order; it returns to No. 1 after No. 30.
86	01101010		Actual frequency of abnormality delay	0~255 (Hz)								Display of actual frequency at time of abnormality delay
87	11101010		Fan step number at time of abnormality delay	0~15								Display of fan step number at time of abnormality delay
88	00011010		Indoor LEV opening pulse abnormality delay (No. 1 to 30 units)	0~2000 (pulse)								Address and display data are alternately displayed every second. Pressing SWP2 changes the displayed unit in ascending order; it returns to No. 1 after No. 30.
89	10011010		High pressure sensor data at time of abnormality delay	-99.9~999.9 (Kgf/cm ²)								Display of data from high pressure sensor, all thermistors, and SC/SH at time of abnormality delay
90	01011010		TH4 (Compressor) sensor data at time of abnormality delay	-99.9~999.9 (°C)								
91	11011010		TH6 (Suction pipe) sensor data at time of abnormality delay									
92	00111010		TH3 (Outdoor liquid pipe) sensor data at time of abnormality delay									
93	10111010		TH8 (Heat sink) sensor data at time of abnormality delay									
94	01111010		OC SC (cooling) at time of abnormality delay									
95	11111010		IC SC/SH at time of abnormality delay (No. 1 to 30 units)	-99.9~999.9(°C) During heating: subcool (SC) During cooling: superheat (SH) (Fixed to "0" during cooling operation)								Address and display data are alternately displayed every second. Pressing SWP2 changes the displayed unit in ascending order; it returns to No. 1 after No. 30.
96	00000110		ROM version monitor	0.00~99.99 (ver)								Display of version data of ROM
97	10000110		ROM type									Display of ROM type
98	01000110		Check sum mode	0000~FFFF								Display of check sum code of ROM

No.	SW1 setting 12345678	Display mode	Display on the LED1, 2 (display data)								Notes	
			1	2	3	4	5	6	7	8		
99	11000110	Backup heating determination value a	-99.9-999.9 (°C)								Disclosure is required only for the US.	
100	00100110	Backup heating determination value b										
101	10100110	Backup heating determination value c										
102	01100110	Backup heating determination value d										
103	11100110	Detailed and latest history of voltage error (U9/4220)	-	Active filter abnormality	PAM error	Converter Fault	Power synchronization signal error	L1 open phase error	Under voltage error	Over voltage error	Flagging the latest history of U9 error	
104	00010110	External connection status at time of abnormality delay	CN3N 1-3 input	CN3N 1-2 input	CN3S 1-2 input	CN3D 1-3 input	CN3D 1-2 input	-	-	-	Input: light off No input: light on	
105	10010110	External connection status at time of abnormality	CN3N 1-3 input	CN3N 1-2 input	CN3S 1-2 input	CN3D 1-3 input	CN3D 1-2 input	-	-	-	Input: light off No input: light on	
106	01010110	Actual frequency of abnormality	0-255 (Hz)								Display of actual frequency at time of abnormality	
107	11010110	Fan step number at time of abnormality	0-15								Display of fan step number at time of abnormality	
108	00110110	Detailed and latest error history (UP/4220)	-	-	-	-	-	-	Failure in 12 VDC power supply circuit on power circuit board	Over current abnormality	Flagging the latest history of UP error	
109	10110110	IC LEV opening pulse at time of abnormality (No. 1 to 30 units)	0-2000 (pulse)								Address and display data are alternately displayed every second. Pressing SWP2 changes the displayed unit in ascending order; it returns to No. 1 after No. 30.	
110	01110110	High pressure sensor data at time of abnormality	-99.9-999.9 (Kg/cm²)								Display of data from High pressure sensor, all thermistors, and SC/SH at time of abnormality.	
111	11110110	TH4 (Compressor) sensor data at time of abnormality										
112	00001110	TH6 (Suction pipe) sensor data at time of abnormality										
113	10001110	TH3 (Outdoor liquid pipe) sensor data at time of abnormality										
114	01001110	TH8 (Heat sink) sensor data at time of abnormality										
115	11001110	OC SC (cooling) at time of abnormality	-99.9-999.9(°C) During heating: subcool (SC) During cooling: superheat (SH) (Fixed to "0" during cooling operation)								Address and display data are alternately displayed every second. Pressing SWP2 changes the displayed unit in ascending order; it returns to No. 1 after No. 30.	
116	00101110	IC SC/SH at time of abnormality (No. 1 to 30 units)										

This chapter provides an introduction to electrical wiring for the Power Multi series, together with notes concerning power wiring, wiring for control (transmission wires and remote controller wires), and the frequency converter.

9-1. OVERVIEW OF POWER WIRING

- (1) Use a separate power supply for the outdoor unit and indoor unit.
- (2) Bear in mind ambient conditions (ambient temperature, direct sunlight, rain water, etc.) when proceeding with the wiring and connections.
- (3) The wire size is the minimum value for metal conduit wiring. The power cord size should be 1 rank thicker consideration of voltage drops. Make sure the power-supply voltage does not drop more than 10%.
- (4) Specific wiring requirements should adhere to the wiring regulations of the region.
- (5) Power supply cords of parts of appliances for outdoor use shall not be lighter than polychloroprene sheathed flexible cord (design 60245 IEC57). For example, use wiring such as YZW.
- (6) Install an earth line longer than power cables.

⚠ Warning:

- Be sure to use specified wires to connect so that no external force is imparted to terminal connections. If connections are not fixed firmly, it may cause heating or fire.
- Be sure to use the appropriate type of overcurrent protection switch. Note that generated overcurrent may include some amount of direct current.


⚠ Caution:

- Some installation site may require attachment of an earth leakage breaker. If no earth leakage breaker is installed, it may cause an electric shock.
- Do not use anything other than breaker and fuse with correct capacity. Using fuse and wire or copper wire with too large capacity may cause a malfunction of unit or fire.
- Be sure to install N-Line. Without N-Line, it could cause damage to the unit.

9-2. WIRING OF MAIN POWER SUPPLY AND EQUIPMENT CAPACITY


9-2-1. Wiring diagram for main power supply

■ Schematic Drawing of Wiring : When NOT using a Branch Box (example)

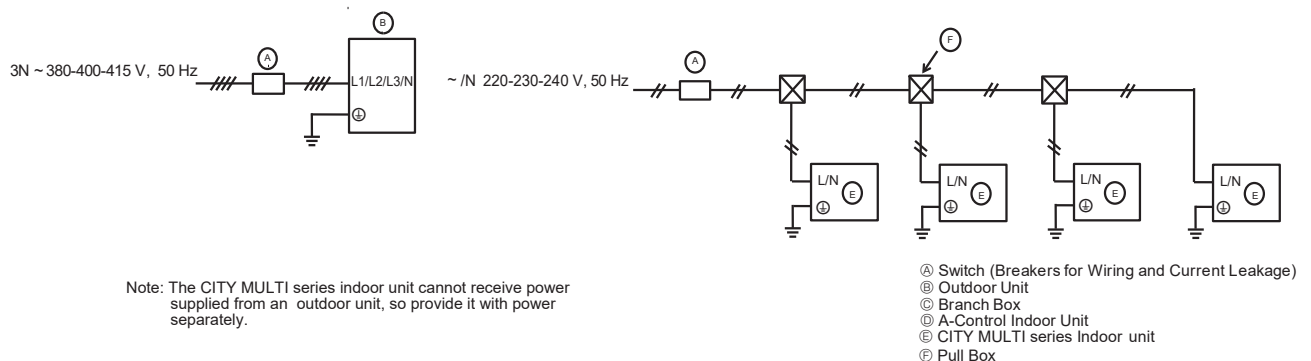


■ Schematic Drawing of Wiring : When using Branch Boxes (example)


<When power is supplied to branch box from the outdoor unit>

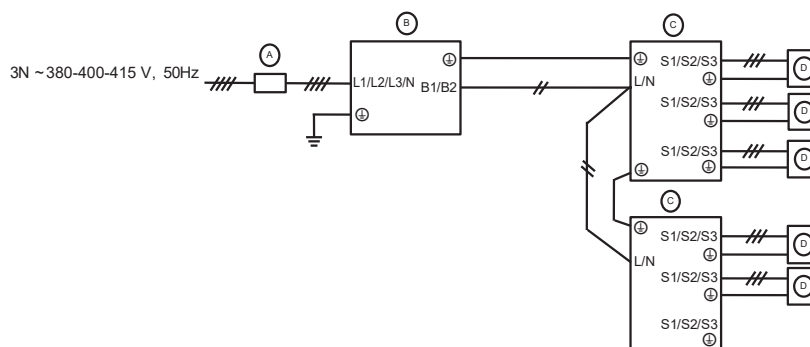


<When power is supplied to outdoor unit and branch box separately>

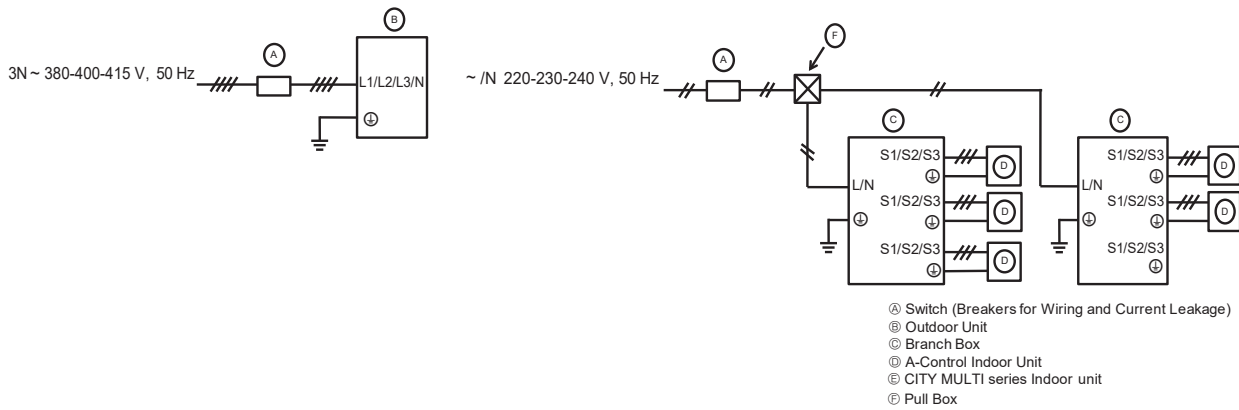

■ Schematic Drawing of Wiring : When using a Branch Box and CITY MULTI series indoor unit (example)
<When power is supplied to outdoor unit and branch box separately>

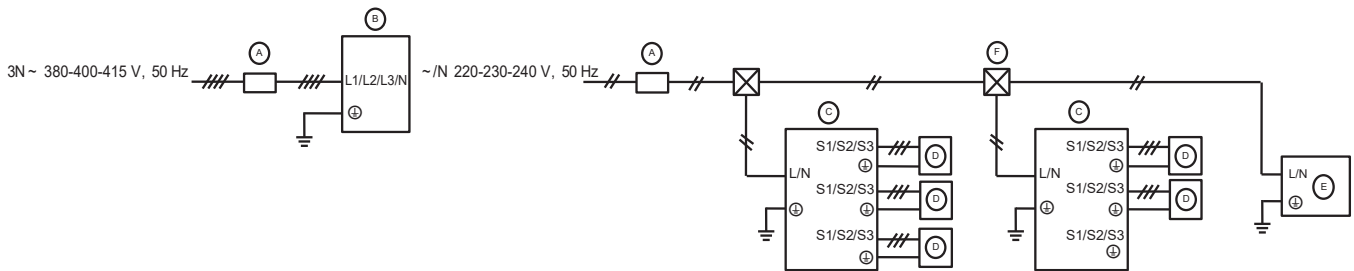

<When power is supplied to branch box from the outdoor unit>

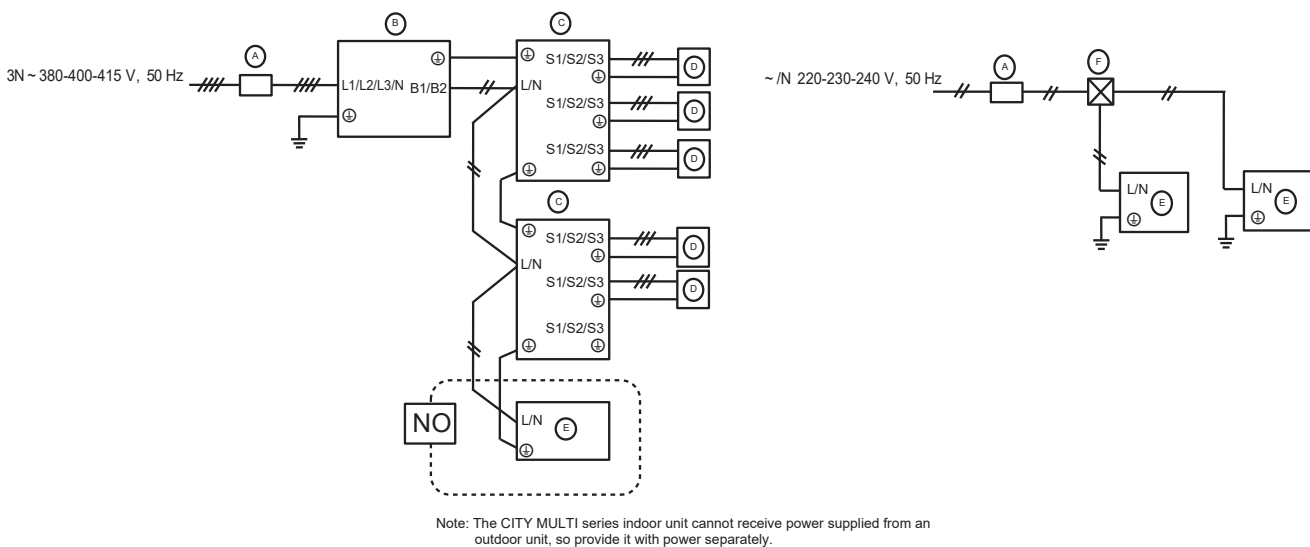

9-2-2. Cross section area of Wire for Main Power and ON/OFF capacities

<When power is supplied separately>

Model	Power supply *2	Minimum Wire Cross-sectional area (mm ²)		Breaker for Wiring *1	Breaker for Current Leakage
		Main Cable	Ground		
Outdoor unit	PUMY-P250YBM	3N~ 380-400-415 V 50 Hz	4.0	32 A	32 A 30 mA 0.1 sec. or less
	PUMY-P300YBM	3N~ 380-400-415 V 50 Hz	6.0	40 A	40 A 30 mA 0.1 sec. or less

<When power is supplied from the outdoor unit>

Model	Power supply *2	Minimum Wire Cross-sectional area (mm ²)		Breaker for Wiring *1	Breaker for Current Leakage
		Main Cable	Ground		
Outdoor unit	PUMY-P250YBM	3N~ 380-400-415 V 50 Hz	6.0	40 A	40 A 30 mA 0.1 sec. or less
	PUMY-P300YBM	3N~ 380-400-415 V 50 Hz	6.0	40 A	40 A 30 mA 0.1 sec. or less

*1 A breaker with at least 3.0 mm contact separation in each poles shall be provided. Use non-fuse breaker (NF) or earth leakage breaker (NV).

*2 In multi-phase appliances, the colour of the neutral conductor of the supply cord, if any, shall be blue.

<Indoor units> When power is supplied to indoor unit and outdoor unit separately

Total operating current of the indoor unit	Minimum wire thickness (mm ²)			Ground-fault interrupter *1	Local switch (A)		Breaker for wiring (NFB)
	Main Cable	Branch	Ground		Capacity	Fuse	
F0 = 16 A or less *2	1.5	1.5	1.5	20 A current sensitivity *3	16	16	20
F0 = 25 A or less *2	2.5	2.5	2.5	30 A current sensitivity *3	25	25	30
F0 = 32 A or less *2	4.0	4.0	4.0	40 A current sensitivity *3	32	32	40

Apply to IEC61000-3-3 about max. permissive system impedance.

*1 The Ground-fault interrupter should support inverter circuit.

The Ground-fault interrupter should combine using of local switch or wiring breaker.

*2 Please take the larger of F1 or F2 as the value for F0.

F1 = Total operating maximum current of the indoor units × 1.2

F2 = {V1 × (Quantity of Type 1)/C} + {V1 × (Quantity of Type 2)/C} + {V1 × (Quantity of Type 3)/C} + ... + {V1 × (Quantity of Type 14)/C}

Connect to Branch box (PAC-MK-BC)

Indoor unit		V1	V2
Type 1	MSZ-AP-VG, MSZ-EF-VG-E2/ER2/ET2, MSZ-EF-VGK-E1/ER1/ET1, MSZ-AP-VGK, MFZ-KT-VG, MSZ-LN-VG2	7.4	2.4
Type 2	MSZ-FH-VE2	6.8	
Type 3	Branch box (PAC-MK-BC)	5.1	3.0

Connect to Connection kit (PAC-LV11M)

Indoor unit		V1	V2
Type 4	MSZ-AP-VG, MSZ-EF-VG-E2/ER2/ET2, MSZ-EF-VGK-E1/ER1/ET1, MSZ-AP-VGK, MFZ-KT-VG, MSZ-LN-VG2	7.4	2.4
Type 5	MSZ-FH-VE2	6.8	
Type 6	Connection kit (PAC-LV11M)	3.5	

Connect to CITY MULTI

Indoor unit		V1	V2
Type 7	PEFY-P-VMA3-E, PEFY-P-VMA(L)-E1	38.0	1.6
Type 8	PEFY-P-VMHS-E-F, PEFY-P40-140VMHS-E	26.8	
Type 9	PEFY-M-VMA(2)(L)-A, PEFY-P-VMA(L)-E3	18.6	3.0
Type 10	PMFY-P-VBM-E, PLFY-EP-VEM-E, PLFY-P-VFM-E, PEFY-P-VMS1(L)-E, PCFY-P-VKM-E, PKFY-P-VKM-E, PFFY-P-VCM-E, PKFY-P-VLM-E/ET, PLFY-M-VEM-E/ET, PLFY-P-VEM-E	19.8	
Type 11	PLFY-P-VEM-PA	17.1	2.4
Type 12	PLFY-P-VLMD-E, PEFY-P-VMR-E-L/R, PFFY-P-VKM-E2, PFFY-P-VLEM-E, GUF-RD(H)4, PEFY-P-VMH-E/E2	0	
Type 13	PEFY-P200/250VMHS-E	13.8	4.8
Type 14	PEFY-P-VMX(L)-E(1)	38.0	2.4

C : Multiple of tripping current at tripping time 0.01s

Please pick up "C" from the tripping characteristic of the breaker.

<Example of "F2" calculation>

Condition PLFY-P-VBM × 4 + PEFY-P-VMA × 1, C = 8 (refer to right sample chart)

F2 = 19.8 × 4/8 + 38 × 1/8

= 14.65

16 A breaker (Tripping current = 8 × 16 A at 0.01s)


*3 Current sensitivity is calculated using the following formula.

G1 = V2 × (Quantity of Type 1) + V2 × (Quantity of Type 2) + V2 × (Quantity of Type 3) + ... + V2 × (Quantity of Type 14) + V3 × (Wire length [km])

G1	Current sensitivity
30 or less	30 mA 0.1 sec. or less
100 or less	100 mA 0.1 sec. or less

Wire thickness	V3
1.5 mm ²	48
2.5 mm ²	56
4.0 mm ²	66

Sample chart

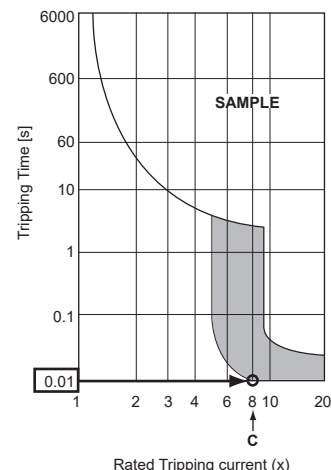

- Bear in mind ambient conditions (ambient temperature, direct sunlight, rain water, etc.) when proceeding with the wiring and connections.
- The wire size is the minimum value for metal conduit wiring. The power cord size should be 1 rank thicker consideration of voltage drops. Make sure the power-supply voltage does not drop more than 10%.
- Specific wiring requirements should adhere to the wiring regulations of the region.
- Power supply cords of parts of appliances for outdoor use shall not be lighter than polychloroprene sheathed flexible cord (design 60245 IEC57). For example, use wiring such as YZW.
- Install an earth longer than other cables.

9-3. DESIGN FOR CONTROL WIRING

Please note that the types and numbers of control wires needed by the Power Multi series will depend on the remote controllers and whether they are linked with the system.

9-3-1. Selection number of control wires

		M-NET remote controller
Use		Remote controller used in system control operations • Group operation involving different refrigerant systems • Linked operation with upper control system
Remote controller → indoor unit		2-core wire (non-polar)
Transmission wires	Wires connecting → indoor units	
	Wires connecting → indoor units with outdoor unit	
	Wires connecting → outdoor units	

9-4. WIRING TRANSMISSION CABLES

9-4-1. Types of control cables

1. Wiring transmission cables

Types of transmission cables	Shielding wire (2-core) CVVS, CPEVS or MVVS
Cable diameter	More than 1.25 mm ²
Maximum wiring length	Within 200 m

2. M-NET Remote control cables

Types of remote control cables	Shielding wire (2-core) CVVS, CPEVS, or MVVS
Cable diameter	0.5 to 1.25 mm ²
Remarks	If the length exceeds 10 m, use a cable with the same specifications as transmission line wiring.

3. MA Remote control cables

Type of remote control cable	Sheathed 2-core cable (unshielded) CVV
Cable diameter	0.3 to 1.25 mm ² (0.75 to 1.25 mm ²)*
Remarks	Within 200 m

* Connected with simple remote controller.

9-4-2. Wiring examples

• Controller name, symbol and allowable number of controllers.


Name	Symbol	Allowable number of controllers	
Outdoor unit controller	OC	—	
Indoor unit controller	M-IC	PUMY-P250	1 to 30 units per 1 OC
		PUMY-P300	
	A-IC	PUMY-P250	2 to 12 units per 1 OC
		PUMY-P300	
Branch box	—	—	0 to 3 units per 1 OC
Remote controller	RC	M-NET RC	Maximum of 30 controllers for 1 OC (Cannot be connected if a branch box is used.)
		MA-RC	Maximum of 2 per group

9-5. SYSTEM SWITCH SETTING

In order to identify the destinations of signals to the outdoor units, indoor units, and remote controller of the Power Multi series, each microprocessor must be assigned an identification number (address). The addresses of outdoor units, indoor units, and remote controller must be set using their settings switches. Please consult the installation manual that comes with each unit for detailed information on setting procedures.


9-6. EXAMPLE EXTERNAL WIRING DIAGRAM FOR A BASIC SYSTEM

- Example of system when using an M-NET controller

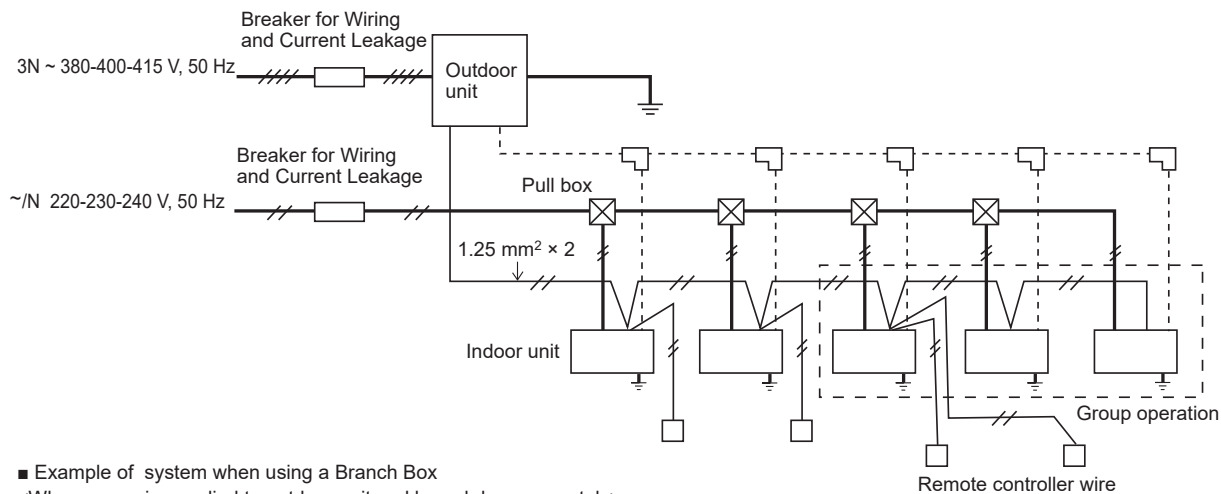


- Example of system when using a Branch Box

<When power is supplied to outdoor unit and branch box separately>

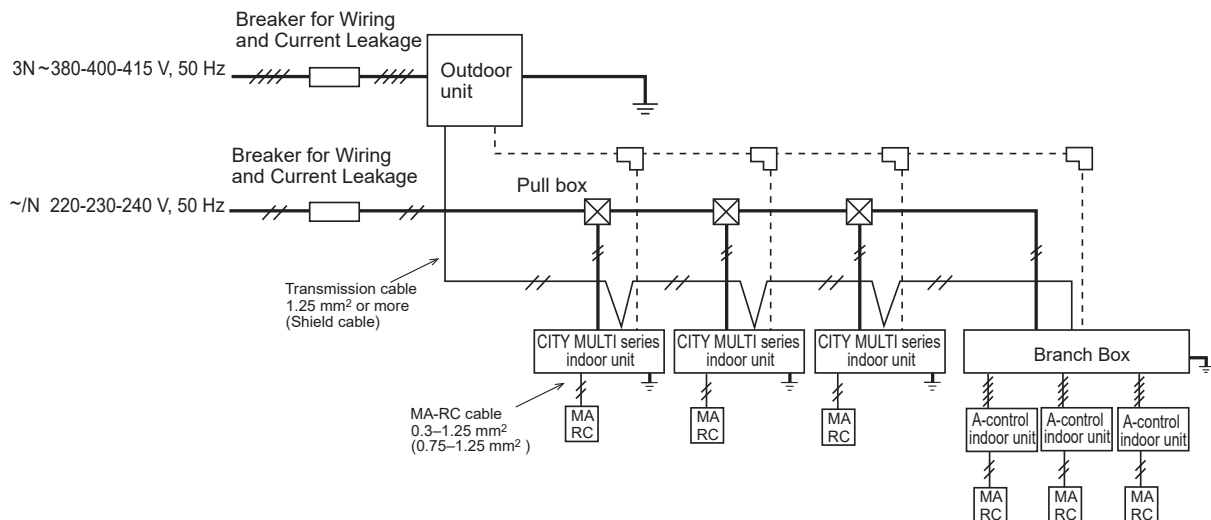

<When power is supplied to branch box from the outdoor unit>

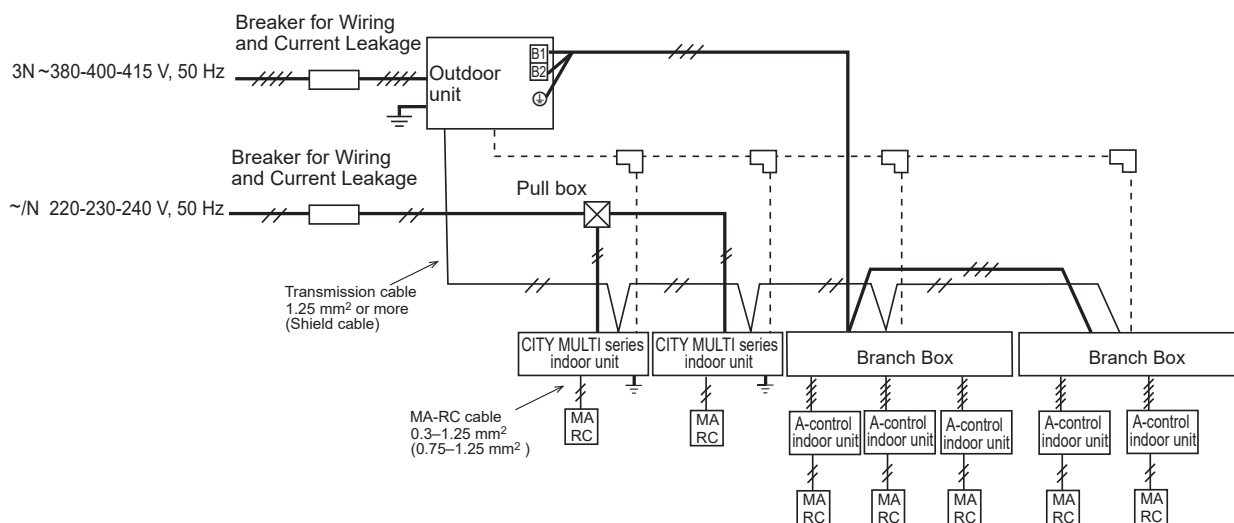

9-7. METHOD FOR OBTAINING ELECTRICAL CHARACTERISTICS WHEN A CAPACITY AGREEMENT IS TO BE SIGNED WITH AN ELECTRIC POWER COMPANY

The electrical characteristics of connected indoor unit system for air conditioning systems, including the Power Multi series, will depend on the arrangement of the indoor and outdoor units.

First read the data on the selected indoor and outdoor units and then use the following formulas to calculate the electrical characteristics before applying for a capacity agreement with the local electric power company.

9-7-1. Obtaining the electrical characteristics of the Power Multi series system

(1) Procedure for obtaining total power consumption

	Page numbers in this technical manual	Power consumption
Total power consumption of each indoor unit	See the technical manual of each indoor unit.	①
Power consumption of outdoor unit*	Standard capacity diagram— Refer to 4-3.	②
Total power consumption of system	See the technical manual of each indoor unit.	①+② <kW>

*The power consumption of the outdoor unit will vary depending on the total capacity of the selected indoor units.

(2) Method of obtaining total current

	Page numbers in this technical manual	Subtotal
Total current through each indoor unit	See the technical manual of each indoor unit.	①
Current through outdoor unit*	Standard capacity diagram — Refer to 4-3.	②
Total current through system	See the technical manual of each indoor unit.	①+② <A>

*The current through the outdoor unit will vary depending on the total capacity of the selected indoor units.

(3) Method of obtaining system power factor


Use the following formula and the total power and current obtained in parts ① and ② on the above tables to calculate the system power factor.

$$\text{System power factor} = \frac{(\text{Total system power consumption})}{(\text{Total system current} \times \text{voltage})} \times 100 \%$$


9-7-2. Applying to an electric power company for power and total current


Calculations should be performed separately for heating and cooling employing the same methods; use the largest resulting value in your application to the electric power company.


10-1. REFRIGERANT PIPING SYSTEM

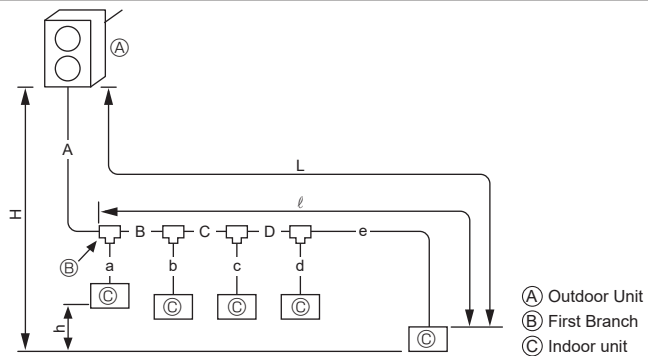Line-Branch Method
 Connection Examples
 (Connecting to 5 Indoor Units)


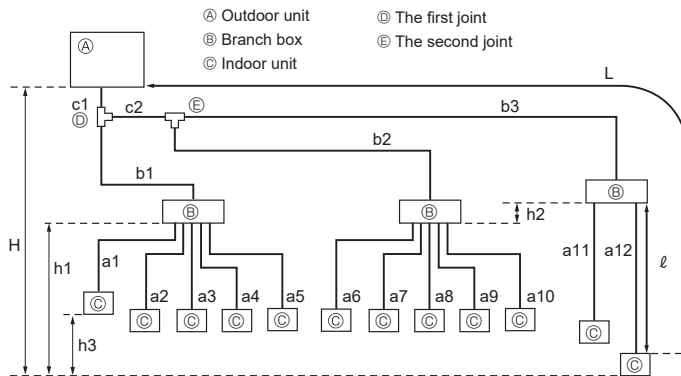
Permissible Length	Total Piping Length	A+B+C+D+a+b+c+d+e ≤ 310 m																																									
	Farthest Piping Length (L)	A+B+C+D+e ≤ 150 m																																									
	Farthest Piping Length After First Branch (ℓ)	B+C+D+e ≤ 30 m																																									
Permissible High/Low Difference	High/Low Difference in Indoor/Outdoor Section (H)	H ≤ 50 m (In the case of outdoor unit is set higher than indoor unit)																																									
		H ≤ 40 m (In the case of outdoor unit is set lower than indoor unit)																																									
	High/Low Difference in Indoor/Indoor Section (h)	h ≤ 15 m																																									
■ Selecting the Refrigerant Branch Kit		Use an optional branch piping kit (CMY-Y62-G-E).																																									
■ Select Each Section of Refrigerant Piping																																											
<div>(1) Section From Outdoor Unit to First Branch (A)</div> <div>(2) Sections From Branch to Indoor Unit (a,b,c,d,e)</div> <div>(3) Section From Branch to Branch (B,C,D)</div> <div>Each Section of Piping</div> <div>Select the size from the table to the right.</div>		(1) Refrigerant Piping Diameter In Section From Outdoor Unit to First Branch (Outdoor Unit Piping Diameter) (mm)																																									
		<table><tr><td>Model</td><td></td><td>Liquid pipe</td><td>Gas pipe</td></tr><tr><td rowspan="2">P250</td><td>L ≤ 90 m</td><td>ø9.52*</td><td>ø22.2</td></tr><tr><td>L > 90 m</td><td>ø12.7</td><td>ø22.2</td></tr><tr><td>P300</td><td>All</td><td>ø12.7</td><td>ø25.4</td></tr></table>			Model		Liquid pipe	Gas pipe	P250	L ≤ 90 m	ø9.52*	ø22.2	L > 90 m	ø12.7	ø22.2	P300	All	ø12.7	ø25.4																								
		Model		Liquid pipe	Gas pipe																																						
P250	L ≤ 90 m	ø9.52*	ø22.2																																								
	L > 90 m	ø12.7	ø22.2																																								
P300	All	ø12.7	ø25.4																																								
(2) Refrigerant Piping Diameter In Section From Branch to Indoor Unit (Indoor Unit Piping Diameter) (mm)																																											
<table><tr><td>a, b, c, d, e</td><td></td><td>Liquid pipe</td><td>Gas pipe</td></tr><tr><td>Model number</td><td></td><td>Liquid pipe</td><td>Gas pipe</td></tr><tr><td>10 - 50</td><td></td><td>ø6.35</td><td>ø12.7</td></tr><tr><td>63 - 140</td><td></td><td>ø9.52</td><td>ø15.88</td></tr><tr><td>200</td><td></td><td>ø9.52</td><td>ø19.05</td></tr><tr><td>250</td><td></td><td>ø9.52</td><td>ø22.2</td></tr></table>			a, b, c, d, e		Liquid pipe	Gas pipe	Model number		Liquid pipe	Gas pipe	10 - 50		ø6.35	ø12.7	63 - 140		ø9.52	ø15.88	200		ø9.52	ø19.05	250		ø9.52	ø22.2																	
a, b, c, d, e		Liquid pipe	Gas pipe																																								
Model number		Liquid pipe	Gas pipe																																								
10 - 50		ø6.35	ø12.7																																								
63 - 140		ø9.52	ø15.88																																								
200		ø9.52	ø19.05																																								
250		ø9.52	ø22.2																																								
		(3) Refrigerant Piping Diameter In Section From Branch to Branch (B, C, D) (mm)																																									
		<table><tr><td colspan="2">Total down-stream capacity of indoor units</td><td>Liquid Pipe</td><td>Gas Pipe</td></tr><tr><td rowspan="3">- 16.0 kW</td><td rowspan="2">P250</td><td>L ≤ 90 m</td><td>ø9.52*</td></tr><tr><td>L > 90 m</td><td>ø12.7</td></tr><tr><td>P300</td><td>All</td><td>ø12.7</td></tr><tr><td rowspan="3">16.1 - 22.4 kW</td><td rowspan="2">P250</td><td>L ≤ 90 m</td><td>ø9.52*</td></tr><tr><td>L > 90 m</td><td>ø12.7</td></tr><tr><td>P300</td><td>All</td><td>ø12.7</td></tr><tr><td rowspan="3">22.5 - 36.4 kW</td><td rowspan="2">P250</td><td>L ≤ 90 m</td><td>ø9.52*</td></tr><tr><td>L > 90 m</td><td>ø12.7</td></tr><tr><td>P300</td><td>All</td><td>ø12.7</td></tr><tr><td>36.5 kW -</td><td>P300</td><td>All</td><td>ø12.7</td></tr><tr><td></td><td></td><td></td><td>ø25.4</td></tr></table>			Total down-stream capacity of indoor units		Liquid Pipe	Gas Pipe	- 16.0 kW	P250	L ≤ 90 m	ø9.52*	L > 90 m	ø12.7	P300	All	ø12.7	16.1 - 22.4 kW	P250	L ≤ 90 m	ø9.52*	L > 90 m	ø12.7	P300	All	ø12.7	22.5 - 36.4 kW	P250	L ≤ 90 m	ø9.52*	L > 90 m	ø12.7	P300	All	ø12.7	36.5 kW -	P300	All	ø12.7				ø25.4
Total down-stream capacity of indoor units		Liquid Pipe	Gas Pipe																																								
- 16.0 kW	P250	L ≤ 90 m	ø9.52*																																								
		L > 90 m	ø12.7																																								
	P300	All	ø12.7																																								
16.1 - 22.4 kW	P250	L ≤ 90 m	ø9.52*																																								
		L > 90 m	ø12.7																																								
	P300	All	ø12.7																																								
22.5 - 36.4 kW	P250	L ≤ 90 m	ø9.52*																																								
		L > 90 m	ø12.7																																								
	P300	All	ø12.7																																								
36.5 kW -	P300	All	ø12.7																																								
			ø25.4																																								
		L: The farthest piping length from the outdoor unit to an indoor unit. * ø12.7 when connecting the indoor unit for PEFY-P200 or P250. Note: When connecting the CONNECTION KIT (PAC-LV11M-J) and an M-series indoor unit, refer to the installation manual for the CONNECTION KIT when selecting the pipe size and piping length.																																									
■ Additional refrigerant charge																																											
Refrigerant for the extended piping is not included in the outdoor unit when the unit is shipped from the factory. Therefore, charge each refrigerant piping system with additional refrigerant at the installation site. In addition, in order to carry out service, enter the size and length of each liquid pipe and additional refrigerant charge amounts in the spaces provided on the “Refrigerant amount” plate on the outdoor unit.																																											
■ Calculation of additional refrigerant charge																																											
• Calculate the additional charge using the liquid pipe size and length of the extended piping.																																											
• Calculate the additional refrigerant charge using the procedure shown to the right, and charge with the additional refrigerant.																																											
• For amounts less than 0.1 kg, round up the calculated additional refrigerant charge. (For example, if the calculated charge is 15.92 kg, round up the charge to 16.0 kg.)																																											
• The amount of additional refrigerant which is calculated from the total capacity of indoor units and the combination of extended pipes must not be over 22.8 kg. (Refer to 2-1 for the capacity of indoor units, and above for extended piping.)																																											
		<Additional charge>																																									
		<table><tr><td>Pipe size Liquid pipe ø6.35 (m) × 19.0 (g/m)</td><td>+</td><td>Pipe size Liquid pipe ø9.52 (m) × 50.0 (g/m)</td><td>+</td><td>Pipe size Liquid pipe ø12.7 (m) × 92.0 (g/m)</td><td>+</td><td></td></tr></table>			Pipe size Liquid pipe ø6.35 (m) × 19.0 (g/m)	+	Pipe size Liquid pipe ø9.52 (m) × 50.0 (g/m)	+	Pipe size Liquid pipe ø12.7 (m) × 92.0 (g/m)	+																																	
Pipe size Liquid pipe ø6.35 (m) × 19.0 (g/m)	+	Pipe size Liquid pipe ø9.52 (m) × 50.0 (g/m)	+	Pipe size Liquid pipe ø12.7 (m) × 92.0 (g/m)	+																																						
		Included refrigerant amount when shipped from the factory																																									
		<table><tr><td>Included refrigerant amount</td></tr><tr><td>9.3 kg</td></tr></table>			Included refrigerant amount	9.3 kg																																					
Included refrigerant amount																																											
9.3 kg																																											
		Calculation example																																									
		Outdoor model: P250 A + B + C + D: ø9.52 30 m																																									
		1: P63 (7.1 kW) a: ø9.52 15 m																																									
		2: P63 (7.1 kW) b: ø9.52 10 m																																									
		3: P63 (7.1 kW) c: ø9.52 10 m																																									
		4: P63 (7.1 kW) d: ø9.52 10 m																																									
		5: P40 (4.5 kW) e: ø6.35 15 m																																									
		The total length of each pipe size is as follows: ø9.52: A + B + C + D + a + b + c + d = 75 m ø6.35: e = 15 m																																									
		The total capacity of connected indoor units is as follows: 7.1 + 7.1 + 7.1 + 7.1 + 4.5 = 32.9 (kW)																																									
		Therefore, the additional charge is as follows: 15 × $\frac{19.0}{1000}$ + 75 × $\frac{50.0}{1000}$ + 4.0 = 8.1 kg (round up)																																									
		Total capacity of connected indoor units Amount for the indoor units																																									
		<table><tr><td>- 16.0 kW</td><td>2.5 kg</td></tr><tr><td>16.1 - 27.0 kW</td><td>3.0 kg</td></tr><tr><td>27.1 - 31.0 kW</td><td>3.5 kg</td></tr><tr><td>31.1 - 34.0 kW</td><td>4.0 kg</td></tr><tr><td>34.1 - 36.5 kW</td><td>4.5 kg</td></tr><tr><td>36.6 - 39.0 kW</td><td>5.0 kg</td></tr><tr><td>39.1 - 41.0 kW</td><td>5.5 kg</td></tr><tr><td>41.1 kW -</td><td>6.1 kg</td></tr></table>			- 16.0 kW	2.5 kg	16.1 - 27.0 kW	3.0 kg	27.1 - 31.0 kW	3.5 kg	31.1 - 34.0 kW	4.0 kg	34.1 - 36.5 kW	4.5 kg	36.6 - 39.0 kW	5.0 kg	39.1 - 41.0 kW	5.5 kg	41.1 kW -	6.1 kg																							
- 16.0 kW	2.5 kg																																										
16.1 - 27.0 kW	3.0 kg																																										
27.1 - 31.0 kW	3.5 kg																																										
31.1 - 34.0 kW	4.0 kg																																										
34.1 - 36.5 kW	4.5 kg																																										
36.6 - 39.0 kW	5.0 kg																																										
39.1 - 41.0 kW	5.5 kg																																										
41.1 kW -	6.1 kg																																										
		At the conditions below:																																									



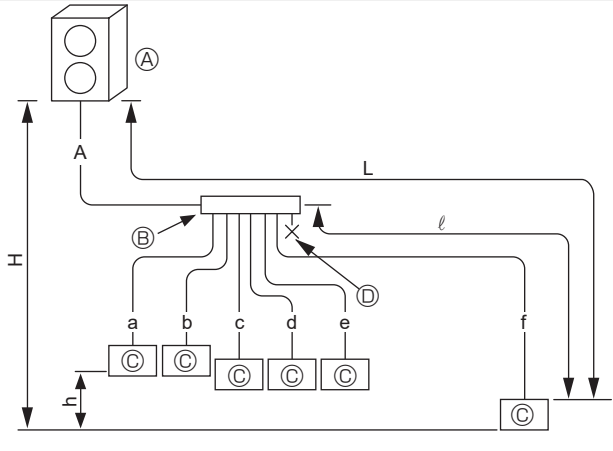Header-Branch Method Connection Examples (Connecting to 6 Indoor Units)		 <div data-bbox="1243 557 1410 680"><p>Ⓐ Outdoor Unit Ⓑ First Branch Ⓒ Indoor unit Ⓓ Cap</p></div>																															
Permissible Length	Total Piping Length	$A+a+b+c+d+e+f \leq 310 \text{ m}$																															
	Farthest Piping Length (L)	$A+ f \leq 150 \text{ m}$																															
	Farthest Piping Length After First Branch (ℓ)	$f \leq 30 \text{ m}$																															
Permissible High/Low Difference	High/Low Difference in Indoor/Outdoor Section (H)	$H \leq 50 \text{ m}$ (In the case of outdoor unit is set higher than indoor unit) $H \leq 40 \text{ m}$ (In the case of outdoor unit is set lower than indoor unit)																															
	High/Low Difference in Indoor/Indoor Section (h)	$h \leq 15 \text{ m}$																															
■ Selecting the Refrigerant Branch Kit		Please select branching kit, which is sold separately, from the table below. (The kit comprises sets for use with liquid pipes and for use with gas pipes.) <table data-bbox="604 949 1219 1016"><tr><td>Branch header (4 branches)</td><td>Branch header (8 branches)</td></tr><tr><td>CMY-Y64-G-E</td><td>CMY-Y68-G-E</td></tr></table>		Branch header (4 branches)	Branch header (8 branches)	CMY-Y64-G-E	CMY-Y68-G-E																										
Branch header (4 branches)	Branch header (8 branches)																																
CMY-Y64-G-E	CMY-Y68-G-E																																
■ Select Each Section of Refrigerant Piping <div data-bbox="78 1095 517 1207"><p>(1) Section From Outdoor Unit to First Branch (A)</p><p>(2) Sections From Branch to Indoor Unit (a,b,c,d,e,f)</p><p>Each Section of Piping</p></div> Select the size from the table to the right.		<div data-bbox="564 1050 1003 1128"><p>(1) Refrigerant Piping Diameter In Section From Outdoor Unit to First Branch (Outdoor Unit Piping Diameter)</p></div> <table data-bbox="564 1140 1003 1274"><tr><th colspan="2">A</th><th colspan="2">(mm)</th></tr><tr><th>Model</th><th></th><th>A Liquid pipe</th><th>B Gas pipe</th></tr><tr><td rowspan="2">P250</td><td>$L \leq 90 \text{ m}$</td><td>ø9.52*</td><td>ø22.2</td></tr><tr><td>$L > 90 \text{ m}$</td><td>ø12.7</td><td>ø22.2</td></tr><tr><td>P300</td><td>All</td><td>ø12.7</td><td>ø25.4</td></tr></table> <p>L: The farthest piping length from the outdoor unit to an indoor unit.</p> <p>* ø12.7 when connecting the indoor unit for PEFY-P200 or P250.</p> <p>Note: When connecting the CONNECTION KIT (PAC-LV11M-J) and an M-series indoor unit, refer to the installation manual for the CONNECTION KIT when selecting the pipe size and piping length.</p>		A		(mm)		Model		A Liquid pipe	B Gas pipe	P250	$L \leq 90 \text{ m}$	ø9.52*	ø22.2	$L > 90 \text{ m}$	ø12.7	ø22.2	P300	All	ø12.7	ø25.4											
A		(mm)																															
Model		A Liquid pipe	B Gas pipe																														
P250	$L \leq 90 \text{ m}$	ø9.52*	ø22.2																														
	$L > 90 \text{ m}$	ø12.7	ø22.2																														
P300	All	ø12.7	ø25.4																														
■ Additional refrigerant charge		<div data-bbox="1019 1050 1434 1128"><p>(2) Refrigerant Piping Diameter In Section From Branch to Indoor Unit (Indoor Unit Piping Diameter)</p></div> <table data-bbox="1019 1140 1434 1319"><tr><th colspan="3">a, b, c, d, e, f</th><th colspan="2">(mm)</th></tr><tr><th>Model number</th><th>Liquid pipe</th><th>Gas pipe</th><th></th><th></th></tr><tr><td>10 - 50</td><td>ø6.35</td><td>ø12.7</td><td></td><td></td></tr><tr><td>63 - 140</td><td>ø9.52</td><td>ø15.88</td><td></td><td></td></tr><tr><td>200</td><td>ø9.52</td><td>ø19.05</td><td></td><td></td></tr><tr><td>250</td><td>ø9.52</td><td>ø22.2</td><td></td><td></td></tr></table>		a, b, c, d, e, f			(mm)		Model number	Liquid pipe	Gas pipe			10 - 50	ø6.35	ø12.7			63 - 140	ø9.52	ø15.88			200	ø9.52	ø19.05			250	ø9.52	ø22.2		
a, b, c, d, e, f			(mm)																														
Model number	Liquid pipe	Gas pipe																															
10 - 50	ø6.35	ø12.7																															
63 - 140	ø9.52	ø15.88																															
200	ø9.52	ø19.05																															
250	ø9.52	ø22.2																															
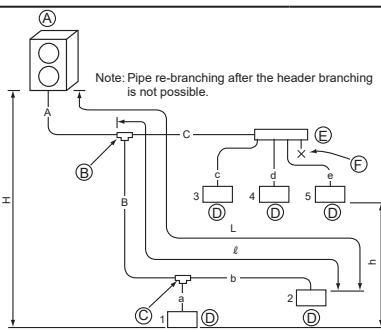
<div>Method of Combined Branching of Lines and Headers</div> <div>Connection Examples</div> <div>(Connecting to 5 Indoor Units)</div>		<div></div> <div><div>A Outdoor unit</div><div>B First branching (branching joint)</div><div>C Branching joint</div><div>D Indoor unit</div><div>E Branching header</div><div>F Blind caps</div></div>																																				
Permissible Length	Total Piping Length	$A+B+C+a+b+c+d+e \leq 310\text{m}$																																				
	Farthest Piping Length (L)	$A+B+b \leq 150\text{m}$																																				
	Farthest Piping Length After First Branch (ℓ)	$B+b \leq 30\text{m}$																																				
Permissible High/Low Difference	High/Low Difference in Indoor/Outdoor Section (H)	$H \leq 50\text{ m}$ (In the case of outdoor unit is set higher than indoor unit)																																				
		$H \leq 40\text{ m}$ (In the case of outdoor unit is set lower than indoor unit)																																				
	High/Low Difference in Indoor/Indoor Section (h)	$h \leq 15\text{ m}$																																				
■ Selecting the Refrigerant Branch Kit		Please select branching kit, which is sold separately, from the table below. (The kit comprises sets for use with liquid pipes and for use with gas pipes.)																																				
		<table><tr><td>Branch Joint</td><td>Branch header (4 branches)</td><td>Branch header (8 branches)</td></tr><tr><td>CMY-Y62-G-E</td><td>CMY-Y64-G-E</td><td>CMY-Y68-G-E</td></tr></table>	Branch Joint	Branch header (4 branches)	Branch header (8 branches)	CMY-Y62-G-E	CMY-Y64-G-E	CMY-Y68-G-E																														
Branch Joint	Branch header (4 branches)	Branch header (8 branches)																																				
CMY-Y62-G-E	CMY-Y64-G-E	CMY-Y68-G-E																																				
■ Select Each Section of Refrigerant Piping		(1) Refrigerant Piping Diameter In Section From Outdoor Unit to First Branch (Outdoor Unit Piping Diameter) (mm)																																				
(1) Section From Outdoor Unit to First Branch (A)		A (mm)																																				
(2) Sections From Branch to Indoor Unit (a,b,c,d,e)		a, b, c, d, e (mm)																																				
(3) Section From Branch to Branch (B,C)																																						
Select the size from the table to the right.		<table><tr><th>Model</th><th>Liquid pipe</th><th>Gas pipe</th></tr><tr><td rowspan="2">P250</td><td>$L \leq 90\text{ m}$</td><td>ø9.52*</td></tr><tr><td>$L > 90\text{ m}$</td><td>ø12.7</td></tr><tr><td>P300</td><td>All</td><td>ø12.7</td></tr></table>	Model	Liquid pipe	Gas pipe	P250	$L \leq 90\text{ m}$	ø9.52*	$L > 90\text{ m}$	ø12.7	P300	All	ø12.7	<table><tr><th>Model number</th><th>Liquid pipe</th><th>Gas pipe</th></tr><tr><td>10 – 50</td><td>ø6.35</td><td>ø12.7</td></tr><tr><td>63 – 140</td><td>ø9.52</td><td>ø15.88</td></tr><tr><td>200</td><td>ø9.52</td><td>ø19.05</td></tr><tr><td>250</td><td>ø9.52</td><td>ø22.2</td></tr></table>	Model number	Liquid pipe	Gas pipe	10 – 50	ø6.35	ø12.7	63 – 140	ø9.52	ø15.88	200	ø9.52	ø19.05	250	ø9.52	ø22.2									
Model	Liquid pipe	Gas pipe																																				
P250	$L \leq 90\text{ m}$	ø9.52*																																				
	$L > 90\text{ m}$	ø12.7																																				
P300	All	ø12.7																																				
Model number	Liquid pipe	Gas pipe																																				
10 – 50	ø6.35	ø12.7																																				
63 – 140	ø9.52	ø15.88																																				
200	ø9.52	ø19.05																																				
250	ø9.52	ø22.2																																				
		(3) Refrigerant Piping Diameter In Section From Branch to Branch (B, C, D) (mm)																																				
		<table><tr><th colspan="2">Total down-stream capacity of indoor units</th><th>Liquid pipe</th><th>Gas pipe</th></tr><tr><td rowspan="3">– 16.0kW</td><td rowspan="2">P250</td><td>$L \leq 90\text{ m}$</td><td>ø9.52*</td></tr><tr><td>$L > 90\text{ m}$</td><td>ø12.7</td></tr><tr><td>P300</td><td>All</td><td>ø12.7</td></tr><tr><td rowspan="3">16.1 – 22.4 kW</td><td rowspan="2">P250</td><td>$L \leq 90\text{ m}$</td><td>ø9.52*</td></tr><tr><td>$L > 90\text{ m}$</td><td>ø12.7</td></tr><tr><td>P300</td><td>All</td><td>ø12.7</td></tr><tr><td rowspan="3">22.5 – 36.4 kW</td><td rowspan="2">P250</td><td>$L \leq 90\text{ m}$</td><td>ø9.52*</td></tr><tr><td>$L > 90\text{ m}$</td><td>ø12.7</td></tr><tr><td>P300</td><td>All</td><td>ø12.7</td></tr><tr><td>36.5 kW –</td><td>P300</td><td>All</td><td>ø12.7</td></tr></table>		Total down-stream capacity of indoor units		Liquid pipe	Gas pipe	– 16.0kW	P250	$L \leq 90\text{ m}$	ø9.52*	$L > 90\text{ m}$	ø12.7	P300	All	ø12.7	16.1 – 22.4 kW	P250	$L \leq 90\text{ m}$	ø9.52*	$L > 90\text{ m}$	ø12.7	P300	All	ø12.7	22.5 – 36.4 kW	P250	$L \leq 90\text{ m}$	ø9.52*	$L > 90\text{ m}$	ø12.7	P300	All	ø12.7	36.5 kW –	P300	All	ø12.7
Total down-stream capacity of indoor units		Liquid pipe	Gas pipe																																			
– 16.0kW	P250	$L \leq 90\text{ m}$	ø9.52*																																			
		$L > 90\text{ m}$	ø12.7																																			
	P300	All	ø12.7																																			
16.1 – 22.4 kW	P250	$L \leq 90\text{ m}$	ø9.52*																																			
		$L > 90\text{ m}$	ø12.7																																			
	P300	All	ø12.7																																			
22.5 – 36.4 kW	P250	$L \leq 90\text{ m}$	ø9.52*																																			
		$L > 90\text{ m}$	ø12.7																																			
	P300	All	ø12.7																																			
36.5 kW –	P300	All	ø12.7																																			
		L: The farthest piping length from the outdoor unit to an indoor unit. * ø12.7 when connecting the indoor unit for PEFY-P200 or P250. Note: When connecting the CONNECTION KIT (PAC-LV11M-J) and an M-series indoor unit, refer to the installation manual for the CONNECTION KIT when selecting the pipe size and piping length.																																				
■ Additional refrigerant charge		Refer to the same section in the previous page.																																				

Branch box Method Connection Examples (Connecting to 12 Indoor Units)



Permissible length (one-way)	Total piping length	$c1 + c2 + b1 + b2 + b3 + a1 + a2 + a3 + a4 + a5 + a6 + a7 + a8 + a9 + a10 + a11 + a12 \leq 240 \text{ m}$
	Farthest piping length (L)	$c1 + c2 + b3 + a12 \leq 80 \text{ m}$
	Piping length between outdoor unit and branch boxes	$c1 + c2 + b1 + b2 + b3 \leq 95 \text{ m}$
	Farthest branch box from the first joint	$c2 + b3 \leq 30 \text{ m}$
	Farthest piping length after branch box (l)	$a12 \leq 25 \text{ m}$
	Total piping length between branch boxes and indoor units	$a1 + a2 + a3 + a4 + a5 + a6 + a7 + a8 + a9 + a10 + a11 + a12 \leq 145 \text{ m}$
Permissible height difference (one-way)	In indoor/outdoor section (H) *1	$H \leq 50 \text{ m}$ (In the case of outdoor unit is set higher than indoor unit) $H \leq 40 \text{ m}$ (In the case of outdoor unit is set lower than indoor unit)
	In branch box/indoor unit section	$h1 + h2 \leq 15 \text{ m}$
	In each branch unit (h2)	$h2 \leq 15 \text{ m}$
	In each indoor unit (h3)	$h3 \leq 12 \text{ m}$
Number of bends		$ c1 + b1 + a1 , c1 + b1 + a2 , c1 + b1 + a3 , c1 + b1 + a4 , c1 + b1 + a5 , c1 + c2 + b2 + a6 , c1 + c2 + b2 + a7 , c1 + c2 + b2 + a8 , c1 + c2 + b2 + a9 , c1 + c2 + b2 + a10 , c1 + c2 + b3 + a11 , c1 + c2 + b3 + a12 \leq 23$

*1 Branch box should be placed within the level between the outdoor unit and indoor units.

■ Select Each Section of Refrigerant Piping

Refer to 7-2-2.

■ Additional refrigerant charge

Additional refrigerant charge

Refrigerant for the extended piping is not included in the outdoor unit when the unit is shipped from the factory. Therefore, charge each refrigerant piping system with additional refrigerant at the installation site. In addition, in order to carry out service, enter the size and length of each liquid pipe and additional refrigerant charge amounts in the spaces provided on the "Refrigerant amount" plate on the outdoor unit.

* When the unit is stopped, charge the unit with the additional refrigerant through the liquid stop valve after the pipe extensions and indoor units have been vacuumized.

When the unit is operating, add refrigerant to the gas check valve using a safety charger. Do not add liquid refrigerant directly to the check valve.

Calculation of additional refrigerant charge

- Calculate the additional charge using the liquid pipe size and length of the extended piping and total capacity of connected indoor units.
- Calculate the additional refrigerant charge using the procedure shown to the right, and charge with the additional refrigerant.
- For amounts less than 0.1 kg, round up the calculated additional refrigerant charge.
(For example, if the calculated charge is 6.01 kg, round up the charge to 6.1 kg.)

<Additional charge>

Calculation of refrigerant charge

Pipe size Liquid pipe		Pipe size Liquid pipe		Pipe size Liquid pipe		Total capacity of connected indoor units	Amount for the indoor units
ø6.35	+	ø9.52	+	ø12.7	+	– 16.0 kW	2.5 kg
(m) × 19.0 (g/m)		(m) × 50.0 (g/m)		(m) × 92.0 (g/m)		16.1 kW – 27.0 kW	3.0 kg
						27.1 kW – 31.0 kW	3.5 kg
						31.1 kW – 34.0 kW	4.0 kg
						34.1 kW – 36.5 kW	4.5 kg
						36.6 kW – 39.0 kW	5.0 kg
						39.1 kW – 41.0 kW	5.5 kg
						41.1 kW –	6.1 kg

Included refrigerant amount when shipped from the factory

Model name	Included refrigerant amount
PUMY-P250YBM	9.3 kg
PUMY-P300YBM	

<Example>

Outdoor model: PUMY-P250YBM

Indoor 1: model 50

Indoor 2: model 50

Indoor 3: model 50

Indoor 4: model 50

Indoor 5: model 50

Indoor 6: model 42

b1 + b2 + c1 + c2: ø9.52 30 m

a1: ø6.35 15 m

a2: ø6.35 10 m

a6: ø6.35 10 m

a7: ø6.35 10 m

a8: ø6.35 15 m

a9: ø6.35 15 m

At the conditions below:

The total length of each liquid line is as follows:

ø9.52 : b1 + b2 + c1 + c2 = 30m

ø6.35 : a1 + a2 + a6 + a7 + a8 + a9 = 75m

The total capacity of connected indoor unit is as follows:


50 (5.0kW) + 50 (5.0kW) + 50 (5.0kW) + 50 (5.0kW) + 50 (5.0kW) + 42 (4.2kW) = 292 (29.2kW)

<Calculation example>

Additional refrigerant charge

$$30 \times \frac{50.0}{1000} + 75 \times \frac{19.0}{1000} + 3.5 = 6.5 \text{ kg (rounded up)}$$

Mixed Method
Connection Examples
(Connecting to 1 Branch box)

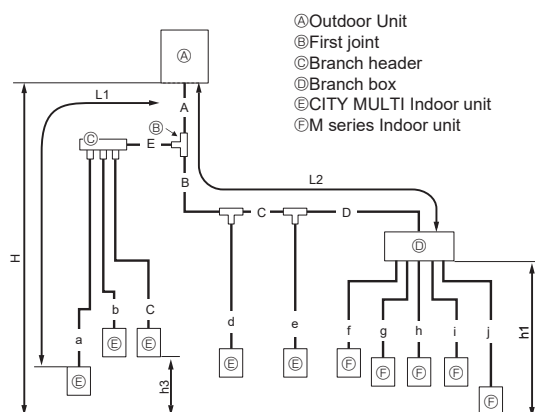

Permissible length (One-way)	Total piping length	$A+B+C+D+E+a+b+c+d+e+f+g+h+i+j \leq 310 \text{ m}$
	Farthest piping length (L1)	$A+E+a$ or $A+B+C+e \leq 85 \text{ m}$
	Farthest piping length. Via Branch box	$A+B+C+D+j \leq 80 \text{ m}$
	Piping length between outdoor unit and branch box	$A+B+C+D \leq 80 \text{ m}$
	Farthest piping length from the first joint	$B+C+D$ or $B+C+e \leq 30 \text{ m}$
	Farthest piping length after branch box	$j \leq 25 \text{ m}$
	Total piping length between branch boxes and indoor units	$f+g+h+i+j \leq 145 \text{ m}$
Permissible height difference (One-way)	In indoor/outdoor section (H)*1	$H \leq 50 \text{ m}$ (In the case of outdoor unit is set higher than indoor unit) $H \leq 40 \text{ m}$ (In the case of outdoor unit is set lower than indoor unit)
	In branch box/indoor unit section (h1)	$h1 \leq 15 \text{ m}$
	In each indoor unit (h3)	$h3 \leq 12 \text{ m}$
Number of bends		≤ 23

*1 Branch box should be placed within the level between the outdoor unit and indoor units.

■ **Selecting the Refrigerant Branch Kit**

Please select branching kit, which is sold separately, from the table below.
(The kit comprises sets for use with liquid pipes and for use with gas pipes.)

Branch joint	Branch header (4 branches)	Branch header (8 branches)
CMY-Y62-G-E	CMY-Y64-G-E	CMY-Y68-G-E

■ **Select Each Section of Refrigerant Piping**

- (1) Section From Outdoor Unit to Branch box or Branch header (A to E)
- (2) Sections From Branch box or Branch header to Indoor Unit (a to j)
- Each Section of Piping

Select the size from the table to the right.

(1) Refrigerant Piping Diameter In Section From Outdoor Unit to Branch box or Branch header (Outdoor Unit Piping Diameter)

A (mm)		
Model	Liquid pipe	Gas pipe
P250	ø9.52*	ø22.2
P300	ø12.7	ø25.4

B to E (mm)

Total down-stream capacity of indoor units	Model	Liquid pipe	Gas pipe
– 16.0kW	P250	ø9.52*	ø15.88
	P300	ø12.7	
16.1 kW – 22.4 kW	P250	ø9.52*	ø19.05
	P300	ø12.7	
22.5 kW – 36.4 kW	P250	ø9.52*	ø22.2
	P300	ø12.7	
36.5 kW –	P300	ø12.7	ø25.4

* ø12.7 when connecting the indoor unit for PEFY-P200 or P250.

(2) Refrigerant Piping Diameter In Section From Branch box or Branch header to Indoor Unit (Indoor Unit Piping Diameter)


Indoor unit series	Model number	Liquid pipe	Gas pipe
CITY MULTI	10 – 50	ø6.35	ø12.7
	63 – 140	ø9.52	ø15.88
	200	ø9.52	ø19.05
	250	ø9.52	ø22.2
M series	15 – 42	ø6.35	ø9.52
	50	ø6.35	ø12.7

Note:
When connecting the CONNECTION KIT (PAC-LV11M-J) and an M-series indoor unit, refer to the installation manual for the CONNECTION KIT when selecting the pipe size and piping length.

■ **Additional refrigerant charge**

Refer to the same section in the previous page.

Mixed Method
Connection Examples
(Connecting to 2 Branch boxes)

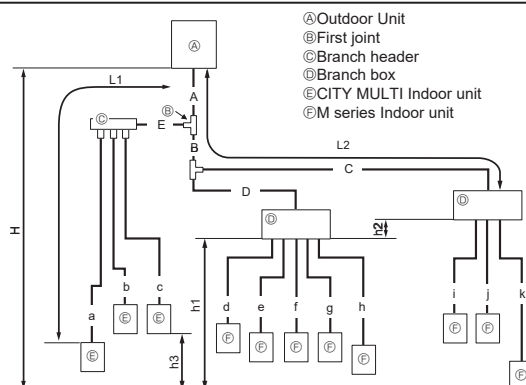

Permissible length (One-way)	Total piping length	$A+B+C+D+E+a+b+c+d+e+f+g+h+i+j+k \leq 310 \text{ m}$
	Farthest piping length (L1)	$A+E+a \leq 85 \text{ m}$
	Farthest piping length. Via Branch box	$A+B+C+k \leq 80 \text{ m}$
	Piping length between outdoor unit and branch boxes	$A+B+C+D \leq 95 \text{ m}$
	Farthest piping length from the first joint	$B+C \text{ or } E+a \leq 30 \text{ m}$
	Farthest piping length after branch box	$k \leq 25 \text{ m}$
	Total piping length between branch boxes and indoor units	$d+e+f+g+h+i+j+k \leq 145 \text{ m}$
Permissible height difference (One-way)	In indoor/outdoor section (H)*1	$H \leq 50 \text{ m}$ (In the case of outdoor unit is set higher than indoor unit) $H \leq 40 \text{ m}$ (In the case of outdoor unit is set lower than indoor unit)
	In branch box/indoor unit section (h1)	$h1+h2 \leq 15 \text{ m}$
	In each branch unit (h2)	$h2 \leq 15 \text{ m}$
	In each indoor unit (h3)	$h3 \leq 12 \text{ m}$
Number of bends		≤ 23

*1 Branch box should be placed within the level between the outdoor unit and indoor units.

■ **Selecting the Refrigerant Branch Kit**

Please select branching kit, which is sold separately, from the table below.
(The kit comprises sets for use with liquid pipes and for use with gas pipes.)

Branch joint	Branch header (4 branches)	Branch header (8 branches)
CMY-Y62-G-E	CMY-Y64-G-E	CMY-Y68-G-E

■ **Select Each Section of Refrigerant Piping**

- (1) Section From Outdoor Unit to Branch box or Branch header (A to E)
(2) Sections From Branch box or Branch header to Indoor Unit (a to k)

Each Section of Piping

Select the size from the table to the right.

(1) Refrigerant Piping Diameter In Section From Outdoor Unit to Branch box or Branch header (Outdoor Unit Piping Diameter)

A	(mm)	
	Liquid pipe	Gas pipe
P250	$\phi 9.52^*$	$\phi 22.2$
P300	$\phi 12.7$	$\phi 25.4$

B to E (mm)

Total down-stream capacity of indoor units	Model	Liquid pipe	Gas pipe
– 16.0kW	P250	$\phi 9.52^*$	$\phi 15.88$
	P300	$\phi 12.7$	
16.1 kW – 22.4 kW	P250	$\phi 9.52^*$	$\phi 19.05$
	P300	$\phi 12.7$	
22.5 kW – 36.4 kW	P250	$\phi 9.52^*$	$\phi 22.2$
	P300	$\phi 12.7$	
36.5 kW –	P300	$\phi 12.7$	$\phi 25.4$

* $\phi 12.7$ when connecting the indoor unit for PEFY-P200 or P250.

(2) Refrigerant Piping Diameter In Section From Branch box or Branch header to Indoor Unit (Indoor Unit Piping Diameter)

Indoor unit series	Model number	Liquid pipe	Gas pipe
CITY MULTI	10 – 50	$\phi 6.35$	$\phi 12.7$
	63 – 140	$\phi 9.52$	$\phi 15.88$
	200	$\phi 9.52$	$\phi 19.05$
	250	$\phi 9.52$	$\phi 22.2$
M series	15 – 42	$\phi 6.35$	$\phi 9.52$
	50	$\phi 6.35$	$\phi 12.7$


Note:

When connecting the CONNECTION KIT (PAC-LV11M-J) and an M-series indoor unit, refer to the installation manual for the CONNECTION KIT when selecting the pipe size and piping length.

■ **Additional refrigerant charge**

Refer to the same section in the previous page.

Mixed Method
Connection Examples
(Connecting to 3 Branch boxes)

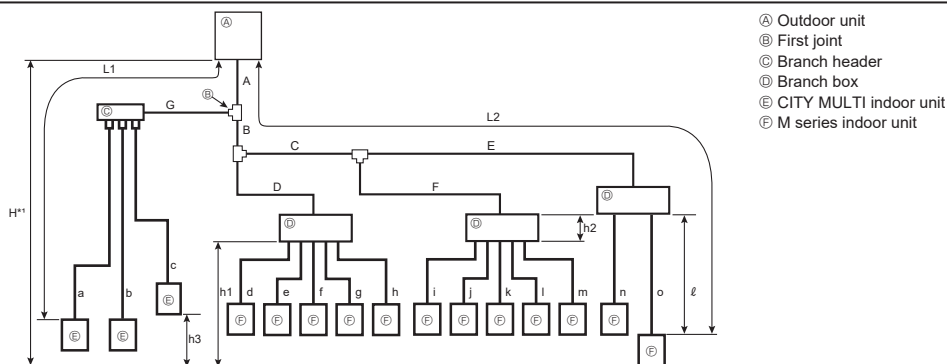

Permissible length (One-way)	Total piping length	$A + G + B + C + D + F + E + a + b + c + d + e + f + g + h + i + j + k + l + m + n + o \leq 310 \text{ m}$
	Farthest piping length (L1)	$A + G + a \leq 85 \text{ m}$
	Farthest piping length via branch box (L2)	$A + B + C + E + o \leq 80 \text{ m}$
	Piping length between outdoor unit and branch boxes	$A + B + C + D + F + E \leq 95 \text{ m}$
	Farthest piping length from the first joint	$B + C + E \text{ or } G + a \leq 30 \text{ m}$
	Farthest piping length after branch box (ℓ)	$o \leq 25 \text{ m}$
	Total piping length between branch boxes and indoor units	$d + e + f + g + h + i + j + k + l + m + n + o \leq 145 \text{ m}$
Permissible height difference (One-way)	In indoor/outdoor section (H)*1	$H \leq 50 \text{ m}$ (In the case of outdoor unit is set higher than indoor unit) $H \leq 40 \text{ m}$ (In the case of outdoor unit is set lower than indoor unit)
	In branch box/indoor unit section	$h1 + h2 \leq 15 \text{ m}$
	In each branch unit ($h2$)	$h2 \leq 15 \text{ m}$
	In each indoor unit ($h3$)	$h3 \leq 12 \text{ m}$
Number of bends		≤ 23

*1 Branch box should be placed within the level between the outdoor unit and indoor units.

■ **Selecting the Refrigerant Branch Kit**

Please select branching kit, which is sold separately, from the table below.
(The kit comprises sets for use with liquid pipes and for use with gas pipes.)

Branch joint	Branch header (4 branches)	Branch header (8 branches)
CMY-Y62-G-E	CMY-Y64-G-E	CMY-Y68-G-E

■ **Select Each Section of Refrigerant Piping**

- (1) Section From Outdoor Unit to Branch box or Branch header (A to G)
- (2) Sections From Branch box or Branch header to Indoor Unit (a to o)
- Each Section of Piping

Select the size from the table to the right.

(1) Refrigerant Piping Diameter In Section From Outdoor Unit to Branch box or Branch header (Outdoor Unit Piping Diameter)

A (mm)		
Model	Liquid pipe	Gas pipe
P250	$\phi 9.52^*$	$\phi 22.2$
P300	$\phi 12.7$	$\phi 25.4$

B to G (mm)			
Total down-stream capacity of indoor units	Model	Liquid pipe	Gas pipe
– 16.0kW	P250	$\phi 9.52^*$	$\phi 15.88$
	P300	$\phi 12.7$	
16.1 kW – 22.4 kW	P250	$\phi 9.52^*$	$\phi 19.05$
	P300	$\phi 12.7$	
22.5 kW – 36.4 kW	P250	$\phi 9.52^*$	$\phi 22.2$
	P300	$\phi 12.7$	
36.5 kW –	P300	$\phi 12.7$	$\phi 25.4$

* $\phi 12.7$ when connecting the indoor unit for PEFY-P200 or P250.

(2) Refrigerant Piping Diameter In Section From Branch box or Branch header to Indoor Unit (Indoor Unit Piping Diameter)

Indoor unit series	Model number	Liquid pipe	Gas pipe
CITY MULTI	10 – 50	$\phi 6.35$	$\phi 12.7$
	63 – 140	$\phi 9.52$	$\phi 15.88$
	200	$\phi 9.52$	$\phi 19.05$
	250	$\phi 9.52$	$\phi 22.2$
M series	15 – 42	$\phi 6.35$	$\phi 9.52$
	50	$\phi 6.35$	$\phi 12.7$

Note:
When connecting the CONNECTION KIT (PAC-LV11M-J) and an M-series indoor unit, refer to the installation manual for the CONNECTION KIT when selecting the pipe size and piping length.

■ **Additional refrigerant charge**


Refer to the same section in the previous page.

10-2. PRECAUTIONS AGAINST REFRIGERANT LEAKAGE

10-2-1. Introduction

R410A refrigerant of this air conditioner is non-toxic and non-flammable but leaking of large amount from an indoor unit into the room where the unit is installed may be deleterious. To prevent possible injury, the rooms should be large enough to keep the R410A concentration specified by ISO 5149-1 as follows.

Maximum concentration
Maximum refrigerant concentration of R410A of a room is 0.44kg/m³ accordance with ISO 5149-1.
To facilitate calculation, the maximum concentration is expressed in units of kg/m³ (kg of R410A per m³)
Maximum concentration of R410A: 0.44 kg/m³
(ISO 5149-1)

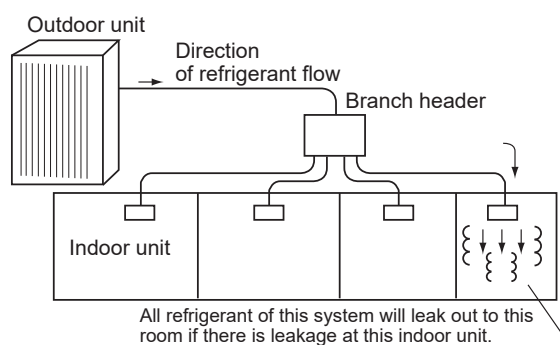

10-2-2. Confirming procedure of R410A concentration

Follow (1) to (3) to confirm the R410A concentration and take appropriate treatment, if necessary.

(1) Calculate total refrigerant amount by each refrigerant system. Total refrigerant amount is precharged refrigerant at ex-factory plus additional charged amount at field installation.


Note:

When the air conditioning system consists of several independent refrigerant system, figure out the total refrigerant amount by each independent refrigerant system.


(2) Calculate room volumes (m³) and find the room with the smallest volume

The part with represents the room with the smallest volume.


(a) Situation in which there are no partitions

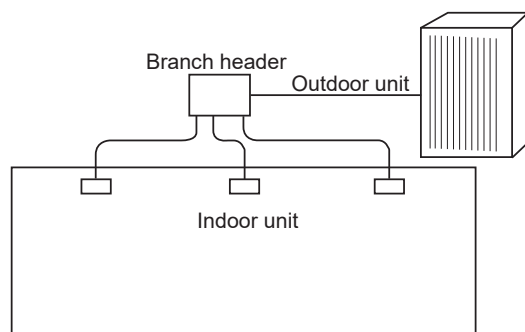

(b) There are partitions, but there are openings that allow the effective mixing of air.

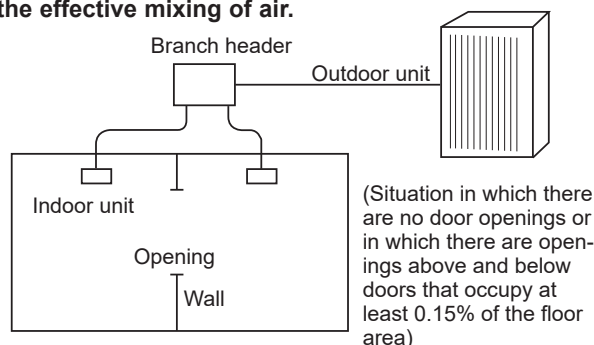

(c) If the smallest room has mechanical ventilation apparatus that is linked to a household gas detection and alarm device, the calculations should be performed for the second smallest room.

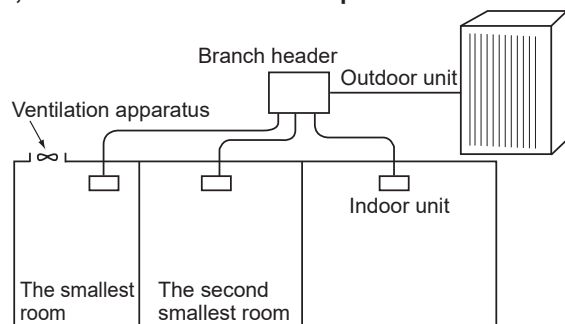

(3) Use the results of calculations (1) and (2) to calculate the refrigerant concentration:

$$\frac{\text{Total refrigerant in the refrigerating unit (kg)}}{\text{The smallest room in which an indoor unit has been installed (m}^3\text{)}} \leq \text{Maximum concentration(kg/m}^3\text{)}^*$$





*Maximum concentration of R410A:0.44kg/m³

If the calculation results do not exceed the maximum concentration, perform the same calculation for larger rooms until it has been determined that nowhere exceeds the maximum concentration.





11-1. OUTDOOR UNIT

—————> : Indicates the visible parts in the photos/figures.
 -----> : Indicates the invisible parts in the photos/figures.



Note: Turn OFF the power supply before disassembly.

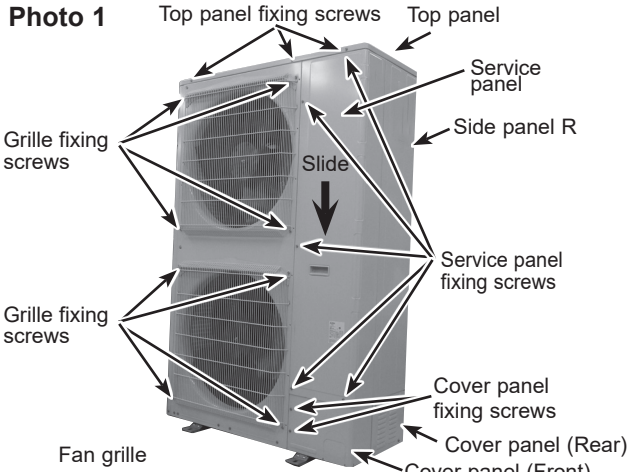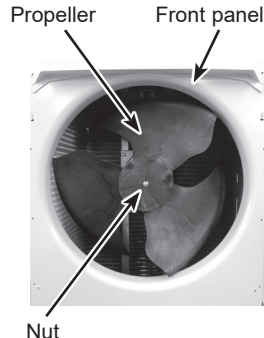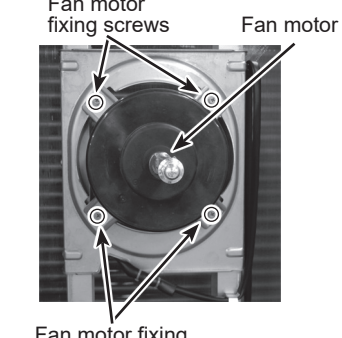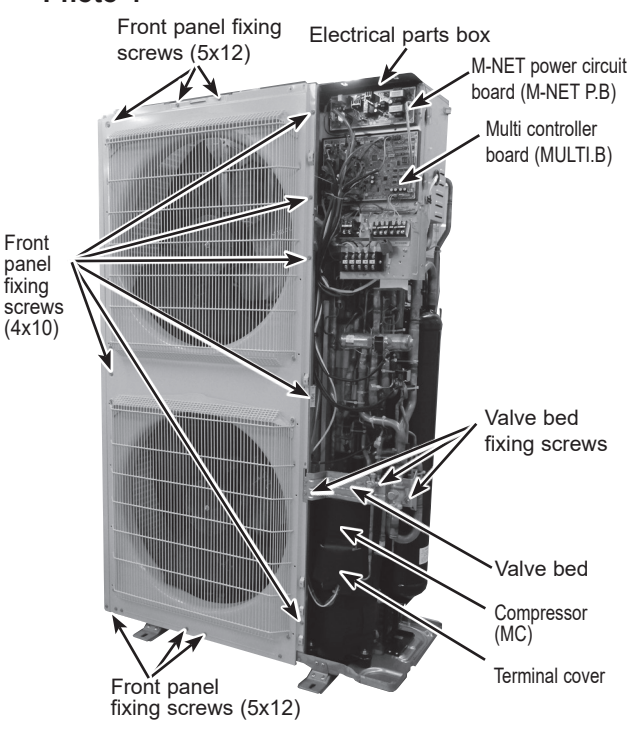
OPERATING PROCEDURE	PHOTOS/FIGURES
1. Removing the panels on the right side of the unit (1) Remove service panel fixing screws (5 × 12) and slide the hook on the right downward to remove the service panel. (2) Remove screws (5 × 12) of the top panel and remove it. (3) Remove front cover panel fixing screws (5 × 12) and remove the front cover panel. (4) Remove back cover panel fixing screws (5 × 12) and remove the back cover panel. (5) Remove side panel R fixing screws (5 × 12) in the rear of the unit and then remove the side panel R.	Photo 1 
2. Removing the fan motor (MF1, MF2) (1) Remove the service panel. (See Photo 1) (2) Remove the top panel. (See Photo 1) (3) Remove fan grille fixing screws (5 × 12) to detach the fan grille. (See Photo 1) (4) Remove a nut (for right handed screw of M6) to detach the propeller. (See Photo 2.) (5) Disconnect the connectors, CNF1 and CNF2 on multi controller board in electrical parts box. (6) Remove fan motor fixing screws (5 × 20) to detach the fan motor. (See Photo 3) Note: MF1 (Upper) ... The color of its connector is white. MF2 (Lower) ... The color of its connector is blue.	Photo 2  Photo 3 
3. Removing the electrical parts box (1) Remove the service panel. (See Photo 1) (2) Remove the top panel. (See Photo 1) (3) Disconnect the connecting wire from terminal block. (See Photo 5) (4) Remove all the following connectors from multi controller board; <Diagram symbol in the connector housing> • Fan motor (CNF1, CNF2) • Thermistor <HIC pipe> (TH2) • Thermistor <Outdoor liquid pipe> (TH3) • Thermistor <Compressor> (TH4) • Thermistor <Suction pipe/Ambient, Outdoor> (TH6/7) • High pressure switch (63H) • High pressure sensor (63HS) • Low pressure sensor (63LS) • 4-way valve (21S4) • Bypass valve (SV1) • Oil return valve (SV3) • Linear Expansion valve (LEV-A, LEV-B) Pull out the disconnected wire from the electrical parts box. (5) Remove the cover panel front. (See Photo 1) (6) Remove the cover panel rear. (See Photo 1) (7) Remove the side panel R. (See Photo 1) (8) Remove the terminal cover and disconnect the compressor lead wire.	Photo 4 



From the previous page.

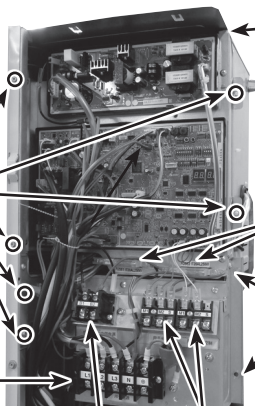
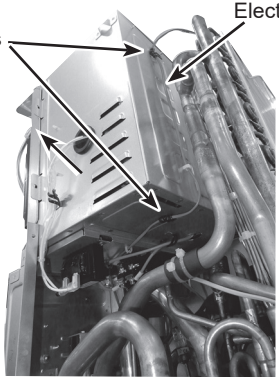
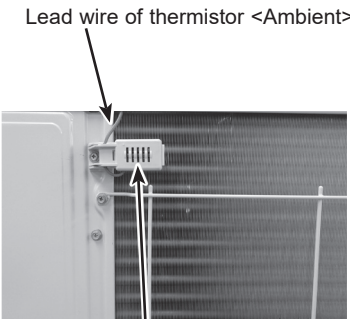
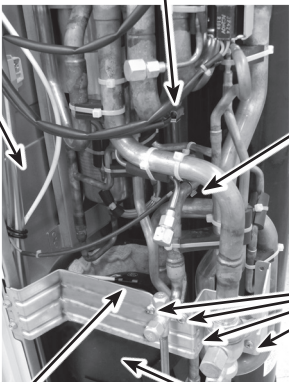
OPERATING PROCEDURE	PHOTOS/FIGURES
<p>(9) Remove electrical parts box fixing screws (5 × 12) and detach the electrical parts box by pulling it upward.</p>	<p>Photo 5</p>  <p>Labels in Photo 5: Electrical parts box, Electrical parts box fixing screws, Fuse (1, 2), Electrical parts box fixing screws, Terminal block (TB1), Terminal block (TB1B), Terminal block (TB3) (TB7).</p>
<p>4. Removing the thermistors <Suction pipe> (TH6) and <Ambient> (TH7)</p> <ol style="list-style-type: none"> (1) Remove the service panel. (See Photo 1) (2) Remove the top panel. (See Photo 1) (3) Disconnect the connectors, TH6 and TH7 (red), on the multi controller board in the electrical parts box. (4) Remove the cover panel front. (See Photo 1) (5) Remove the cover panel rear. (See Photo 1) (6) Remove the side panel R. (See Photo 1) (7) Remove the wire of TH7 from the clamps and clips on the bottom and the side of the electrical parts box. (See Photo 6) (8) Pull out the thermistor <Ambient> (TH7) from the sensor holder. (See Photo 7) (9) Pull out the thermistor <Suction pipe> (TH6) from the sensor holder. (See Photo 8) <p>Note: When replacing thermistor <Suction pipe> (TH6) or <Ambient> (TH7), replace them together since they are combined together.</p>	<p>Photo 6</p>  <p>Labels in Photo 6: Clamps, Electrical parts box.</p> <p>Photo 7</p>  <p>Labels in Photo 7: Lead wire of thermistor <Ambient> (TH7), Sensor holder.</p>
<p>5. Removing the thermistor <Compressor> (TH4) and thermistor <HIC pipe> (TH2)</p> <ol style="list-style-type: none"> (1) Remove the service panel. (See Photo 1) (2) Disconnect the connectors, TH4 (white) and TH2 (black) on the multi controller board in the electrical parts box. (3) Loosen the clamp or band for the lead wire of the electrical parts box and the separator. (4) Pull out the thermistor <Compressor> (TH4) from the sensor holder. (See Photo 8) 	<p>Photo 8</p>  <p>Labels in Photo 8: Thermistor <Suction pipe> (TH6), Separator, Thermistor <HIC pipe> (TH2), Ball valve and stop valve fixing screws, Thermistor <Compressor> (TH4), Compressor (MC).</p>

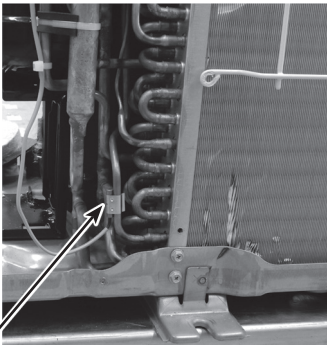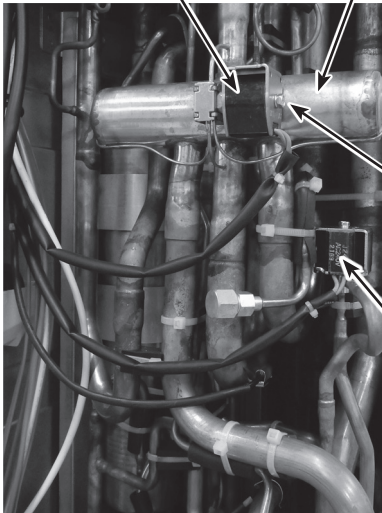

OPERATING PROCEDURE	PHOTOS/FIGURES
<p>6. Removing the thermistor <Outdoor liquid pipe> (TH3)</p> <ol style="list-style-type: none">(1) Remove the service panel. (See Photo 1)(2) Remove the top panel. (See Photo 1)(3) Remove the cover panel front. (See Photo 1)(4) Remove the cover panel rear. (See Photo 1)(5) Remove the side panel R. (See Photo 1)(6) Disconnect the connector, TH3 (white), on the Multi control- ler board in the electrical parts box.(7) Loosen the clamp or band for the lead wire of the electrical parts box and the separator.(8) Pull out the thermistor <Outdoor liquid pipe> (TH3) from the sensor holder. (See Photo 9) <p>Note: Attach the band to the same position when loosening it.</p>	<p>Photo 9</p>  <p>Thermistor <Outdoor liquid pipe> (TH3)</p>
<p>7. Removing the 4-way valve coil (21S4)</p> <ol style="list-style-type: none">(1) Remove the service panel. (See Photo 1) <p>[Removing the 4-way valve coil]</p> <ol style="list-style-type: none">(2) Remove 4-way valve coil fixing screw (M5 × 7).(3) Remove the 4-way valve coil by sliding the coil toward you.(4) Loosen the clamp or band for the lead wire of the electrical parts box and the separator.(5) Disconnect the connector 21S4 (green) on the multi control- ler board in the electrical parts box.	<p>Photo 10</p>  <p>4-way valve coil (21S4)</p> <p>4-way valve</p> <p>4-way valve coil fixing screw</p> <p>Bypass valve coil (SV3)</p>
<p>8. Removing the 4-way valve</p> <ol style="list-style-type: none">(1) Remove the service panel. (See Photo 1)(2) Remove the top panel. (See Photo 1)(3) Remove the cover panel front. (See Photo 1)(4) Remove the cover panel rear. (See Photo 1)(5) Remove the side panel R. (See Photo 1)(6) Remove the electrical parts box. (See Photo 5)(7) Remove ball valve and stop valve fixing screws (5 × 16) then valve bed fixing screws (5 × 12) and remove the valve bed. (See Photo 8)(8) Remove the 4-way valve coil. (See Photo 10)(9) Recover refrigerant.(10) Remove the welded part of 4-way valve. <p>Note 1: Recover refrigerant without spreading it in the air.</p> <p>Note 2: When installing the 4-way valve, cover it with a wet cloth to prevent it from heating (120°C or more), then braze the pipes so that the inside of pipes are not oxidized.</p>	



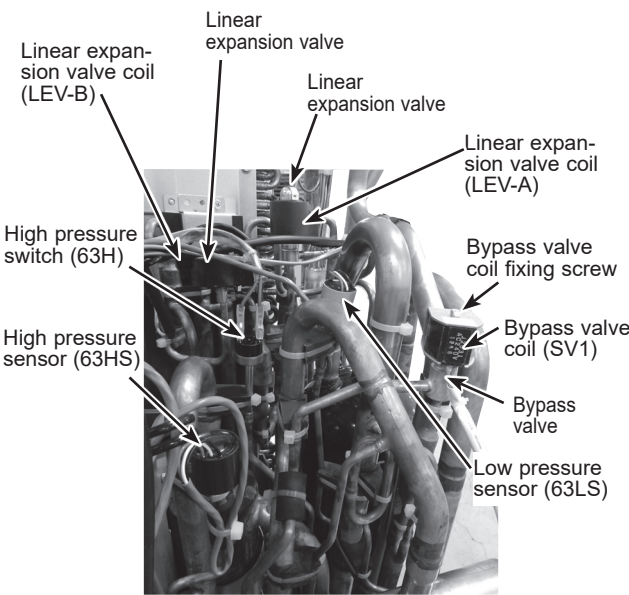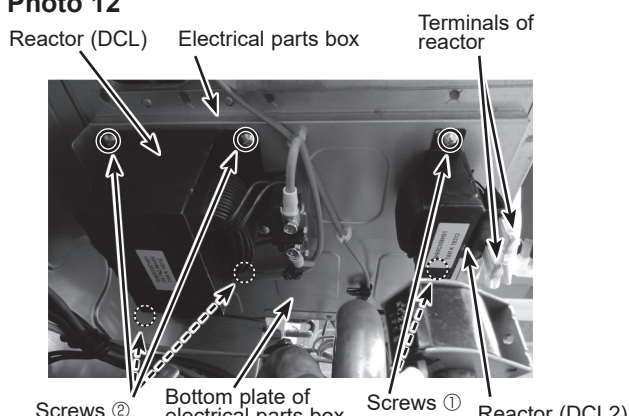OPERATING PROCEDURE	PHOTOS/FIGURES
<p>9. Removing bypass valve coil (SV1 and SV3) and bypass valve</p> <ol style="list-style-type: none">(1) Remove the service panel. (See Photo 1)(2) Remove the top panel. (See Photo 1)(3) Remove the cover panel front. (See Photo 1)(4) Remove the cover panel rear. (See Photo 1)(5) Remove the side panel R. (See Photo 1)(6) Remove the bypass valve coil fixing screw (M4 × 6).(7) Remove the bypass valve coil by sliding the coil upward.(8) Disconnect the connector SV1 (gray) and SV3 (black) on the multi controller circuit board in the electrical parts box. (See Photo 10 and 11)(9) Remove the electrical parts box to remove SV1. (See Photo 5)(10) Recover refrigerant.(11) Remove the welded part of bypass valve. <p>Refer to the notes below.</p> <p>10. Removing the high pressure switch (63H), high pressure sensor (63HS), and low pressure sensor (63LS)</p> <ol style="list-style-type: none">(1) Remove the service panel. (See Photo 1)(2) Remove the top panel. (See Photo 1)(3) Remove the cover panel front. (See Photo 1)(4) Remove the cover panel rear. (See Photo 1)(5) Remove the side panel R. (See Photo 1)(6) Pull out the lead wire of high pressure switch or disconnect the connector 63HS (white) and connector 63LS (blue) from the multi controller circuit board in the electrical parts box.(7) Remove the electrical parts box. (See Photo 5)(8) Recover refrigerant.(9) Remove the welded part of high pressure switch, high pressure sensor and low pressure sensor. <p>Refer to the notes to the right.</p>	<p>Photo 11</p>  <p>Notes:</p> <ol style="list-style-type: none">1. Recover refrigerant without spreading it in the air.2. When installing the following parts, cover it with a wet cloth to prevent it from heating as the temperature below, then braze the pipes so that the inside of pipes are not oxidized;<ul style="list-style-type: none">• Bypass valve (procedure 9), 120°C or more• High pressure switch and high pressure sensor (procedure 10), 100°C or more• Low pressure sensor (procedure 10), 100°C or more
<p>11. Removing linear expansion valve (LEV-A, LEV-B)</p> <ol style="list-style-type: none">(1) Remove the service panel. (See Photo 1)(2) Remove the top panel. (See Photo 1)(3) Remove the cover panel front. (See Photo 1)(4) Remove the cover panel rear. (See Photo 1)(5) Remove the side panel R. (See Photo 1)(6) Remove the electrical parts box. (See Photo 5)(7) Remove the linear expansion valve coil. (See Photo 11)(8) Recover refrigerant.(9) Remove the welded part of linear expansion valve.	
<p>12. Removing the reactor (DCL, DCL2)</p> <ol style="list-style-type: none">(1) Remove the service panel. (See Photo 1)(2) Remove the top panel. (See Photo 1)(3) Remove the cover panel front. (See Photo 1)(4) Remove the cover panel rear. (See Photo 1)(5) Remove the side panel R. (See Photo 1)(6) Remove the electrical parts box. (See Photo 5)(7) Disconnect the lead wires from the reactor. (See Photo 12)(8) Disconnect the terminals of reactor on the bottom plate of the electrical parts box. (See Photo 12)(9) Remove screws ① of the reactor (DCL2) and screws ② of the reactor (DCL) on the bottom plate of the electrical parts box. (See Photo 12)(10) Remove the reactor.	<p>Photo 12</p>  <p>Reactor (DCL) Electrical parts box Terminals of reactor</p> <p>Screws ② Bottom plate of electrical parts box Screws ① Reactor (DCL2)</p>

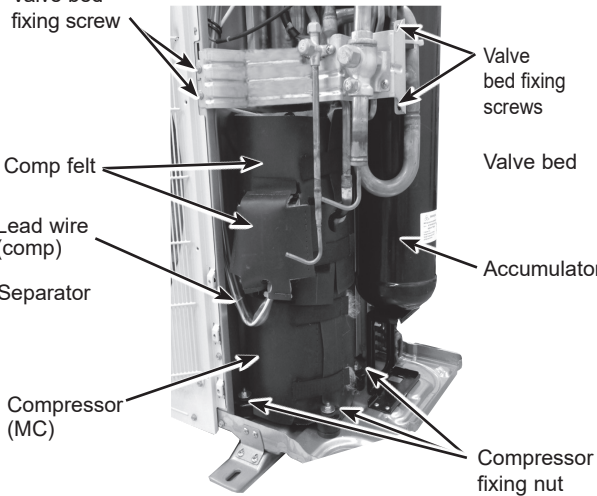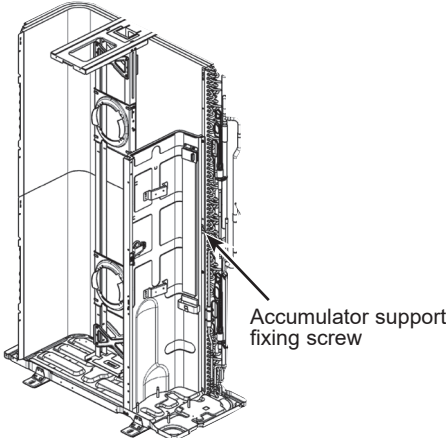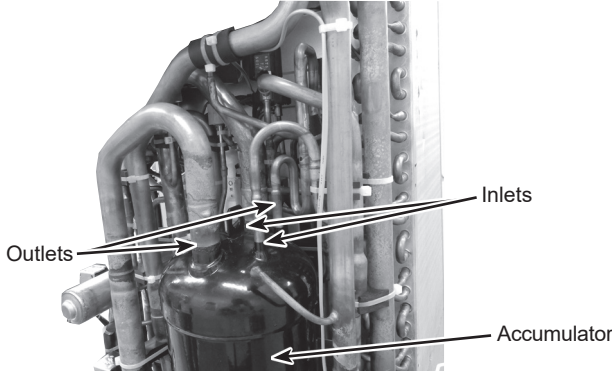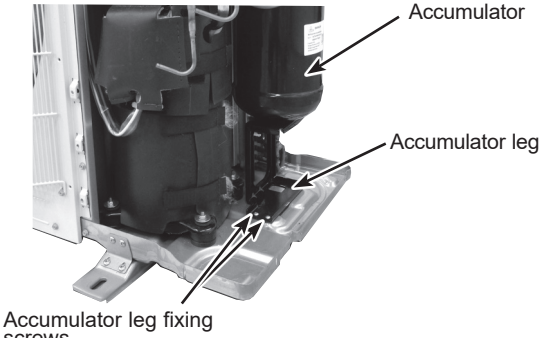
OPERATING PROCEDURE	PHOTOS/FIGURES
<p>13. Removing the compressor (MC)</p> <ol style="list-style-type: none"> (1) Remove the service panel. (See Photo 1) (2) Remove the top panel. (See Photo 1) (3) Remove the cover panel front. (See Photo 1) (4) Remove the cover panel rear. (See Photo 1) (5) Remove ball valve and stop valve fixing screws (5 × 16) then valve bed fixing screws (5 × 12) and remove the valve bed. (See Photo 13) (6) Remove the comp felt covering the compressor, and remove the thermistor <Compressor> (TH4) and the lead wires. (See Photo 8 and 13) (7) Recover refrigerant. (8) Remove the 3 compressor fixing nuts for motor using spanner or adjustable wrench. (9) Remove the welded pipe of motor for compressor inlet and outlet and then remove the compressor. <p>Note: Recover refrigerant without spreading it in the air.</p>	<p>Photo 13</p>  <p>Figure 1</p> 
<p>14. Removing the accumulator</p> <ol style="list-style-type: none"> (1) Remove the service panel. (See Photo 1) (2) Remove the top panel. (See Photo 1) (3) Remove the cover panel front. (See Photo 1) (4) Remove the cover panel rear. (See Photo 1) (5) Remove the side panel R. (See Photo 1) (6) Remove the electrical parts box. (See Photo 5) (7) Recover refrigerant. (8) Remove 4 welded pipes of accumulator inlets and outlets. (See Photo 14) (9) Remove accumulator leg fixing screws (2 [4 × 10] screws and 2 [5 × 12] screws). (See Photo 15 and Figure 1) <p>Note: Recover refrigerant without spreading it in the air.</p>	<p>Photo 14</p>  <p>Photo 15</p> 

12-1. REMOTE CONTROLLER FUNCTIONS

<PAR-4xMAA>

("x" represents 1 or later)

Controller interface

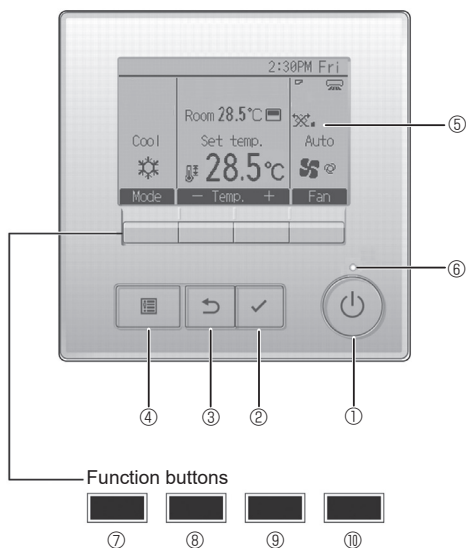

① [ON/OFF] button

Press to turn ON/OFF the indoor unit.

② [SELECT] button

Press to save the setting.

③ [RETURN] button

Press to return to the previous screen.

④ [MENU] button

Press to bring up the Main menu.

⑤ Backlit LCD

Operation settings will appear.


When the backlight is off, pressing any button turns the backlight on and it will stay lit for a certain period of time depending on the screen.

When the backlight is off, pressing any button turns the backlight on and does not perform its function. (except for the [ON/OFF] button)

The functions of the function buttons change depending on the screen.

Refer to the button function guide that appears at the bottom of the LCD for the functions they serve on a given screen.

When the system is centrally controlled, the button function guide that corresponds to the locked button will not appear.

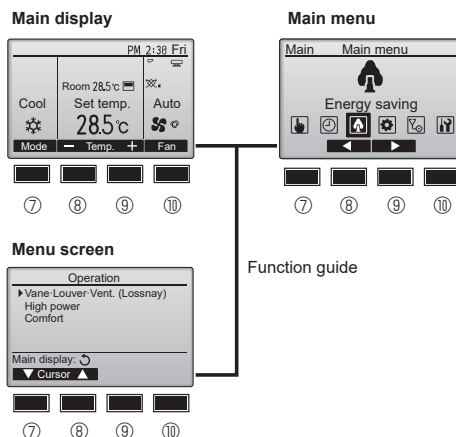

⑥ ON/OFF lamp

This lamp lights up in green while the unit is in operation. It blinks while the remote controller is starting up or when there is an error.

⑦ Function button [F1]

Main display: Press to change the operation mode.

Menu screen: The button function varies with the screen.

⑧ Function button [F2]

Main display: Press to decrease temperature.

Main menu: Press to move the cursor left.

Menu screen: The button function varies with the screen.

⑨ Function button [F3]

Main display: Press to increase temperature.

Main menu: Press to move the cursor right.

Menu screen: The button function varies with the screen.

⑩ Function button [F4]

Main display: Press to change the fan speed.


Menu screen: The button function varies with the screen.

Display


The main display can be displayed in two different modes: "Full" and "Basic". The initial setting is "Full". To switch to the "Basic" mode, change the setting on the Main display setting. (Refer to operation manual included with remote controller.)

<Full mode>

* All icons are displayed for explanation.

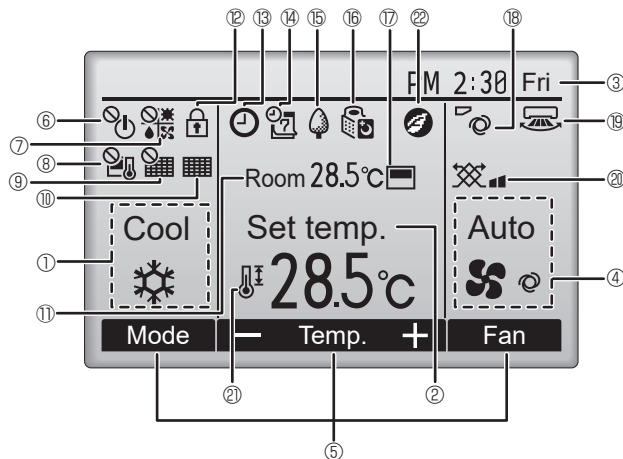

<Basic mode>

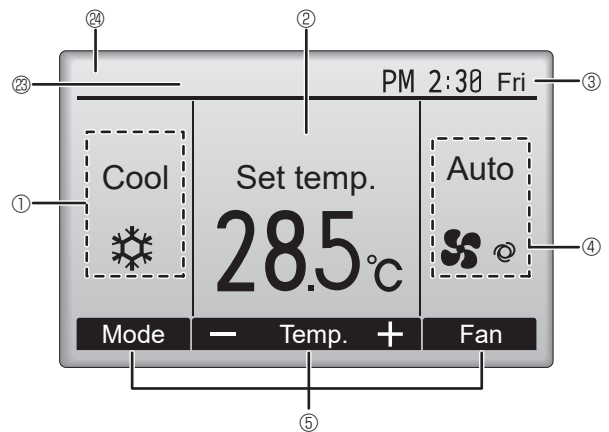

① Operation mode

② Preset temperature

③ Clock

④ Fan speed

⑤ Button function guide

Functions of the corresponding buttons appear here.



Appears when the ON/OFF operation is centrally controlled.



Appears when the operation mode is centrally controlled.



Appears when the preset temperature is centrally controlled.



Appears when the filter reset function is centrally controlled.



Indicates when filter needs maintenance.

⑪ Room temperature



Appears when the buttons are locked.



Appears when the On/Off timer, Night setback, or Auto-off timer function is enabled.



appears when the timer is disabled by the centralized control system.



Appears when the Weekly timer is enabled.



Appears while the units are operated in the energy saving mode. (Will not appear on some models of indoor units)



Appears while the outdoor units are operated in the silent mode.



Appears when the built-in thermistor on the remote controller is activated to monitor the room temperature (⑪).

appears when the thermistor on the indoor unit is activated to monitor the room temperature.



Indicates the vane setting.



Indicates the louver setting.



Indicates the ventilation setting.



Appears when the preset temperature range is restricted.



Appears when an energy saving operation is performed using a "3D i-See sensor" function.

②③ Centrally controlled


Appears for a certain period of time when a centrally-controlled item is operated.

②④ Preliminary error display

A check code appears during the preliminary error.

Most settings (except ON/OFF, mode, fan speed, temperature) can be made from the Main menu.


Menu structure

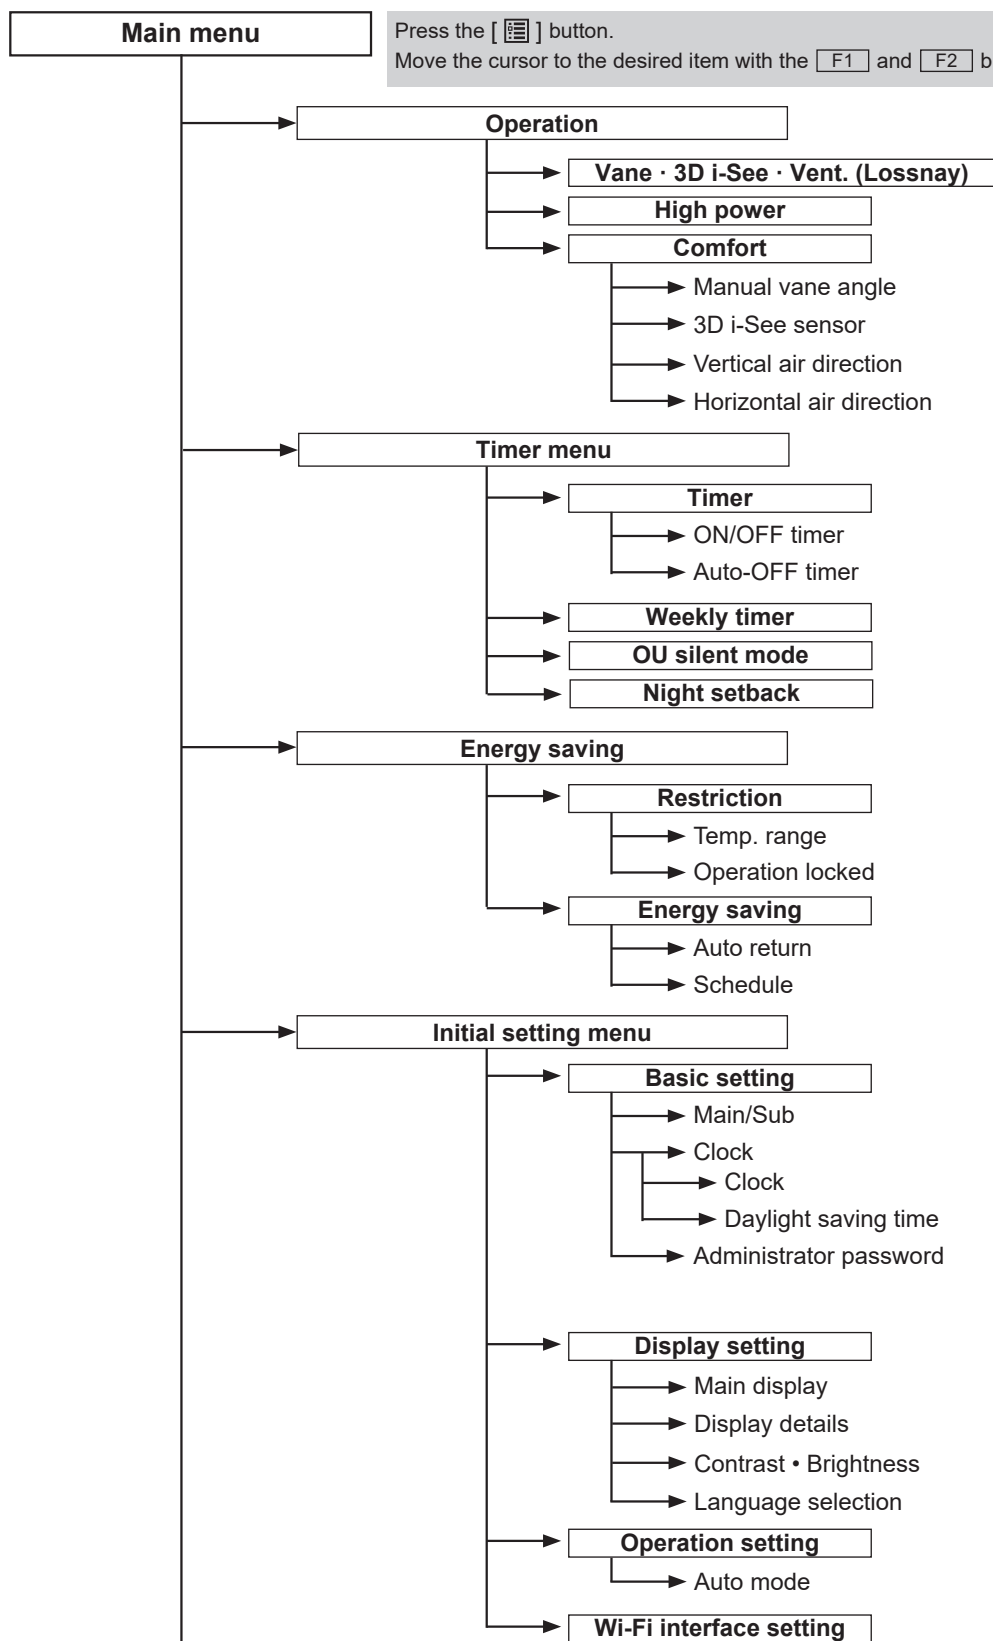

Continue to the next page.

Not all functions are available on all models of indoor units.

Continue from the previous page.

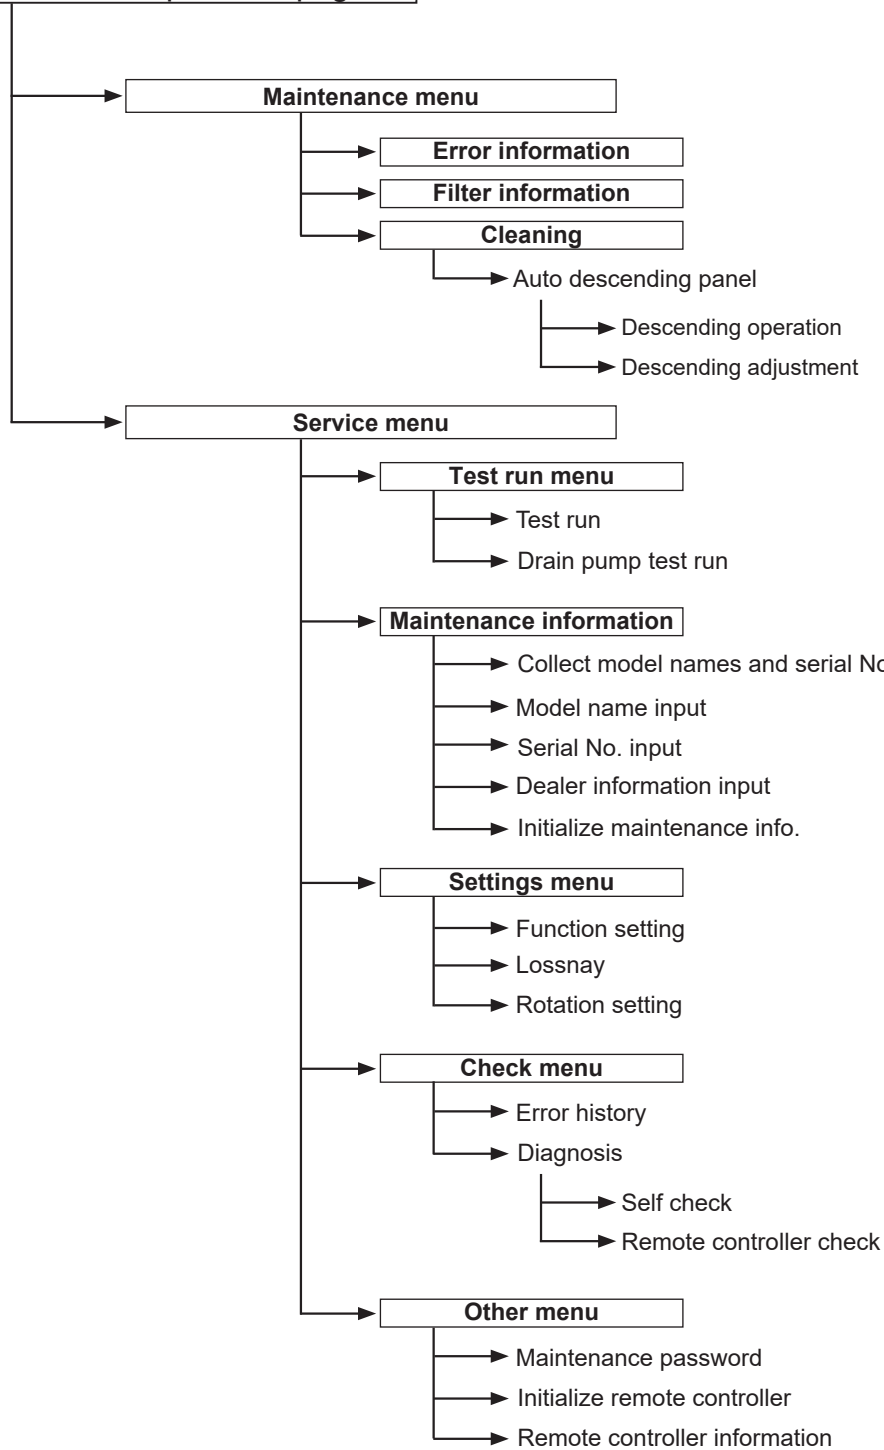

Not all functions are available on all models of indoor units.

Main menu list

Main menu	Setting and display items		Setting details
Operation	Vane · 3D i-See · Vent. (Vane.Vent. (Lossnay))		Vane: Use to set the vertical air direction. Louver: Use to set the horizontal air direction. 3D i-See sensor: This setting is available only for the air conditioners that support easy setting function of motion sensing air direction. Vent: Use to set the amount of ventilation.
	High power ^{*3}		Use to reach the comfortable room temperature quickly. • Units can be operated in the High-power mode for up to 30 minutes.
	Comfort	Manual vane angle	Vertical air direction • Sets the vertical airflow direction (vane) of each unit. Horizontal air direction • Sets the horizontal airflow direction (vane) of each unit.
		3D i-See sensor	Use to set the following functions for 3D i-See sensor. • Air distribution • Energy saving option • Seasonal airflow
Timer	Timer	ON/OFF timer ^{*1}	Use to set the operation ON/OFF times. • Time can be set in 5-minute increments.
		Auto-OFF timer	Use to set the Auto-OFF time. • Time can be set to a value from 30 to 240 in 10-minute increments.
	Weekly timer ^{*1, *2}		Use to set the weekly operation ON/OFF times. • Up to 8 operation patterns can be set for each day. (Not valid when the ON/OFF timer is enabled.)
	OU silent mode ^{*1, *3}		Use to set the time periods in which priority is given to quiet operation of outdoor units over temperature control. Set the Start/Stop times for each day of the week. • Select the desired silent level from "Normal," "Middle," and "Quiet."
	Night setback ^{*1}		Use to make Night setback settings. • Select "Yes" to enable the setting, and "No" to disable the setting. The temperature range and the start/stop times can be set.
Energy saving	Restriction	Temp. range ^{*2}	Use to restrict the preset temperature range. • Different temperature ranges can be set for different operation modes.
		Operation lock	Use to lock selected functions. • The locked functions cannot be operated.
	Energy saving	Auto return ^{*2}	Use to get the units to operate at the preset temperature after performing energy saving operation for a specified time period. • Time can be set to a value from 30 and 120 in 10-minute increments. (This function will not be valid when the preset temperature ranges are restricted.)
		Schedule ^{*1, *3}	Set the start/stop times to operate the units in the energy saving mode for each day of the week, and set the energy saving rate. • Up to 4 energy saving operation patterns can be set for each day. • Time can be set in 5-minute increments. • Energy saving rate can be set to a value from 0% or 50 to 90% in 10% increments.
	Energy data (for unit time, month, and day)		Displays the amount of power consumption during operation. • Unit time data: Data for the last one-month period can be displayed in 30-minute units. • Monthly/daily data: Data for the last 14-month period are displayed in day-and-month-units. * Data can be deleted. * Data are obtained based on the power consumption estimated from the operating state.

^{*1} Clock setting is required.

^{*2} 1°C increments.


^{*3} This function is available only when certain outdoor units are connected.

--

Main menu	Setting and display items		Setting details
Initial setting	Basic setting	Main/Sub	When connecting 2 remote controllers, one of them needs to be designated as a sub controller.
		Clock	Use to set the current time.
		Daylight saving time	Set the daylight saving time.
		Administrator password	The administrator password is required to make the settings for the following items. • Timer setting • Energy saving setting • Weekly timer setting • Restriction setting • Outdoor unit silent mode setting • Night set back
	Display setting	Main display	Use to switch between "Full" and "Basic" modes for the Main display, and use to change the background colors of the display to black.
		Display details	Make the settings for the remote controller related items as necessary. Clock: The initial settings are "Yes" and "24h" format. Temperature: Set either Celsius (°C) or Fahrenheit (°F). Room temp.: Set Show or Hide. Auto mode: Set Auto mode display or Only Auto display.
		Contrast • Brightness	Use to adjust screen contrast and brightness.
		Language selection	Use to select the desired language.
	Operation setting	Auto mode	Whether or not to use Auto mode can be selected by using the button. This setting is valid only when indoor units with Auto mode function are connected.
Maintenance	Error information		Use to check error information when an error occurs. • Check code, error source, refrigerant address, model name, manufacturing number, contact information (dealer's phone number) can be displayed. (The model name, manufacturing number, and contact information need to be registered in advance to be displayed.)
	Filter information		Use to check the filter status. • The filter sign can be reset.
	Cleaning	Auto descending panel	Use to lift and lower the auto descending panel (Optional parts).
Service	Test run		Select "Test run" from the Service menu to bring up the Test run menu. • Test run • Drain pump test run
	Input maintenance info.		Select "Input maintenance Info." from the Service menu to bring up the Maintenance information screen. The following settings can be made from the Maintenance Information screen. • Model name input • Serial No. input • Dealer information input • Initialize maintenance info.
	Settings	Function setting	Make the settings for the indoor unit functions via the remote controller as necessary.
		LOSSNAY setting	This setting is required only when the operation of CITY MULTI units is interlocked with LOSSNAY units.
	Check	Error history	Display the error history and execute "delete error history".
		Diagnosis	Self check: Error history of each unit can be checked via the remote controller. Remote controller check: When the remote controller does not work properly, use the remote controller checking function to troubleshoot the problem.
	Others	Maintenance password	Use to change the maintenance password.
		Initialize remote controller	Use to initialize the remote controller to the factory shipment status.
		Remote controller information	Use to display the remote controller model name, software version, and serial number.

<PAR-SL97A-E>


Controller interface

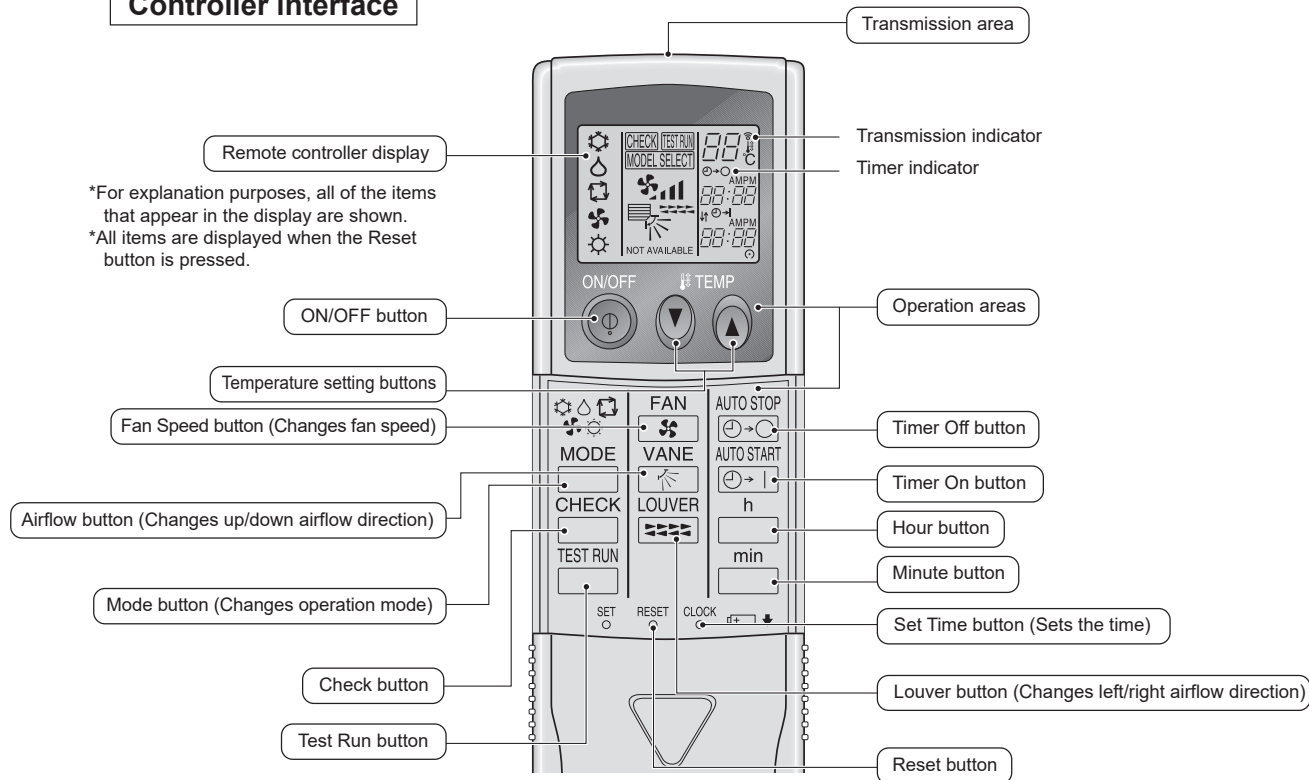

- When using the wireless remote controller, point it towards the receiver on the indoor unit.
- If the remote controller is operated within approximately two minutes after power is supplied to the indoor unit, the indoor unit may beep twice as the unit is performing the initial automatic check.
- The indoor unit beeps to confirm that the signal transmitted from the remote controller has been received. Signals can be received up to approximately 7 meters in a direct line from the indoor unit in an area 45° to the left and right of the unit. However, illumination such as fluorescent lights and strong light can affect the ability of the indoor unit to receive signals.
- If the operation lamp near the receiver on the indoor unit is blinking, the unit needs to be inspected. Consult your dealer for service.
- Handle the remote controller carefully! Do not drop the remote controller or subject it to strong shocks. In addition, do not get the remote controller wet or leave it in a location with high humidity.
- To avoid misplacing the remote controller, install the holder included with the remote controller on a wall and be sure to always place the remote controller in the holder after use.

<PAR-SL100A-E>


Controller interface

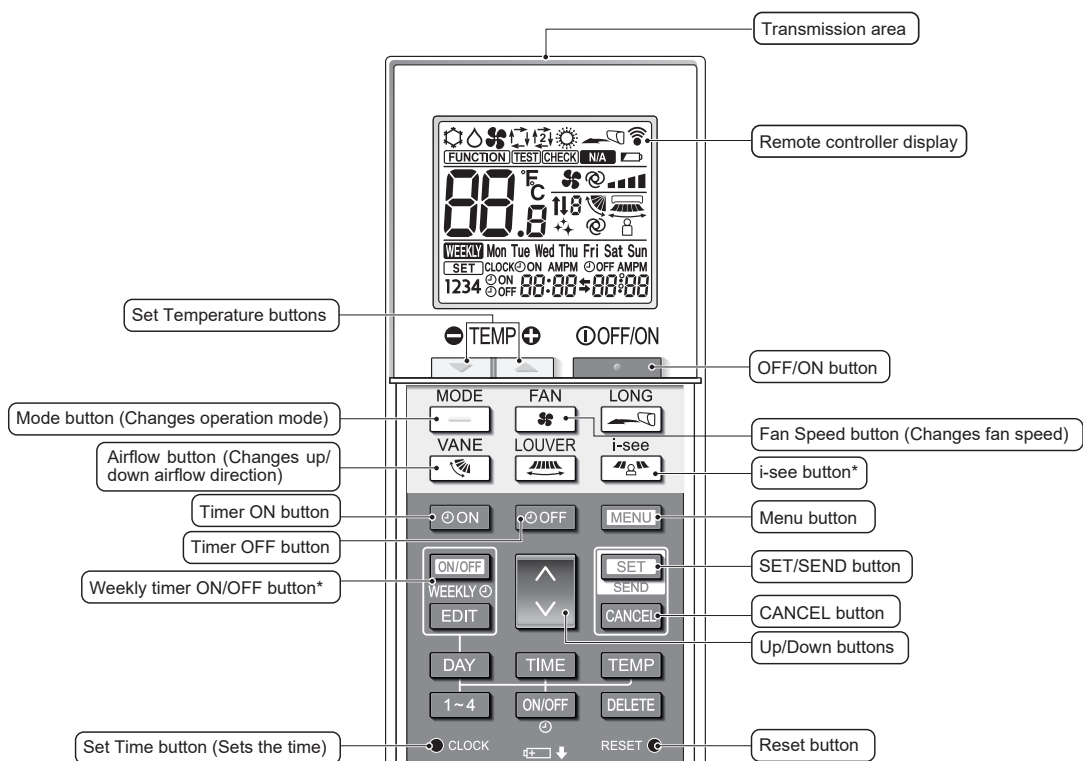

Note:


* This button is enabled or disabled depending on the model of the indoor unit.

Display

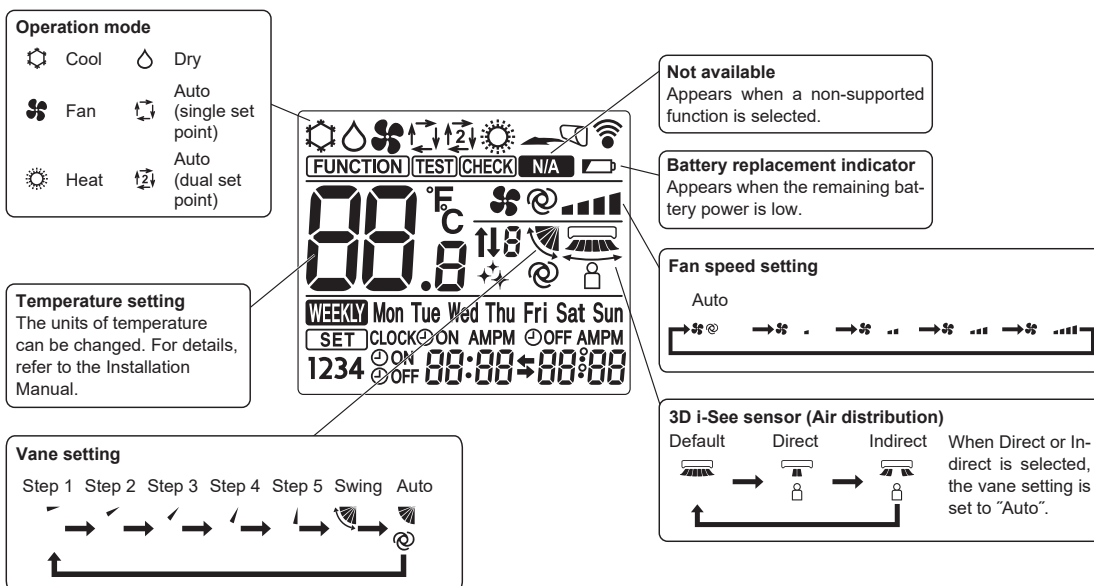

<PAR-U02MEDA>

Controller interface

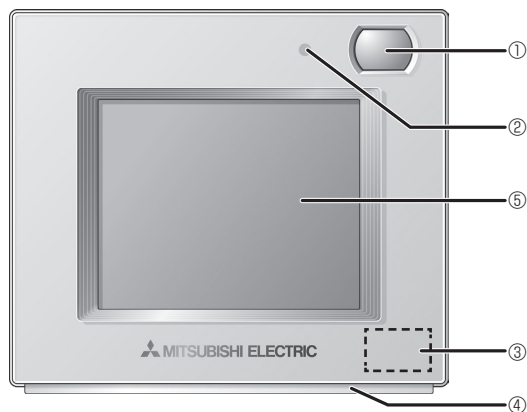

① Occupancy Sensor

The occupancy sensor detects vacancy for energy saving control.

② Brightness Sensor

The brightness sensor detects the brightness of the room for energy saving control.

③ Temperature & Humidity Sensor

The sensor detects the room temperature and the relative humidity.

④ LED Indicator

The LED indicator indicates the operation status in different colors. The LED indicator lights up during normal operation, lights off when units are stopped, and blinks when an error occurs.

⑤ Touch panel & Backlit LCD

The touch panel shows the operation settings screen. When the backlight is off, touching the panel turns the backlight on, and it will stay lit for a predetermined period of time.

12-2. ERROR INFORMATION

When an error occurs, the following screen will appear.
Check the error status, stop the operation, and consult your dealer.

1. Check code, error unit, refrigerant address, date and time of occurrence, model name, and serial number will appear.
The model name and serial number will appear only if the information have been registered.


Press the **[F1]** or **[F2]** button to go to the next page.

Error information 1/2

Error code	A3
Error unit	IU 8 Unit#1
Time Occurred	02/01 4:48

Reset error: Reset button

▼ Page ▲ Reset

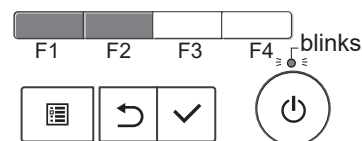

Contact information (dealer's phone number) will appear if the information has been registered.

Error information 2/2

Contact information

Dealer
Tel

Reset error: Reset button

▼ Page ▲ Reset

2. Press the **[F4]** button or the button to reset the error that is occurring.


Errors cannot be reset while the ON/OFF operation is prohibited.

Error information 1/2

Error code	A3
Error unit	IU 8 Unit#1
Time Occurred	02/01 4:48

Reset error: Reset button

▼ Page ▲ Reset

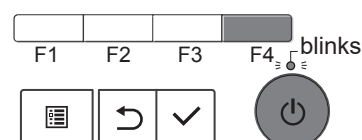


Select "OK" with the **[F4]** button.

Error reset

Reset current error?

Cancel OK




Error reset

Error reset

Main menu:


Navigating through the screens

- To go back to the Service menu button



• Checking the error information

While no errors are occurring, page 2/2 of the error information can be viewed by selecting "Error information" from the Maintenance menu. Errors cannot be reset from this screen.

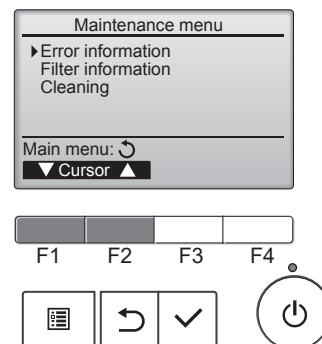


12-3. SERVICE MENU

Maintenance password is required

1. Select "Service" from the Main menu, and press the [✓] button.

*At the main display, the menu button and select "Service" to make the maintenance setting.

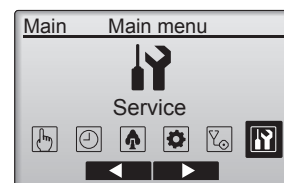

2. When the Service menu is selected, a window will appear asking for the password.



To enter the current maintenance password (4 numerical digits), move the cursor to the digit you want to change with the [F1] or [F2] button.



Set each number (0 through 9) with the [F3] or [F4] button.



Then, press the [✓] button.

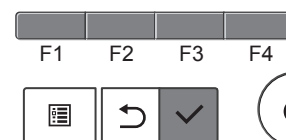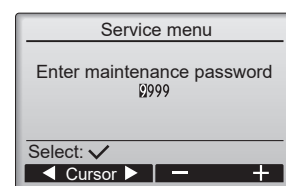

Note: The initial maintenance password is "9999". Change the default password as necessary to prevent unauthorized access. Have the password available for those who need it.

: If you forget your maintenance password, you can initialize the password to the default password "9999" by pressing and holding the [F1] button for 10 seconds on the maintenance password setting screen.


3. If the password matches, the Service menu will appear.

The type of menu that appears depends on the connected indoor units' type.



Note: Air conditioning units may need to be stopped to make only at "Settings". There may be some settings that cannot be made when the system is centrally controlled.

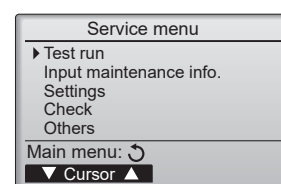

A screen will appear that indicates the setting has been saved.



Navigating through the screens

- To go back to the Service menu[] button
- To return to the previous screen.....[] button

12-4. TEST RUN


12-4-1. PAR-4xMAA

("x" represents 0 or later)


1. Select "Service" from the Main menu, and press the [✓] button.



Select "Test run" with the [F1] or [F2] button, and press the [✓] button.

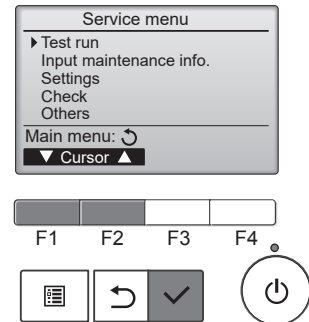

2. Select "Test run" with the [F1] or [F2] button, and press the [✓] button.

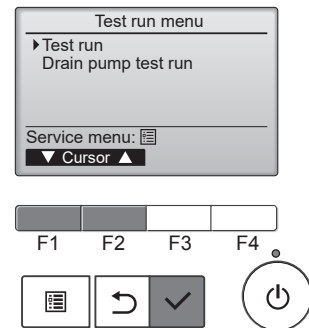

Test run operation


Press the [F1] button to go through the operation modes in the order of "Cool and Heat".

Cool mode: Check the cold air blows out.
Heat mode: Check the heat blows out.

Check the operation of the outdoor unit's fan.



Press the [✓] button and open the Vane setting screen.

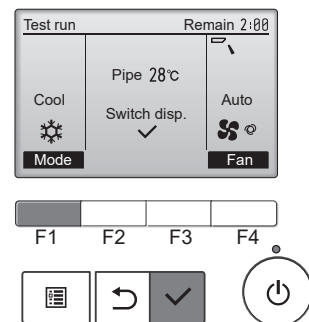

Auto vane check

Check the auto vane with the [F1] [F2] [F3] buttons.




Press the [↺] button to return to "Test run operation".



Press the [⏻] button.





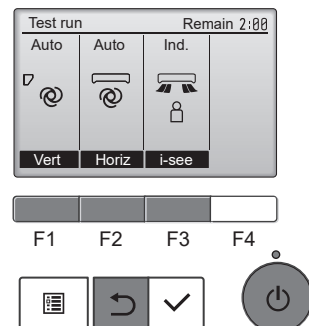





When the test run is completed, the "Test run menu" screen will appear.
The test run will automatically stop after 2 hours.

*The function is available only for the model with vanes.




12-4-2. PAR-SL97A-E

Measure an impedance between the power supply terminal block on the outdoor unit and ground with a 500 V Megger and check that it is equal to or greater than 1.0 MΩ.







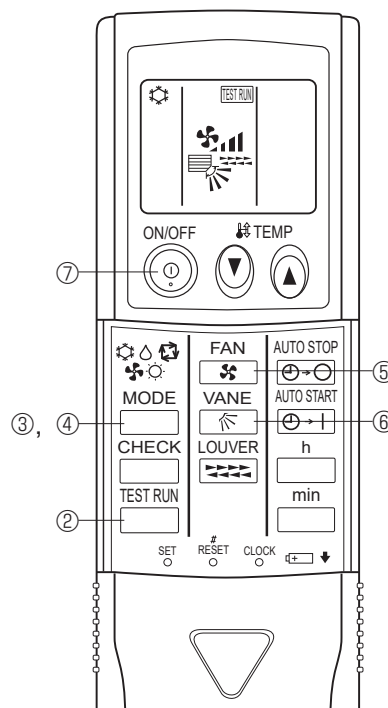







1. Turn on the main power to the unit.
2. Press the  button twice continuously.
(Start this operation from the status of remote controller display turned off.)
- A  and current operation mode are displayed.
3. Press the  () button to activate  mode, then check whether cool air blows out from the unit.
4. Press the  () button to activate  mode, then check whether warm air blows out from the unit.
5. Press the  button and check whether strong air blows out from the unit.
6. Press the  button and check whether the auto vane operates properly.
7. Press the ON/OFF button to stop the test run.


Note:

- Point the remote controller towards the indoor unit receiver while following steps 2 to 7.
- It is not possible to run in FAN, DRY or AUTO mode.




12-4-3. PAR-SL100A-E


1. Press the  button ① to stop the air conditioner.
 - If the weekly timer is enabled ( is on), press the  button ③ to disable it ( is off).
2. Press the  button ② for 5 seconds.
 -  comes on and the unit enters the service mode.
3. Press the  button ②.
 -  ⑥ comes on and the unit enters the test run mode.
4. Press the following buttons to start the test run.
 - : Switch the operation mode between cooling and heating and start the test run.
 - : Switch the fan speed and start the test run.
 - : Switch the airflow direction and start the test run.
 - : Switch the louver and start the test run.
 - : Start the test run.
5. Stop the test run.
 - Press the  button ① to stop the test run.
 - After 2 hours, the stop signal is transmitted.

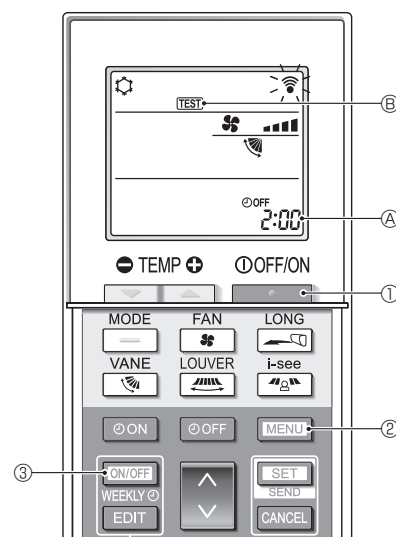

12-4-4. PAR-U02MEDA

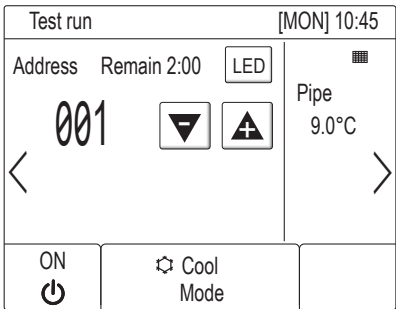

[Test run screen]

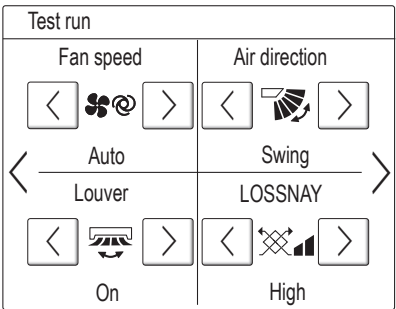

[Indoor unit setting screen]

- (a) Read the section about Test run in the indoor unit Installation Manual before performing a test run.
- (b) During the test run, indoor units will be forced to operate in the Thermo-ON status.
Except the set temperature, normal operation functions are accessible during test run.
- (c) By selecting the address of another indoor unit, the liquid pipe temperature of the selected unit can be monitored.
- (d) The test run will automatically end in two hours.

* When AHC is controlled from the controller
To monitor the operating status of AHC, touch the [<] button on the [Test run] screen and access the [General equipment] screen.
To set the humidity setting for the humidifier (when one is connected to the AHC), touch the [>] button on the [Indoor unit setting] screen.

12-5. FUNCTION SETTING



12-5-1. PAR-4xMAA

("x" represents 0 or later)

1. Select "Service" from the Main menu, and press the [✓] button.

Select "Setting" from the Service menu, and press the [✓] button.

Select "Function setting", and press the [✓] button.

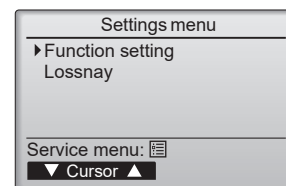

2. The Function setting screen will appear.

Press the [F1] or [F2] button to move the cursor to one of the following: M-NET address, function setting number, or setting value. Then, press the [F3] or [F4] button to change the settings to the desired settings.


Once the settings have been completed, press the [✓] button.

A screen will appear indicating that the settings information is being sent.

To check the current settings of a given unit, enter the setting for its M-NET address and function setting number, select Conf for the Function, and press the [✓] button.



A screen will appear indicating that the settings are being searched for.

When the search is done, the current settings will appear.

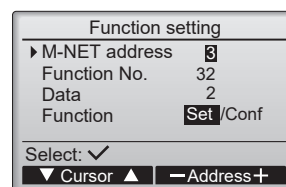

When the settings information has been sent, a screen will appear indicating its completion.

To make additional settings, press the [↺] button to return to the screen shown in the above step. Set the function numbers for other indoor units by following the same steps.

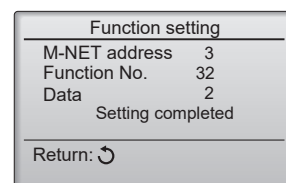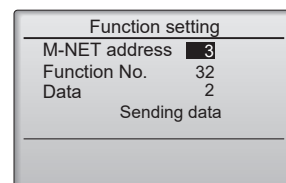


Note:

- Refer to the indoor unit Installation Manual for information about the factory settings of indoor units, function setting numbers, and setting values.
- Be sure to write down the settings for all functions if any of the initial settings has been changed after the completion of installation work.


12-5-2. PAR-SL97A-E

Functions can be selected with the wireless remote controller. Function selection using wireless remote controller is available only for refrigerant system with wireless function. Refrigerant address cannot be specified by the wireless remote controller.

[Flow of function selection procedure]

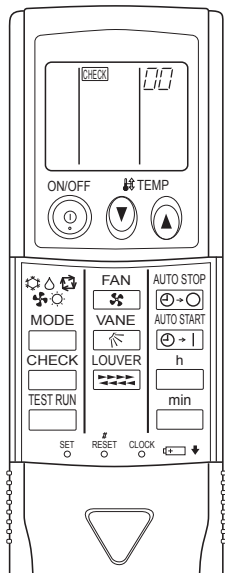

The flow of the function selection procedure is shown below. This example shows how to turn off the function that raises the set temperature by 4 degrees during HEAT operation. (Mode 24: 2)
The procedure is given after the flow chart.

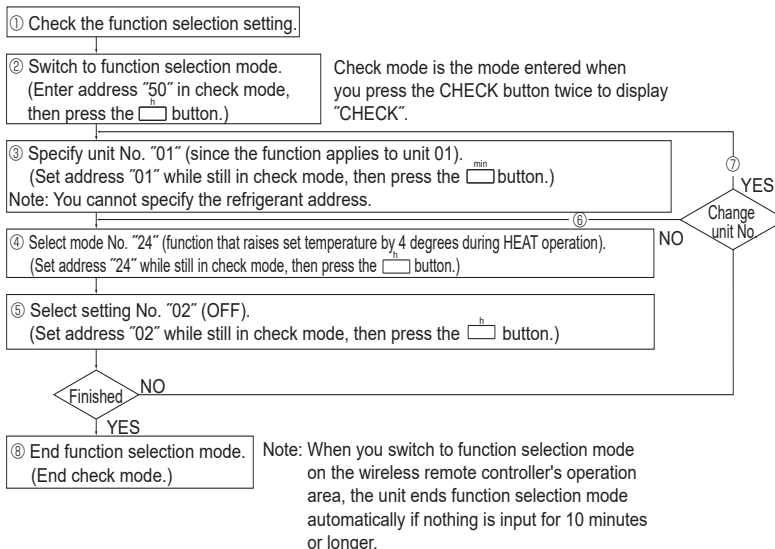

[Operating instructions]

1. Check the function settings.

2. Press the button twice continuously. → **CHECK** is lit and "00" blinks.

Press the button once to set "50". Direct the wireless remote controller toward the receiver of the indoor unit and press the button.

3. Set the unit number.

Press the button to set the unit number. (Press "01" to specify the indoor unit whose unit number is 01.)

Direct the wireless remote controller toward the receiver of the indoor unit and press the button.

By setting unit number with the button, specified indoor unit starts performing fan operation.

Detect which unit is assigned to which number using this function. If unit number is set to AL, all the indoor units in same refrigerant system start performing fan operation simultaneously.

Notes:

1. If a unit number that cannot be recognized by the unit is entered, 3 beeps of 0.4 seconds will be heard. Reenter the unit number setting.
2. If the signal was not received by the sensor, you will not hear a beep or a "double beep" may be heard. Reenter the unit number setting.

4. Select a mode.

Press the button to set a mode. Press "24" to turn on the function that raises the set temperature by 4 degrees during heat operation. Direct the wireless remote controller toward the sensor of the indoor unit and press the button.
→ The sensor-operation indicator will blink and beeps will be heard to indicate the current setting number.

Current setting number: 1 = 1 beep (1 second)
2 = 2 beeps (1 second each)
3 = 3 beeps (1 second each)

Notes:

1. If a mode number that cannot be recognized by the unit is entered, 3 beeps of 0.4 seconds will be heard. Reenter the mode number.
2. If the signal was not received by the sensor, you will not hear a beep or a "double beep" may be heard. Reenter the mode number.

5. Select the setting number.

Press the button to select the setting number. (02: Not available)

Direct the wireless remote controller toward the receiver of the indoor unit and press the button.
→ The sensor-operation indicator will blink and beeps will be heard to indicate the setting number.

Setting number: 1 = 2 beeps (0.4 seconds each)
2 = 2 beeps (0.4 seconds each, repeated twice)
3 = 2 beeps (0.4 seconds each, repeated 3 times)

Notes:

1. If a setting number that cannot be recognized by the unit is entered, the setting will turn back to the original setting.
2. If the signal was not received by the sensor, you will not hear a beep or a "double beep" may be heard. Reenter the setting number.
6. Repeat steps ④ and ⑤ to make an additional setting without changing unit number.
7. Repeat steps ③ to ⑤ to change unit number and make function settings on it.
8. Complete the function settings

Press button.

Do not use the wireless remote controller for 30 seconds after completing the function setting.

12-5-3. PAR-SL100A-E

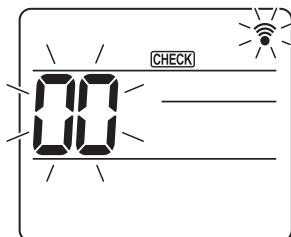


Fig. 1

1. Going to the function select mode
 Press the **[MENU]** button between of 5 seconds.
 (Start this operation from the status of remote controller display turned off.)
 [CHECK] is lit and "00" blinks. (Fig. 1)
 Press the **[↓]** button to set the "50".
 Direct the wireless remote controller toward the receiver of the indoor unit and press the **[SET]** button.

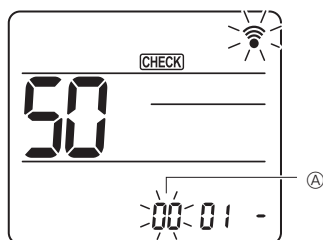


Fig. 2

2. Setting the unit number
 Press the **[↓]** button to set unit number **Ⓐ**. (Fig. 2)
 Direct the wireless remote controller toward the receiver of the indoor unit and press the **[SET]** button.

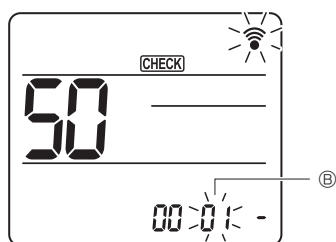


Fig. 3

3. Select a mode
 Press the **[↓]** button to set Mode number **Ⓑ**. (Fig. 3)
 Direct the wireless remote controller toward the receiver of the indoor unit and press the **[SET]** button.
 Current setting number:
 1=1 beep (1 second)
 2=2 beep (1 second each)
 3=3 beep (1 second each)

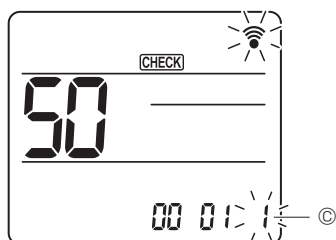


Fig. 4

4. Selecting the setting number
 Use the **[↓]** button to change the Setting number **Ⓒ**. (Fig. 4)
 Direct the wireless remote controller toward the receiver of the indoor unit and press the **[SET]** button.
5. To select multiple functions continuously
 Repeat select **③** and **④** to change multiple function settings continuously.
6. Complete function selection
 Direct the wireless remote controller toward the sensor of the indoor unit and press the **[OFF/ON]** button.



Note: Be sure to write down the settings for all functions if any of the initial settings has been changed after the completion of installation work.

12-6. ERROR HISTORY


1. Select "Service" from the Main menu, and press the [✓] button.



Select "Check" with the [F1] or [F2] button, and press the [✓] button.

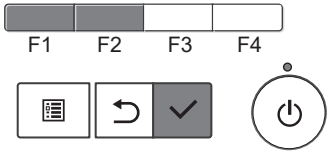
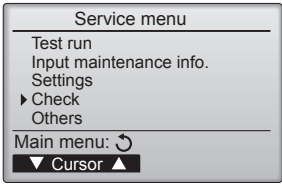


2. Select "Error history" with the [F1] or [F2] button, and press the [✓] button.

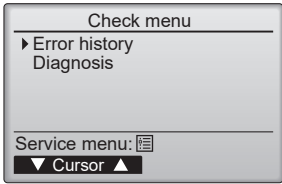

3. 16 error history records will appear.

4 records are shown per page, and the top record on the first page indicates the latest error record.

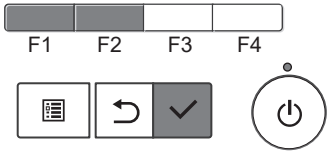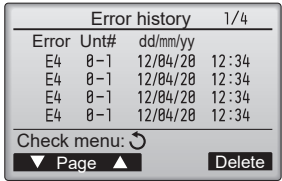

4. Deleting the error history

To delete the error history, press the [F4] button (Delete) on the screen that shows error history.
A confirmation screen will appear asking if you want to delete the error history.





Press the [F4] button (OK) to delete the history.



"Error history deleted" will appear on the screen.

Press the [↶] button to go back to the Check menu screen.

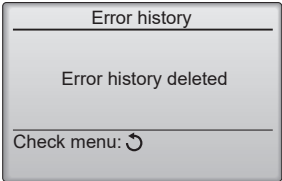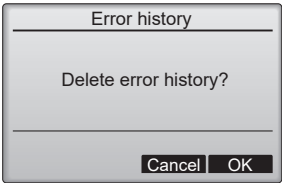

12-7. SELF-DIAGNOSIS

12-7-1. PAR-4xMAA


("x" represents 0 or later)

1. Select "Service" from the Main menu,
and press the [✓] button.

Select "Check" from the Service menu,
and press the [✓] button.

Select "Diagnosis" from the Check menu,
and press the [✓] button.



Select "Self check" with the [F1] or [F2] button,
and press the [✓] button.

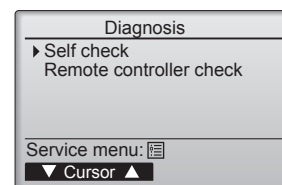


2. Select "Self check" from the Diagnosis menu, and press
the [✓] button to view the Self check screen.

With the [F1] or [F2] button, enter the M-NET address,
and press the [✓] button.

Check code, unit number, attribute, and indoor unit demand signal ON/OFF status at the contact will appear.
"-" will appear if no error history is available.

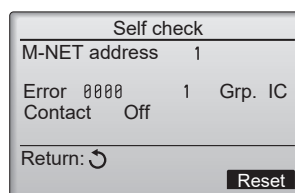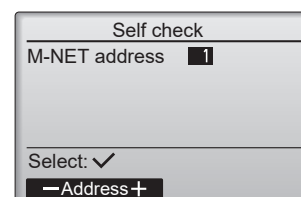



When there is no error history

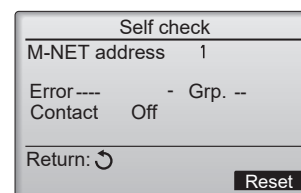

3. Resetting the error history

Press the [F4] button (Reset) on the screen that shows the error history.
A confirmation screen will appear asking if you want to delete the error history.


Press the [F4] button (OK) to delete the error history. If deletion fails,
"Request rejected" will appear, and "Unit not exist" will appear if
indoor units that are correspond to the entered address are not found.

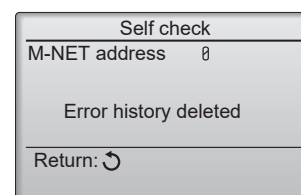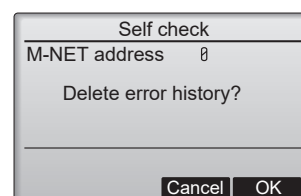

12-7-2. PAR-SL97A-E

When a malfunction occurs to air conditioner, both indoor unit and outdoor unit will stop and operation lamp blinks to inform unusual stop.


<Malfunction-diagnosis method at maintenance service>

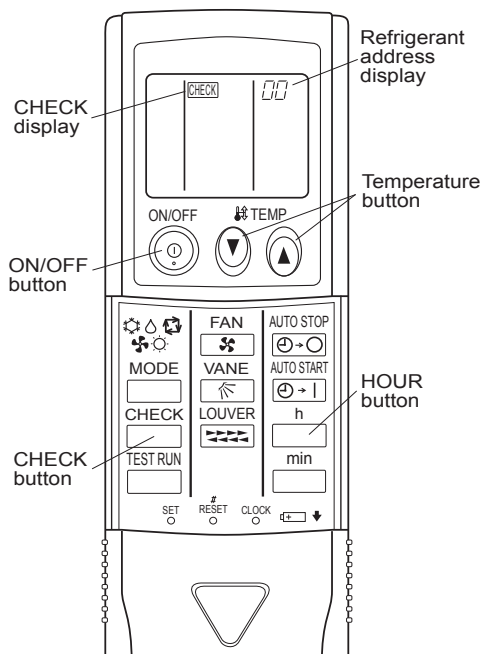

[Procedure]

- Press the CHECK button twice.
 - "CHECK" lights, and refrigerant address "00" blinks.
 - Check that the remote controller's display has stopped before continuing.
- Press the TEMP buttons.
 - Select the refrigerant address of the indoor unit for the self-diagnosis.
 - Note: Set refrigerant address using the outdoor unit's DIP switch (SW1). (For more information, see the outdoor unit installation manual.)
- Point the remote controller at the sensor on the indoor unit and press the HOUR button.
 - If an air conditioner error occurs, the indoor unit's sensor emits an intermittent buzzer sound, the operation light blinks, and the check code is output. (It takes 3 seconds at most for check code to appear.)
- Point the remote controller at the sensor on the indoor unit and press the ON/OFF button.
 - The check mode is cancelled.

12-7-3. PAR-SL100A-E

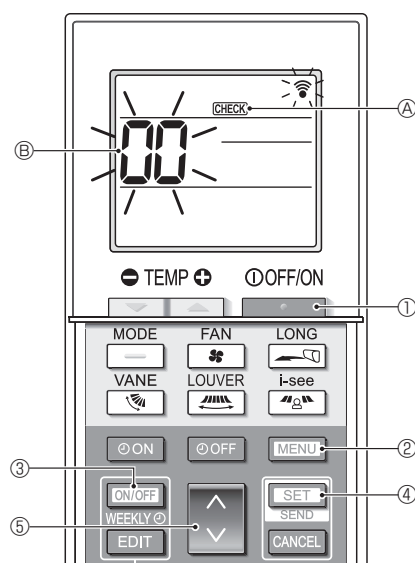

- Press the button ① to stop the air conditioner.
 - If the weekly timer is enabled (WEEKLY is on), press the button ③ to disable it (WEEKLY is off).
- Press the button ② for 5 seconds.
 - CHECK (A) comes on and the unit enters the self-check mode.
- Press the button ⑤ to select the refrigerant address (M-NET address) (B) of the indoor unit for which you want to perform the self-check.
- Press the button ④.
 - If an error is detected, the check code is indicated by the number of beeps from the indoor unit and the number of blinks of the OPERATION INDICATOR lamp.
- Press the button ①.
 - CHECK (A) and the refrigerant address (M-NET address) (B) go off and the self-check is completed.

12-8. REMOTE CONTROLLER CHECK

If operations cannot be completed with the remote controller, diagnose the remote controller with this function.

1. Select "Service" from the Main menu, and press the [✓] button.




Select "Check" from the Service menu, and press the [✓] button.



Select "Diagnosis" from the Check menu, and press the [✓] button.



Select "Remote controller check" with the [F1] or [F2] button, and press the [✓] button.

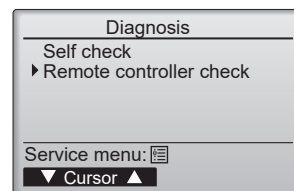



2. Select "Remote controller check" from the Diagnosis menu, and press the [✓] button to start the remote controller check and see the check results.



To cancel the remote controller check and exit the "Remote controller check" menu screen, press the [List] or the [Refresh] button.



The remote controller will not reboot itself.

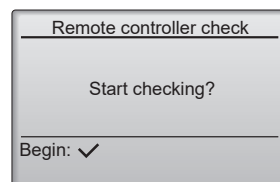


3.
 - OK: No problems are found with the remote controller. Check other parts for problems.
 - E3, 6832: There is noise on the transmission line, or the indoor unit or another remote controller is faulty. Check the transmission line and the other remote controllers.
 - NG (ALL0, ALL1): Send-receive circuit fault. The remote controller needs replacing.
 - ERC: The number of data errors is the discrepancy between the number of bits in the data transmitted from the remote controller and that of the data that was actually transmitted over the transmission line. If data errors are found, check the transmission line for external noise interference.



If the [✓] button is pressed after the remote controller check results are displayed, remote controller check will end, and the remote controller will automatically reboot itself.

Check the remote controller display and see if anything is displayed (including lines). Nothing will appear on the remote controller display if the correct voltage (8.5–12 VDC) is not supplied to the remote controller. If this is the case, check the remote controller wiring and indoor units.

Remote controller check results screen

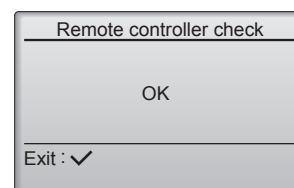

12-9. SPECIAL FUNCTION OPERATION SETTING

<PAR-U02MEDA>


*M-NET remote controller cannot be connected with a refrigerant system which includes branch box.

It is necessary to perform “group settings” and “Interlocked LOSSNAY” at making group settings of different refrigerant systems (multiple outdoor unit).

(A) Group settings: Enter the indoor unit controlled by the remote controller, check the content of entries, and clear entries, etc.


(B) Interlocked LOSSNAY: Used to set the linked operation of a Lossnay unit.

How to display the setup screen

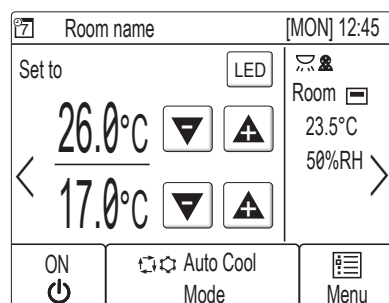


• HOME screen

Touch the [MENU] button.

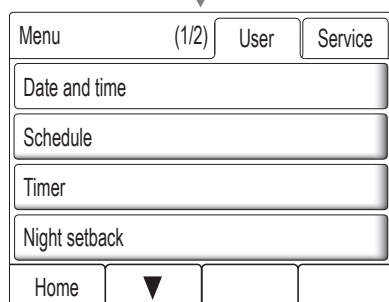


• Menu (User) screen

Touch the [Service] button.

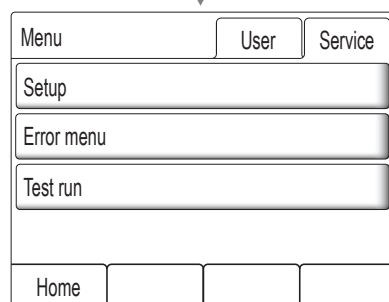

• Menu (Service) screen

Touch the [Setup] button.
Setup screen will appear.

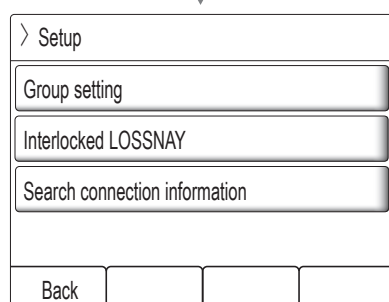

(a) Group setting

Use this screen to register the indoor units and the AHC to be controlled from the controller.

[Group setting]			
IC	Address	▼ 001 ▲	
001 002 003 004	Unit	IC	
005 006 007 008	Function	Set Del	
009 010 011 012			
013 014 015 016			
AHC 201			
Back			

1. Select an indoor unit or an AHC address in the [Address] field.
The number of units that can be registered.
Indoor unit: 16 units maximum
AHC: 1 unit maximum
* AHC cannot be controlled from the controller unless indoor units are registered with the system.
2. Touch the [Set] button to register the address, and [Del] to delete the address.
 - Successful address registration/deletion:
The registered address(es) will appear on the left side of the screen.
Deleted address will not appear on the screen.
 - Error:
"Request denied." or "Is not to be connected" will appear.

(b) Interlocked LOSSNAY

Use this function to interlock the operation of indoor units and LOSSNAY units.

[Interlocked LOSSNAY]			
001 IC 007 IC	Add. 1	▼ 001 ▲	
002 IC 008 IC	Add. 2	▼ 013 ▲	
003 IC 009 IC	Function	Set Conf Del	
004 IC 010 IC			
005 IC 011 IC			
006 IC 012 IC			
Back			

1. To register LOSSNAY units
Select the indoor unit address in the Add. 1 section.
Select the interlocked LOSSNAY address in the Add. 2 section.
Touch the [Set] button to save the setting.
2. To search for an interlocked setting
Touch the [Conf] button to display in the left column the addresses of the units that are interlocked with the unit whose address was set in the Add. 1 section.
3. To delete the interlock settings
After taking Step 2 above, select the address to be deleted in the Add. 2 section, and then touch the [Del] button.

When the setting or deletion is successfully completed, "Completed" will appear below [Function] field on the screen.
If setting or deletion fails, "Request denied" will appear below [Function] field on the screen.

(c) Search connection information

Use this screen to specify a unit and search for the controllers that are connected to the unit.

[Search connection information]			
001 IC	Address	▼ 051 ▲	
002 IC			
003 IC			
004 IC	Function	Conf	
005 IC			
006 IC			
Back			

1. Select an address in the [Address] field.
2. Touch the [Conf] button to search for the interlocked units.
The results will appear in the left column. (When multiple units are found, the addresses that do not fit on the first page will appear on the successive pages.)
 - Search error:
"Request denied." will appear.

After completing the settings, touch the [Back] button on the [Setup] screen. The message "Collecting the information from the air conditioner." will appear, and then the screen will jump to the HOME screen. This signals the completion of the setup process. Access the Service Menu from the HOME screen to make the settings for other items as necessary.

mitsubishi electric corporation

HEAD OFFICE: TOKYO BUILDING, 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO100-8310, JAPAN

©Copyright 2021 MITSUBISHI ELECTRIC CORPORATION
Issued: Sep. 2021 No. OCH760 REVISED EDITION-B
Issued: Jul. 2021 No. OCH760 REVISED EDITION-A
Published: May. 2021 No. OCH760
Made in Japan

Specifications are subject to change without notice.